

CAUTION: IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not let lamps rest on the supply cord or any wire.
- **CAUTION:** This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Never operate this product if the power cord or plug is damaged.
- Use only manufacturer specified replacement bulbs.
- Read and follow all instructions that are on the product or provided with the product.

USE AND CARE INSTRUCTIONS


- When storing the product, carefully remove the product from wherever it is placed, avoiding any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

IMPORTANT NOTE: Some unassembled section pieces have light string wires strung between them. Be careful not to put unnecessary strain on the wires during assembly procedures. **All three reindeers will assemble following the same processes described below.**

Assembly (Diagram 1)

1. Attach the front legs by inserting the rods into the loops on the body (A). Insert the end of the hinged hook into the loop on the opposite leg (B). Repeat this procedure for back legs.
2. Attach the reindeer head by sliding the hooks located at the base of the neck into and under the frame of the body. Secure together the ring at front of neck with ring on the body using tie wrap supplied. (C).
3. Attach the two antlers and two ears by inserting the rods on each into the loops on the head (D).
4. Attach the tail by inserting the rod into the loop (E).




Diagram 1

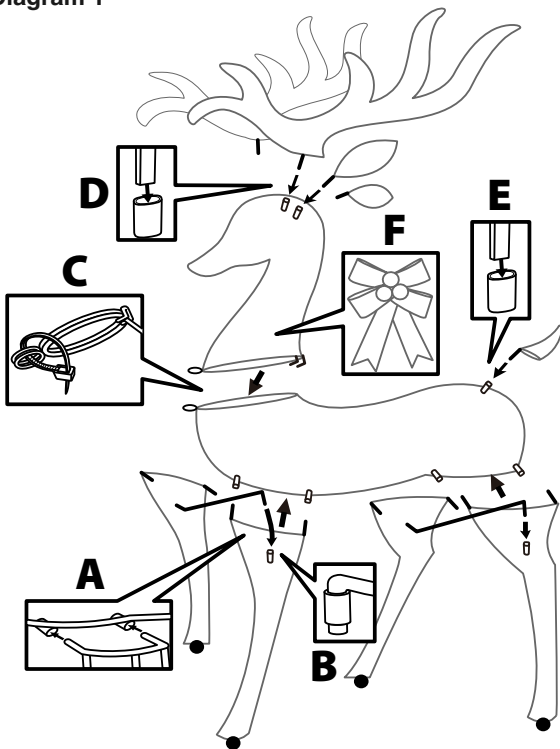

5. Attach the ribbon on neck where desired using tie wraps (F).
6. Secure decoration to the ground using the supplied stakes at points indicated by dots (●).
7. Plug light strings cords into a power supply. Plugs can be "piggy-backed" - - plugged into each other, and then into a receptacle.



Bulb Replacement

 1. Unplug light string from power source.
2. Pull up on the Bulb Lock (if equipped) unlatching the bulb from the bulb socket. Gently pull the bulb straight out (Figure 1).
3. Before inserting the new bulb into socket, make sure that the two wires on either side of the bulb base are straight up and flush with the base (diagram at right).
4. Carefully insert new bulb into socket and push down Bulb Lock (if equipped) until it snaps into place (Figure 2).

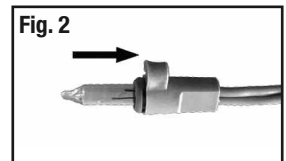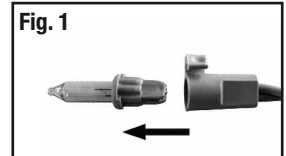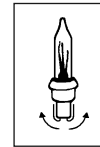

Fuse Replacement

1. Unplug light string from power source.
2. Slide the fuse access cover away from cord side (in direction of arrow, Figure 3) exposing fuses.
3. Remove fuses from compartment and examine. Replace burnt out fuse with new one.
4. Close fuse compartment by sliding access cover back in towards cord side of plug (Figure 4).

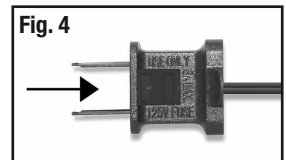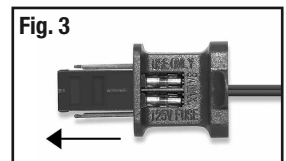

SAVE THESE INSTRUCTIONS