 



HELIOS™ SUSPENSION SYSTEM SET UP

THE HELIOS SUSPENSION SYSTEM NEEDS TO BE SET UP PROPERLY FOR MAXIMUM DURABILITY AND PERFORMANCE. FAILURE TO ADHERE TO THESE INSTRUCTIONS/GUIDELINES MAY RESULT IN SERIOUS INJURY OR DEATH.


- 1 Find two living, mature trees or anchor points approx. 10-14 feet (3-4 meters) apart that can safely support the hammock and its occupant(s).

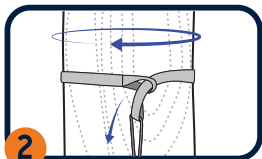

 2 Loop straps around trees at least 5 feet (1.5 meters) from the ground threading the adjustable end through the webbing end with the single loop.

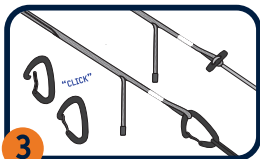

3 Attach hammock carabiners or toggles to the cord loop at the end. Visually check that toggles are securely passed through the loop, or that each carabiner clicks closed.

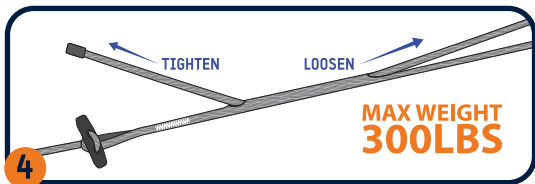

4 To tighten the straps, pull the loose end (with the metal ring) towards your hammock. To loosen the straps pull the loose end back through the cord splice. Gently lower yourself into the hammock to determine if adjustments are needed to achieve a hanging height of 18" (45cm) or less. Relax...

Eagles Nest Outfitters, Inc.

601 Sweeten Creek Industrial Park
Asheville, NC 28803

ph: 828.252.7808

mail@enonation.com



enonation.com

DESIGNED IN ASHEVILLE, NC, USA

MADE IN CHINA

100% POLYESTER, EXCLUSIVE OF TRIMS

ACCIDENTS HAPPEN

- Never hang your hammock higher than 18-inches off the ground.
- Always make sure to check the area beneath the hammock is free of sharp objects, rocks, trash, and any other debris that could create a hazard in the case of a fall.
- Before every use, fully inspect your hammock including carabiners and rope and your suspension system to check for snags, fraying, and general wear and tear in addition to anything unusual and/or different from the time of purchase. If anything suspect is found during inspection, please discontinue use.
- Do not permit children to use unattended.
- Do not jump or swing aggressively in hammock.
- Always test the hammock before putting your full weight into it.
- Do not stack hammocks vertically.
- Do not modify, after market modifications will void your warranty.
- Do not untie hammock knots (found at the ends of the hammock).
- Always follow provided instructions. Failure to adhere to these instructions/guidelines may result in injury or death.

FOR MORE INFORMATION VISIT [ENONATION.COM/SAFETY](https://enonation.com/safety)

PRODUCT CARE

With proper care, your hammock will provide countless hours of relaxation.

- Keep it out of direct UV light when not in use and store dry in a cool place.
- Never leave your hammock unattended.
- Prevent damage by removing sharp items in pockets and debris from shoes.
- Hammocks are flammable; keep away from open flames and embers.
- Get it dirty? Hand wash in cold water using a mild detergent and hang dry.

FOR MORE INFORMATION VISIT [ENONATION.COM/CARE](https://enonation.com/care)

WARRANTY

ENO warrants our product to be in good condition upon receipt and free from manufacturing defects for a period of 2-years from the original date of purchase.

This warranty only covers manufacturing defects and does not cover:

- UV Damage (discoloration and brittleness causes tearing)
- Elemental/Accidental Damage (wind, burns, animal bites)
- Improper care or use (hanging over 18", jumping, swinging)
- Normal wear and tear
- After-market design modifications

FOR MORE INFORMATION VISIT [ENONATION.COM/WARRANTY](https://enonation.com/warranty)