 


Wireless bluetooth square coffee table speaker

-USER'S MANUAL-

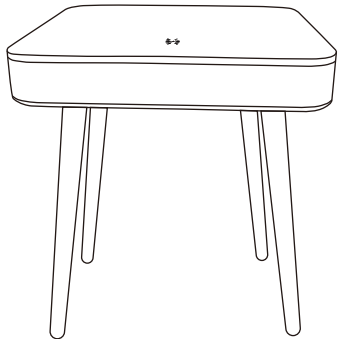


Dear:

Hello, thank you for purchasing and using smart home products. To ensure your legal rights, we recommend that you read this product manual carefully. If you have any objections and better suggestions to the content of this product or the manual, please contact the company through e-commerce platform customer service within 7 days of purchasing the machine, we will be happy to help you service.


Bluetooth:	Bluetooth 5.0
Speaker:	10W*2 THD=1%
Audio response:	100HZ-18KHZ
Power adapter:	AC 100-240V DC 12V/1-2A

 Product List

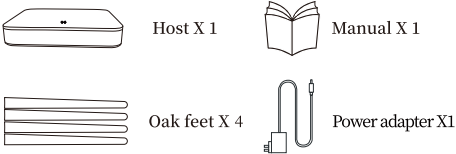

Button and interface description

 Bluetooth version

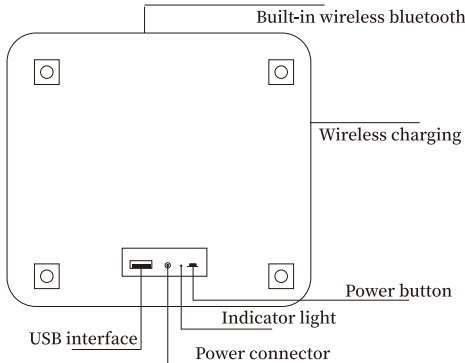

Bluetooth pairing

Turn on Bluetooth

1. Turn on Bluetooth automatically when power is connected.



Search Bluetooth

2. When the mobile phone's Bluetooth is turned on, Search device GT-AI8A on the phone.



Paired connection

3. The Bluetooth speaker will be paired with the smartphone via Bluetooth technology. Enter the connection pairing password: 1234



Successfully paired and connected

4. After the smartphone is successfully paired, the Bluetooth speaker will emit a tone.



Name and content of toxic substances in the product

Part Name	Toxic substances or elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr6+)	Polybrominated biphenyls (PBB)	Polybrominated Diphenyl Ether (PBDE)
Host	x	o	o	o	o	o
Charger	x	o	o	o	o	o
Battery	x	o	o	o	o	o
Cable	x	o	o	o	o	o

This form is compiled in accordance with SJ/T 11364.

o: Indicates that the content of the hazardous substance in all homogeneous materials of the part is within the limit requirement of GB/T 26572.

x: Indicates that the content of the hazardous substance in at least a certain homogeneous material of the part exceeds the limit requirement of GB/T 26572, and there is no mature alternative in the industry at present, which meets the environmental protection requirements of the EU RoHS directive.



The number in this logo indicates that the environmental protection use period of the product under normal use is 20 years. Some components may also have an environmental protection use period mark, and the environmental protection use period is subject to the identification number.

Common problems and repair methods

The lake cannot be turned on. Connect the power adapter to check whether it is turned on, press the power button to turn on, the indicator light is normal; if the indicator light does not light, please check whether the power adapter is faulty, please contact the manufacturer to send the package, if you assemble it privately, you will be responsible for the consequences;

2. Cannot search the Bluetooth of this unit. Check if there are other devices connected to the Bluetooth of this machine, please click MOORE to restore factory settings, and then click on the device to connect to the Bluetooth again;

3. For wireless charging, please confirm whether the mobile phone has its own wireless charging function, and charge the mobile phone at the design;

4. If you don't use it for a long time, please turn off the power of this machine and unplug the power adapter;

5. Don't throw away electronic and electrical products at will, so as to avoid battery damage to the environment; don't put it under high temperature or open flame, beware of fire.

Product performance failures caused by non-human damage during the warranty period can enjoy the following three guarantees:

7. This product supports seven days no reason to return or exchange. Within seven days from the date of purchase, provided that the products, accessories, packaging boxes, invoices and other items sold by the original manufacturer are intact and do not affect their secondary sales, you can choose after the inspection and confirmation by the service point authorized by the manufacturer. The items are sent back together for return and exchange;
8. The three-guarantee period for the core components of this host and power adapter is 1 years. This certificate shall not be altered, otherwise it will be regarded as invalid;

The following situations (including but not limited to) are not within the scope of the "Guarantees" service :

1. No "Guarantees" vouchers or missing valid invoices, or beyond the "Guarantees" service validity period;
 2. The use of expansion components or peripheral devices that are not approved by the company causes damage to the standard components of the product or causes malfunctions;
 3. Parts damage and product performance failure caused by abnormal reasons (including but not limited to foreign objects entering the equipment, transportation and moving bumps in bad environments, etc.);
 4. All equipment caused by force majeure such as earthquakes, fires and other natural disasters or accidents (stolen or lost) cannot work normally;
 5. Product performance failure caused by violation of the product instruction manual; unauthorized persons disassemble, repair, install or modify by themselves;
 6. The product is normally discolored, worn or consumed during use;

After-sales service guarantee card

Product model: _____ Proof of purchase: _____

Purchase Date: _____ Purchase Location: _____

Phone: Email:

Maintenance records:

[illegible]