


Extra Tall Cat Gate Assembly Instructions

Fit Opening:

About 36.2-37Inch

Fit Height:

 About 74.8-98.43Inch

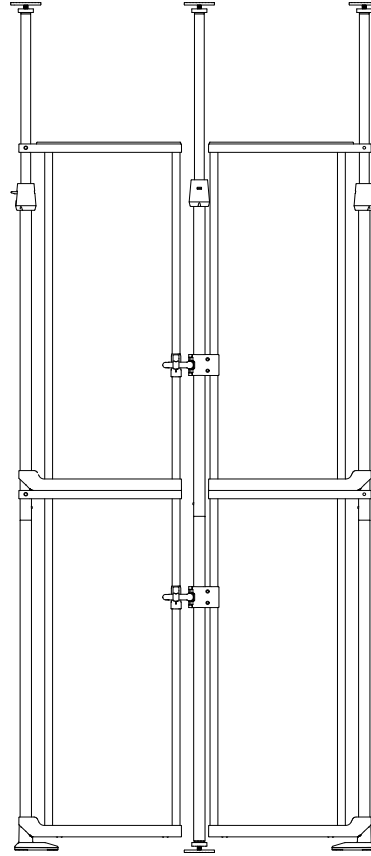


- Thank you for your purchase. Before using, please read the instruction manual carefully to avoid any accidents.
- Please install the gate on the floor, otherwise, it will get fingers stuck or cause any other accidents.

Parts

Please confirm all parts are ready for assembly.

⑧ Circle Screw X 4pcs

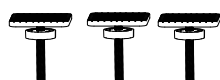


③

Adjustable Post
X 3pcs




④


Connecting Post
X 3pcs

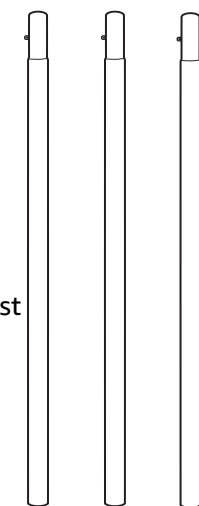



⑤ Non-Slip Base X 2pcs

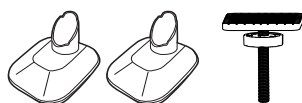

① Top Frame X 2pcs

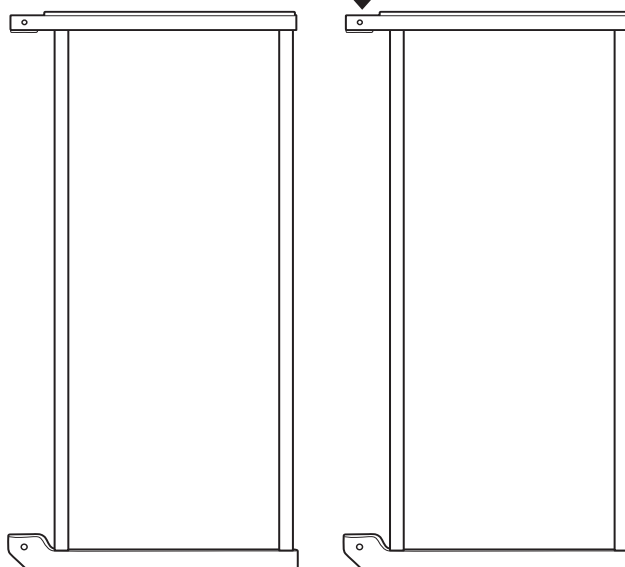


② Bottom Frame X 2pcs

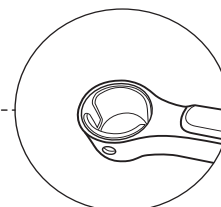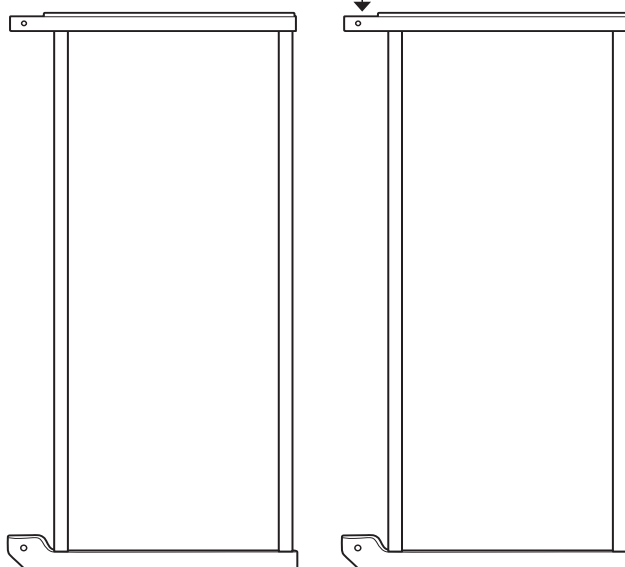


※ Rings inside


⑨ Latch X 2pcs

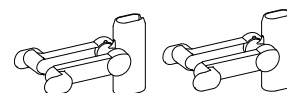


No rings inside

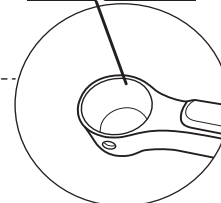




⑥ Latch X 2pcs

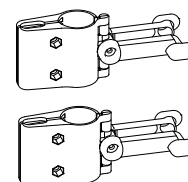


⑦ Fixing Pin X 2pcs

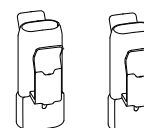

When set at door frame

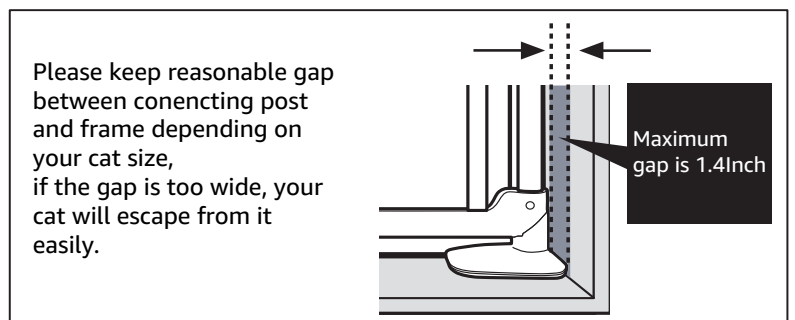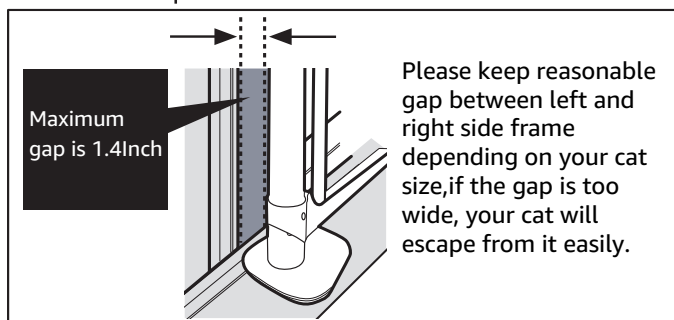
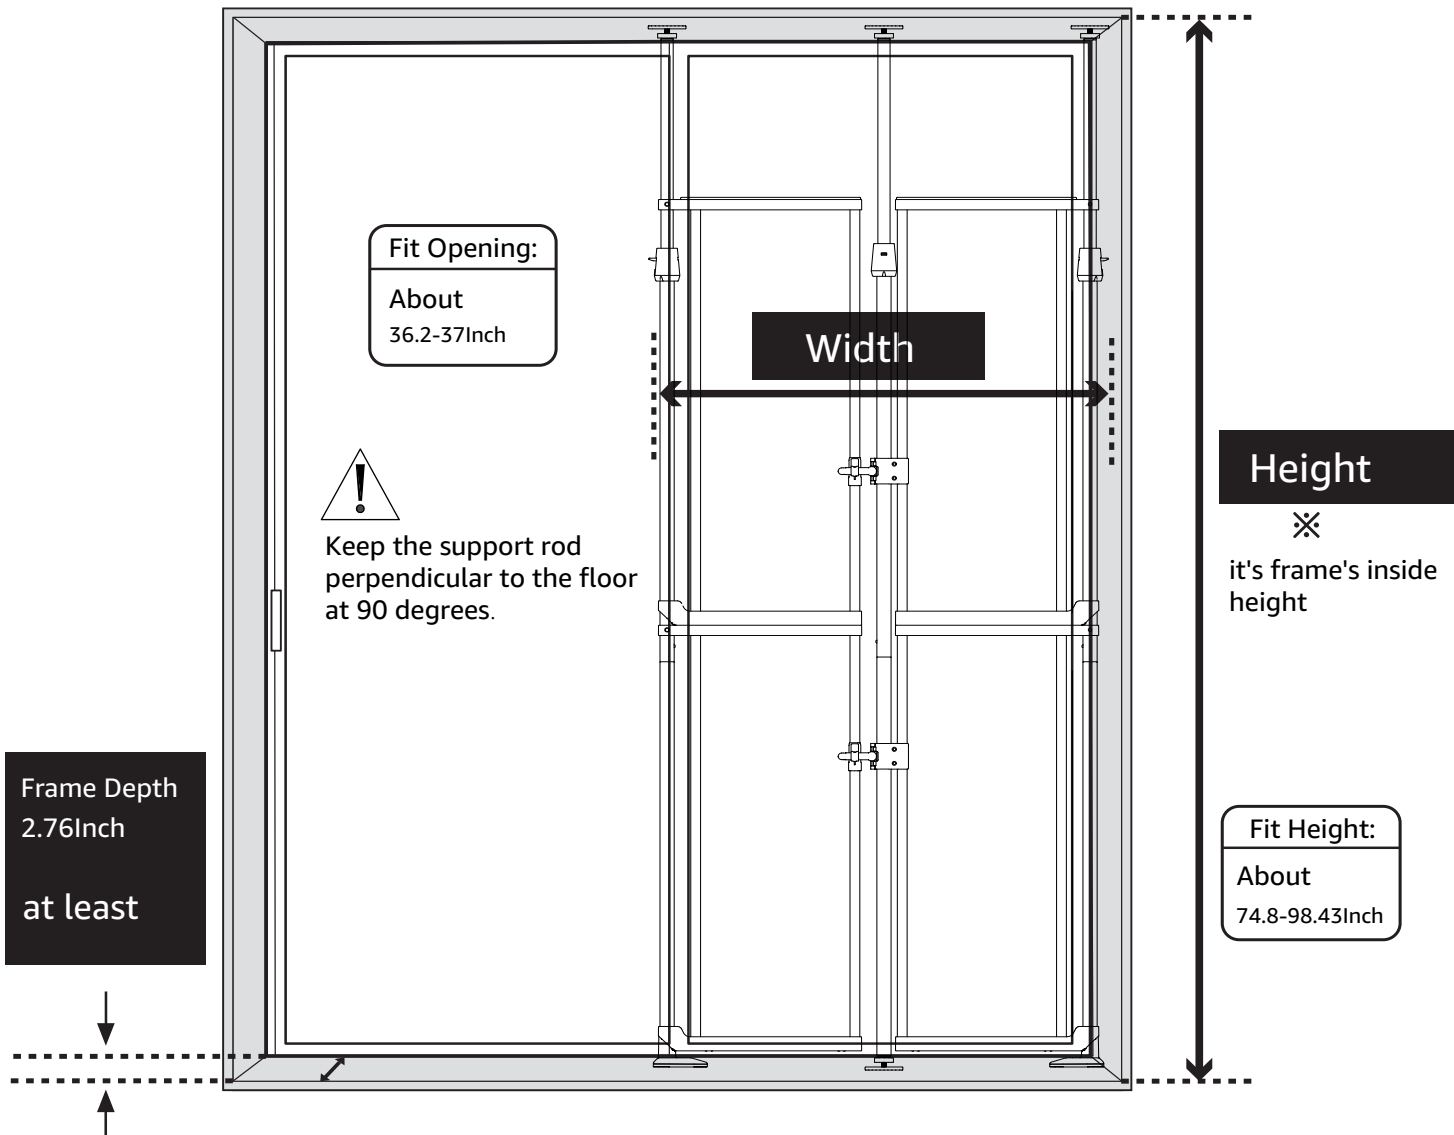


When set at entryway & passage

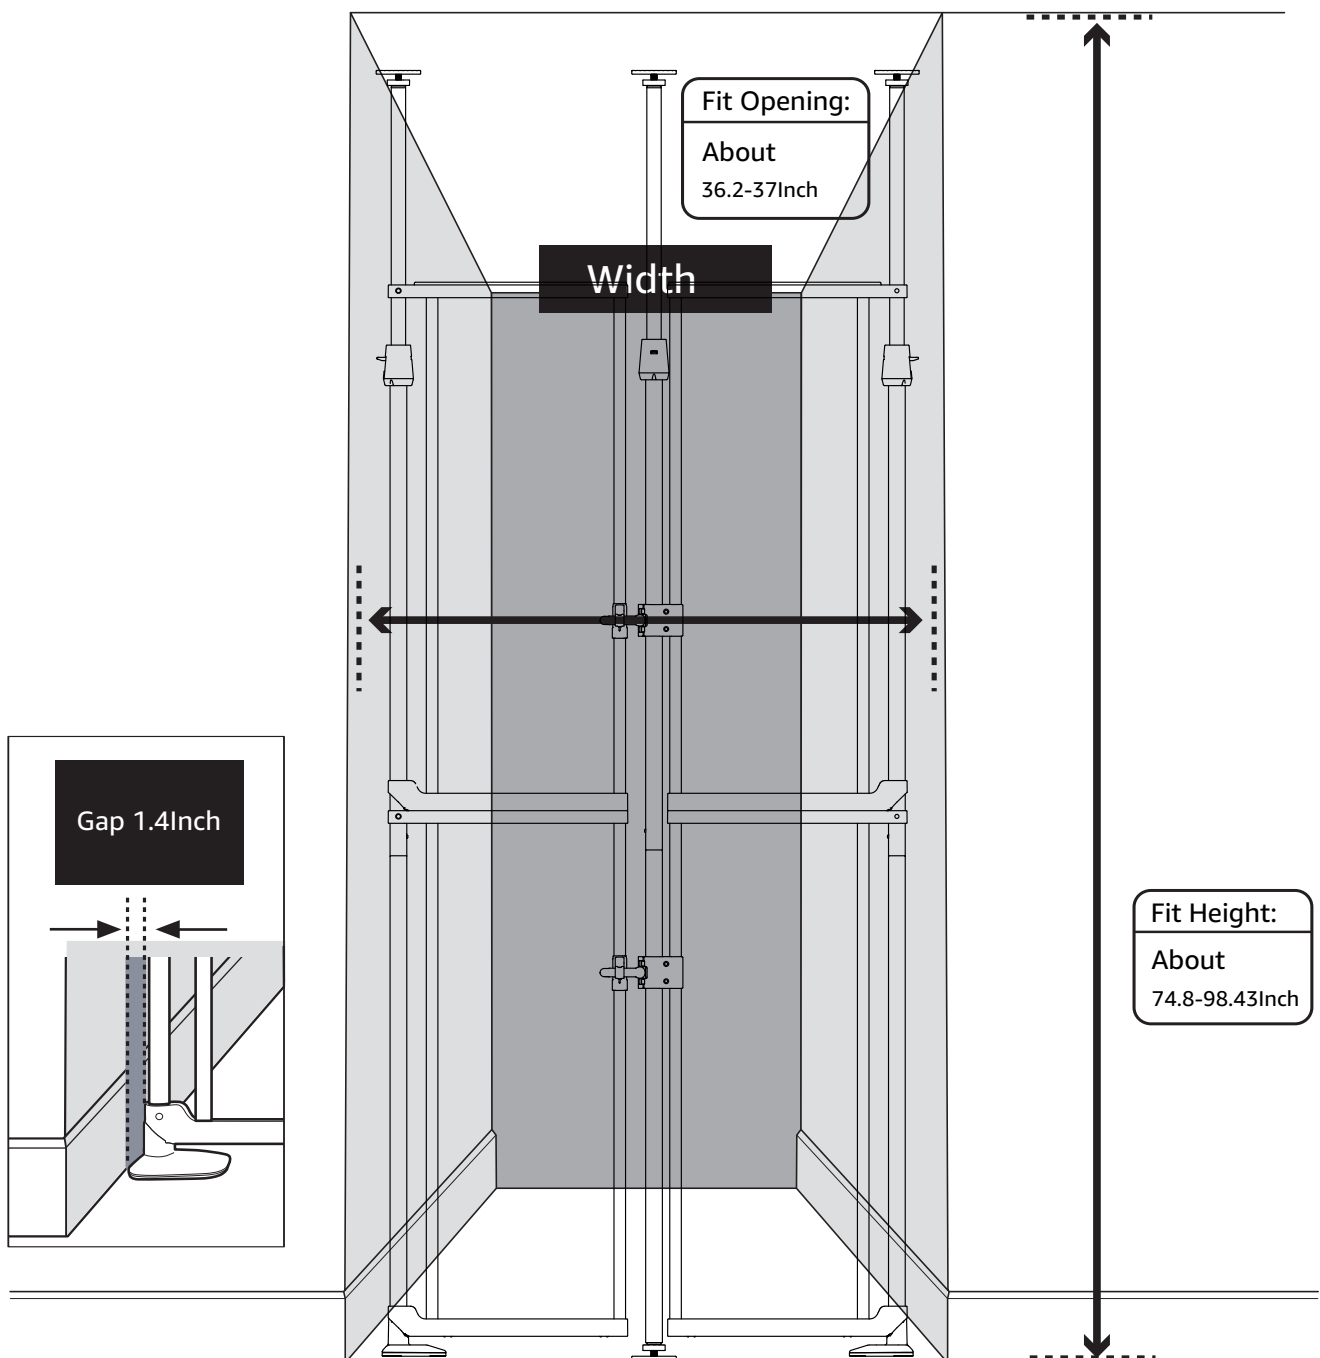


Assembly Instruction (For post and frame)

1 Connect post and frame(please follow below steps 1 to 8)

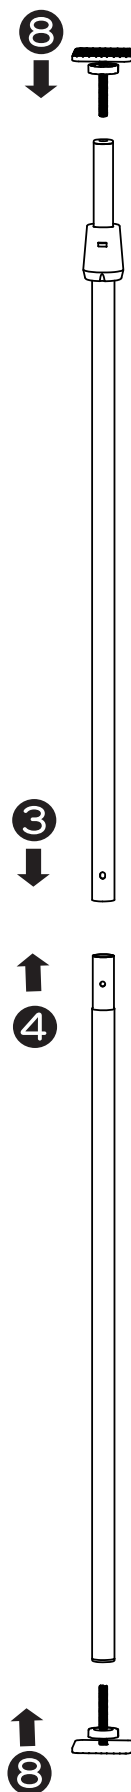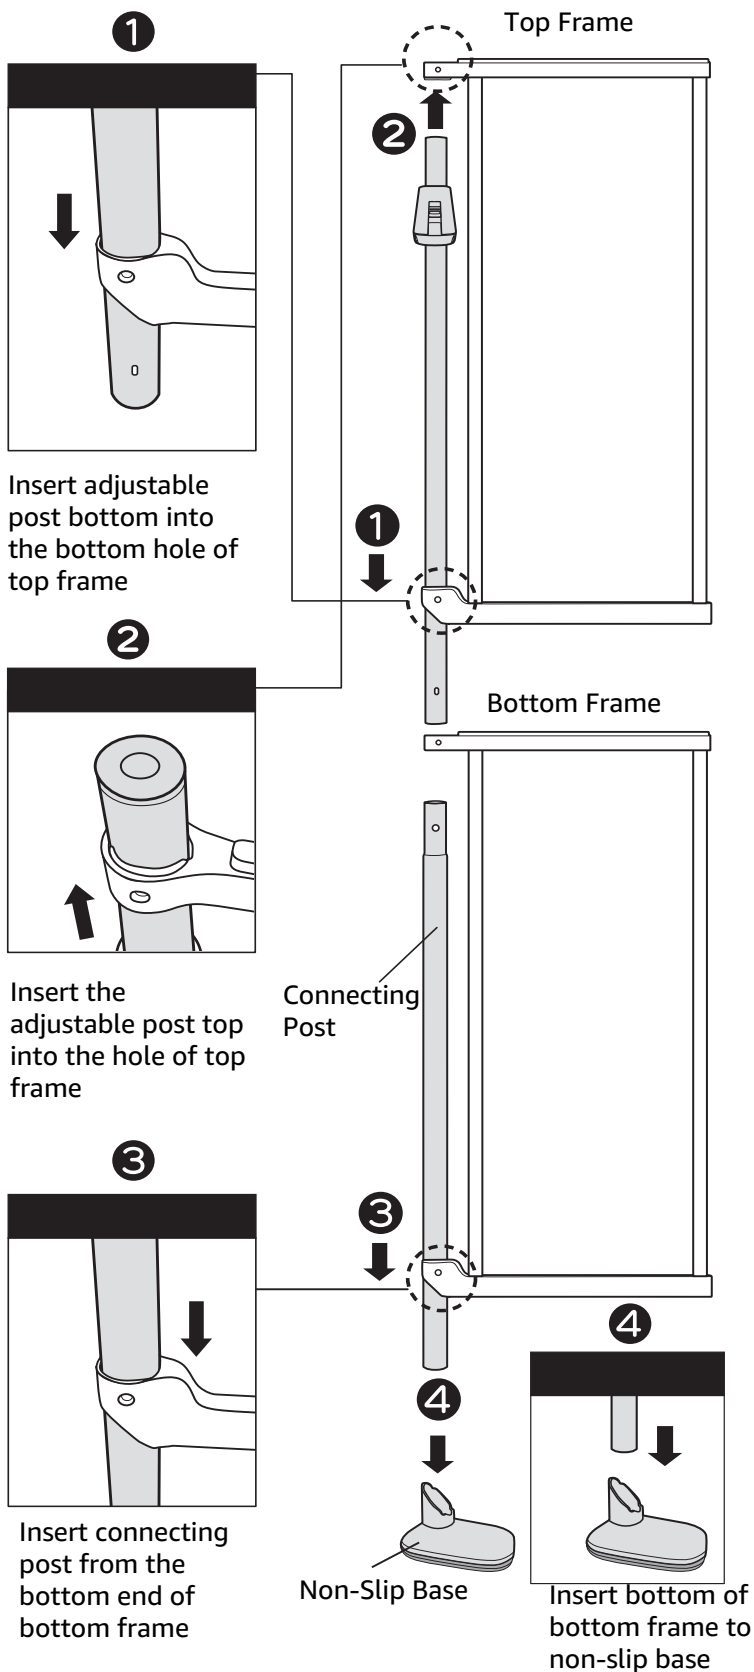






If you need disassembling , 1# frame can't be teardown until 3# tube is pulled out.

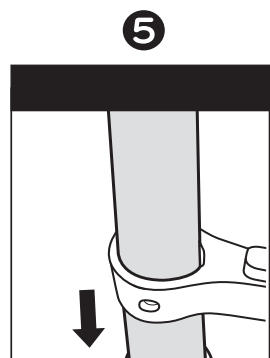


Insert adjustable post into the top of connecting post

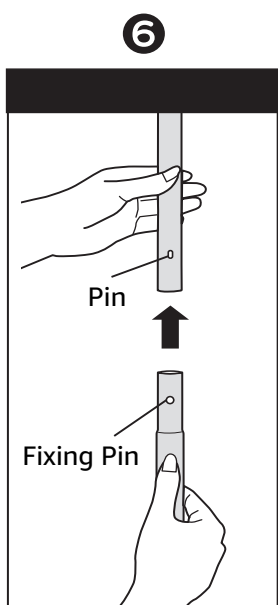


Fix top and bottom post through pin

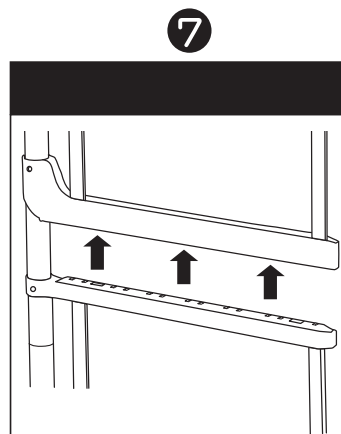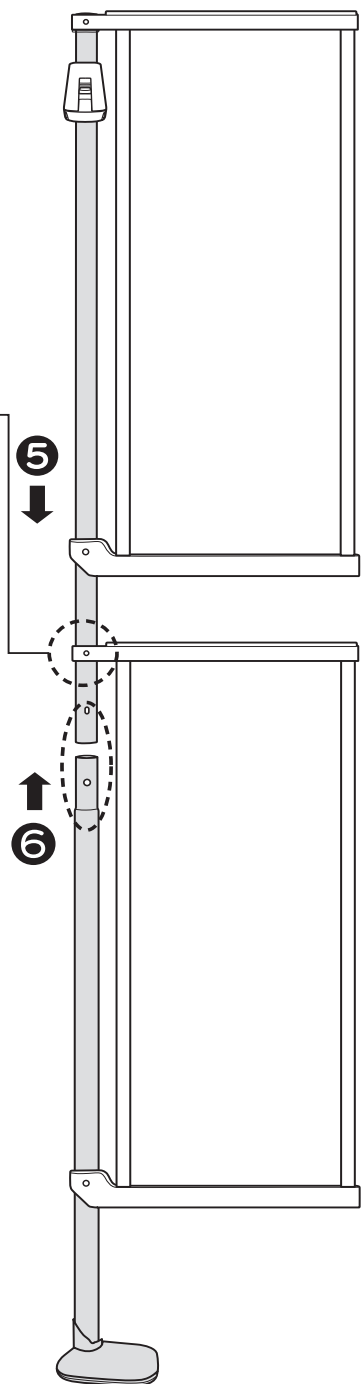

Connect top and bottom frame (press top frame for fixing)


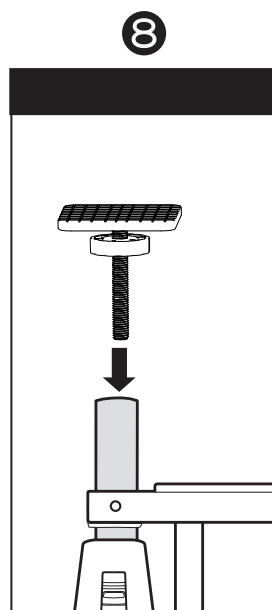


Insert circle screw into the top hole of adjustable post

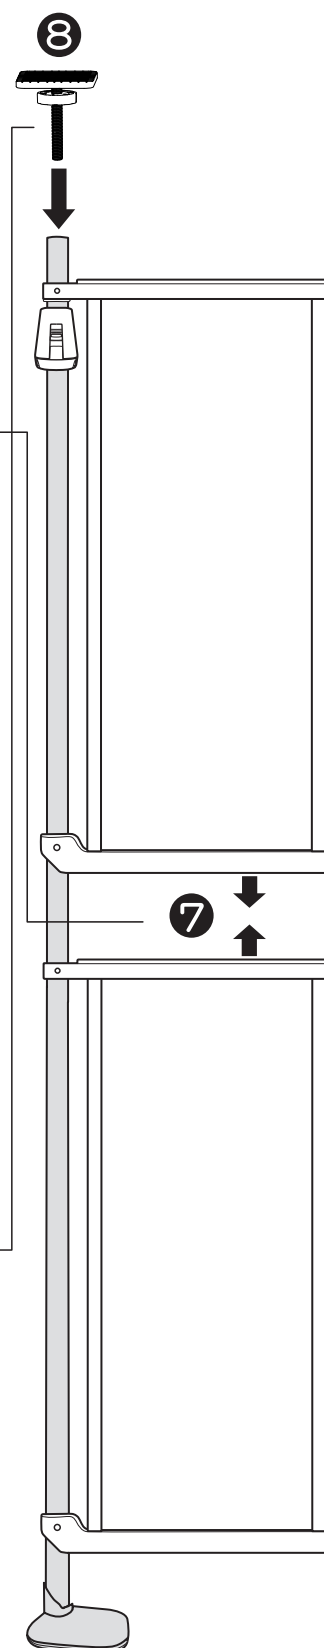


Assembly Instruction (For post and frame)

※ Please install right side frames like left side

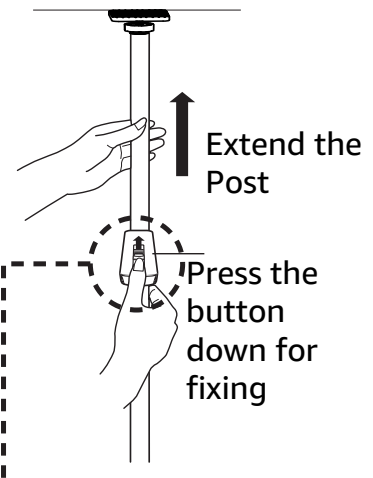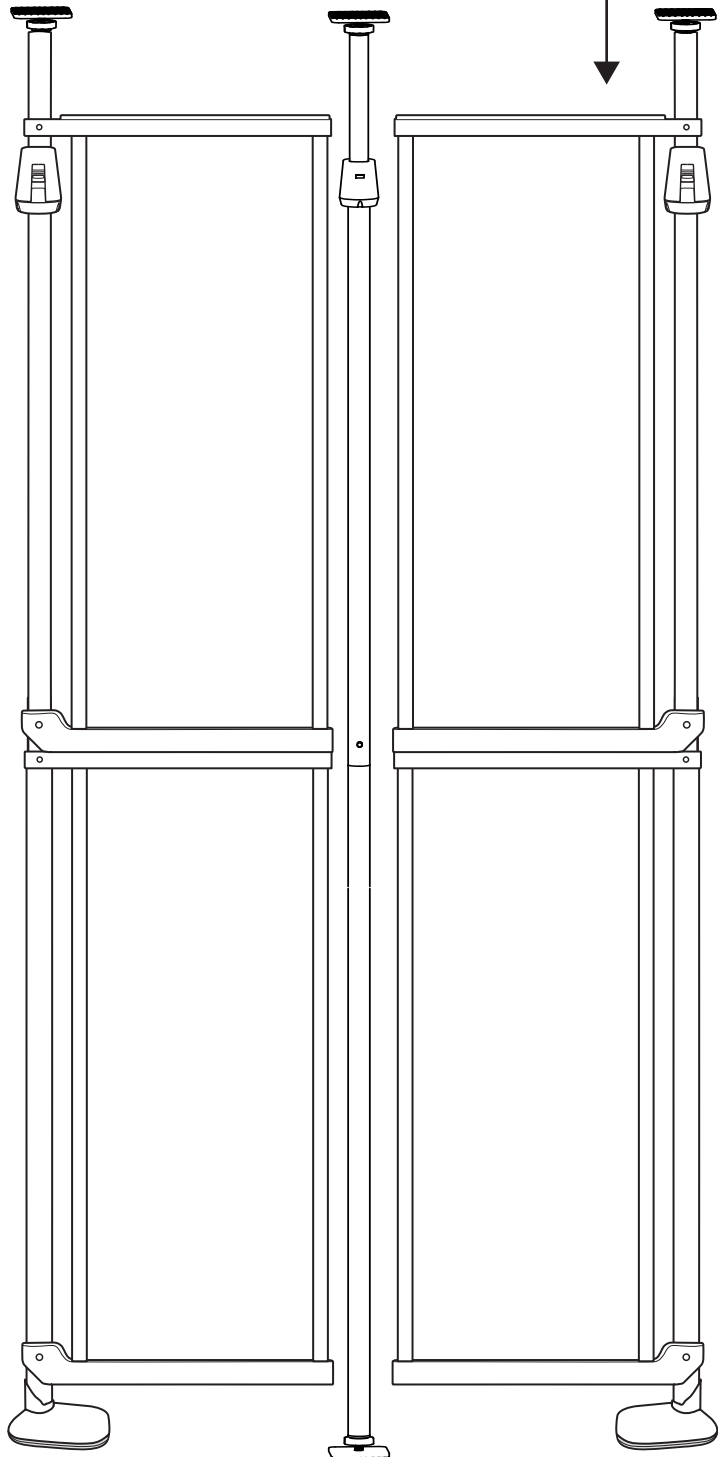

How to adjust the height

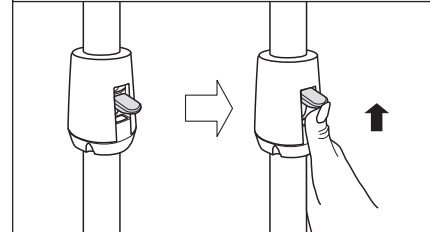


Pull the button up

Circle Screw

Vertical Setting


Twist the circle screw counterclockwise for fixing

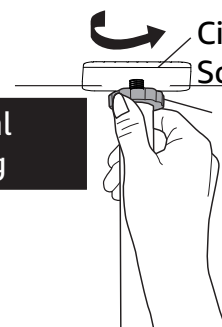


Assembly Instruction (Door and latch)

2 Install latch and fixing pin to gate as below diagram shown.






1
Latch

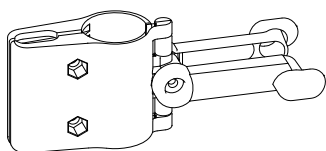

2
Fixing Pin

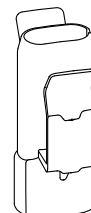

Press

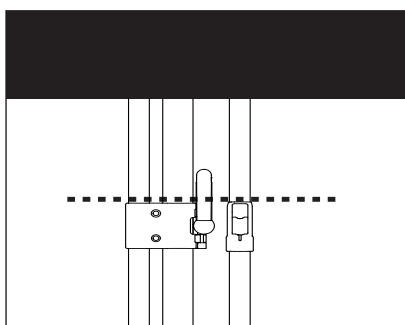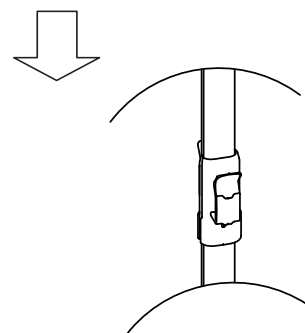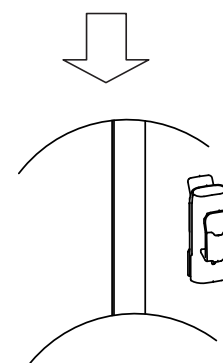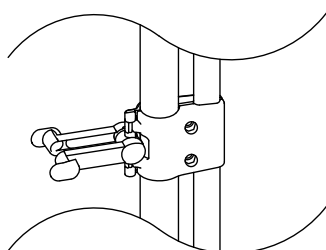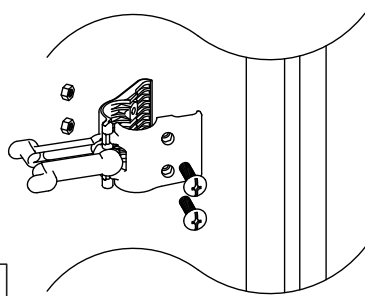

Keep the same level for left and right side parts.

How to open and close the gate door



How to open the door

① Unlock


- Slide the fixing pin

② Lift the latch

- Open the door with lifted latch

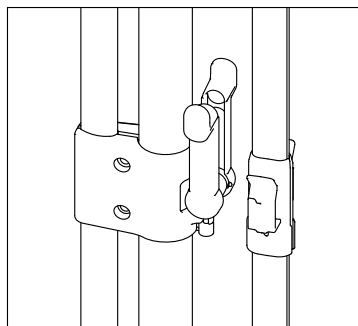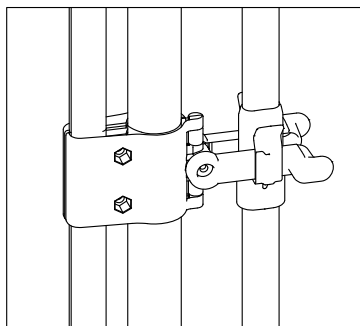

How to disassemble the gate

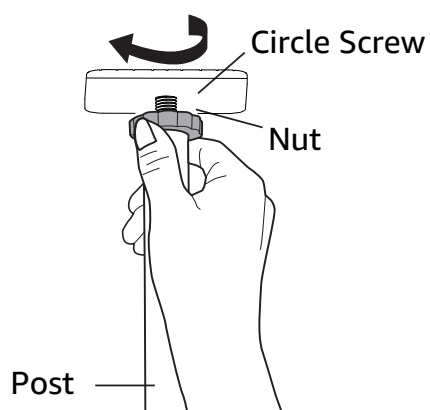

1

Twist the nut on clockwise, then take off the adjustable post from inserted location.

2


Please disassemble the frame and post in reverse order of how to assemble it. (Please refer to page 7 & 8)

⚠ Warning

Please must disassemble the frame and post in orders, otherwise, wall and ceiling will be damaged.

Assembly Instruction (Door and latch)

- 3** The center post is removable, you can install latch and fixing pin to gate as illustrated in the diagram below.

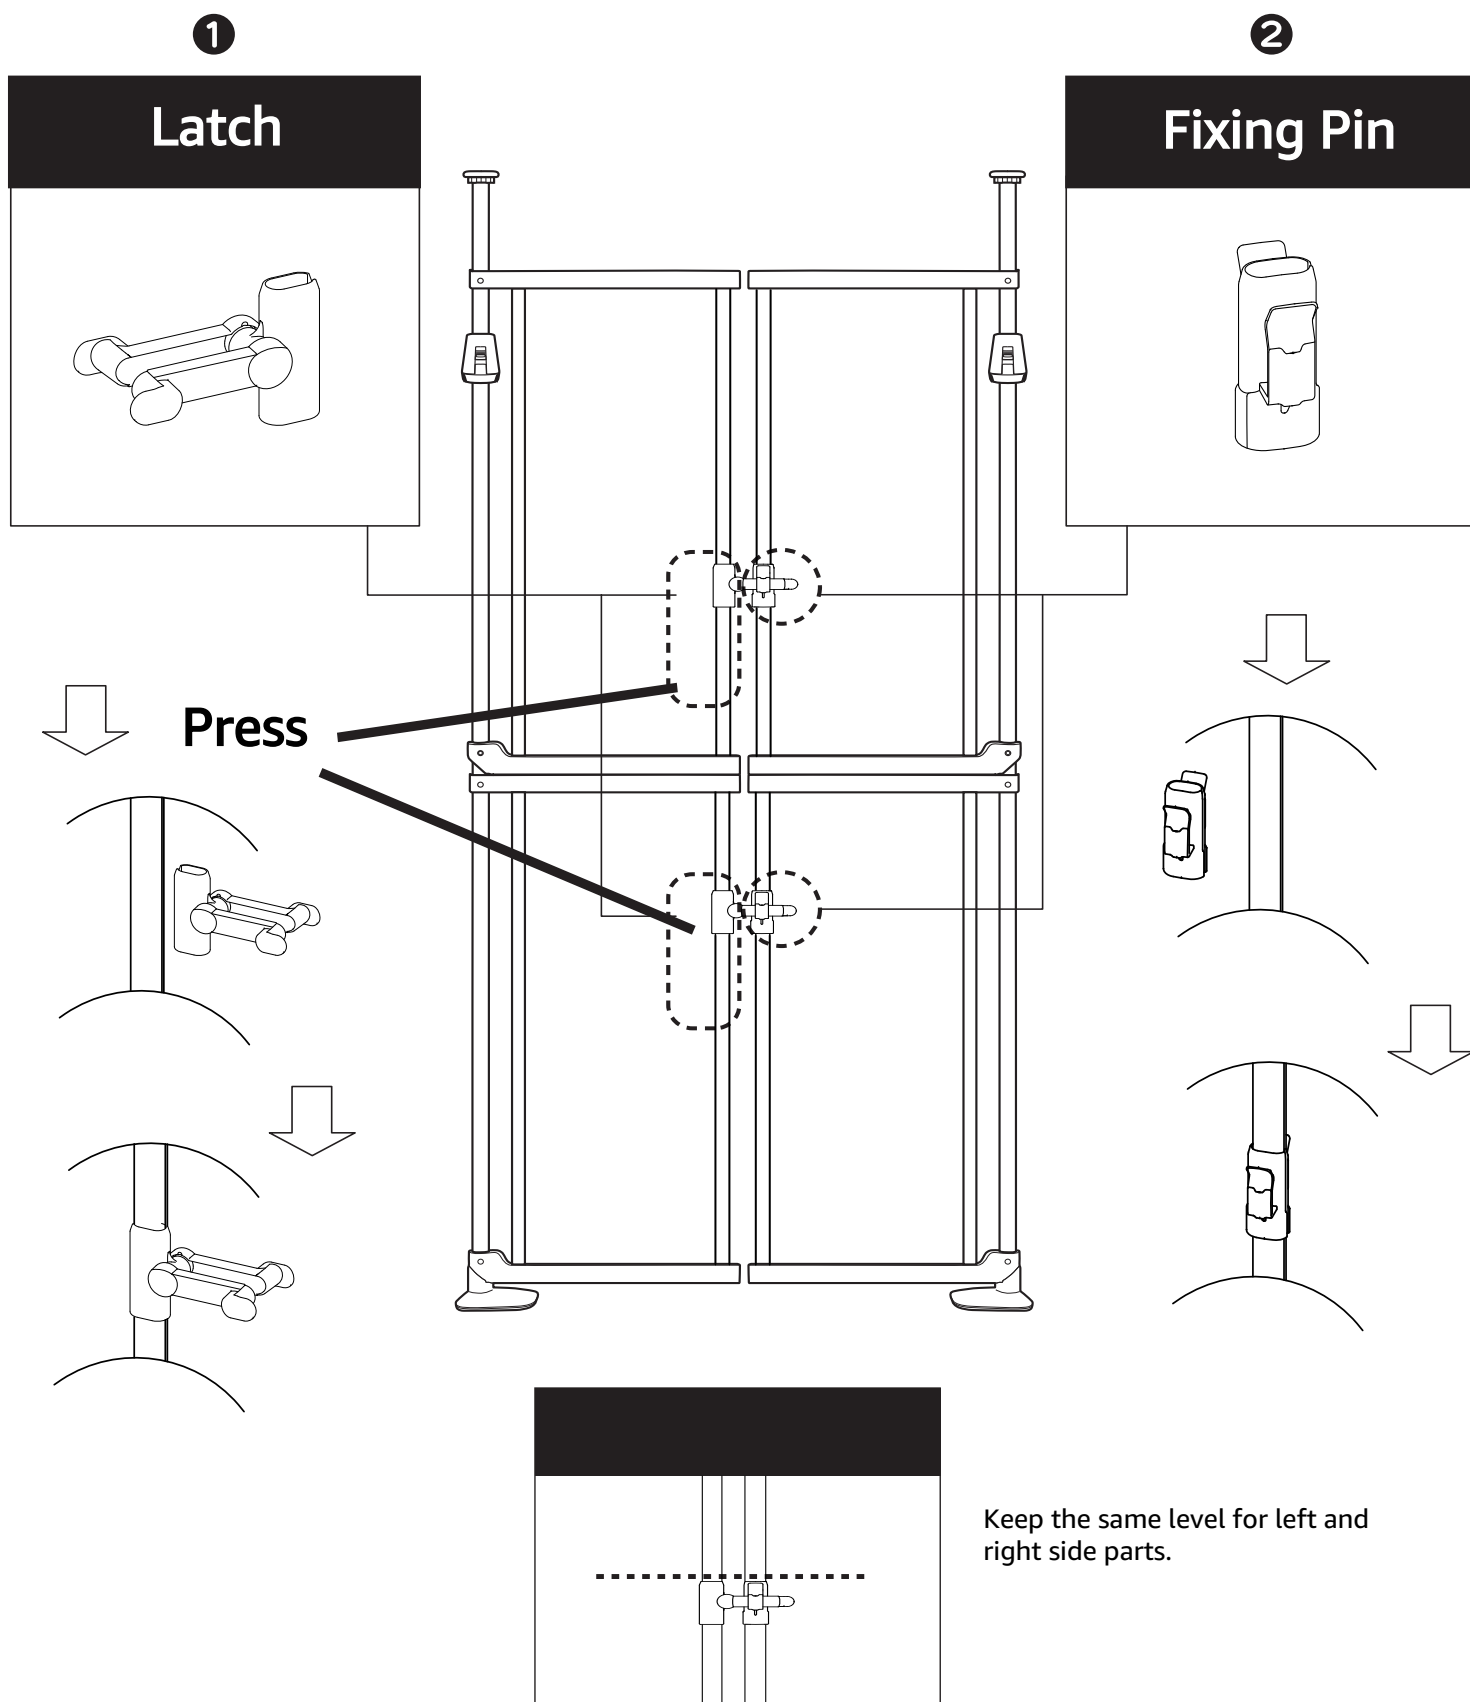


How to open and close the gate door

How to open the door


① Unlock

- Slide the fixing pin

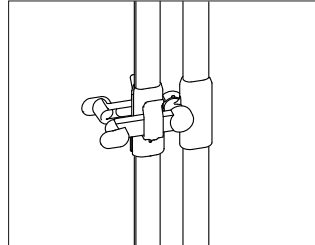


② Lift the latch

- Open the door with lifted latch

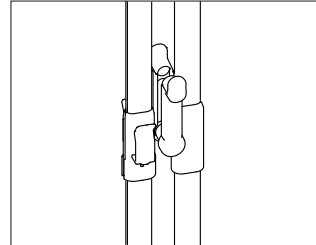

How to disassemble the gate

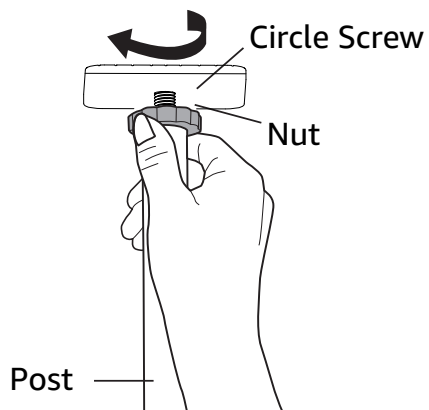

1

Twist the nut on clockwise, then take off the adjustable post from inserted location.

2

Please disassemble the frame and post in reverse order of how to assemble it. (Please refer to page 7 & 8)

⚠ Warning

Please must disassemble the frame and post in orders, otherwise, wall and ceiling will be damaged.