


INSTALLATION & ADJUSTMENT GUIDE

1. POSITIONING



Place the jack post on a solid, level foundation directly under the structural beam or floor joist.

2. SECURING

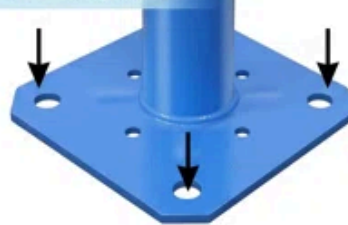

Use the pre-drilled holes in the heavy-duty base plate to bolt the post securely to the floor for maximum stability.

3. ADJUSTING



Rotate the central dual-helix adjustment rod using the handle to raise the top plate until it makes firm contact with the load.

4. MONITORING



Check the integrated safety window to ensure the screw remains within the safe operating range during adjustment.



LOAD CAPACITY:
10,000 LBS



ADJUSTABLE RANGE:
11.5 IN - 20 IN



MATERIAL:
Heavy-Duty Reinforced Steel