 


EN | DE | FR | ES | IT | PL

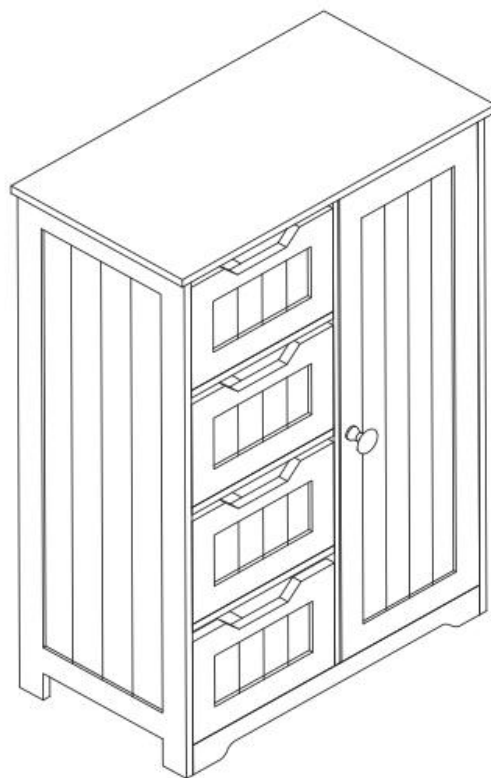

**USER'S MANUAL/HANDBUCH
/MANUEL DE L'UTILISATEUR/MANUAL DEL USUARIO
/MANUALE UTENTE/INSTRUKCJA OBSŁUGI**

A x12



B x12



C x26



D x3



E x29



F x1



G x32



H x3



I x1



J x24



K x2



L x1



M x1



N x4



O x4



P x8



Q x1



 
R x1



S x2



1 x1

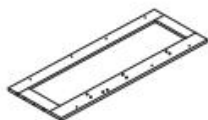

2 x1



 
3 x1



4 x2



 
5 x1

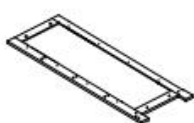

6 x1



 
7 x1



8 x8



9 x1



10 x4



 
11 x4



12 x1



13 x4



 
14 x1

 


15 x1





 
16 x1

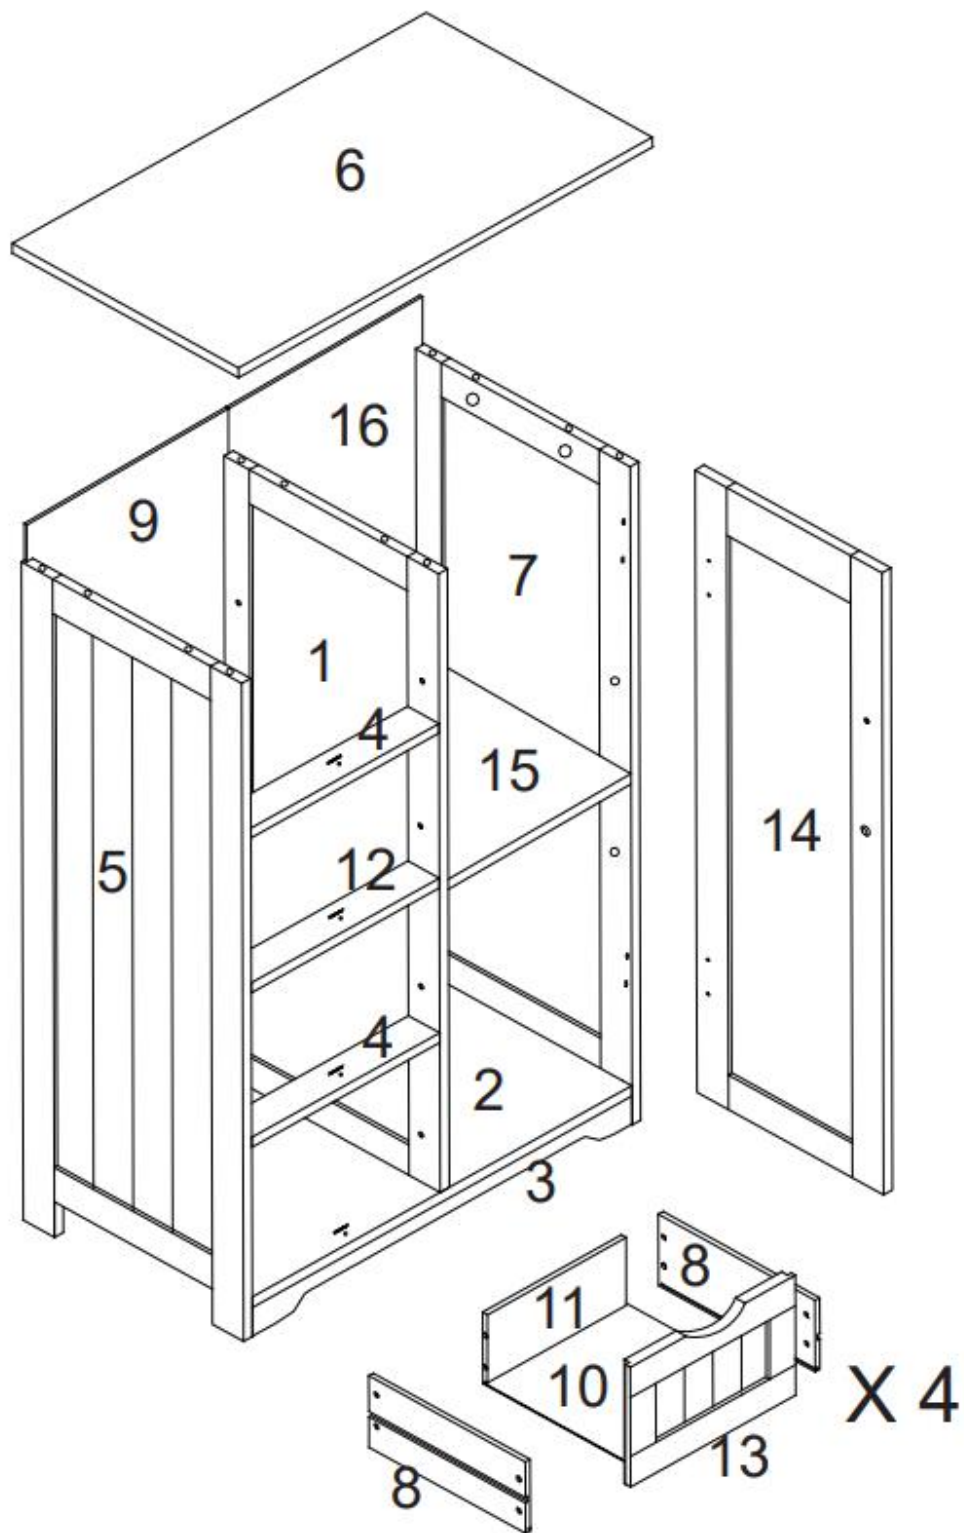



1

 
E	 3x12mm	x 16
P		x 8

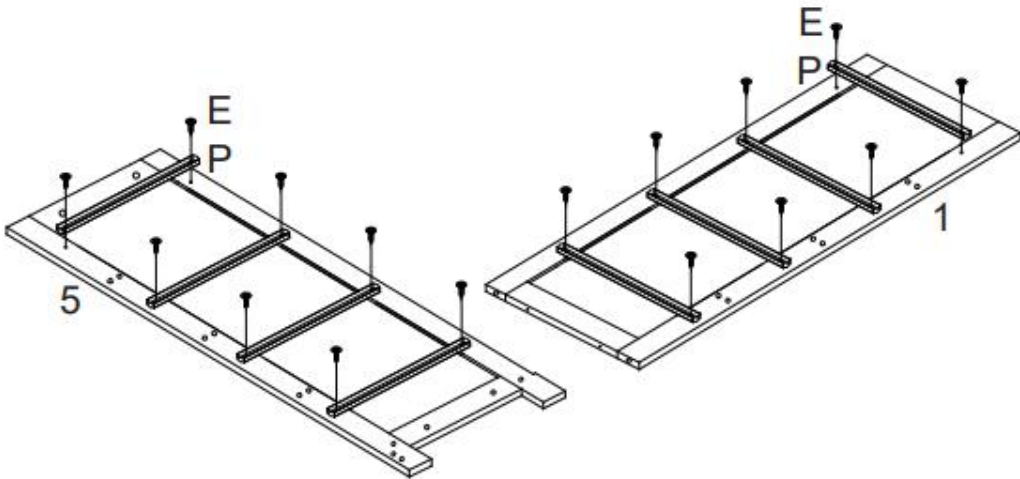




2

 
DEVANT / VORDER / FRONT
FRENTE / DAVANTI / PRZÓD

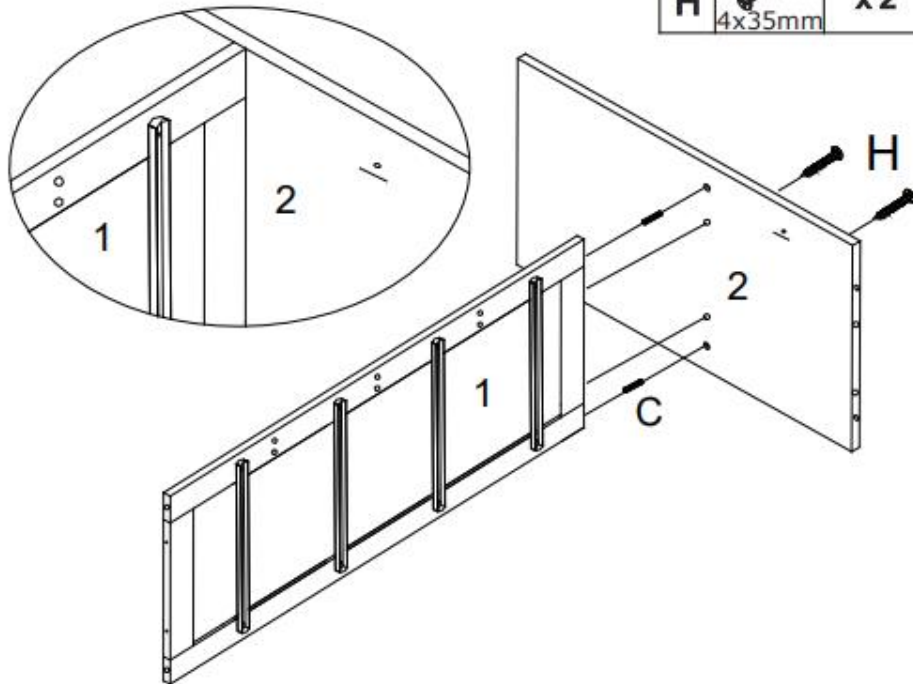C		x 2
H	 4x35mm	x 2






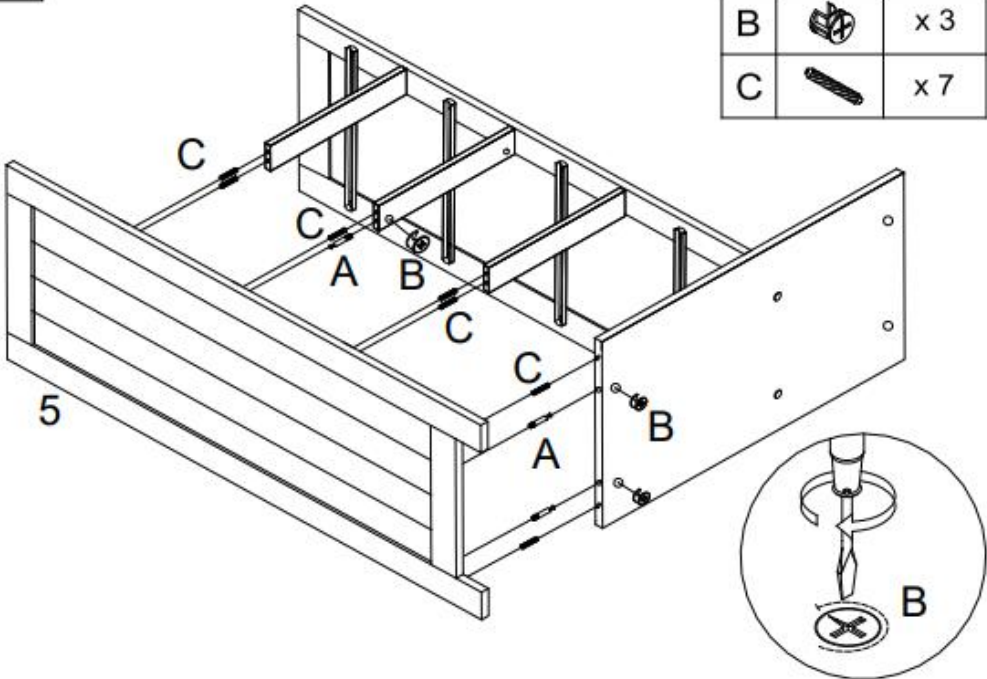 
3

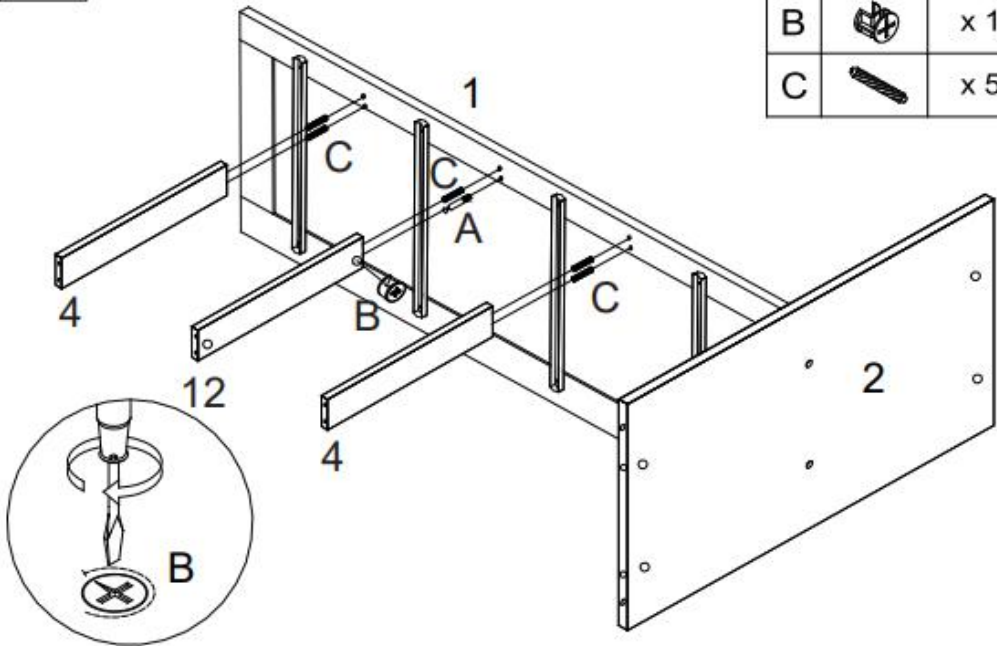A		x1
B		x1
C		x5



 
4

A		x3
B		x3
C		x7



 
5

C		x2
---	---	----

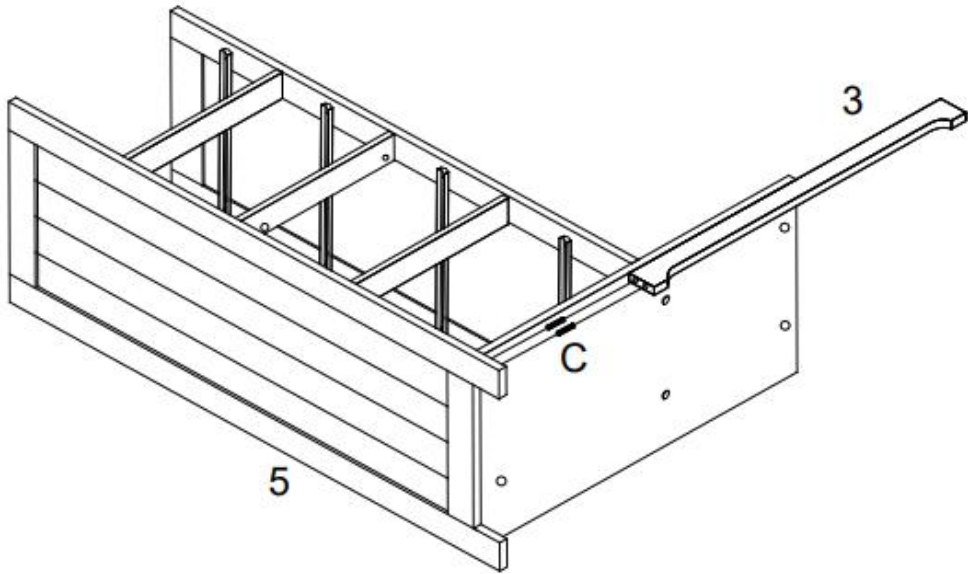

 
6

A		x2
B		x2
C		x4

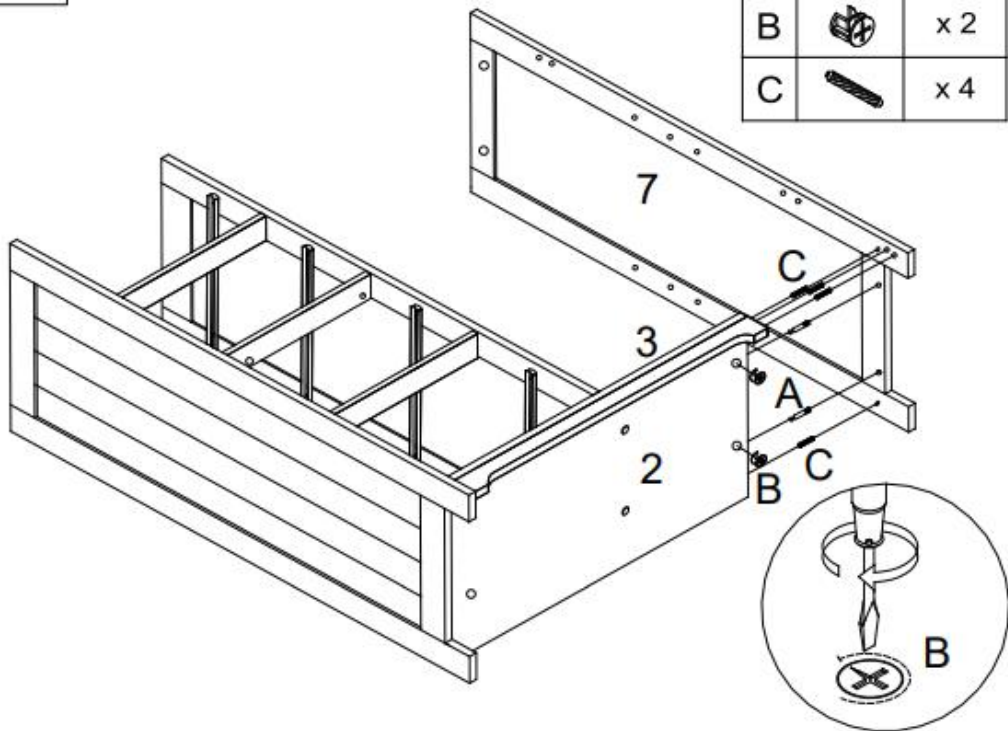




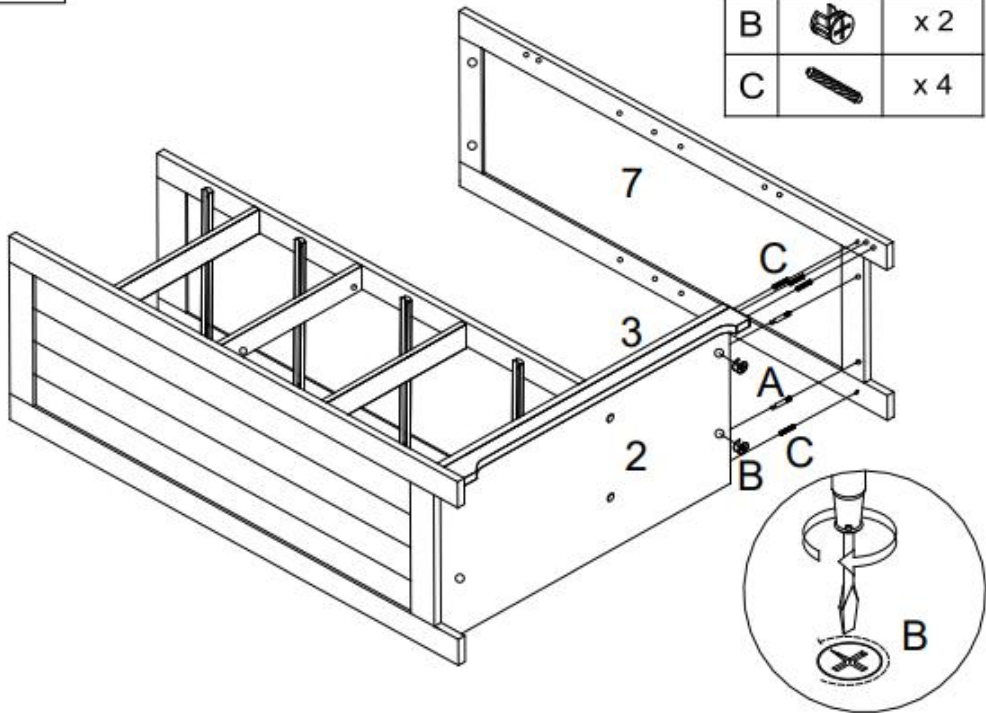 
5

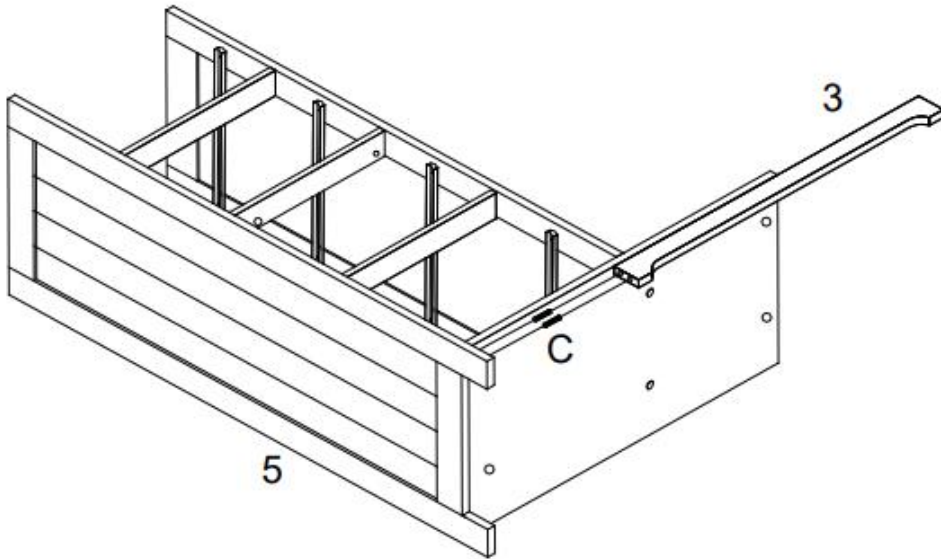C		x2
---	---	----

 


6

A		x2
B		x2
C		x4

 
 
 


7

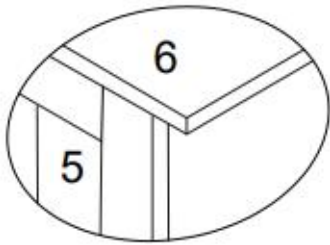



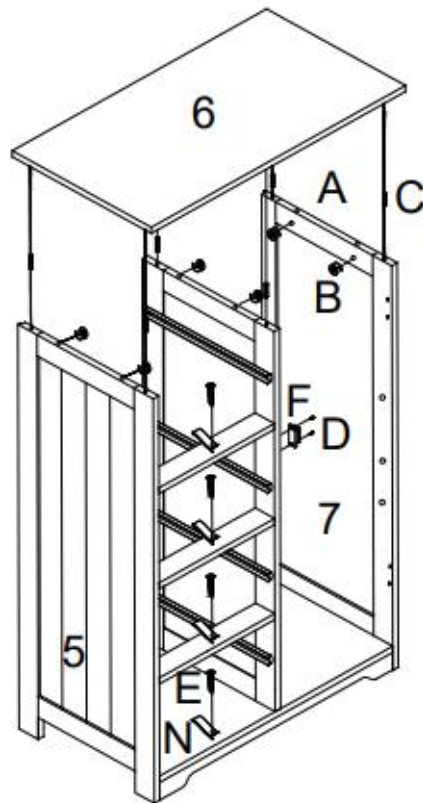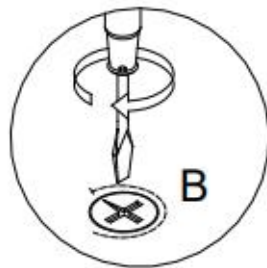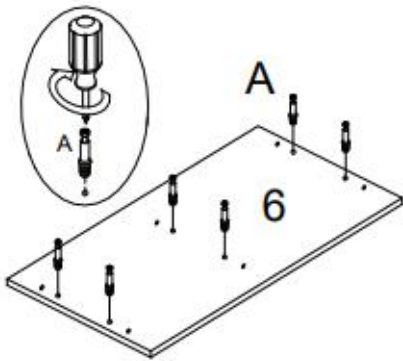

 
DEVANT / VORDER / FRONT
FRENTE / DAVANTI / PRZÓD

A		x 6
B		x 6
C		x 6
D	 3x14mm	x 2
E	 3x12mm	x 4
F		x 1
N		x 4






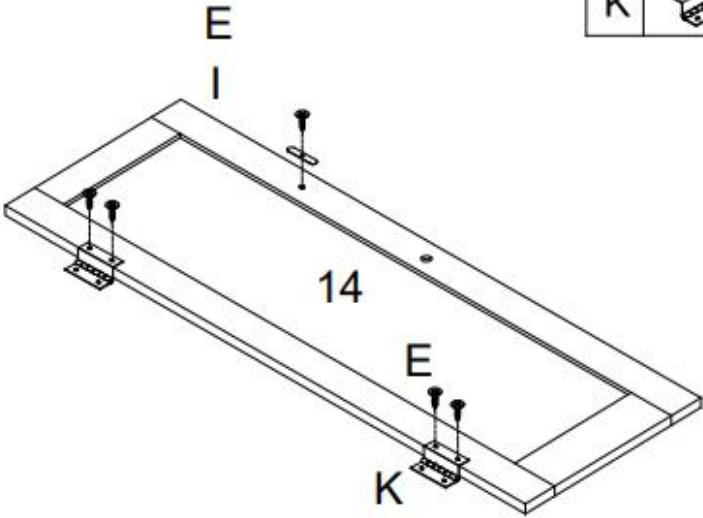 
8

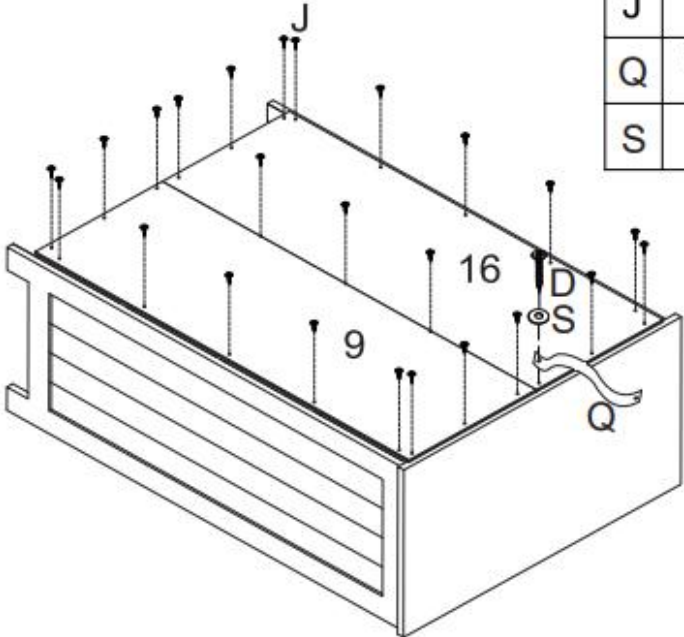D	 3x14mm	x 1
J		x 24
Q		x 1
S		x 1

 





9

E	 3x12mm	x 5
I		x 1
K		x 2

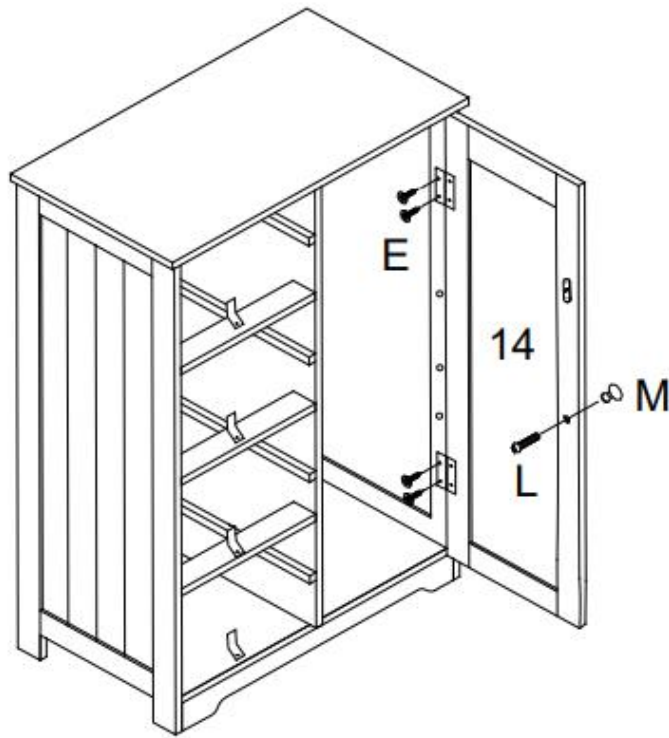 


10



E	 3x12mm	x 4
L		x 1
M		x 1

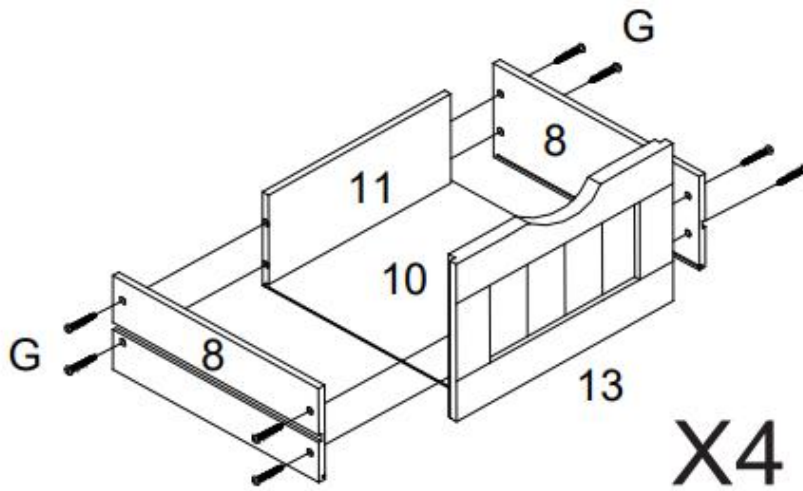


11



G	 3x25mm	x 32
---	--	------

X4

12

H	 4x35mm	x 1
O		x 4
R		x 1

