



 

# ASSEMBLY INSTRUCTION

## DESCRIPTION : 42" ROUND DINING TABLE


Read this instruction carefully. Refer hardware and furniture parts list for guidance. Be sure all parts are complete before assembling. Place all wooden furniture part on a clean and flat soft surface to prevent scratches. Refer steps provided as assembling guide.

PART LIST		
ITEM	DESCRIPTION	QTY
A	TABLE TOP	1 pc
B	PEDESTAL	1 pc
C	MOUNTING PLATE	1 pc
D	LEG	4 pcs



HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	BOLT $\phi$ 1/4" X 40mm	6 pcs
2	BOLT $\phi$ 5/16" X 40mm	4 pcs
3	HEX NUT $\phi$ 5/16" X 12mm	8 pcs
4	LOCK WASHER $\phi$ 5/16" X 1/2"	18 pcs
5	FLAT WASHER $\phi$ 5/16" X 1/2"	18 pcs
6	ALLEN KEY	1 pc
7	WRENCH	1 pc

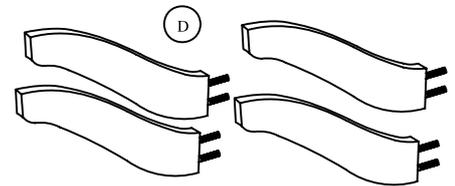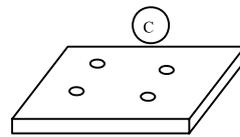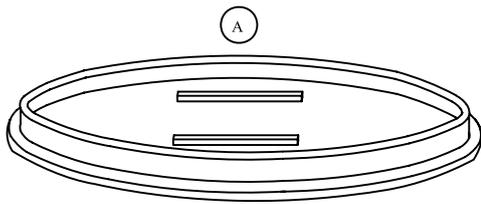


STEP 1 : Attach Mounting Plate (C) on the top of Pedestal (B), tighten with Flat Washer (5), Lock Washer (4) and Bolt(2) with allen Key (6)

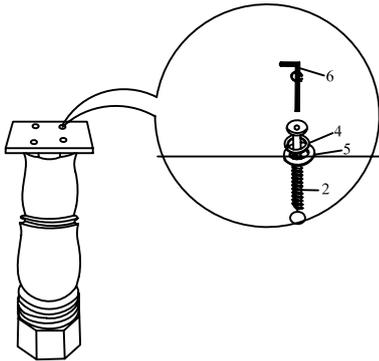

STEP 2: Put Assembled with Mounting Plate on the Bar , tighten with Flate(5), Lock washer (4) and Bolts(1) with Allen Key(6)

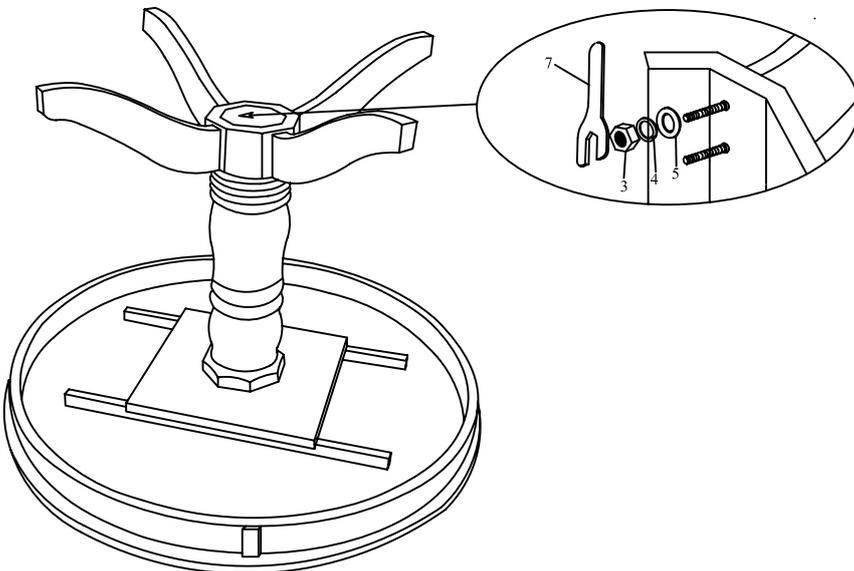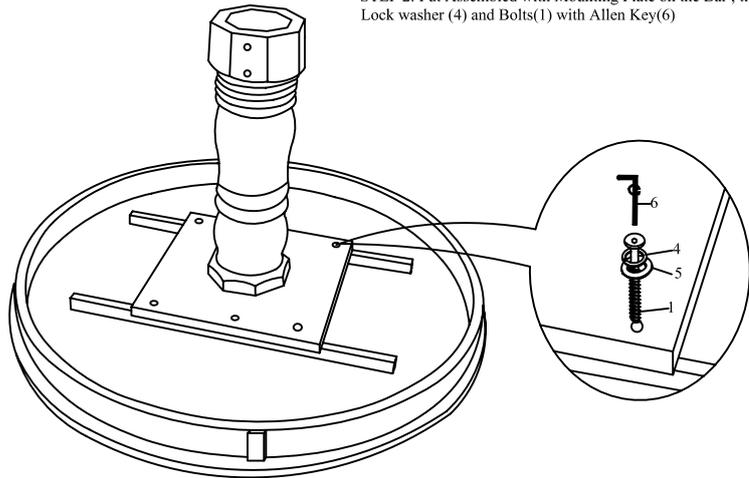



STEP 3: Attach the Leg (D) to the Pedestal (B), tighten all with Flat Washer (5), Lock Washer(4) and Hex Nut (3) with Wrench(7)

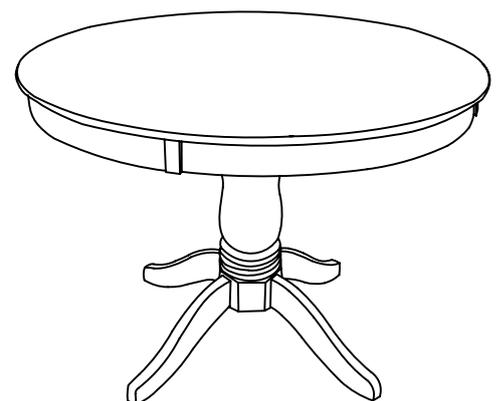

**NOTE: DO NOT TIGHTEN UNTILL COMPLETELY ASSEMBLE.**

 
# ASSEMBLY INSTRUCTION

<b>A</b> CHAIR BACK  1PC	<b>B</b> SEAT CUSHION  1PC	<b>C</b> FRONT LEG  2PCS	<b>D</b> LOCK WASHER 5/16"  9PCS
<b>E</b> FLAT WASHER 5/16"  9PCS	<b>F</b> BOLT 5/16"X3-1/2"  4PCS	<b>G</b> BOLT 5/16"X2-1/2"  4PCS	<b>H</b> BOLT 5/16"X2"  1PC
<b>I</b> ALLEN KEY 5MM  1PC	<b>J</b> WOOD PLUG Ø10*35MM  2PCS		

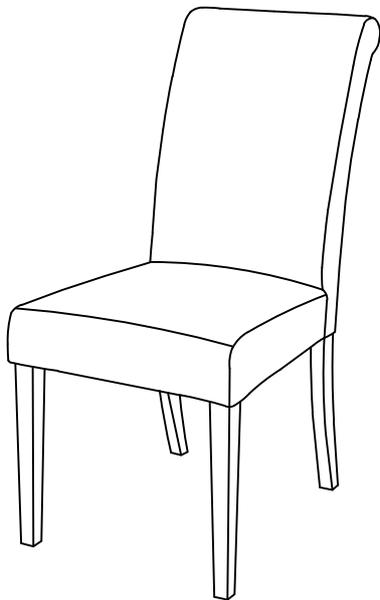


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**1** Attach the Front legs(C) to Seat(B) with Lock washer(D) and Flat washer(E) and Bolt(G) by Allen key(I).

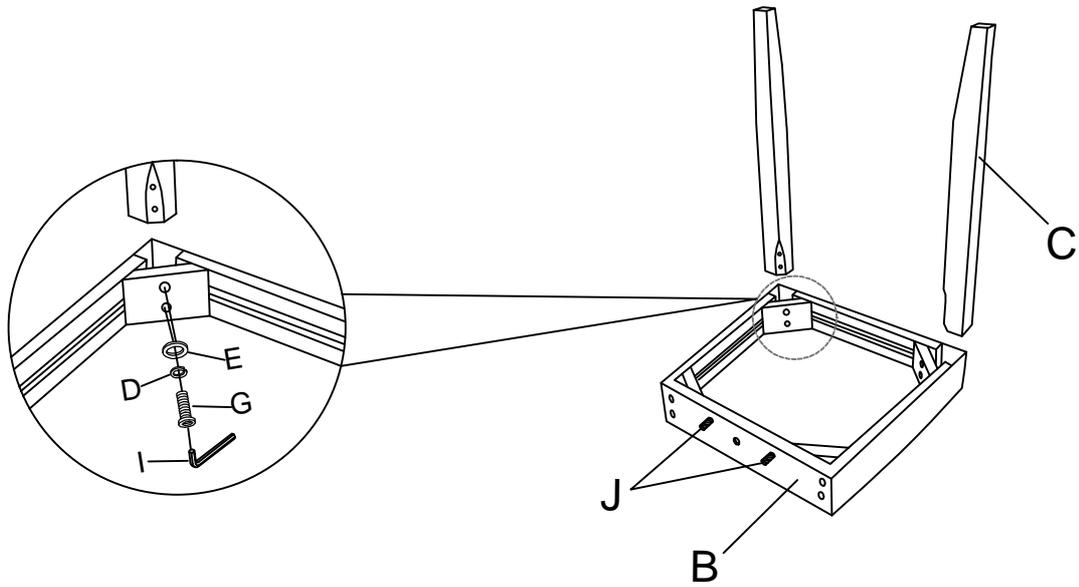

**2** Attach the Chair back(A) to Seat(B) with Wood plug(J), then lock them using Lock washer(D), Flat washer(E), Bolt(F) and Bolt(H) by Allen key(I).

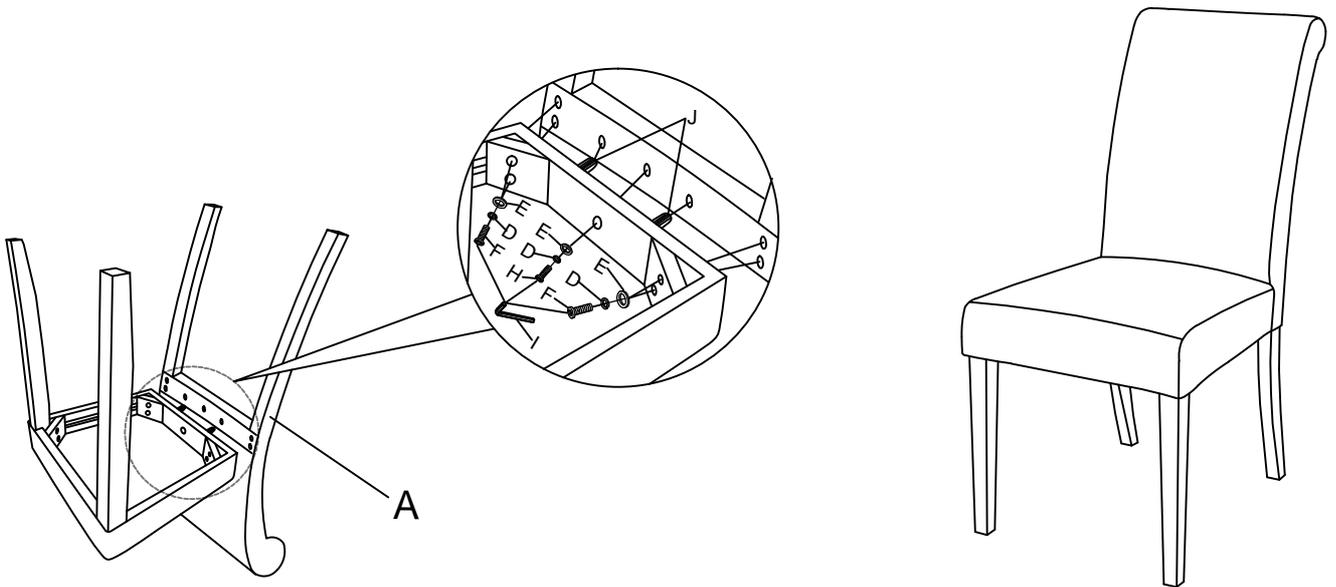

#### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.