


HARDWARE LIST			
A	O January	M6 x 30 Bolt	16
B		M6 x 15 Bolt	10
C	(M) INDIAN	M7 x 40 Screw	4
D		Cam Lock	4
E	Dinger	M4 x 15 Screw	48
B		Shelf Pin	12
G	Commo	M4 x 20 Screw	8
H		Magnetic Door Catch	4
	Comme	M3 x 15 Screw	8
J		Door Hinge	8
K		M4 Alen Key	1

Ensure that all parts and hardware are available bofore beginning assembly.

Follow each step carefully to ensure the proper assembly of this product.

Two people are recommended for ease in the assembly of this product.


A Phillips head screwdriver, pencil, hammer and tape measure is required for the assembly of this product.

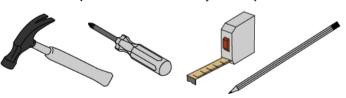



Not included.


Power tools should not be used to assemble this product.




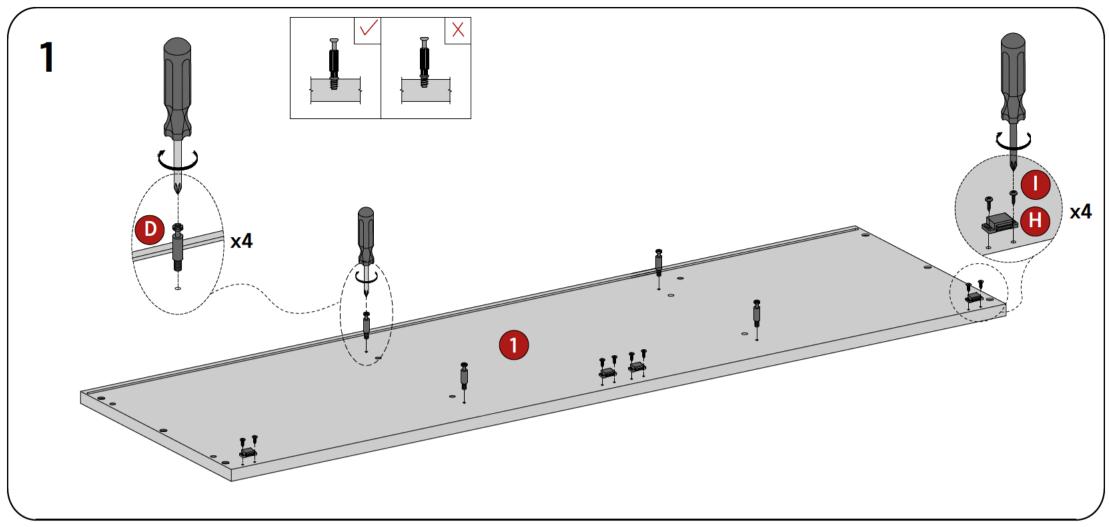


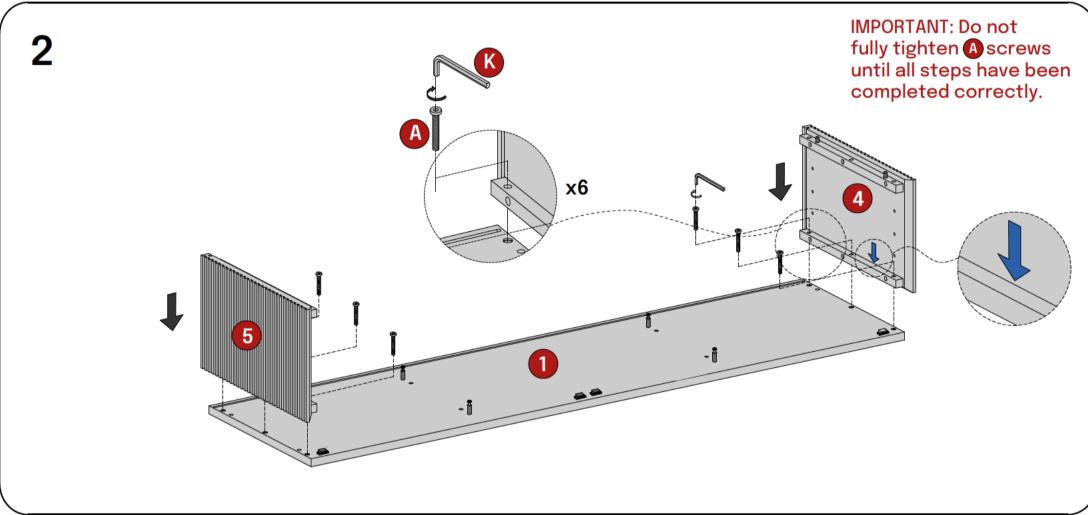


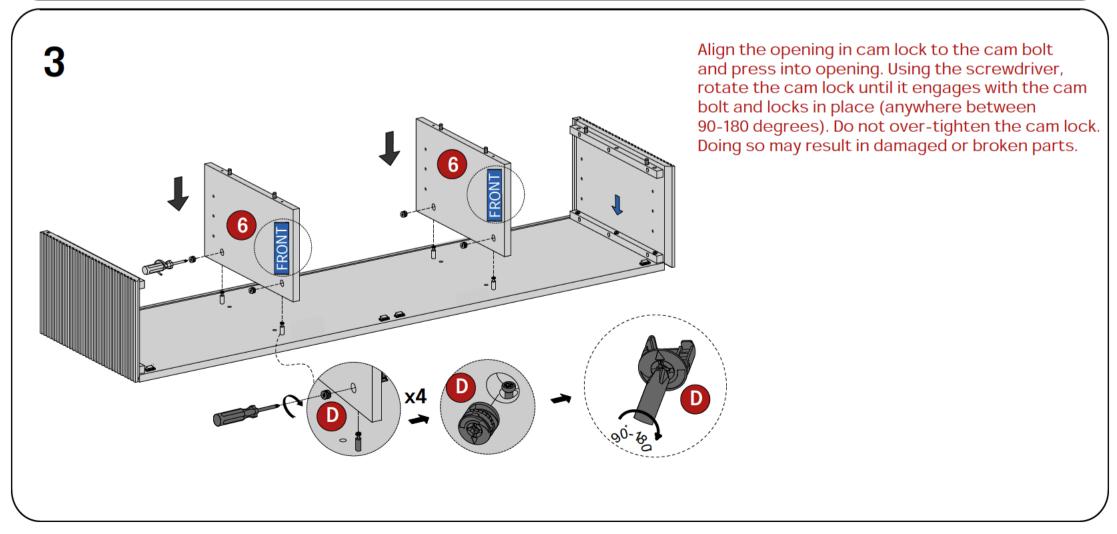


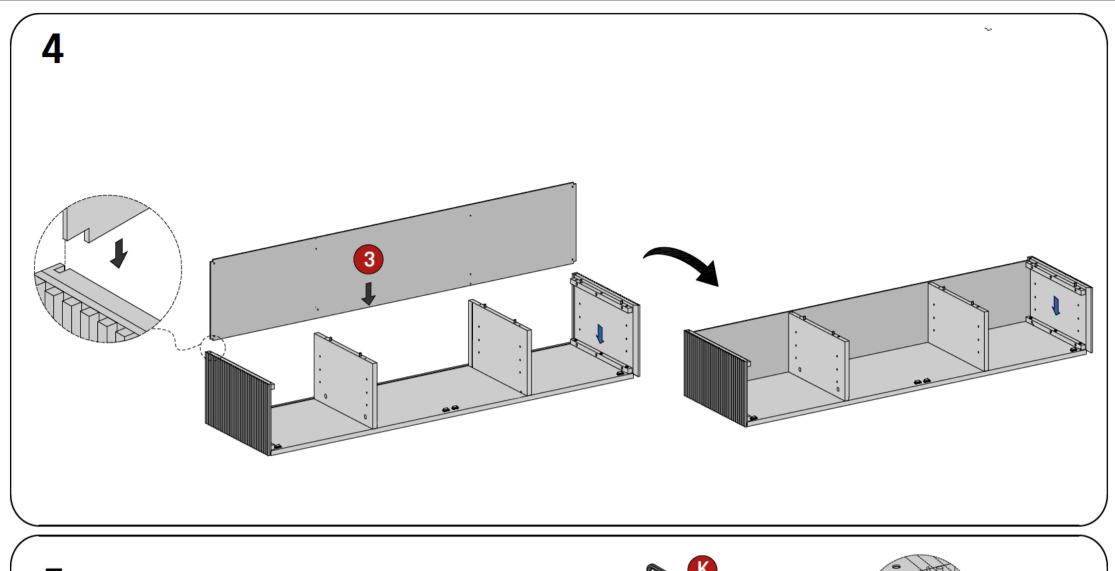


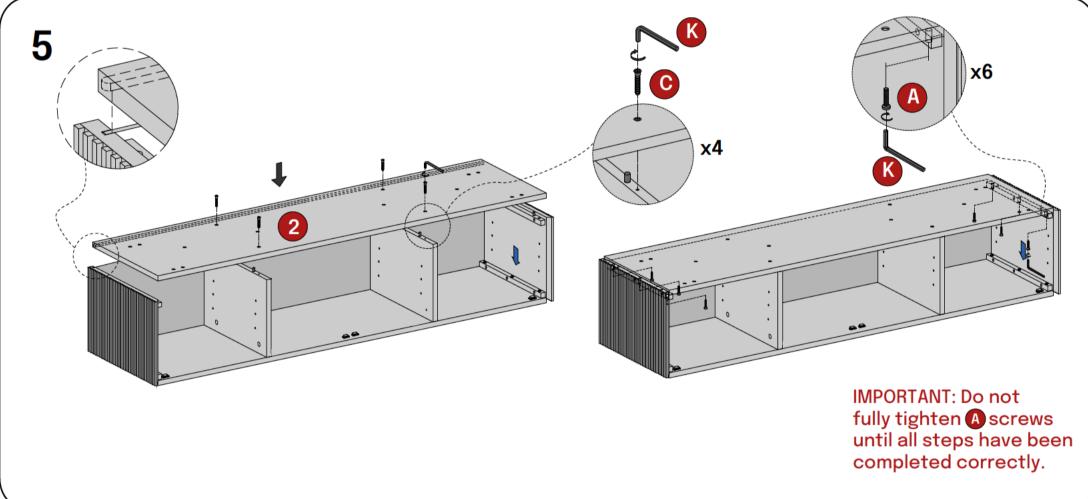


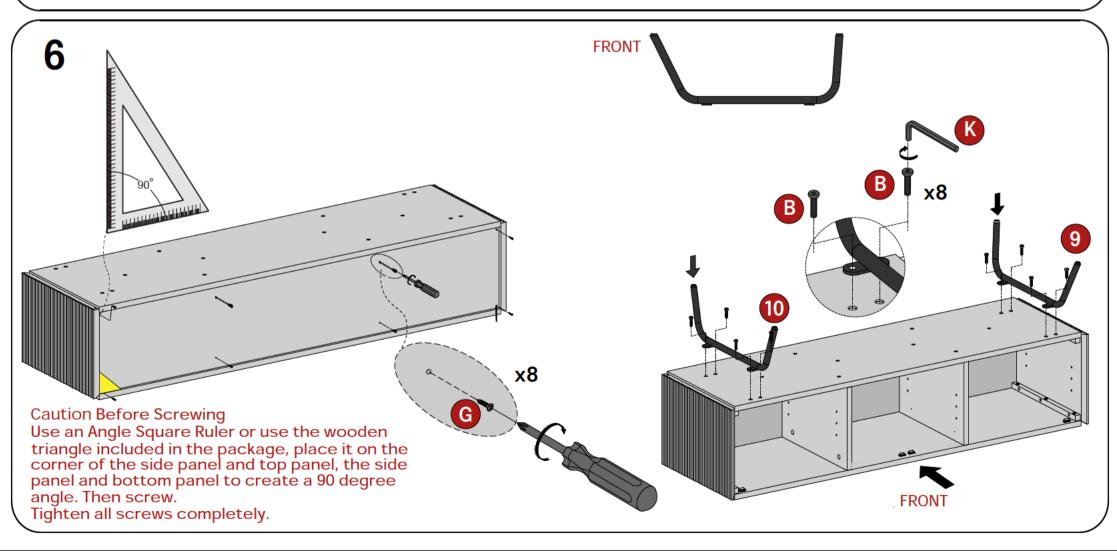


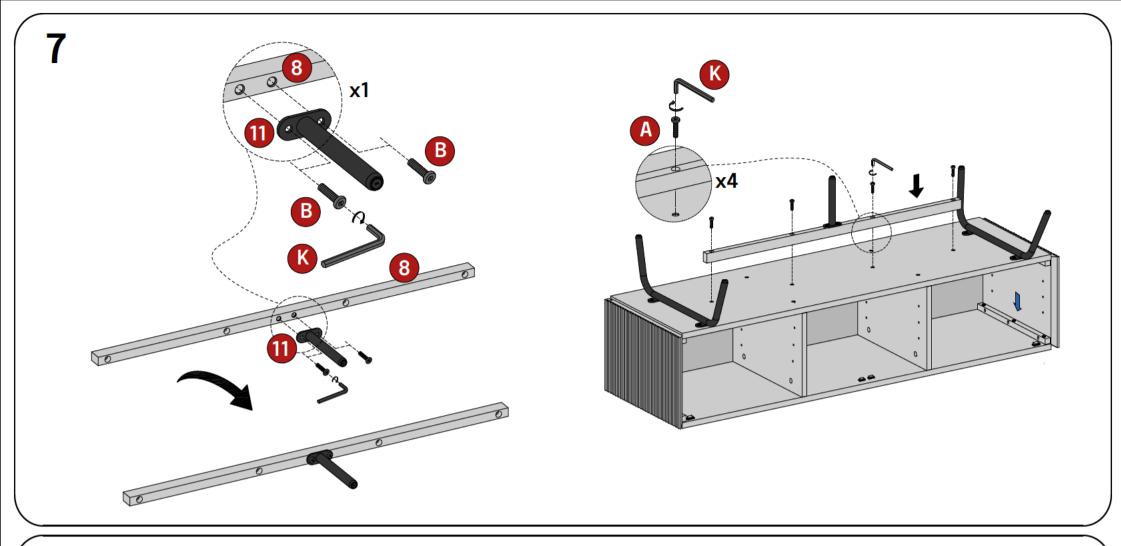

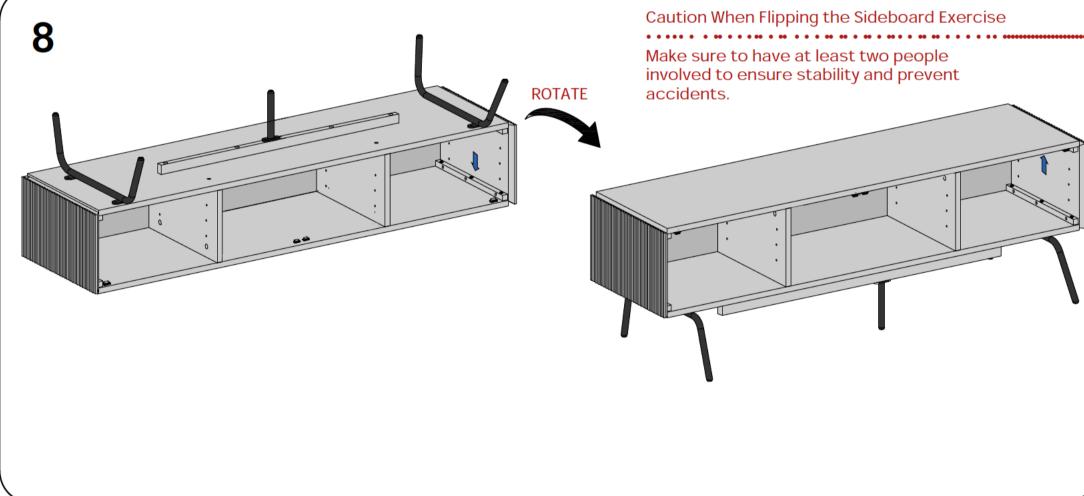

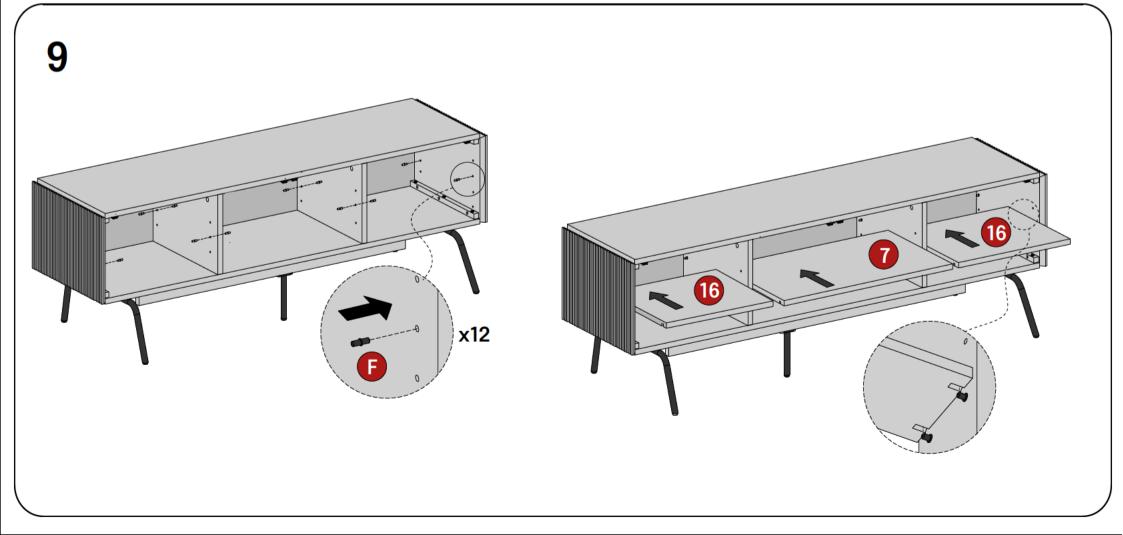

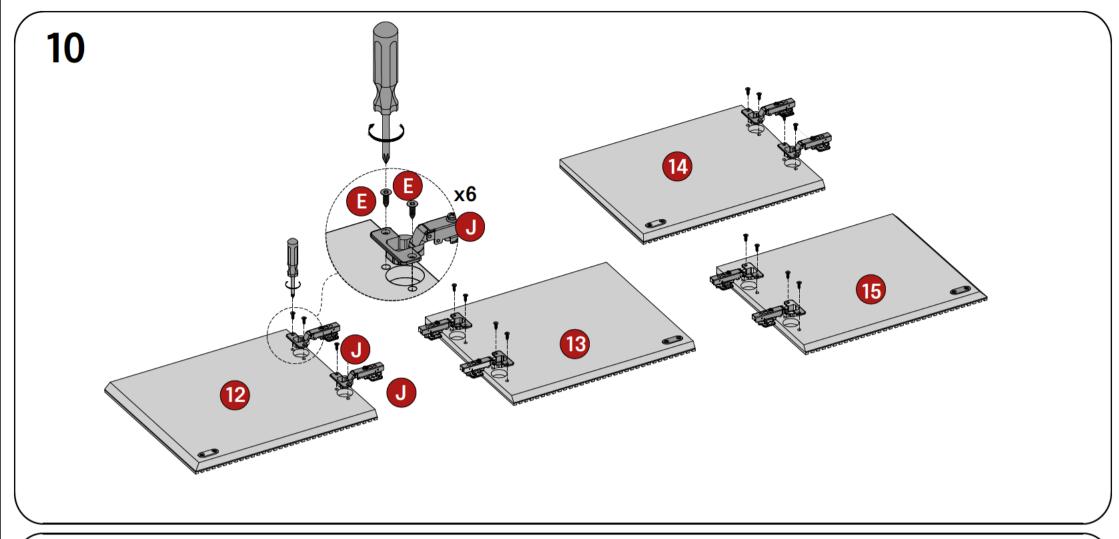


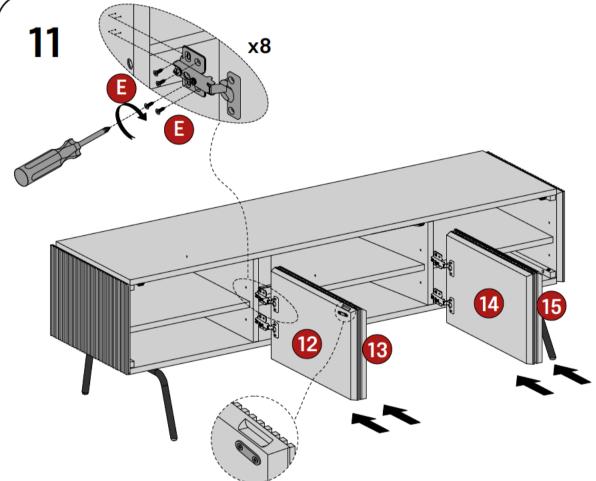


Regarding the installation and adjustment of the door hinge:

1.Use the "waist round hole" marked with a triangle to adjust the position of the door panel (ensure that the gap between the door panel and the upper and lower panels is consistent).


2.Use the screw at the back end of the hinge to adjust the front and back position of the door panel (ensure that the front of the door panel is in the same plane as the upper and lower panels).

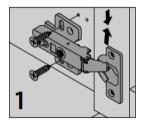


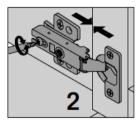


3.Use the screw at the front end of the hinge to adjust the left and right position of the door panel (ensure that the left and right sides of the door panel are in the same plane as the upper and lower panels).


4.After completing these three steps secure the other two screws on the hinge.

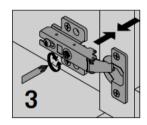

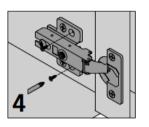

12

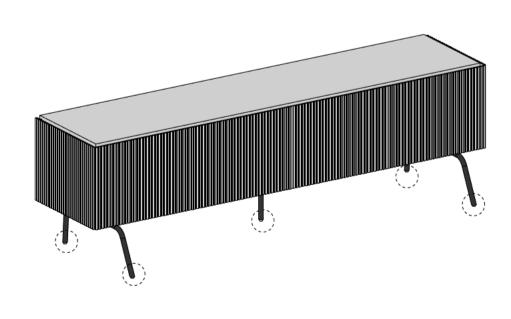

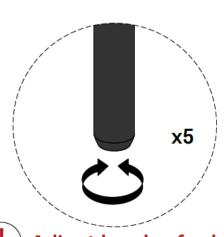

Adjust leveler for balance.