

# Instruction Manual

## IMPORTANT NOTICES

1. When storing Firearms, Never Leave your safe open and unattended.
2. Keep Children away from Safe at all times.
3. Keep your safe locked and closed at all times when not in use, to avoid children being accidentally locked in safe.
4. Place your safe in a cool and dry location.
5. Remember to record the serial number of your safe from the tag on the back of your safe. You will need this serial number for all warranty or customer service inquiries.
6. Electronic media, photographic media and all audio-visual media should not be stored in the safe for fire protection. These materials will not survive the rated internal temperature of the safe and may be damaged or destroyed.

## WARNING

**Safe must be secured as detailed in these instructions. A child or Adult can tip the safe and can be killed or seriously injured. Failure to secure the safe can result in death or serious injury.**

## HANDLE ASSEMBLY (For 3 Spoke Handle Feature)

Screw the 3 handle spokes into the hub and hand tighten. These spokes are located in the front foam packaging.

**WARNING: Do not over tighten spokes.**


**NOTE: Do not use this handle to move the safe.**



## BATTERY INSTALLATION AND REPLACEMENT (For Electronic Locks)

**Note: This product is compatible with 9V batteries.ept-batter.**

To replace the battery, remove the cover by pressing the tab and turning as shown in the illustration (counter clockwise). Install new battery and align cover and install cover (clockwise).

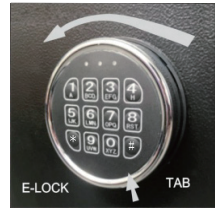

## OPENING THE SAFE

Enter Factory Pass Code : 1 - 5 - 9 - #.

### SETTING THE PASSCODE & PASSCODE RESET

After opening the safe, locate the small red button on the inside of the door, near the hinge. Remove the cap and press the red button until you hear a beep.

Before closing door, make sure your new passcode is functional.



### Electronic Lock

You will see a yellow light on the front faceplate.

Enter your new passcode (minimum of 3, to a maximum of 8 digits) while the yellow light is illuminated, then press #.



### Back up key (For Electronic Locks)

Remove the cover by pressing the tab and turning the cover under battery installation.

Insert the key in the key hole and turn key ¼ turn (until stopped) to unlock the safe. Rotate the handle and open the door.

### Safes with the Alarm-U™ system

Press "0" for three seconds to activate the Alarm-U™ system. If the safe is tampered with, the alarm will sound for 30 seconds. To stop the alarm from sounding, enter the correct passcode.

After tampered alarm, please enter "0" to activate the Alarm-U™ system again.

If 3 incorrect passcode entries are made in succession, the alarm will sound and the safe will be in automatic lockout for 30 seconds. If 3 more failed attempts are entered, the keypad will be in lockout for 5 minutes, the light will flash to show that the keypad is locked. You can use your override key at any time to open the safe.

### **Turning the keypad sound off/on with Mute-U™ system**

You can mute/unmute the keypad by entering the button "\*".

## **CLOSING THE SAFE**

Close the door and turn the handle to the lock position. For a combination safe, turn the dial either direction a few times after turning the handle to lock position.

**WARNING: Do not leave safe unattended while open, and keep children away from safe.**

## **SECURING THE SAFE**

This safe must be mounted to the floor. Failure to do so will compromise the safety, security and warranty of the safe. Place your safe in a cool and dry location.

## **HARDWARE INCLUDED**

- (2) M10x70 Lag screws
- (2) Gasket washers
- (2) Plastic anchors

## TOOLS REQUIRED

Drill


3/8" drill bit

5/16" drill bit

7/16" drill bit

17mm socket wrench

Phillips screwdriver

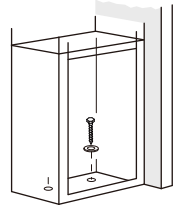

***As all installation may vary, please contact your local Hardware Professional for additional installation recommendations.***