 







 
 

 
 
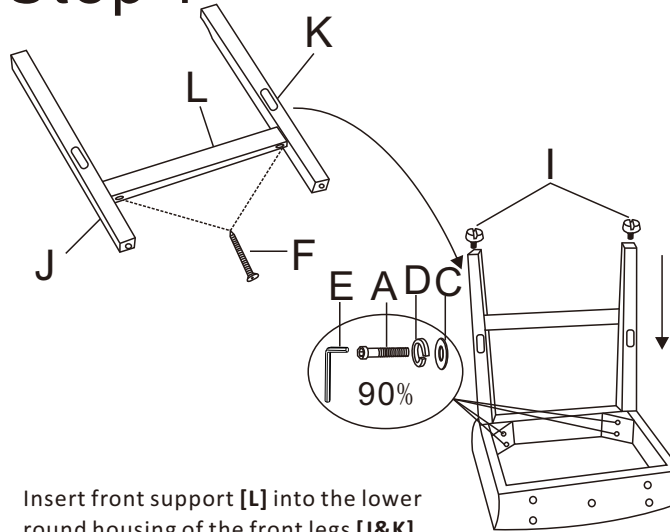


Assembly Instruction

If you have any questions, please feel free to contact us first.


Parts Included for One Chair					
Number	Parts	Quantity	Number	Parts	Quantity
A	 Bolt M8*60mm	5	H	 Seat	1
B	 Bolt M8*80mm	4	I	 Adjustable Footnail	4
C	 Flat Washer	9	J	 Left Front Leg	1
D	 Spring Washer	9	K	 Right Front Leg	1
E	 Allen Key	1	L	 39CM Front Support	1
F	 Screw M4*45mm	6	M	 42.6CM Side Rung	2
G	 Back	1			

Step 1




Insert front support [L] into the lower round housing of the front legs [J&K]. Then secure with screw [F]. (It is the key step to correct assembly).

Step 3

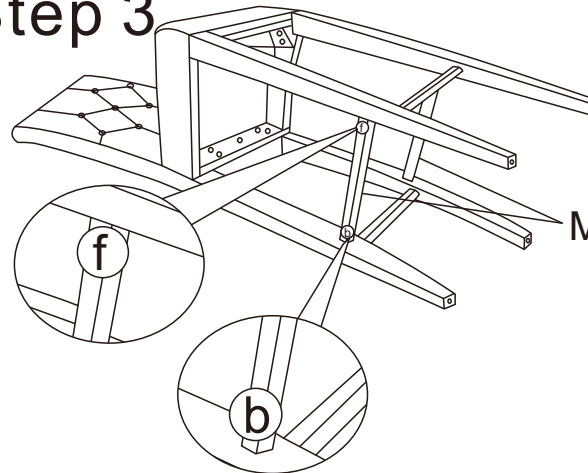


Insert the side rungs [M] into the round housing of both front legs and back legs. (You may need apply a little pressure to the back legs pushing outwards if you can't insert the side rungs.) Pay attention to the direction of the side rung.

Step 2

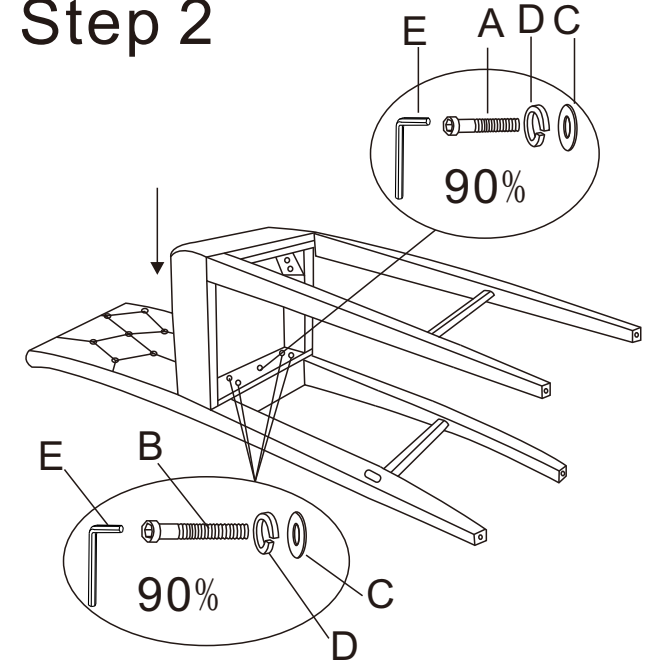

Step 4

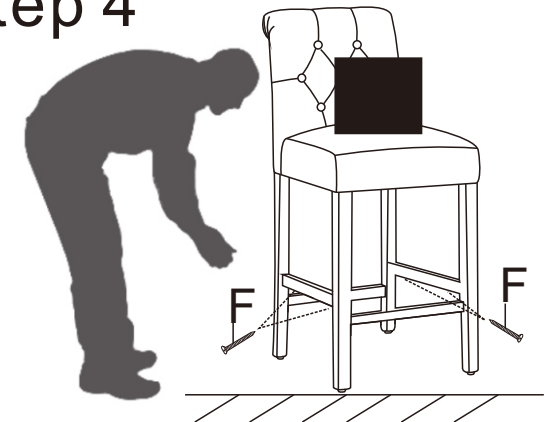

Place the stool on the ground and put your hands on the seat to adjust the balance. Then fully tighten all the bolts. Secure side rungs with screw [F]. Attach the seat cover.