

ASSEMBLY INSTRUCTIONS

SKU: EVC




Factory2Home

FROM OUR FACTORY TO YOUR HOME

14800 Almeda School Road,
Houston, TX 77047

Email: sales@factory2home.net

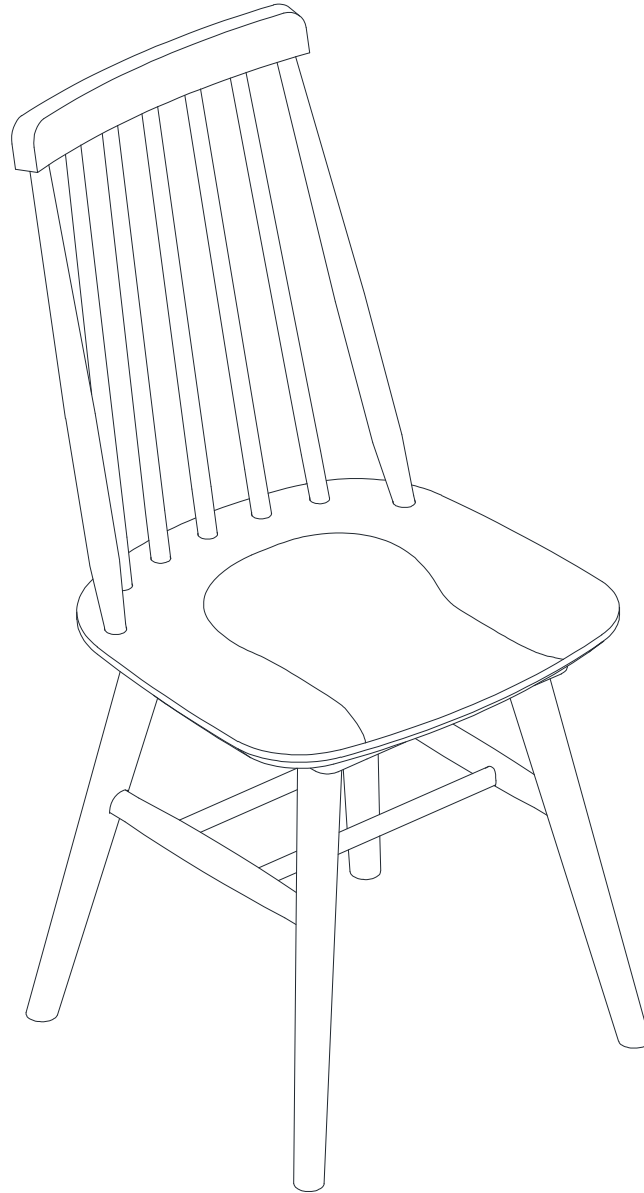

Description : ELVARA DINING CHAIR WITH WOOD SEAT
Product Dimension : W.17.3"xD.20.5"xH.35.8"
Cube Size : 21.4"x18.7"x22.8"

NW: 24.2 LBS

GW: 28.6 LBS

ELVARA DINING CHAIR WITH WOOD SEAT

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present. If hardware is missing or you have difficulty assembling this product, please contact us at sales@factory2home.net.


IMPORTANT NOTE:


 

 
- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT TIGHTEN all screws and bolts until product is completely assembled.
- Keep all hardware parts out of reach of children.



PART LIST

 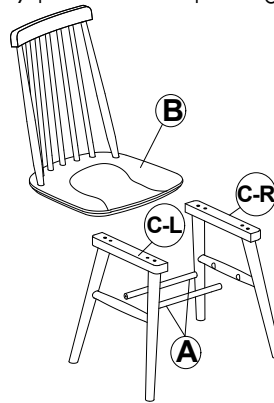


 

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:



NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Side Stretcher	2		C-R	Leg	1	
B	Chair Back	1		C-L		1	

HARDWARE LIST


When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M8x40mm)	4		2	Lock Washer (Ø8.5X13)	4	
3	Flat Washer (Ø8.5x19)	4		4	Screw (M4x30mm)	4	
5	Allen Key	1					

ELVARA DINING CHAIR WITH WOOD SEAT


STEP 1

- Attach Legs (C-L) to Chair Back (B) using Bolt (1), Lock Washer (2) and Flat Washer (3). Tighten with Allen Key (5).

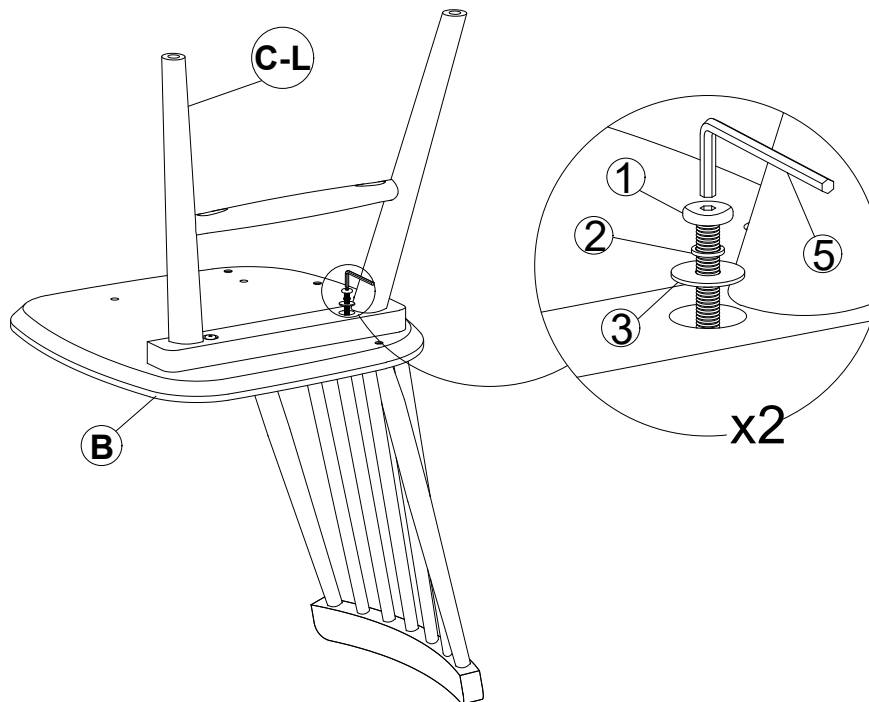

STEP 2


- Attach Side Stretcher (A) to the Legs (from step 1) and Legs (C-R) using Screws (4).
- Attach Legs (C-R) to the Chair Back (B) using Bolt (1), Lock Washer (2) and Flat Washer (3). Tighten with Allen Key (5).

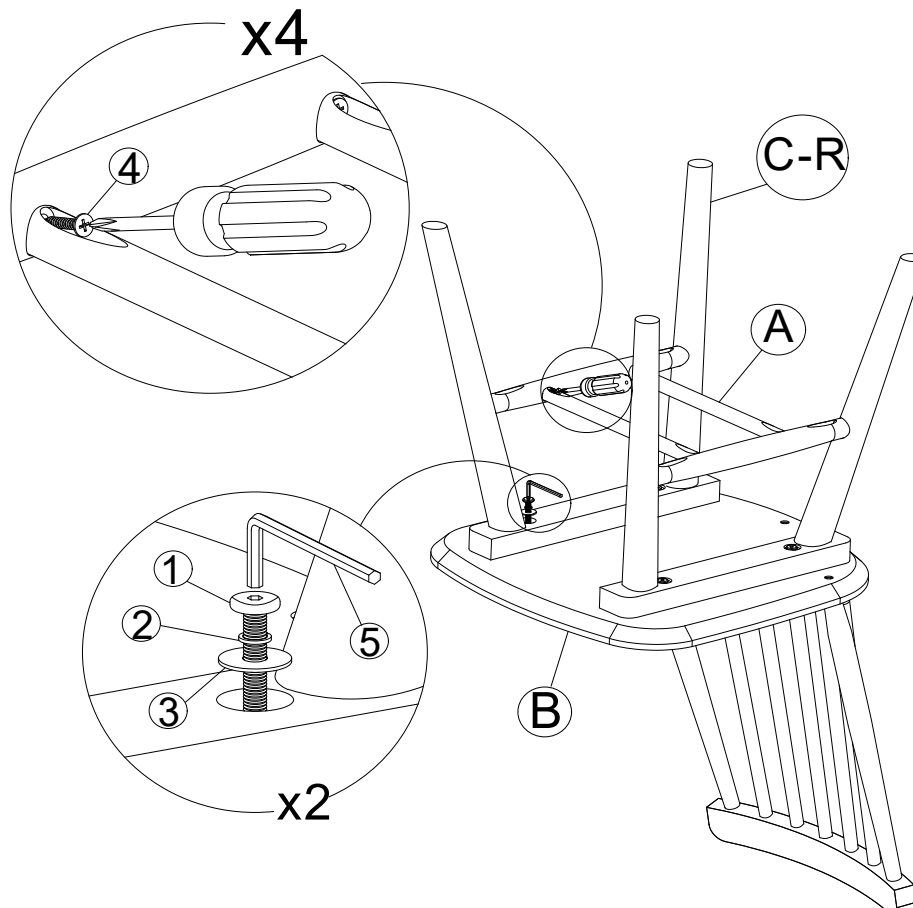

ELVARA DINING CHAIR WITH WOOD SEAT

STEP 3

- Put the chair on a flat, level surface to make sure the chair is level and then tighten the all bolts.

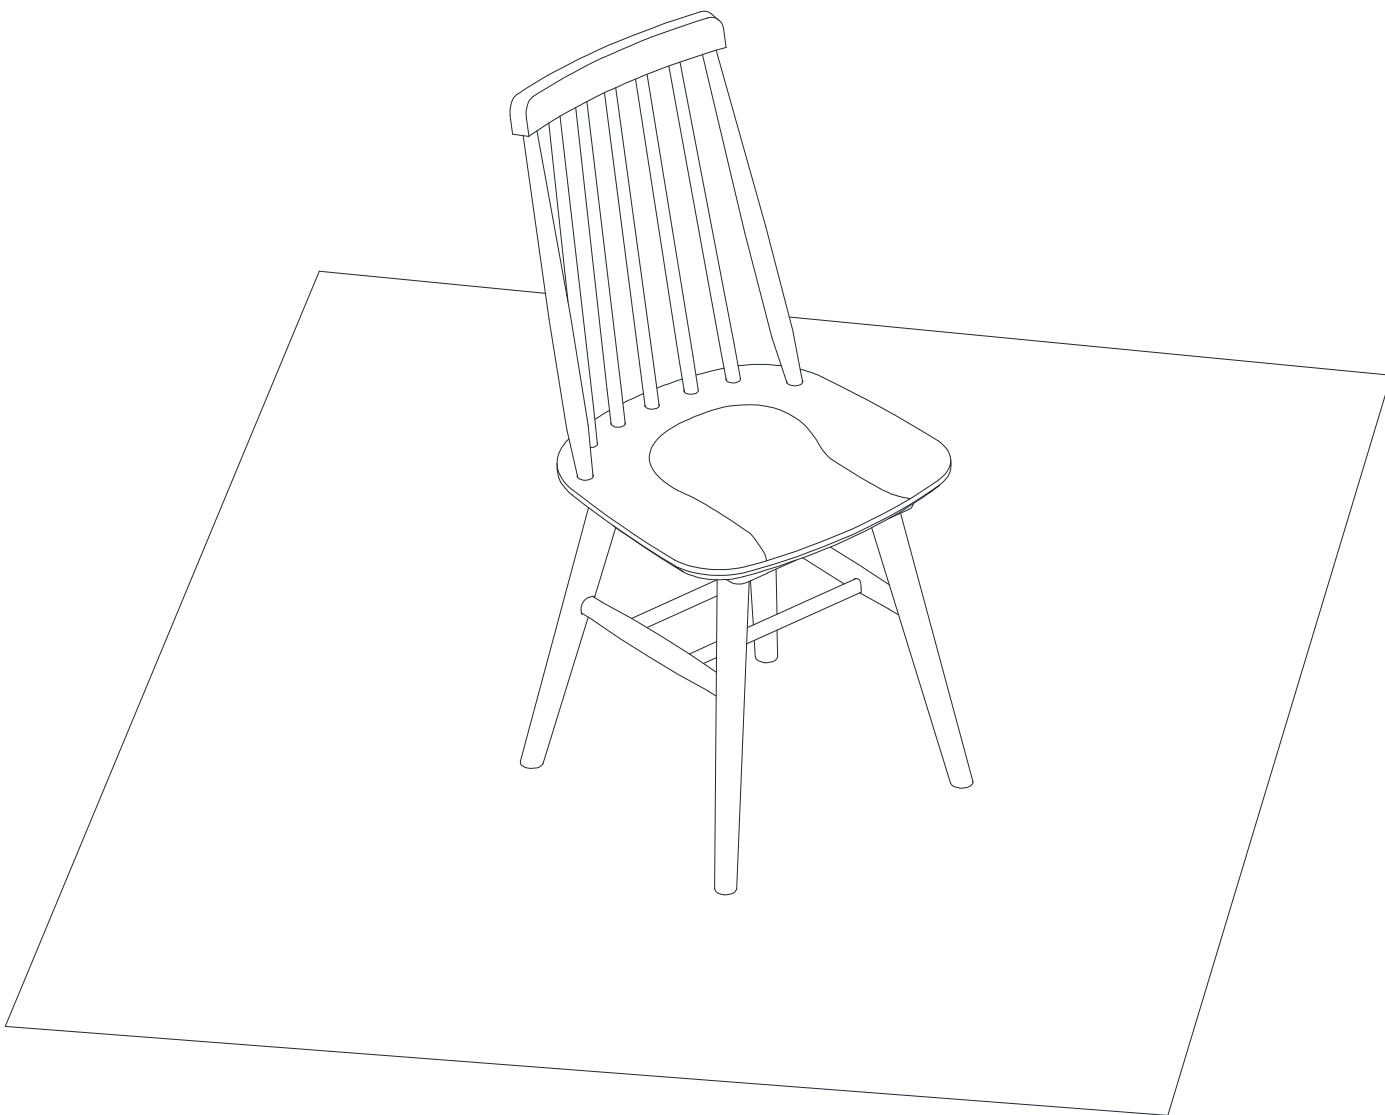

ELVARA DINING CHAIR WITH WOOD SEAT