

**INSTRUCTIONS:**

1. Remove existing showerhead from shower arm.
2. Apply thread sealant tape to existing shower arm threads.
3. Thread adjustable arm onto existing shower arm hand tight plus a quarter turn with a wrench.
4. Apply thread sealant tape to outlet of adjustable shower arm threads.
5. Thread new showerhead onto adjustable shower arm hand tight plus a quarter turn with a wrench.

**To Adjust Height:**

Loosen bottom wing nut and raise or lower shower head/arm. Retighten wing nut.

**To Adjust Angle:** Loosen top wing nut and adjust shower head to desired angle. Retighten wing nut.

**Tip:** Use cloth between wrench and nut to protect finish.