

USER GUIDE



GARDEN FOUNTAIN

INTRODUCTION

- Thank you for purchasing our garden fountain which has been built and assembled to the highest safety and operational standards.
- In order to prevent any damage to persons or property, read this user manual carefully. Please follow all safety precautions and instructions when using the pump. Failure to follow the instructions and safety precautions can result in injury or property damage.
- Please ensure you keep this manual for further reference.
- Our garden fountains contain a high-quality fountain pump system suitable for outdoor and indoor use. The perfect eye-catcher.
- **Warning!** Do not attempt to make any technical or electrical adjustments or modifications to the fountain yourself. This would make any guarantee void.
- Any damage incurred during transport must be reported immediately to the packing distributor and to us in writing. Failure to give timely notice and provide evidence could result in your claim being rejected. You have a legal obligation to minimize damage.

ASSEMBLY

- Unpack all the water fountain components and lay them down on a flat surface.
- Connect the pump to the rubber hose. Make sure the hose is properly connected and is not kinked.
- Connect the LEDs (pre-assembly to fountain body) to the cable connector one at a time.
- Connect the cable connector to the female cord from the pump's body.
- Install the fountain top on the base, ensure it is stable before continuing.
- Connect the pump's cord to the adapter.
- Fill the reservoir with clean water.

Note:


Distilled water is recommended for the reduction of mineral deposits and bacteria build-up.

Insert the plug into the power socket. If installed correctly, water will start to flow from the system.

Please note, due to the shape of the slate, some water splashing out of the fountain is inevitable in the first few seconds.

MAINTENANCE

- Keep the fountain in good working condition by cleaning it and changing the water every 3 days. Using distilled or purified water will give the best results.
- If debris is caught in the intake vents of the pump, disconnect the pump from any power sources and rinse the pump under clean running water.
- No maintenance is necessary when this product is used in accordance with the instructions outlined in this manual.

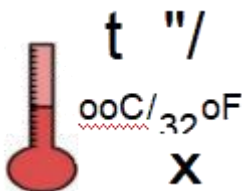

Frost can cause damage to the pump. The pump must be removed and stored in a frost-proof environment if there is a risk of water freezing.

Replacing Bulbs

Pull out the rubber plug containing the lights. Remove the light from the rubber plug and replace the bulb. Replace the light with a new bulb, then connect to the rubber plug and push the rubber plug back into the hole. Push in gently to make sure the hole is properly blocked without damaging the lights.

SECURITY TIPS



- Adhere to all electrical regulations and safety instructions.
 - Never let the pump run dry.
 - Pumping inflammable or any other type of aggressive liquids is prohibited.
 - Pay attention to the temperature of the medium max. 35°C
 - The mains plug must be disconnected before any work is carried out on the garden fountain.
 - Never pull the pump using the electrical cable or pressure hose.
 - Avoid cross section narrowing.
- During longer periods out of activity, clean the pump, wash it with clear water, dry and store it at room temperature.
 - Test wells for enough flowing water (danger if run dry).
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge only if they are supervised. Children shall not play with the appliance.
 - Cleaning and maintenance must not be carried out by children without supervision.

The Manufacturer Takes No Responsibility:

In the case of accidents or damage as a result of carelessness or disregard to the instructions in this manual.

For damage which originate from the improper use of the fountain or any of the components.

GUARANTEE REGULATIONS

For all manufacturing and material defects, the statutory warranty applies. In these cases, we replace or repair the device. Shipping costs shall be borne by our company, except as required by law.

The warranty does not cover:

- Material wear (sealing rings, impeller wheels, impeller chambers).
- Unjustified interventions or changes in the pump.
- Damage due to self-fault.
- Improper servicing and improper use.
- Letting the pump RUN DRY (Also partially!)

Moreover, we give no damage compensation for secondary damages!

RECOGNIZING AND PEPAIRING MISTAKES

Problem	Possible cause	Solution
Pump does not start	No electricity	Check electrical connections
	Defective pump	Replace pump
Pump runs but no water comes out	Hose connection system has a leak	Check hose connection system
	Pump could have a leak	Check pump for moisture damage
	Coarsening or dirty fountain nozzles	Disassemble and clean the hose and the fountain nozzle