

ASSEMBLY INSTRUCTIONS

 
WF194545-DINING TABLE

IMPORTANT NOTE :





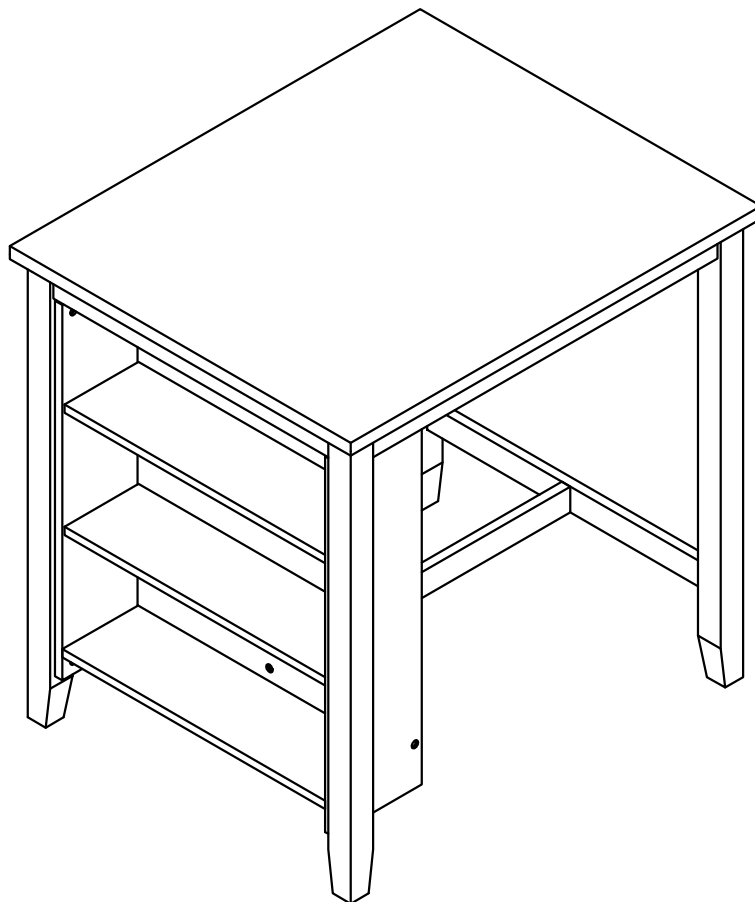

 

 
 




 

 
 
 
 
 
** PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.

 
** BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

**DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.



 
CARTONS ONLY ONE/ CARTONS SEULEMENT UN

PART LISTS				HARDWARE LISTS			
NO.	DESCRIPTION	SKETCH	Q'TY	NO.	DESCRIPTION	SKETCH	Q'TY
1	TABLE TOP		1 PC	A	BOLT Ø5/16" x 50mmL		8 PCS
2	LEG 1 - L		1 PC	B	BOLT Ø1/4" x 40mmL		10 PCS
3	LEG 1 - R		1 PC	C	SPRING WASHER Ø5/16" x 13mmL		8 PCS
4	LEG 2 - L		1 PC	D	FLAT WASHER Ø5/16" x 19mmL		8 PCS
5	LEG 2 - R		1 PC	E	CREW Ø4 x 25mmL		6 PCS
6	SIDE STRECHER		1 PC	F	CREW Ø4 x 45mmL		2 PCS
7	MIDDLE STRECHER		1 PC	G	SHELF PIN		8 PCS
8	SIDE PANEL-L		1 PC	H	ALLEN KEY		1 PC
9	SIDE PANEL-R		1 PC	 Not Included			
10	BACK PANEL		1 PC				
11	BOTTOM PANEL		1 PC				
12	SHELF		2 PCS				

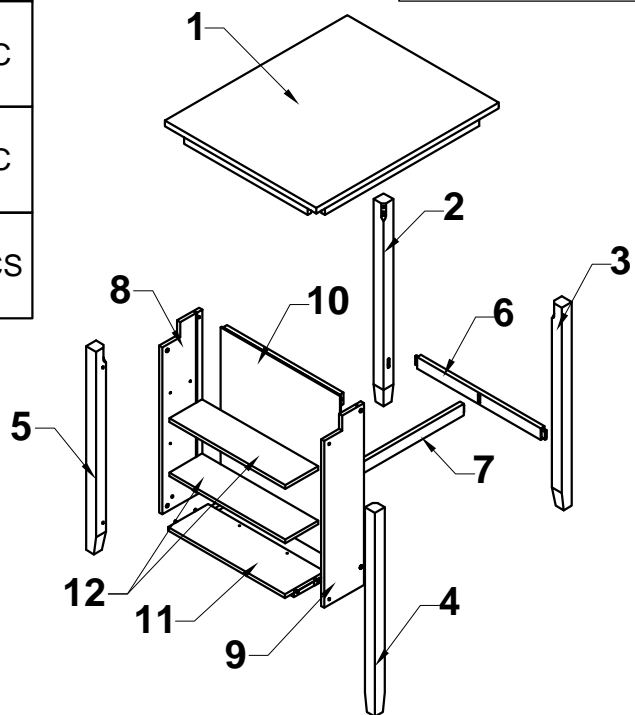 


ASSEMBLY INSTRUCTIONS

STEP 1:

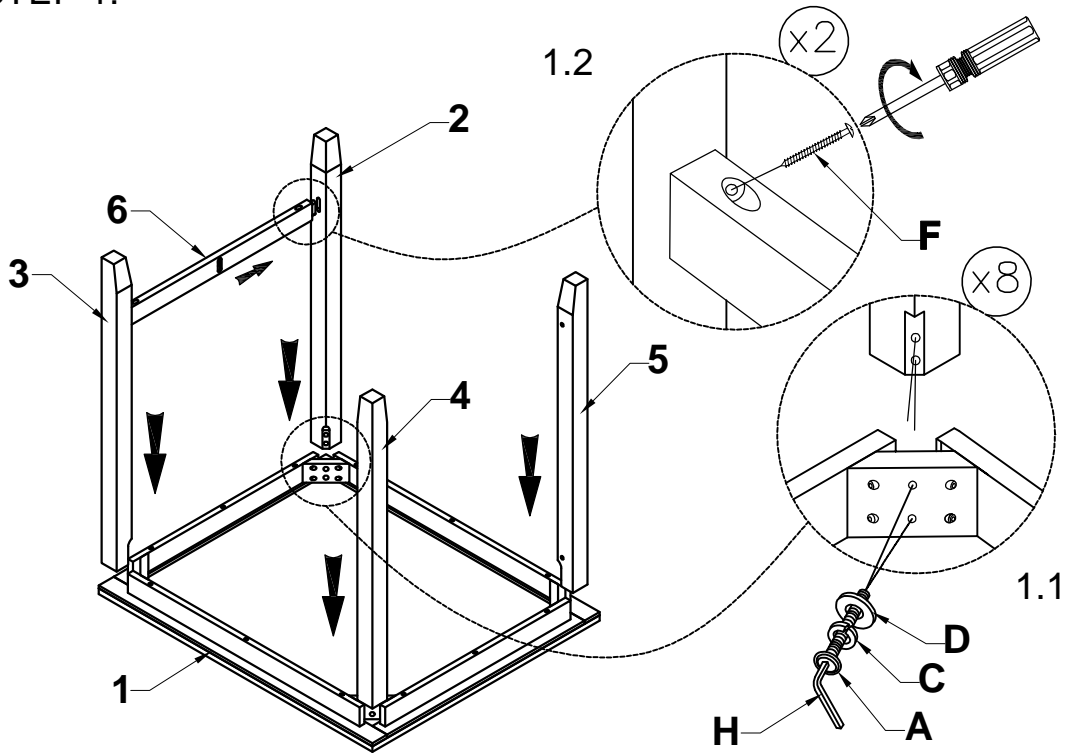 


STEP 2:

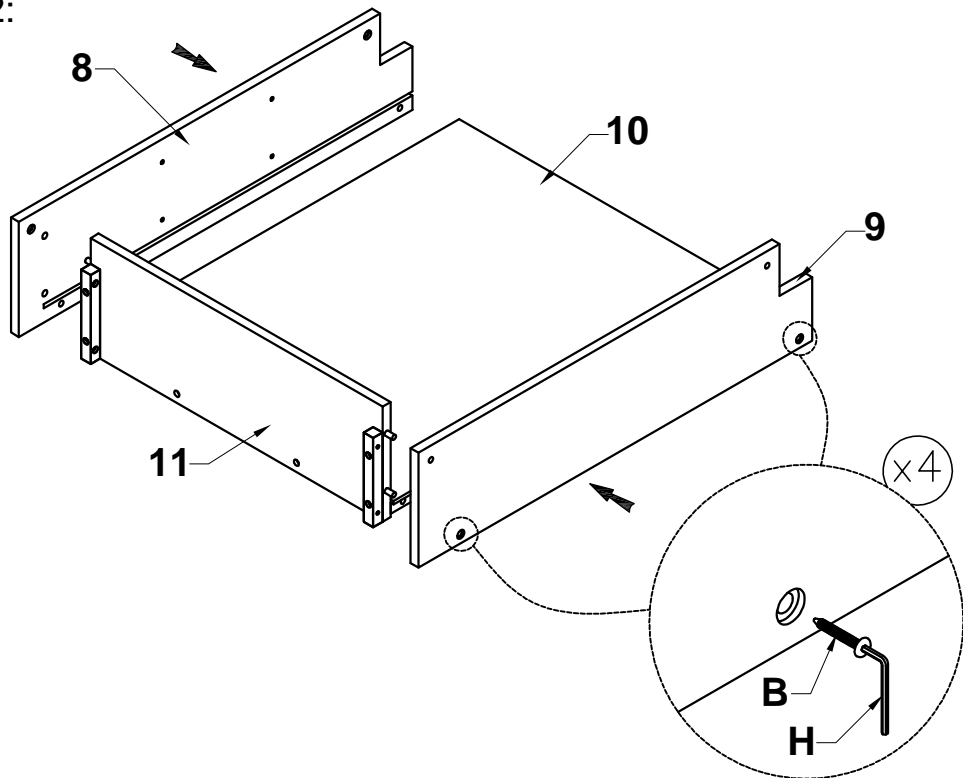 


ASSEMBLY INSTRUCTIONS

STEP 3:

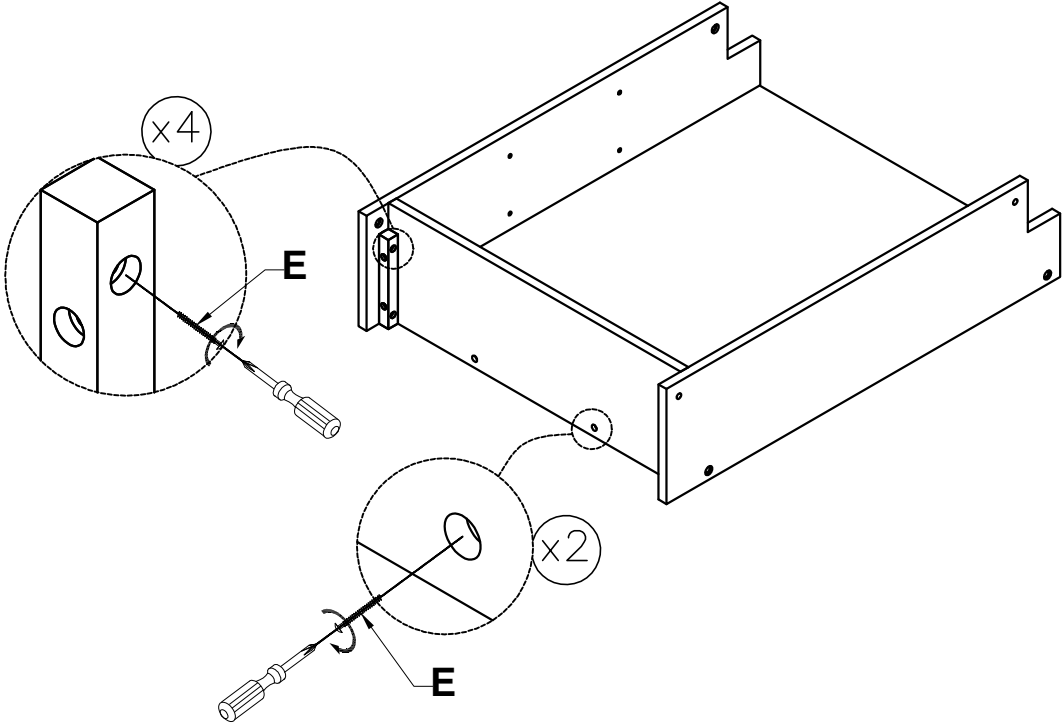 


STEP 4:

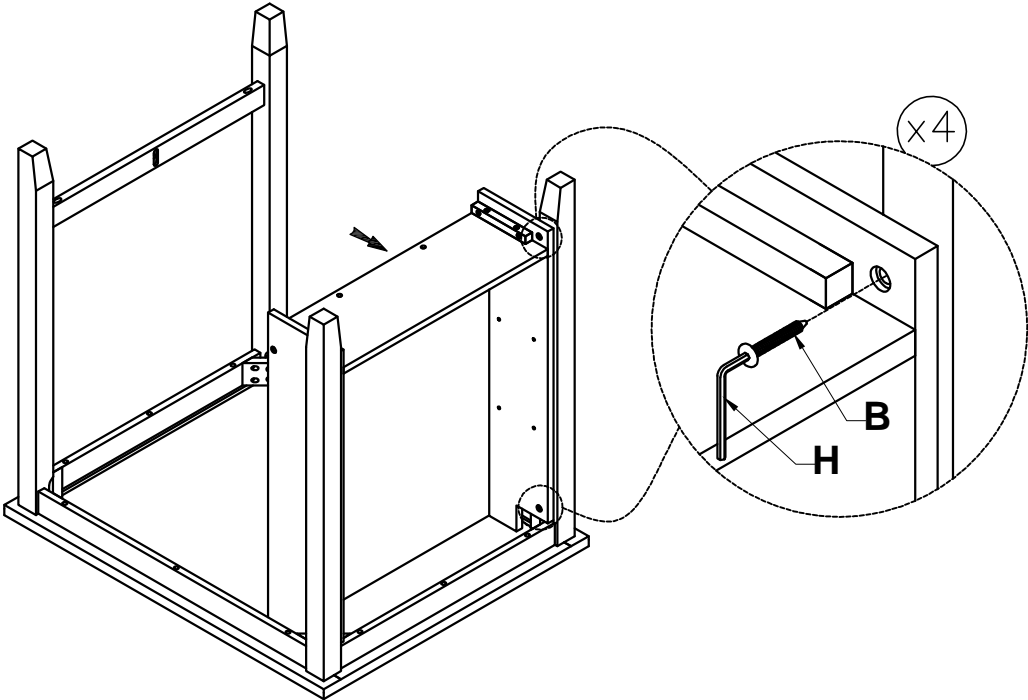

ASSEMBLY INSTRUCTIONS

STEP 5:

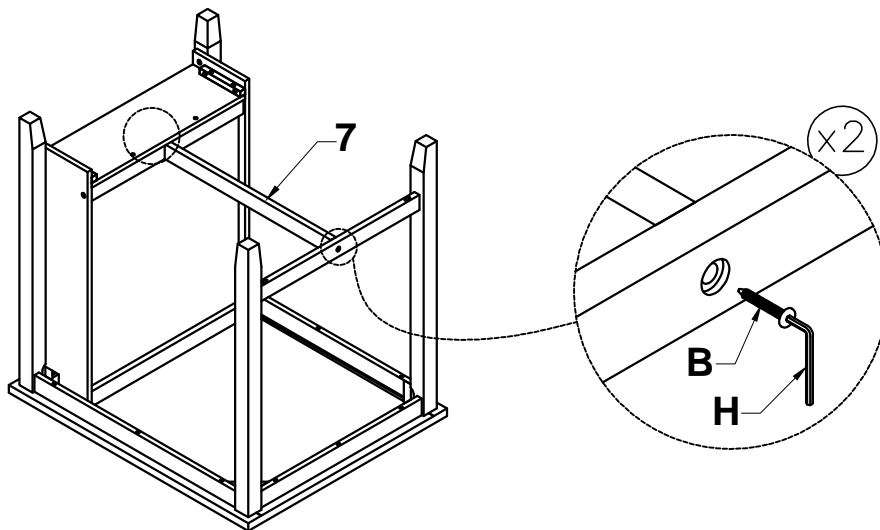

STEP 6:

