
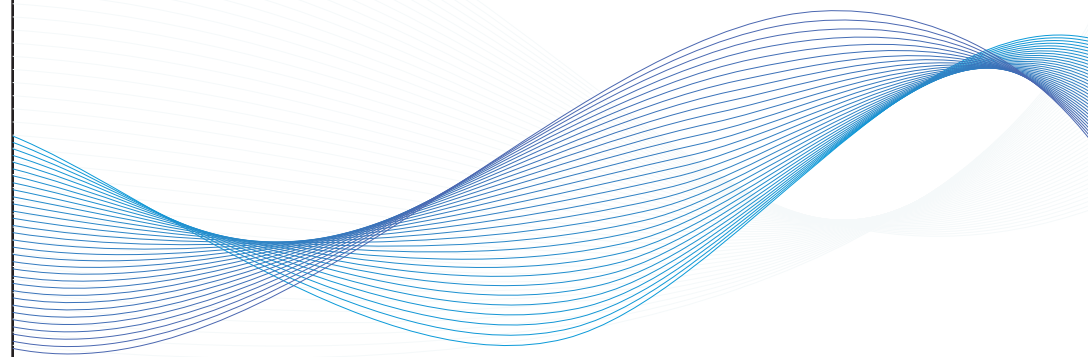


COMFORT
IN
THE BOX


Thank you for choosing

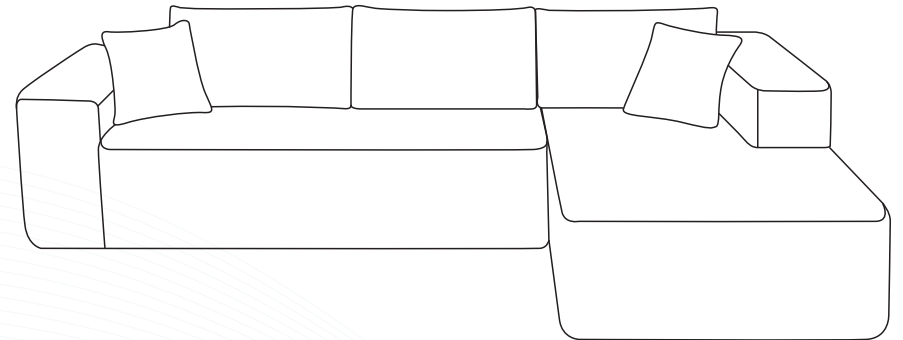

Compressed sofa


--HOW TO UNPACK YOUR SOFA

1

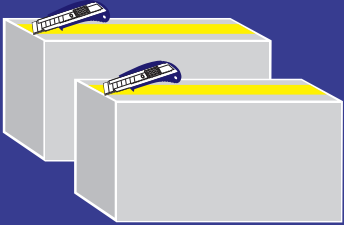


LAY DOWN THE PACKAGE IN YOUR ROOM . AND OPEN IT WITH THE SCISSORS PLEASE DO IT WITHIN 72 HOURS OF RECEIPT.

2

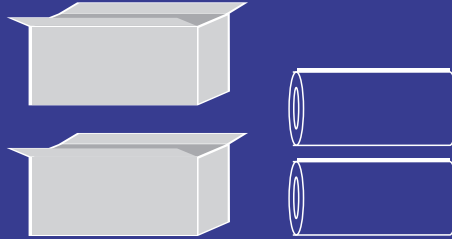


TAKE THE SOFA OUT OF THE BOX

3

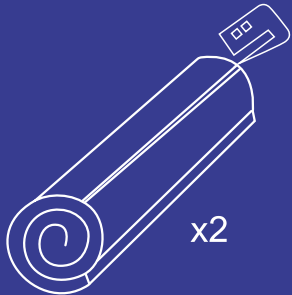


REMOVE THE SOFA FROM THE PLASTIC BAG. DO NOT USE KNIVES OR SCISSORS, SINCE THEY MIGHT DAMAGE YOUR SOFA.

4

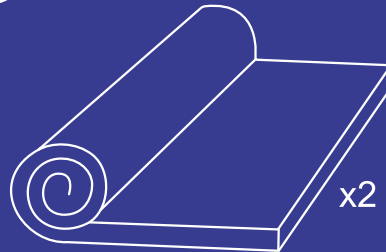


UNFOLD THE COMPRESSED SOFA ONTO A CLEAN SURFACE.

5

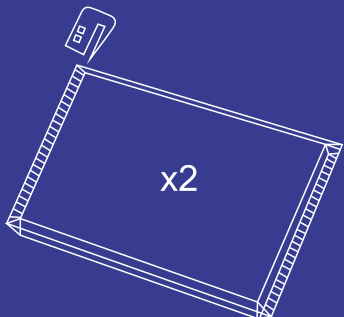

CAREFULLY OPEN THE PLASTIC BAG ALONG THE EDGE AND DECOMPRESS THE SOFA. TAKE OUT THE BAG.

6

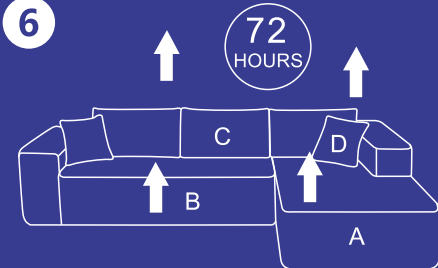

Ax1 Bx1 Cx3 Dx2

ALLOW UP TO 72 HOURS FOR THE SOFA TO FULLY RETURN TO ITS ORIGINAL SHAPE, ALSO LET IT AIR IF THERE ARE ANY ODORS.

Compressed sofa LIMITED WARRANTY

How long does it last?

It will run for 1 year from the date of purchase.

What's covered?

It covers any defects in materials or workmanship and it applies only to the original purchaser .

What's not cover?

- (1) Normal changes in softness or resilience
- (2) Normal impressions less than 1.5 inches in depth
- (3) Wear and tear
- (4) Stains in use
- (5) Misuse or improper maintenance
- (6) Alteration or repair by unauthorized representatives
- (7) Damages resulting from transit or handling