


**3-SIDED GLASS WALL MOUNTED
ELECTRIC FIREPLACE**

MODEL:IF-1350/IF-1360/IF-1372

3-Sided Glass Wall Mounted Electric Fireplace

MODEL:IF-1350/IF-1360/IF-1372

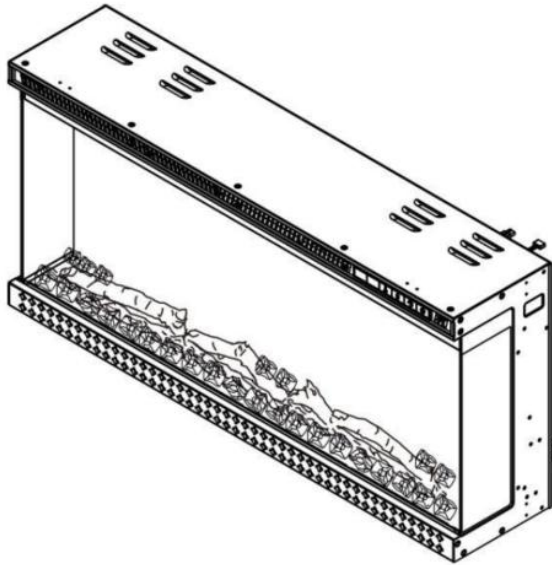

This is the original instruction, please read all manual instructions carefully before operating. We reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.



FCC Information:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.



ICONSUMER SAFETY INFORMATION

- Read this manual before installing and operating this appliance.
- Failure to follow these instructions may result in electric shock, fire property.or personal injury.
- Do not store or use gasoline or other flammable liquids in the vicinity of this appliance.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

IMPORTANT SAFETYINFORMATION!


WARNING!

- Read all instructions before using this heater!
- This heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. if provided,use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater, and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- DO NOT operate any heater with a damaged cord or plug or after the heater malfunctions,has been dropped or damaged in any manner, Discard heater, or return to authorized service facility for examination and /or repair.
- DO NOT run power cord under carpeting. DO NOT cover power cord with

throw rugs, runners, or similar coverings. DO NOT route power cord under furniture or appliances.

- Arrange power cord away from traffic area, and where it will not be tripped over.
- Connect to properly grounded outlets ONLY.
- DO NOT insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause electric shock or fire, or damage the heater.
- To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. Doing so could cause a fire. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- ALWAYS plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- DO NOT place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- NEVER use this heater in bathrooms, laundry rooms, or any other location where the heater could fall into a bathtub or pool, become damp or come in contact with water.
- AVOID FIRE! Regularly inspect all air vents to make sure they are free from dust, lint, or other Blockage. Unplug the unit and clean with a vacuum ONLY. DO NOT rinse or get wet.
- ALWAYS mount to wall bracket before use. DO NOT set on the floor, or other surface, to use.
- NEVER use a wall mount bracket from another manufacturer.
- This product is not intended to be a primary heat source. It is for supplemental heat only.
- INDOOR use only! NEVER use this heater outdoors! Doing so may result in electric shock!
- Risk of electric shock! DO NOT OPEN! No user - serviceable parts inside!

- ALWAYS turn this heater off before unplugging it from the outlet.
- ALWAYS disconnect this unit from the power supply before performing any assembly or cleaning, or before relocating the electric fireplace.
- NEVER leave this heater unattended. ALWAYS unplug this heater when not in use.
- ALWAYS store this heater in a dry location. NEVER use the fireplace if it has become wet.
- NEVER plug this heater into an outlet that is old, cracked, or has any loose wires or connections. Plugging this heater into a faulty outlet could result in electric arcing within the outlet that could cause the outlet to overheat or catch fire.
- ALWAYS check your heater cord and plug connections with each use!
- ◆ MAKE SURE the plug fits tight in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
- ◆ Heaters draw more current than small appliances. Overheating may occur even if it has not occurred with the use of other appliances.
- ◆ During use check frequently to see if the plug outlet or face plate is HOT!
- ◆ If the outlet or face plate is HOT, discontinue use immediately and have a qualified electrician inspect and/or replace the faulty outlets.
- The power cord supplied with the heater has a plug with two flat blades (live and neutral) and one round pin (ground). If a 3 - slot receptacle is not available, an adapter MUST be used. The adapter MUST be properly grounded to the outlet box (see figure at right).(Note:Adapter NOT INCLUDED.)

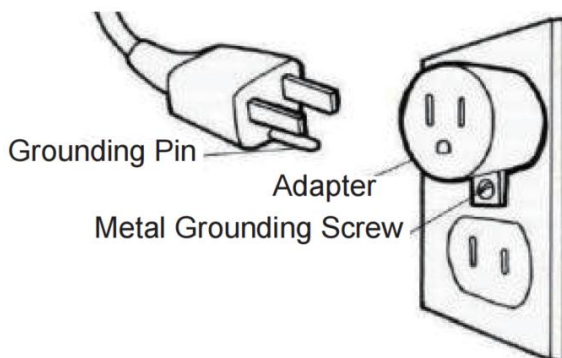

PREPARATION

 
 


This product includes a GLASS panel! Always use extreme caution when handling glass. Failure to do so could result in personal injury or property damage.

Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Parts and assembly steps are grounded for wall - hanging or recessing use. Check the parts list to make sure nothing is missing. Dispose of packaging materials properly. Please recycle whenever possible.

You will need the following tools (not included): Phillips screwdriver; stud finder; level; tape measure; electric drill; 1/4" wood drill bit, hammer.

PARTS & HARDWARE


 Fireplace*1	 M4*25 Screw*4	 M4*12 Screw*25
	 Drywall anchor*9	 ST4*30 Screw*9
 Crystal stone	 carbon log	 Rubber mat*4
 Fasten bracket*7	 Remote control*1	 Wall bracket*1 (Fixed on back of firebox)

Decorative Crystals The weight of each model is not consistent, IF-1350 about 1250g, IF-1360 about 1450g, IF-1372 about 1750g.
Carbon log The number of each model is not consistent. IF-1350 has 5 pieces, IF-1360 has 6 pieces and IF-1372 has 7 pieces.

PARAMETER LIST

Voltage	AC120 60Hz	Time range	1-8H
power	1500W	color of the flames	12 colors
Temperature adjustment	62-82°F	Flame brightness	Five gears
Heating gear	High-end and low-end		

Specification and Dimension

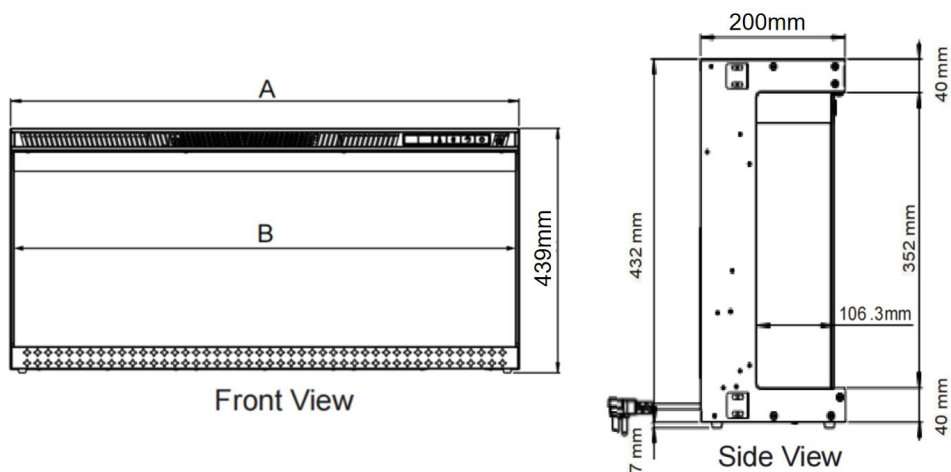


Model	A	B
IF-1350	1270 mm/50 inches	1260 mm/49.6 inches
IF-1360	1525 mm/60 inches	1514 mm/59.6 inches
IF-1372	1829 mm/72 inches	1519 mm/71.6 inches

Installation and Assembly

Your appliance is a wall-mounted, recessed and /or mantel installed appliance. Select a suitable location that is not susceptible to moisture and is away from drapes, furniture and high traffic areas NOTE: Follow all national and local electrical codes.

FREESTANDING INSTALLATION

- 1.Remove M4*8mm black screws out of appliance, please see Fig.1

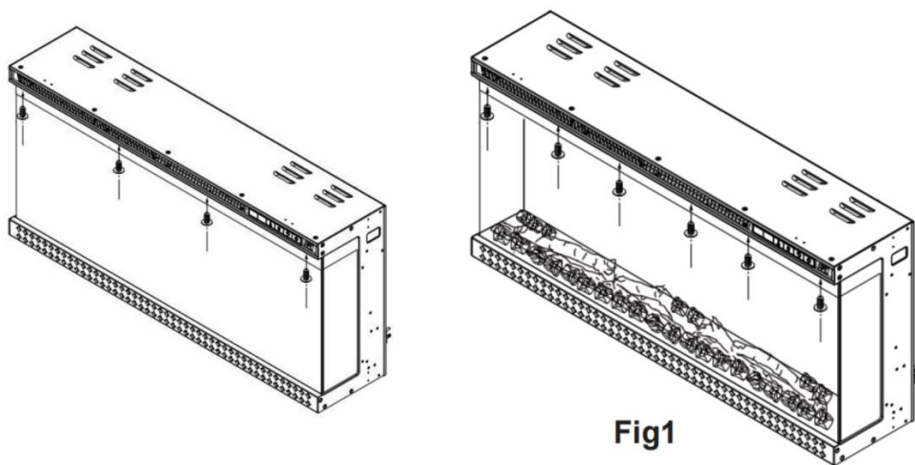

- 2.Take and pull up the front tempered glass out off appliance, see Fig.2

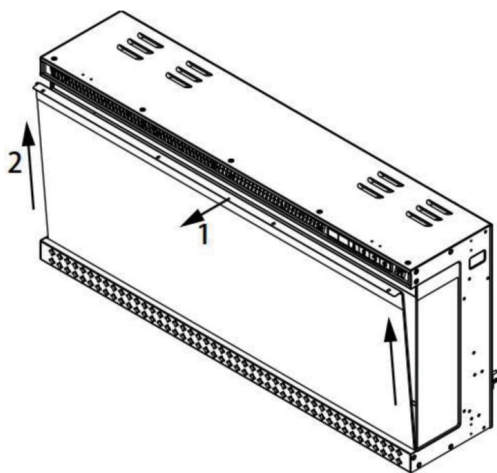


Fig2

3. Take the logs carbon box out off appliance, see Fig.3 .

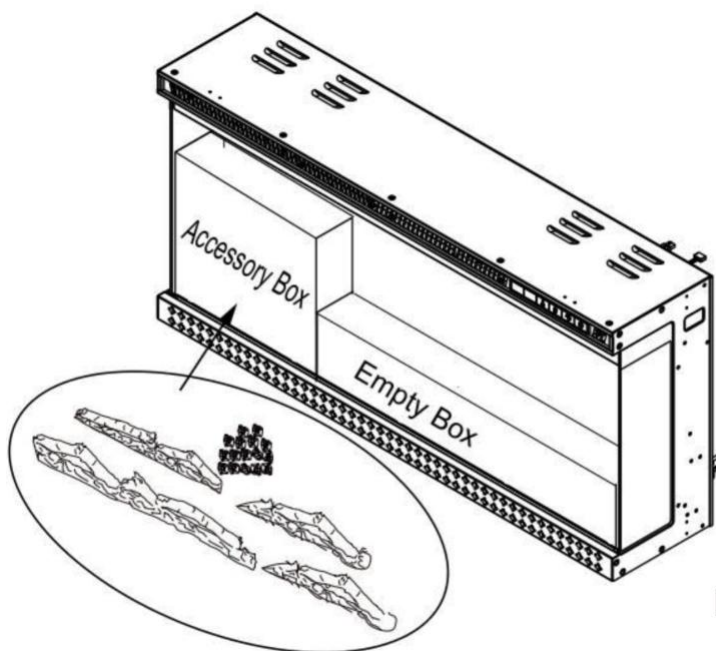


Fig3

4. Lay the heater on the floor or a soft place, install the rubber mats “H” with 4pcs M4x12mm screws as provided, see Fig.4 .

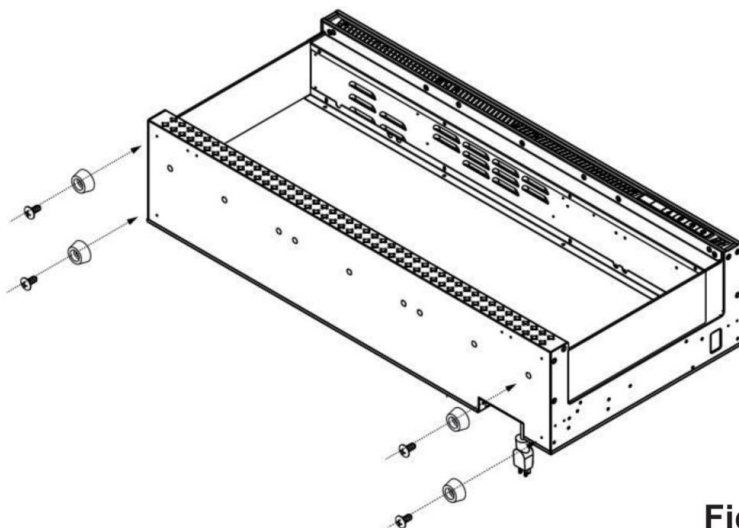


Fig4

5.Place decorative crystals and faux firewood inside the fireplace, see Fig.5

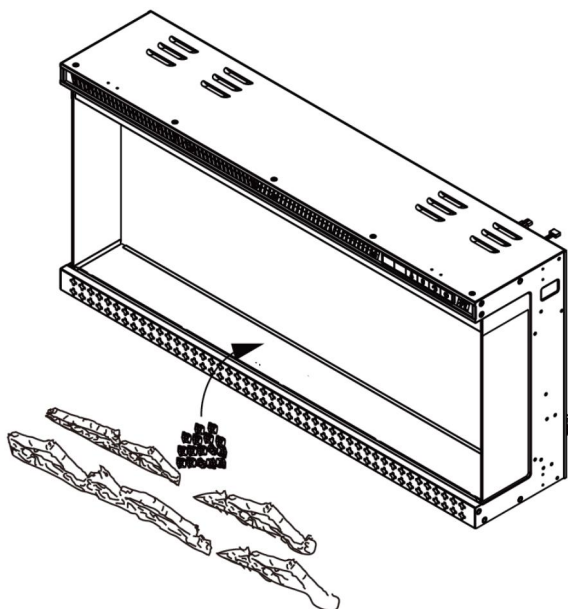


Fig5

6.Rendering of decorative crystals and faux firewood, see Fig6

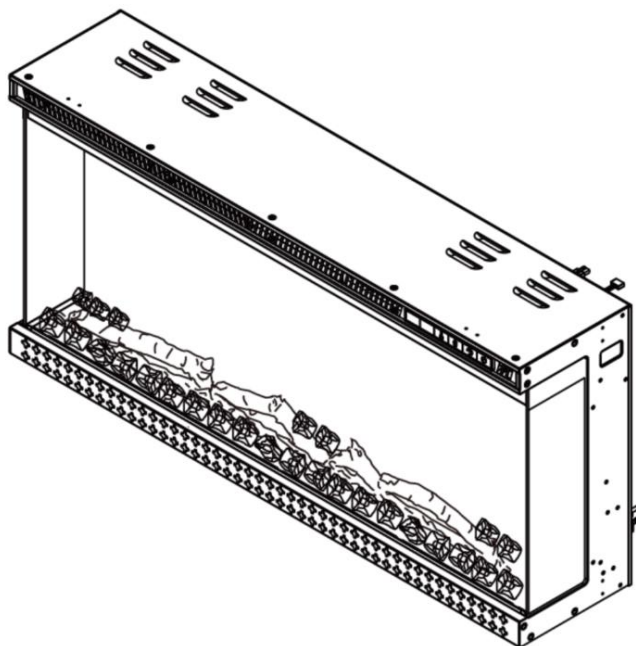


Fig6

7. Install glass panels, see Fig.7



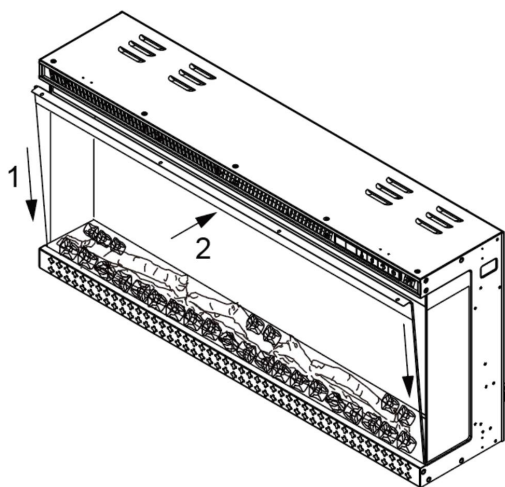


Fig7

8. Secure the glass panels with screws, see Fig.8

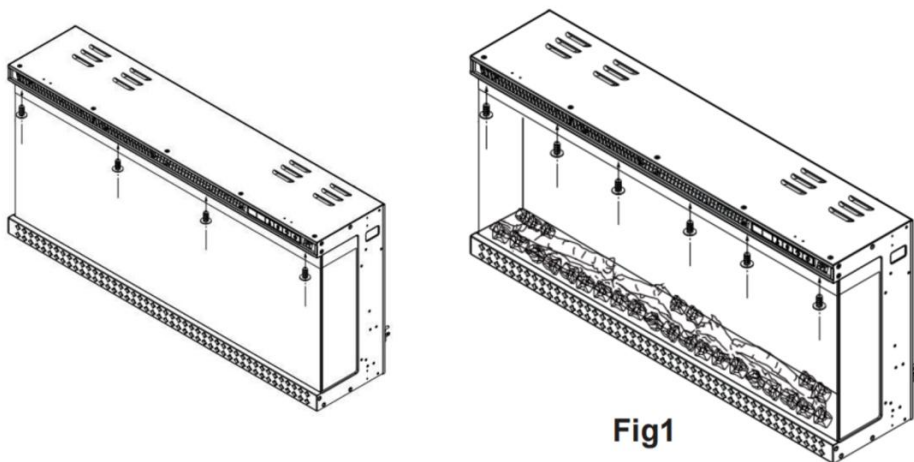


9. Appliance is fully recessed into the wall with both sides open: Front, left, and right side views.

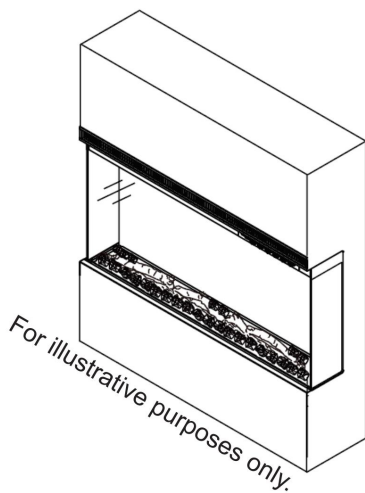


10. Two-Sided Viewing Installation

Appliance is fully recessed into the wall with one side open: Front view and left/right side view, depending on desired open/closed sides.

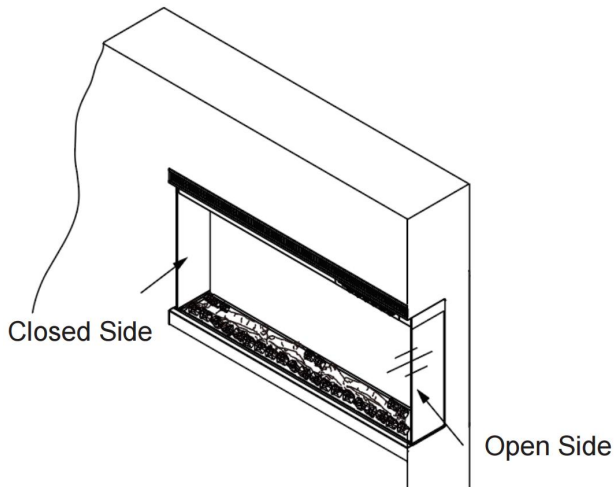


11.Single-Sided Viewing Installation

Appliance is fully recessed into the wall: Left and right side views are covered.

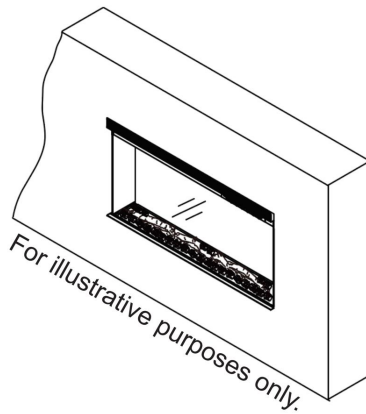

12.Product Assembly


RECESSED TO WALL INSTALLATION (fasten from front)

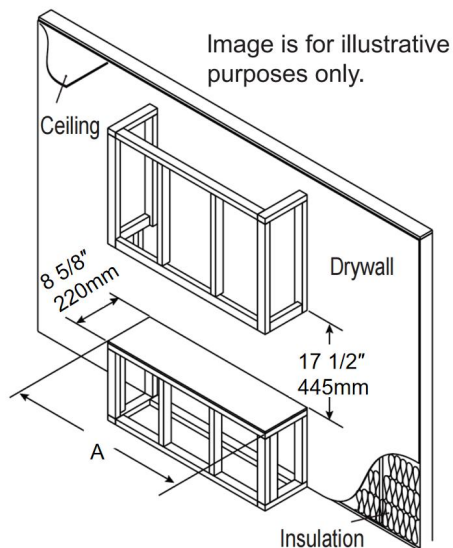


Model	IF-1350	IF-1360	IF-1372
A	50 13/64"(1275mm)	60 13/64"(1529mm)	72 13/64"(1834mm)


13.Product Assembly

Attach the fasten bracket to the heater with two 4*12mm screws,see Fig A.

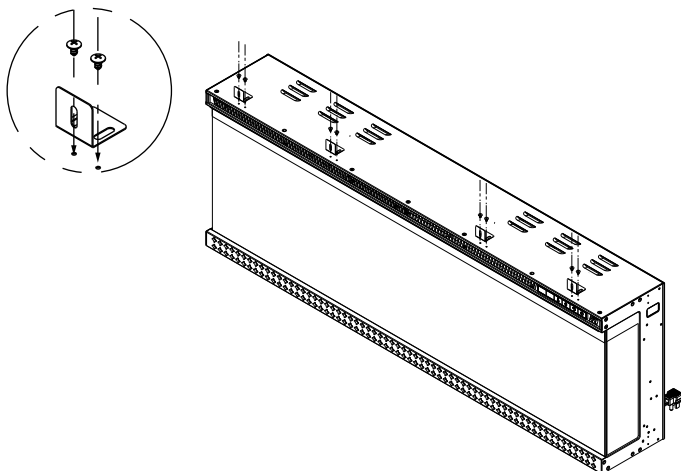

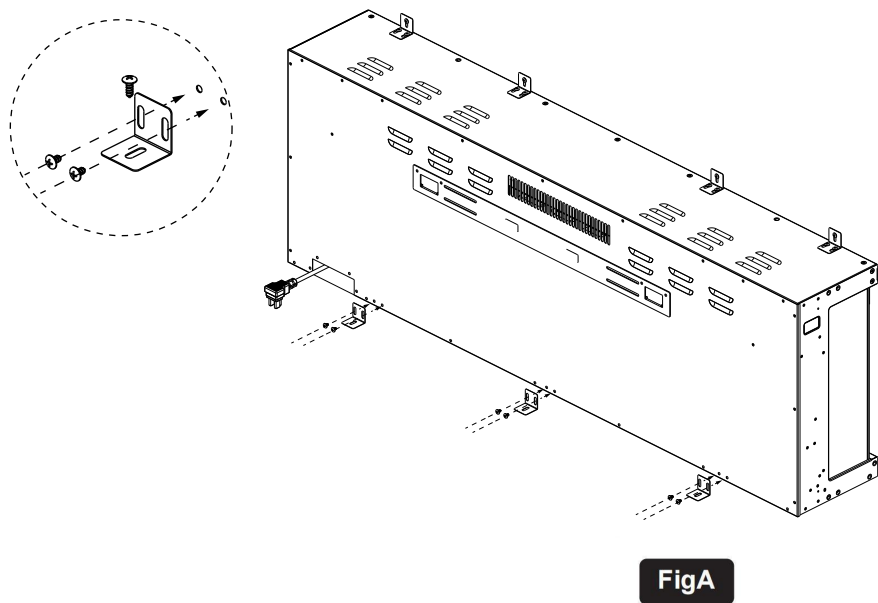


Put the fireplace to mantel hole. Use 4pcs of 4x25mm screws to fasten the bracket at front.

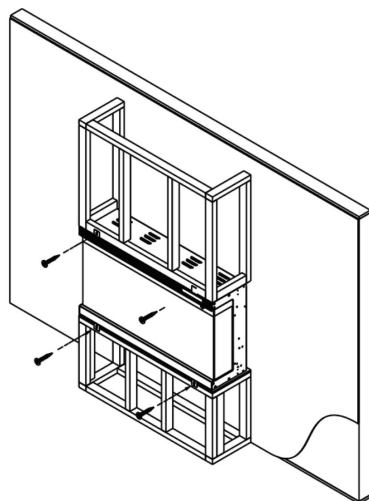

14.Product Assembly


RECESSED TO WALL INSTALLATION (fixed at both sides)

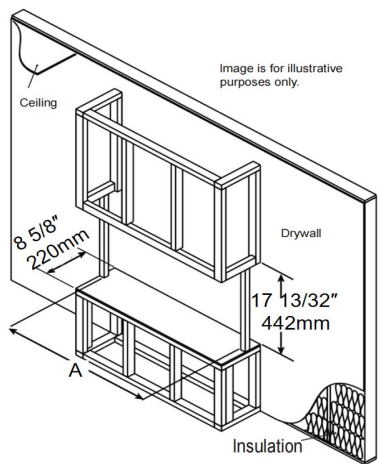


Model	IF-1350	IF-1360	IF-1372
A	50 13/64" (1275mm)	60 13/64" (1529mm)	72 13/64" (1834mm)

Product Assembly

Attach the fasten bracket to the heater (at both sides) with two M4*12mm screws, see Fig B.

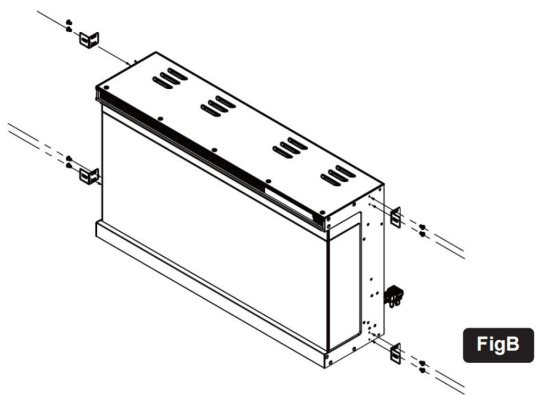


Put the fireplace to mantel hole. Use 4pcs of M4x25mm screws to fasten the bracket at front.

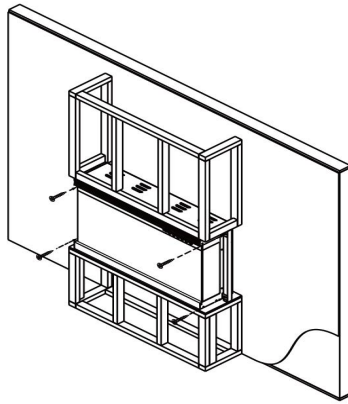

MINIMUM CLEARANCE TO COMBUSTIBLES

Measurements are taken from the glass front.			
Bottom	0"	Top	11.8"(300mm) to mantel
Sides	0"	Top	11.8"(300mm)to ceiling
Back	0"		

minimum mantel clearances warning
warning:when using paint or lacquer to finish the mantel, the paint or lacquer must be heat resistant to prevent discoloration.

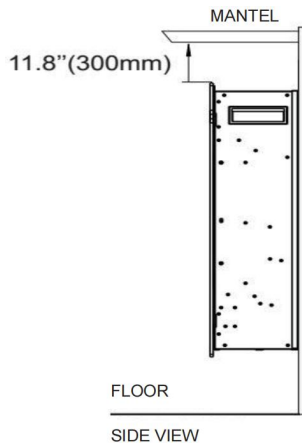

Wall Mounted Installation


Due to the many different materials used on different walls, it is highly recommended that you consult your local builder before you install this appliance on the wall.

A. Select a location that is not prone to moisture and is located at least 36"(914mm) away from combustible materials such as curtain drapes,


furniture, bedding, paper, etc.

B. Have two people hold the appliance against the wall to determine the final location.

C. Place unit face down on a soft, non abrasive surface. Remove the bracket from the back of the unit by removing the screws, refer to Figure 1. Remove 2pcs of screws at back panel, refer to Figure 1.

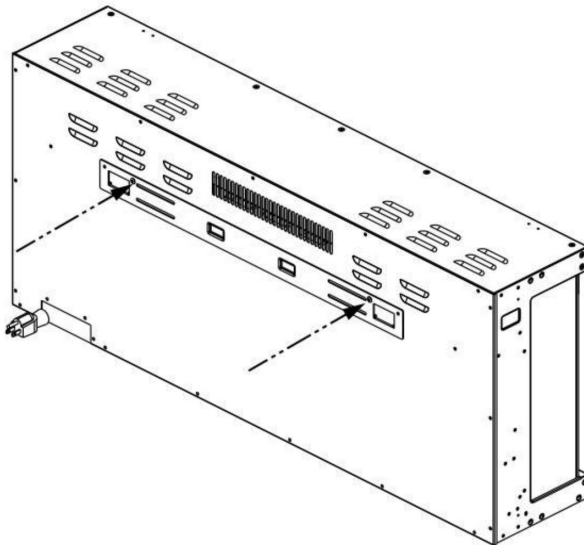

D. Mark out location, then mount the bracket onto the wall using the supplied screws. This bracket **MUST** have the hooks facing upward and be level.

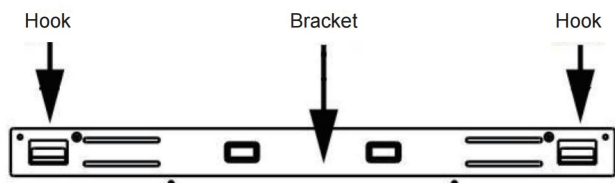


NOTE: It is strongly Recommended that the mounting bracket be screwed into the wall studs where possible. If the wall studs cannot be used, ensure that the supplied plastic anchors are used to affix the bracket to the wall and the bracket is adequately secured.

E. With the wall mounting bracket installed have two people lift the appliance up and insert the two hooks on the bracket into the two slots on the back of the appliance.

F. Check the appliance for stability ensuring that the bracket will not pull free from the wall.

G. Fasten the bottom bracket at the back of fireplace with 2pcs m4x12mm screw, the other end to the wall with 1pc of Drywall anchors.

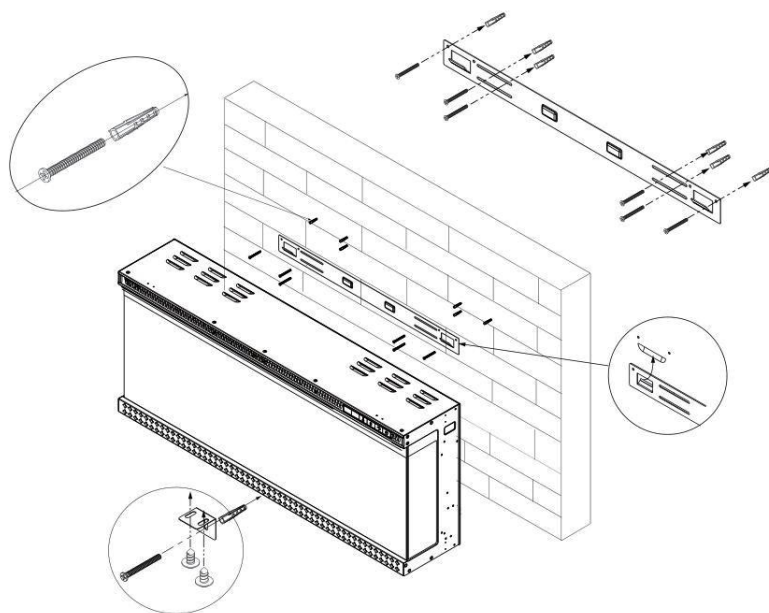

WARNING



TURN OFF THE APPLIANCE COMPLETELY AND LET COOL BEFORE SERVICING. ONLY A QUALIFIED SERVICE PERSON SHOULD SERVICE AND REPAIR THIS ELECTRIC APPLIANCE.

Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure do to so could result in electric shock, fire, serious injury, or death.

Plug the power cord into a 110-120V Volt 15 Amp(At United States) outlet (see IMPORTANT SAFETY INFORMATION). Make sure the outlet is in good condition and that the plug is not loose. NEVER exceed the maximum amperage for the circuit. DO NOT plug other appliances into the same circuit.

Methods of Operation

This electric fireplace can be operated either by the switches located on the top right hand side of the fire or by supplied remote control.

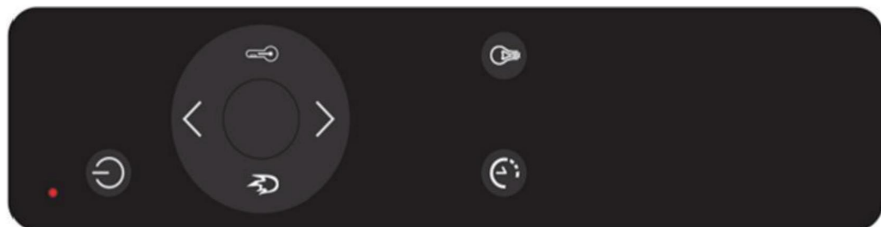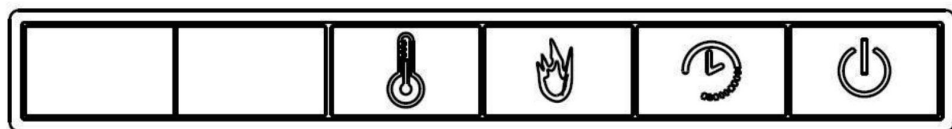

TOUCH PANEL/REMOTE CONTROL OPERATION

BUTTON	FUNCTION	ACTION&INDICATION
 POWER	ON:Enables control panel functions and remote control.Turn on flame effect. OFF:Disables control panel functions and remote control.Turn off flame effect.	1.Press once,indicator light turns on. Power turns on. All functions enabled. 2. Press again, power turn off.
 FLAME	FLAME button: 1.Control the flame color. 2. Keep pressing for 3 seconds the flame brightness gets changing.	1.Press once.Flame color effect gets changing. 2.Press again until desired setting is reached.
 HEATER	HEATER button: Control the temperature output mode. When fireplace is turning on, keep again select the desired temperature setting. (62-82°F)	1.Press once,indicator lights up.750W heater turns on and blows warm air. 2.Press again.Indicator lights up.1500W heaters turns on and blows hot air. 3. Press again. change the temperature.
 TIMER	TIMER button:Control timer settings to turn off fireplace at selected time. Settings range from 0 hours,1hours,to 8 hours.	Press once,indicator light turn on.Temperature is set to hours. Press again until desired setting is reached. LED display show setting.

	Increase button: Increase the heat output and flame Color.	Increase the heat output and flame color.
	Decrease button: Decrease the heat output and flame color.	Decrease the heat output.
	Flame button: Change the flame brightness	Flame button: Change the flame brightness.

Note1:When the heater is first turned on, a slight odor may be present. This is normal and should not occur again unless the heater is not used for a long period of time.

Note2:To improve operation, aim the remote control at the front of the fireplace. DO NOT press the buttons too quickly, Give the unit time to respond to each command.

Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF.

To reset:

1. Unplug the power cord from the outlet
2. Turn the ON/OFF switch on the CONTROL PANEL to OFF. Wait 5 minutes.
3. Inspect the fireplace to make sure no vents are blocked, or clogged with dust or lint. If there are, use a vacuum to clean the vent areas.
4. With the POWER switch in the OFF position, plug the power cord back into the outlet.
5. If the problem continues, have your outlet and wiring inspected by a professional.

Remote Control Battery Information

Remote control requires two AAA batteries (not included).

NEVER dispose of batteries in fire. Failure to observe this precaution may result in an explosion.

Dispose of batteries at your local hazardous material processing center.

CARE AND MAINTENANCE

Cleaning

ALWAYS turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.

NEVER immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury.

Metal:

Buff using a soft cloth, slightly dampened with a citrus oil-based product.

DO NOT use brass polish or household cleaners as these products will damage the metal trim.

Glass:

Use a good quality glass cleaner and dry thoroughly with a paper towel or lint-free cloth.

NEVER use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

Use a vacuum or duster to remove dust and dirt from the heater and vent areas.

Clean the exterior of the fireplace with a slightly damp cloth or duster.

Maintenance

Risk of electric shock! DO NOT OPEN! No user-serviceable parts inside!
ALWAYS turn the heater OFF and unplug the power cord from the outlet before cleaning,performing maintenance, or moving this fireplace. Failure to do so could result in electric shock,fire,or personal injury

Electrical and Moving Parts:

The fan motors are lubricated at the factory and will not require lubrication. Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Storage:

Store heater in a clean dry place when not in use.
WARNING! No other servicing should be performed by the consumer. Do not attempt to service the unit yourself.

Troubleshooting

WARNING: DISCONNECTED THE APPLIANCE COMPLETELY AND LET COOL PRIOR TO ANY SERVICE ONLY A QUALIFIED SEVICE PERSON SHOULD SERVICE AND PEPAIR THIS ELECTRIC APPLAINCE

PROBLEM	POSSIBLE CAUSE	SOLUTION
Fireplace turns off and will not turn on.	1.Fireplace has overheated and safety devise has caused thermal switch to disconnect or home circuit breaker has opened.	1.Reset switch by turning main power off and waiting turning it back on or breaker circuit breaker.

Flame is not moving.	1.Loose wiring. 2.Flame motor defective 3.Flame rod out of place	1.Inspect wiring for loose connections. 2.Call a qualified service technician to replace flame motor. 3."Flame Rod"out of place due to rough transit/handing of the product. This issue can be corrected as simple as removing the glass,flipping the fireplace upside and down,removing a set of screws that are holding the bottom frame plate and placing the fame rod back into place.
Flame is not visible	1.Wiring is loose.	1.Disconnect from power source and inspect wiring for loose connections and repair or replace if necessary. 2.Push the flame button to high.
Log set and /or is not glowing.	1.Wiring is loose. 2.Ember is off mode,	1.Disconnect from power source and inspect wiring for loose connections and repair or replace if necessary.
Remote control does not work.	1.Low batteries. 2.Not aiming control correctly. 3.Defective remote control and/or sensor.	1.Replace batteries in remote control. 2.Aim control at sensor located directly behind glass screen in center of unit just above logs. 3.Replace remote control and/or sensor.