 
 


Installation Instructions

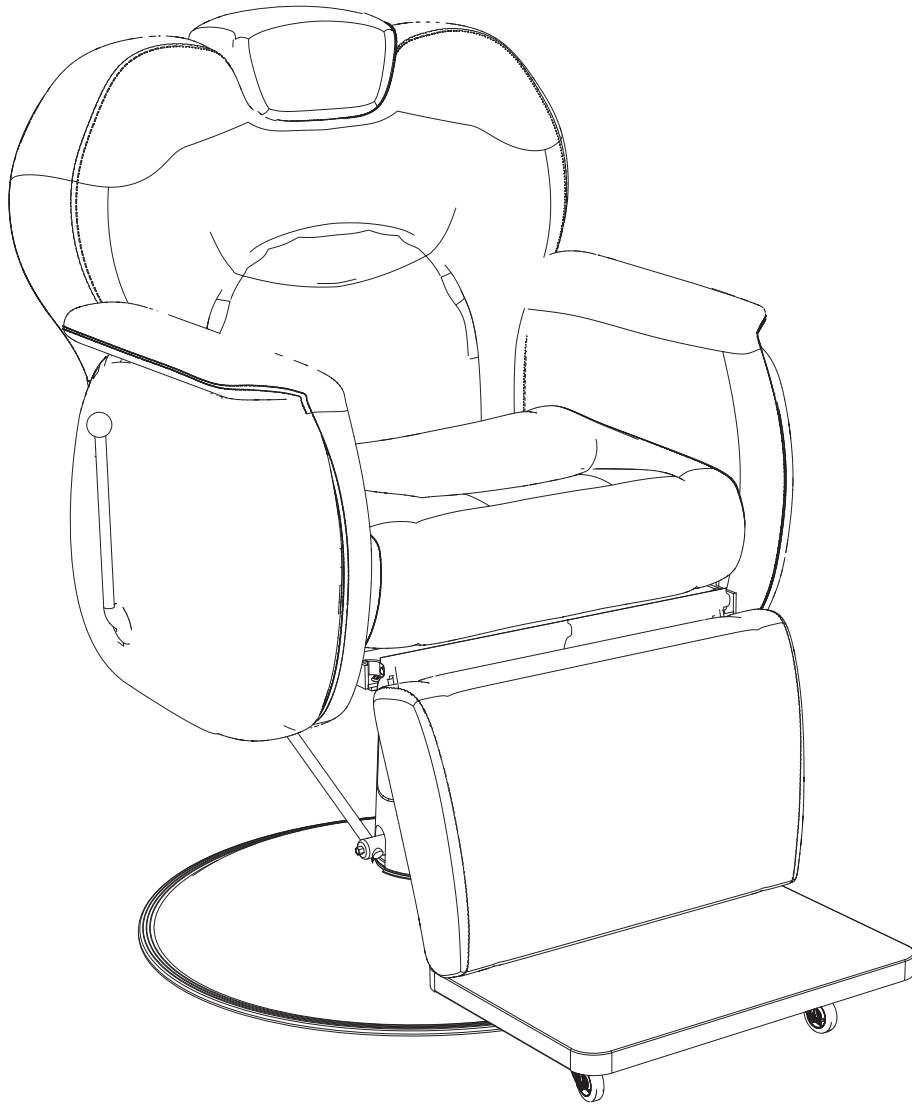

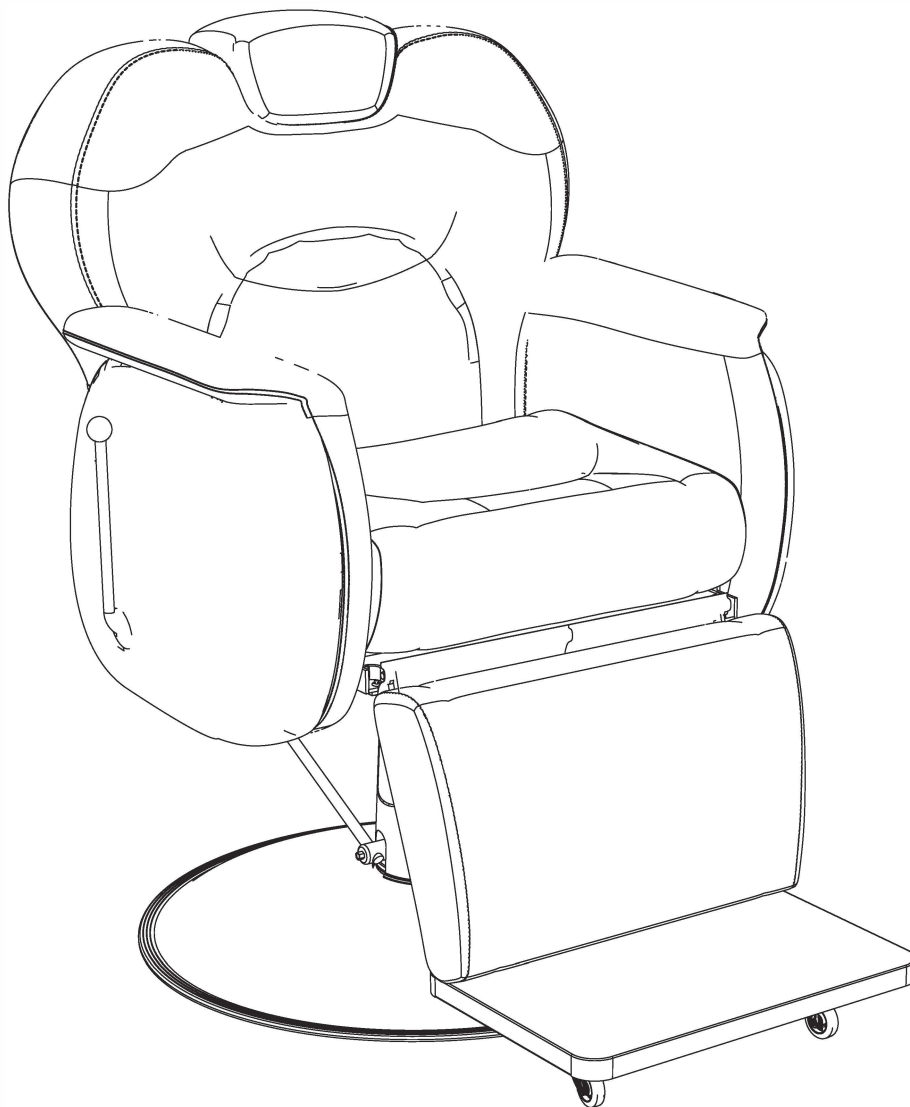


***Tips for height adjustment:**

 To Lower the Seat: step on the step pedal all the way down to lower the seat.

To Raise the Seat: consecutively step on the step pedal halfway to slowly raise the seat to a higher position.


Please do not hesitate to contact us if there are any problems with the items.

Please also leave us the order number and the pictures or videos of the item, and we will reply to you within 48 hours.





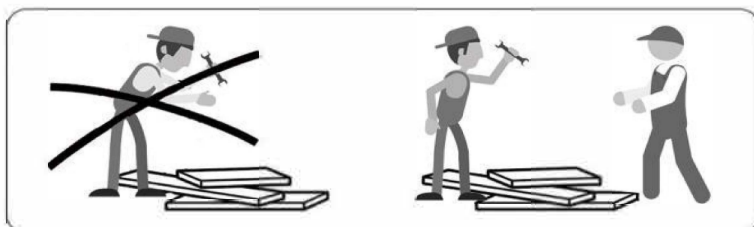













Assemble with the assistance of another person.

 Carefully protect the product during installation.

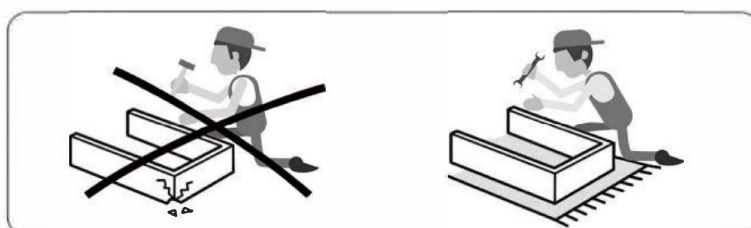


Parts Included

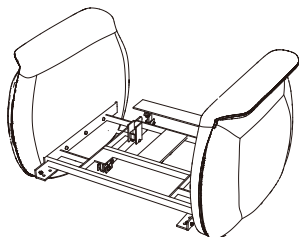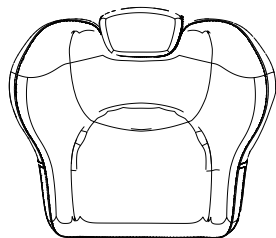  
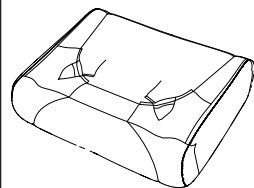 
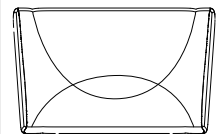 
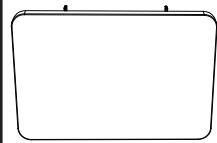 
A*1  Seat	B*1  Backrest	C*1  Seat Cushion	D*1  Leg Rest	E*1  Footrest
---	---	--	---	---

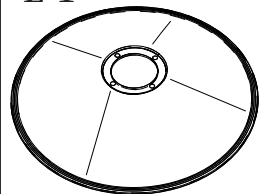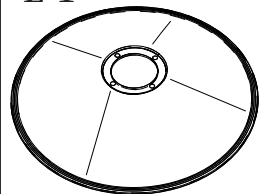           F *1  F1 *1  Wrench	G1*1  <td> G2*1  </td> <td> H*4  </td> <td> I*4  </td> <td> J*1  K*4  Screws </td> <td> L*1  Base </td> <td> M*1  Pump </td> <td> N*1  Step Pedal </td> <td> O*1  Connecting Rod </td> <td> P*1  Footrest Connector </td>	G2*1 	H*4 	I*4 	J*1  K*4  Screws	L*1  Base	M*1  Pump	N*1  Step Pedal	O*1  Connecting Rod	P*1  Footrest Connector
--	---	--	---	---	---	---	---	---	---	---

 
1 Install the base and pump

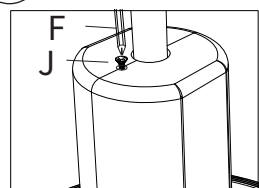

1-1. Secure the pump cover with J.

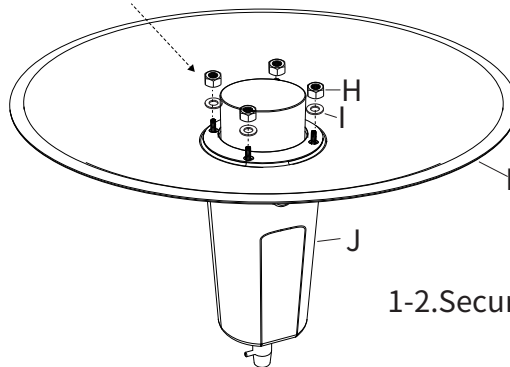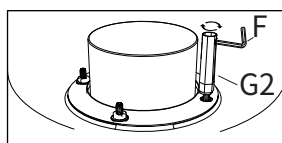   
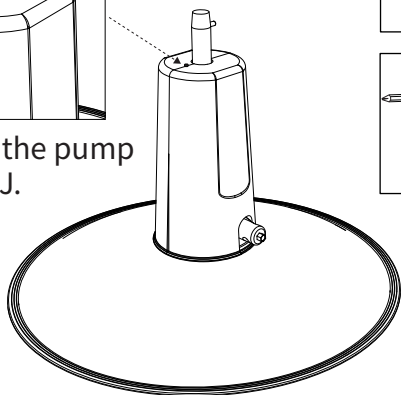 


 1-2. Secure the pump and base with H and I.



F*1 	G1*1 	H*4 	Y*4 	J*1 	L*1 	M*1 
Wrench		Screws			Base	Pump

2 Install the step pedal

  2-1. Insert K into the pump and tighten the screw.

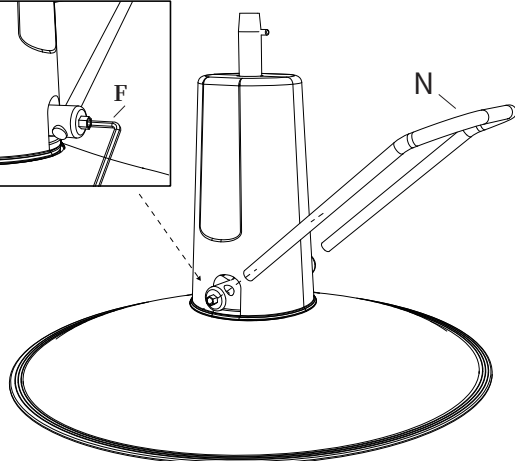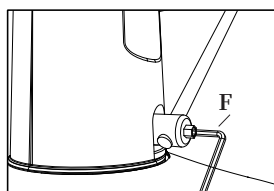

Pay attention to the orientation of N.

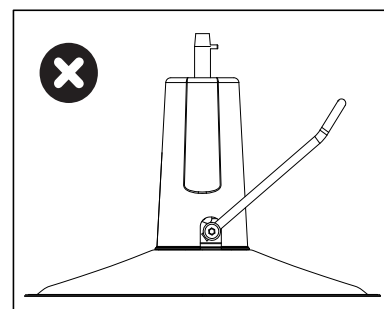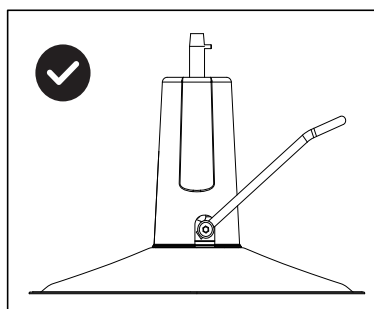  

F*1 	N 
Wrench	Step Pedal

3 Install the seat to the pump

 
Two person are recommended to complete this step.

3-1. One person lifts the seat.



3-2. The other person adjusts the position of the seat from below.

3-3. Insert the seat onto the pump.

A*1

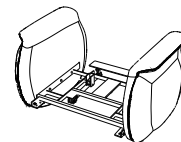

Seat

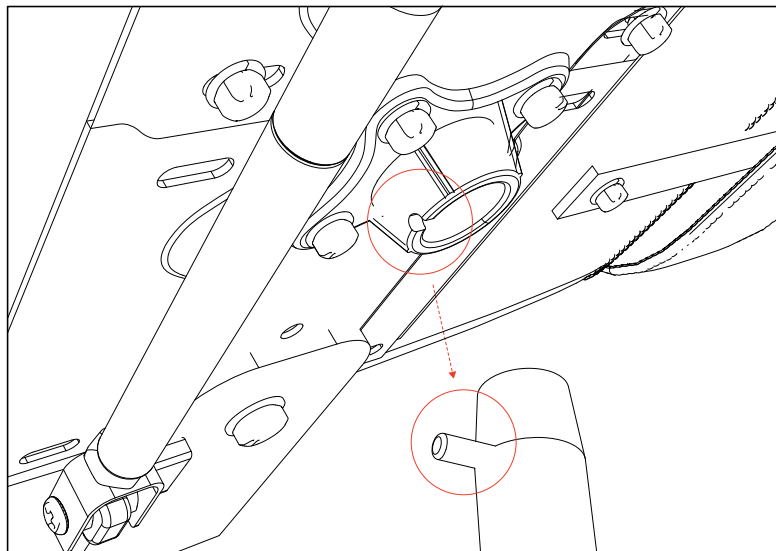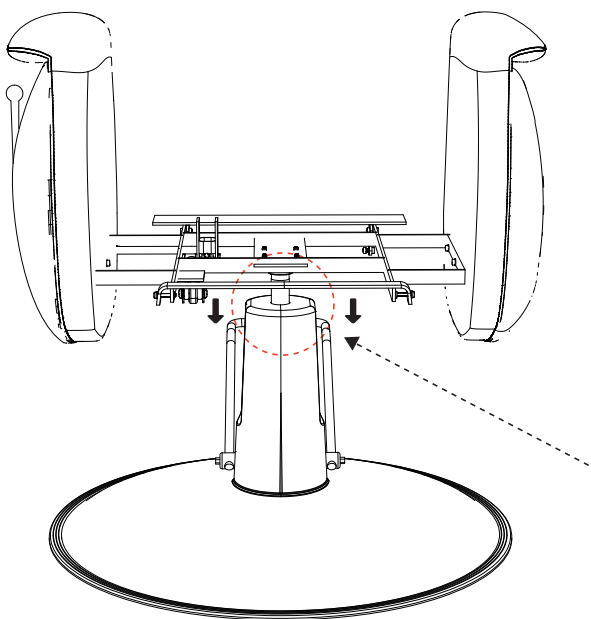  

4 Install the Footrest Connector and Footrest.

4-1. Remove the screws pre-installed on both sides of the chassis (as shown in 4-1), align the screw holes of the footrest connector and the chassis, and then re-tighten the screws with allen wrench provided.

4-2. Install the Footrest to the Connector: Remove the screws on both sides of the footrest (as shown in 4-2) align the screw holes of the footrest and the connector, and then re-tighten the screws with allen wrench provided.

F*1



E*1

 
 
 


Footrest

P*1



Footrest Connector


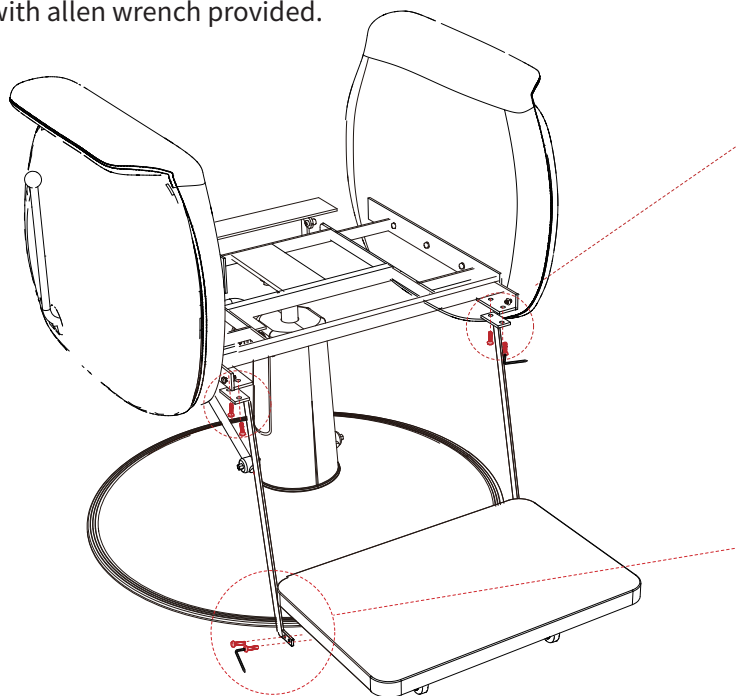
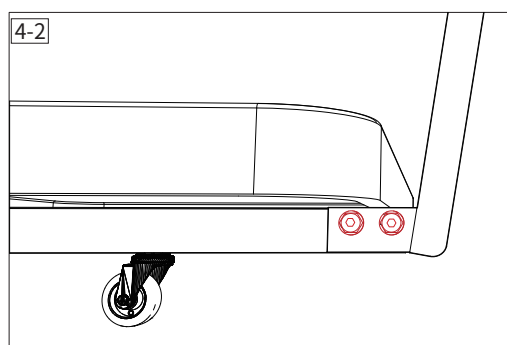
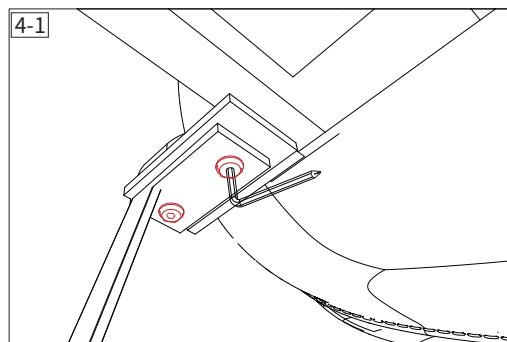


5

Install the Leg Support to the Chassis.

5-1 Remove the screws and nuts pre-installed on both sides of the chassis (as shown in 5-1).

 
 
 
 
5-2 Align the screw holes on both sides of the leg support and the chassis, and then re-tighten the screws with the #17 wrench and #14sleeve provided (as shown in 5-2).

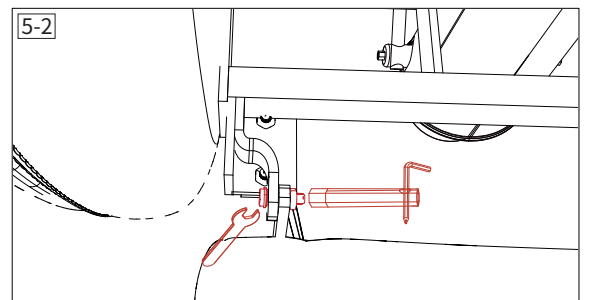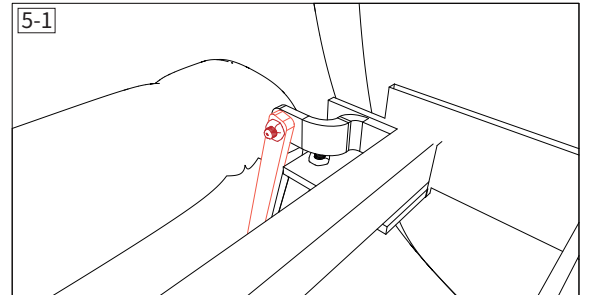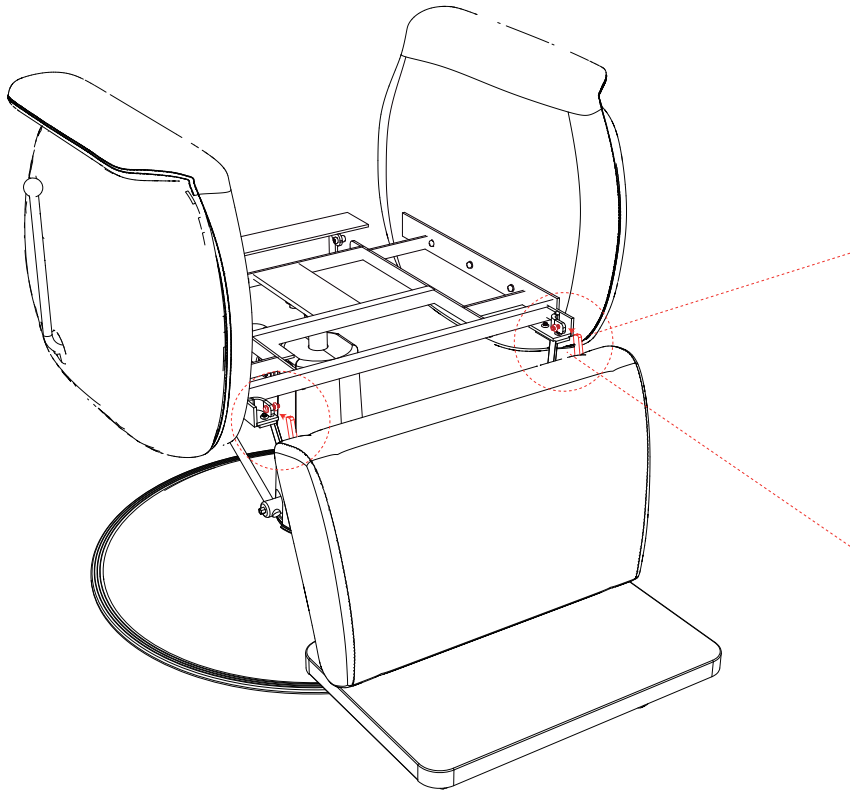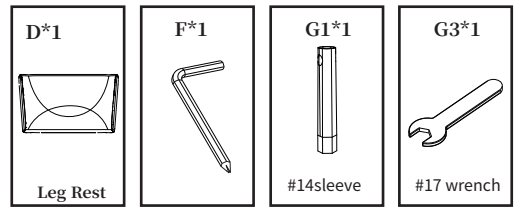

6

Connect the Leg Support and Chassis

  
 
 
Remove the screws and nuts pre-installed on the chassis and leg support, put in the footrest Connector and tighten the screws again.

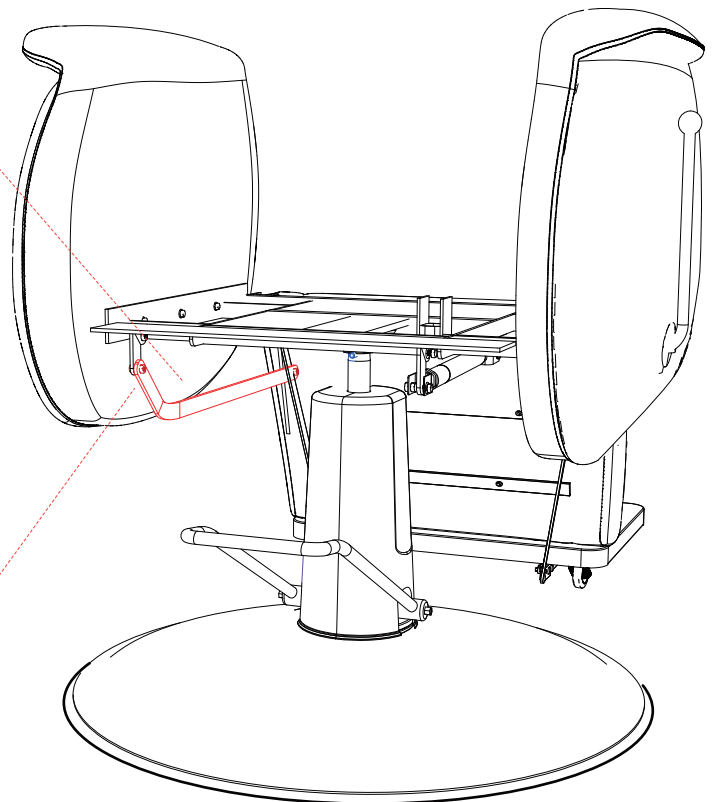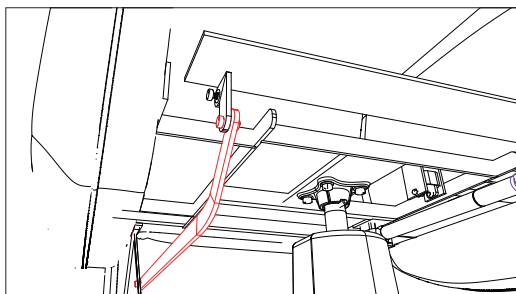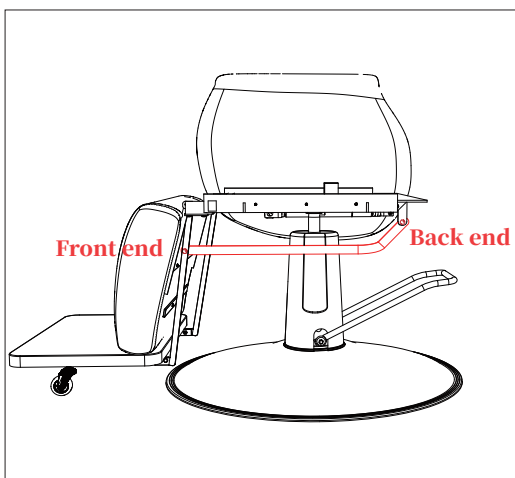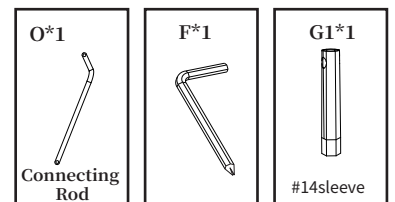

7

Install the Backrest

 
 
 
7-1 Remove the 4 nuts under the backrest, and then align the 4 screw holes on the chassis to place the backrest on the chassis.
7-2 Pass the longer end of the wrench through the hole of the sleeve, and then this tool to tighten the 4 nuts removed from the previous step to fix the backrest (as shown in 7-1).

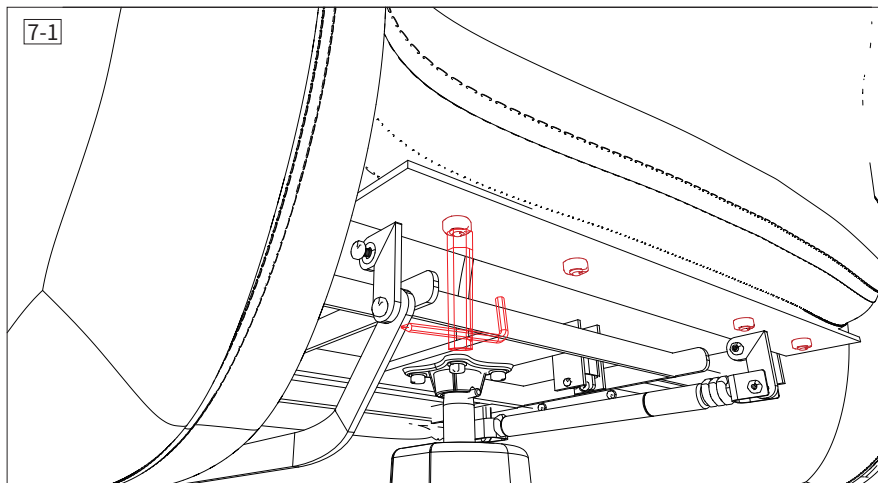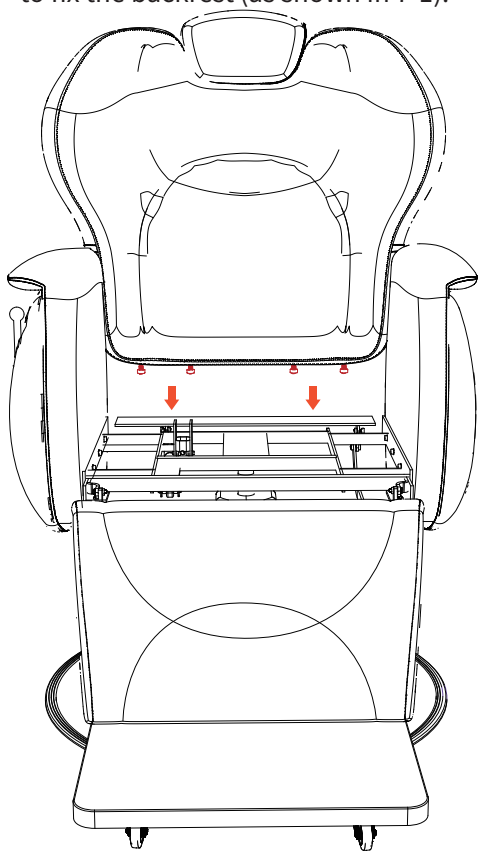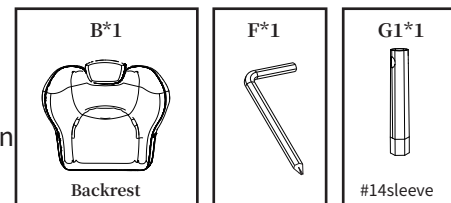

8

Install the Seat Cushion

   8-1 Align the 4 screwholes on the seat and the chassis
8-2 Use the provided wrench to screw the 4 self tapping screws into the screw holes to fix the seat (as shown in 8-1).

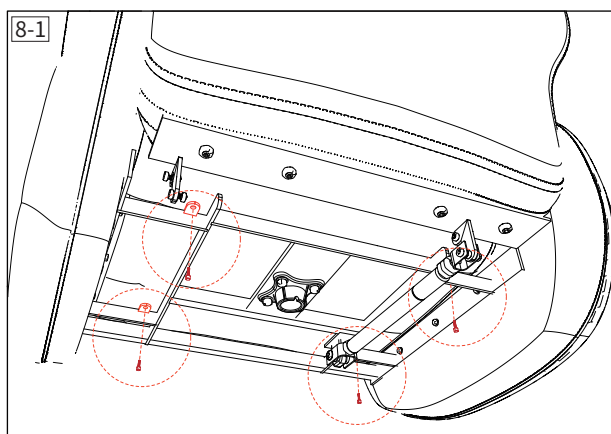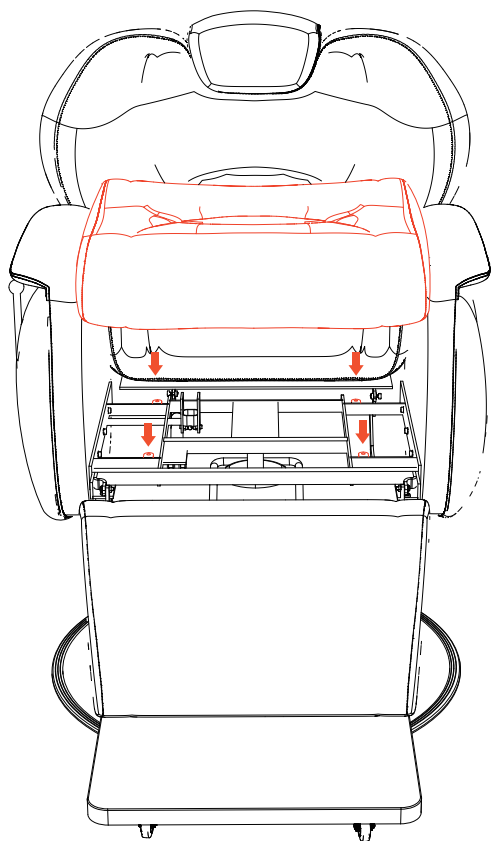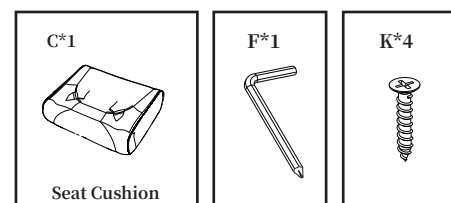

Installation Completed.

