

PRETTYCARE

Smart Trash Can Instruction Manual



Please read this instruction carefully before use,
and please keep it properly for future

PRETTYCARE // Every day is wonderful


Precautions

The main body of this product contains electronic components, including precision parts.

1. Water Avoidance: Do not rinse the electronic part directly with water to prevent damage or short circuits to internal circuits. Wipe the electronic part shell clean with a wrung wet cloth.


2. Touch Buttons: Avoid allowing foreign matter to adhere to the touch buttons as it may affect functionality. Use a soft cloth to wipe the touch screen area to prevent scratches. If not used for an extended period, press and hold the power-off button to turn off the product.

Product Structure

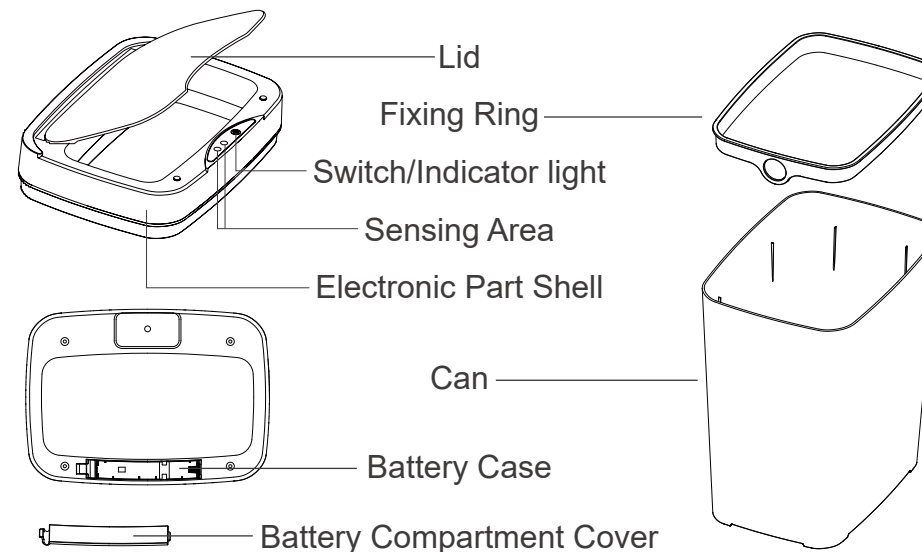

PRETTYCARE // Every day is wonderful

Product List

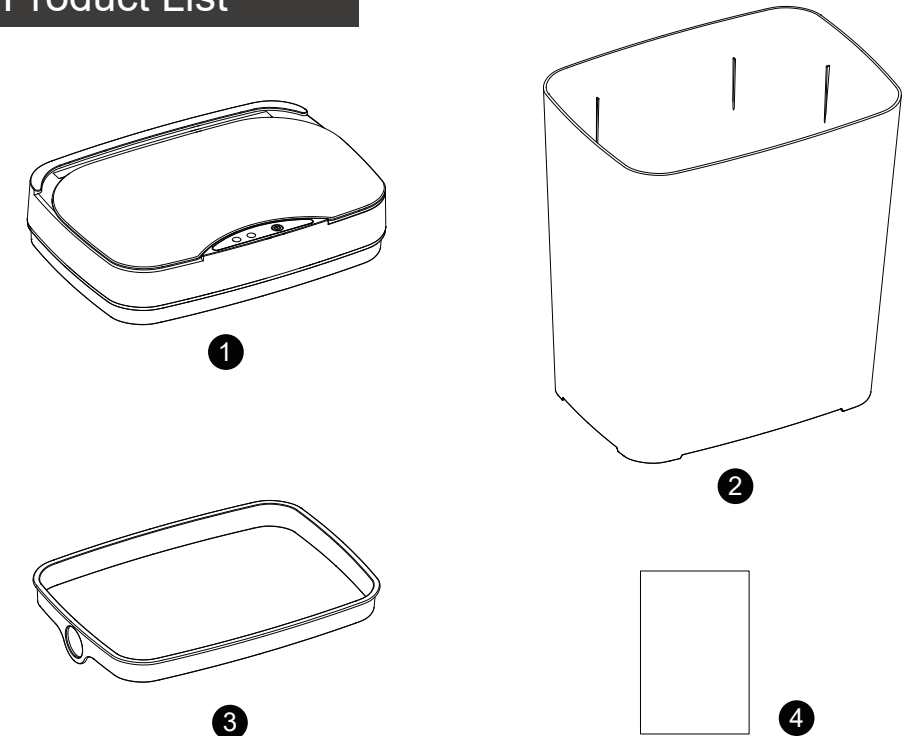

① Smart trash can lid* 2

② Can* 2

③ Fixing ring* 2

④ Product Manual* 1

INSTRUCTIONS FOR USE

- 1.On/off key: Press and hold for 1.5 seconds to turn on (the indicator light flashes blue for 3 seconds). Press and hold again for 1.5 seconds to turn off (the indicator light flashes red for 3 seconds)
- 2.Sensing Area: If any object or hand comes within 11.8in of the sensing area of this product, the lid will automatically open, and the blue light will flash slowly. After 5 seconds, the lid will automatically close.
- 3.Vibration Device: Use your foot or an object to lightly kick the can, and the motor will work normally to open the lid. The lid will automatically close after 5 seconds.
- 4.Battery Box: This product requires two AA batteries to start the smart sensing operation.
- 5.Switch Function: Short press the switch, and the lid will stay open, the blue light stays on for five seconds and then goes out to save power. Short press the switch again, and the lid will close,restoring the sensing function.

PAY ATTENTION !!!

- 1.If there is an object blocking the sensing area within 23.6in, the lid will remain closed. The blue indicator light will not work until the obstructing object is removed, and then it will resume normal operation.
- 2.When the battery power is low, the red light will flash slowly when the lid is opened, indicating that the battery power is about to be exhausted.Replace the batteries.

Product parameters	
PRODUCT NAME	SMART TRASH CAN
MODEL	GC01
MATERIAL	PP
CAPACITY	3.6gal
SIZE	9.8* 7*12.2in
COLOR	WHITE+BLACK
BATTERY	AA*2 (NOT INCLUDED)
BATTERY LIFE	30-60days (Depends on frequency of use)
APPLICABLE BAG CAPACITY	≥4gal(NOT INCLUDED)

Troubleshooting

ERRORS	SOLUTIONS
Lid does not open	Press the power button to make sure the power is on.
	Check if the batteries are placed correctly
Lid does not close	Press the "Open/Close" button to close the trash can.
	Check to see if there are any objects within the sensor area. If there are, remove them
	Wipe the sensor with a dry cloth to ensure that the sensor is clean and that there is no excess moisture on it.
Red LED flashes slowly	Battery power is low. Replace the batteries.

If you encounter product problems that we have not mentioned, please contact our customer service in time and we will solve it for you within 24 hours



Customer Service

We are committed to providing users with a perfect

shopping experience, if you encounter any problems,

please feel free to contact us, we will reply you within

24 hours. If you need to repair or replace any parts,

please seek help from the PRETTYCARE team via

Walmart

(or contact us via email: help-prettycare@outlook.com