


Model: _____


Lot No: _____

Date of Purchase: _____


4

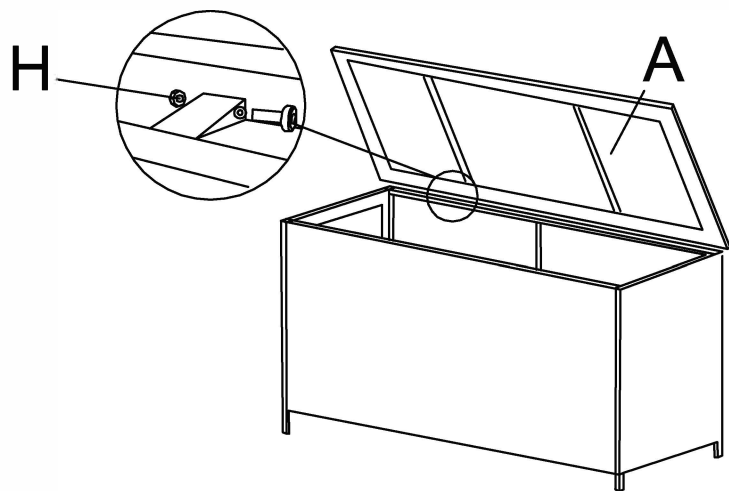


5

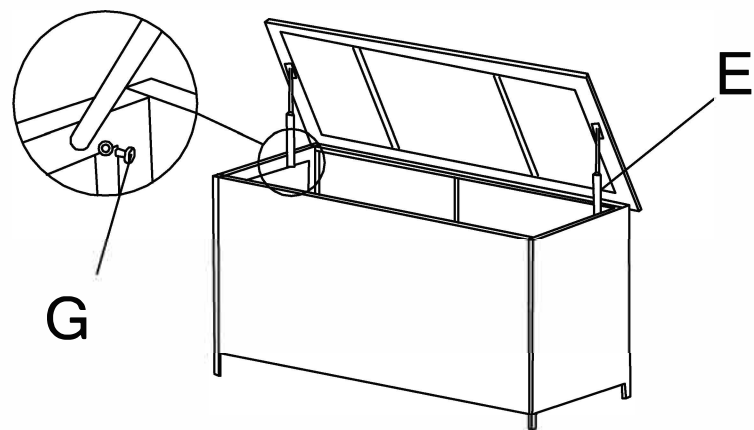

6

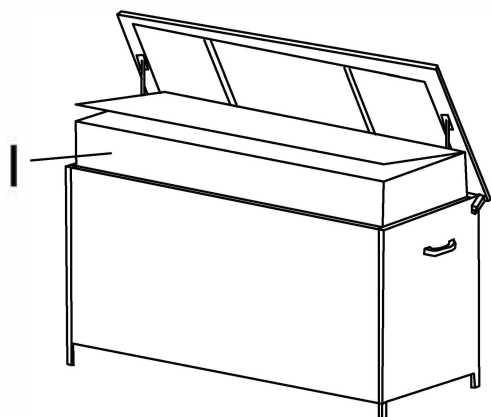

DECK Box

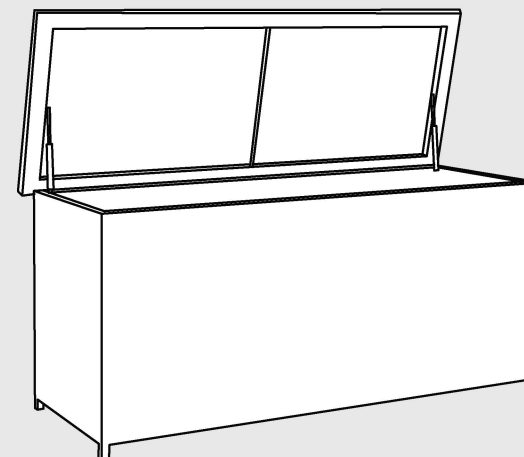

ADULT ASSEMBLY REQUIRED

 
If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free customer service number and have this assembly manual open to the parts list ready to provide the model name, and part name or number.




WARNING: This product may contain small components, please ensure they are kept away from small children.

PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.




A. Top
1x

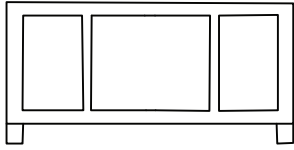


B. Front 1x
Back 1x

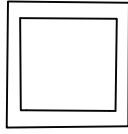


C. Box Side
2x

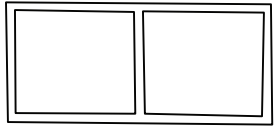

 D. Bottom
1x



 E. Trunk Strut
2x




F. Bolt 18x
Washer 18x



G. Bolt 2x
Washer 2x




H. Nut
2x

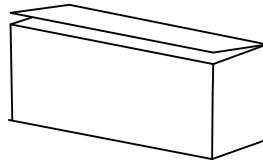

I. Box Case
1x



 J. Allen Key
1x




K. Wrench
1x


ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

1

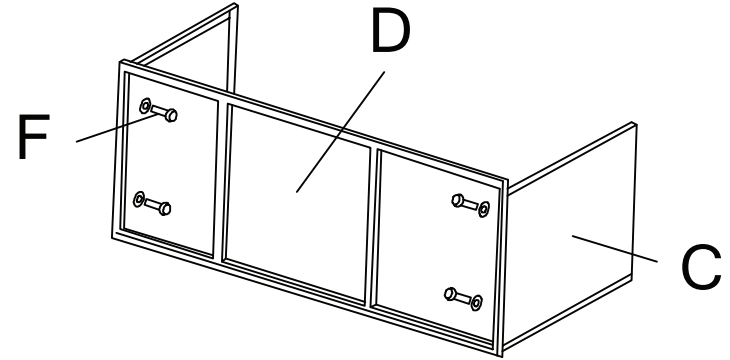

2

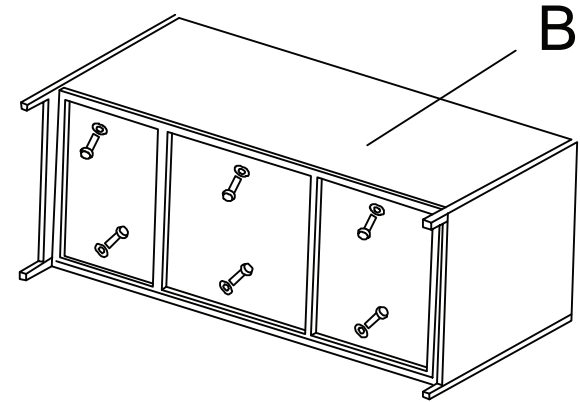

3

