



MULTI-FUNCTION ORGANIC JUICER OPERATIONS MANUAL

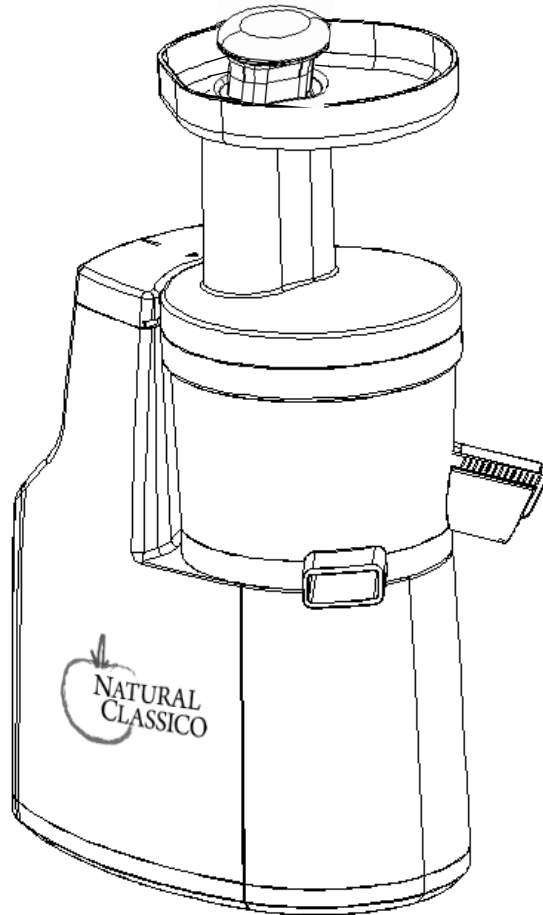


TABLE OF CONTENTS


IMPORTANT SAFETY INFORMATION	1
PARTS	2
JUICER ASSEMBLY	3-4
JUICER USER GUIDE	5
FOOD PROCESSOR ASSEMBLY	5-6
FOOD PROCESSOR USER GUIDE	6
PRODUCT SPECIFICATIONS	7
TROUBLESHOOTING	7

THANK YOU FOR USING A NATURAL CLASSICO MULTI-FUNCTION ORGANIC JUICER. PLEASE READ THE ENTIRE INSTRUCTION MANUAL PRIOR TO USING YOUR UNIT.

IF YOU HAVE ANY QUESTIONS REGARDING THE NATURAL CLASSICO MULTI-FUNCTION ORGANIC JUICER PLEASE VISIT [HTTP://WWW.NATURALCLASSICO.COM](http://www.naturalclassico.com) OR CALL: 1-877-862-7049.

IMPORTANT SAFETY INFORMATION


When using electrical appliances, basic safety precautions should always be followed.

 If the product need to be repaired, please contact the authorized vendor. **DO NOT** dismantle it by yourself, in order to avoid electric shock.


1. Please disconnect the power when dismantling or cleaning any parts of the product.
2. Before use, check the power cord, plug, juicer nets, screws and other parts, if found damaged, please stop using the product, please contact the authorized vendor.
3. Before turning on power, make sure the movable parts in place, the container lid and the container be fully tightened to prevent product leakage.
4. With intelligent protection component, the product will stop working with it's automatic protection if the power is too great. To continue use, please wait one minute after restart. This method will extend product life.
5. The product will automatically stop if overloaded or stalled. After restart if the product will not continue to work, clean the product and try again.
6. Ingredients must to be cut into small pieces that are able to be inserted into barrel. Nucleus (pit), Hard seeds, thick or crusty food must be removed before processing.
7. This product is not suitable for pressing hard fibrous foods; such as ice, coconut, or sugar cane. Attempting to press these ingredients can result in the foods getting stuck, blocking residue, resulting in damaged parts, thus affecting the life of the product.
8. When adding ingredients, do not use excessive force. Please ensure that the ingredients are cut to the proper size.
9. During the products operation to avoid injury, do not have your face too close, reach into the feed inlet, use other equipment to insert ingredients.
10. When using any electric appliance used around children, close supervision is strongly suggested.
11. In order to avoid thermal deformation damage do not use in a microwave. Parts in contact with the food materials are in line with food grade certification requirements.
12. Do not place or submerge, place or rinse the product motor in water. Do not use water over 140°F (60°C) to clean or disinfect the product, container and/or other accessories.
13. Staining caused by food ingredients is normal, and will not effect quality.
16. Do not use steel wool, abrasive cleaning agents or aggressive liquids (such as petrol or acetone) to clean the product.
20. Do not put any of the components into the dishwasher.
21. The product is intended for residential use only.

Please save these instructions for future reference.

PARTS

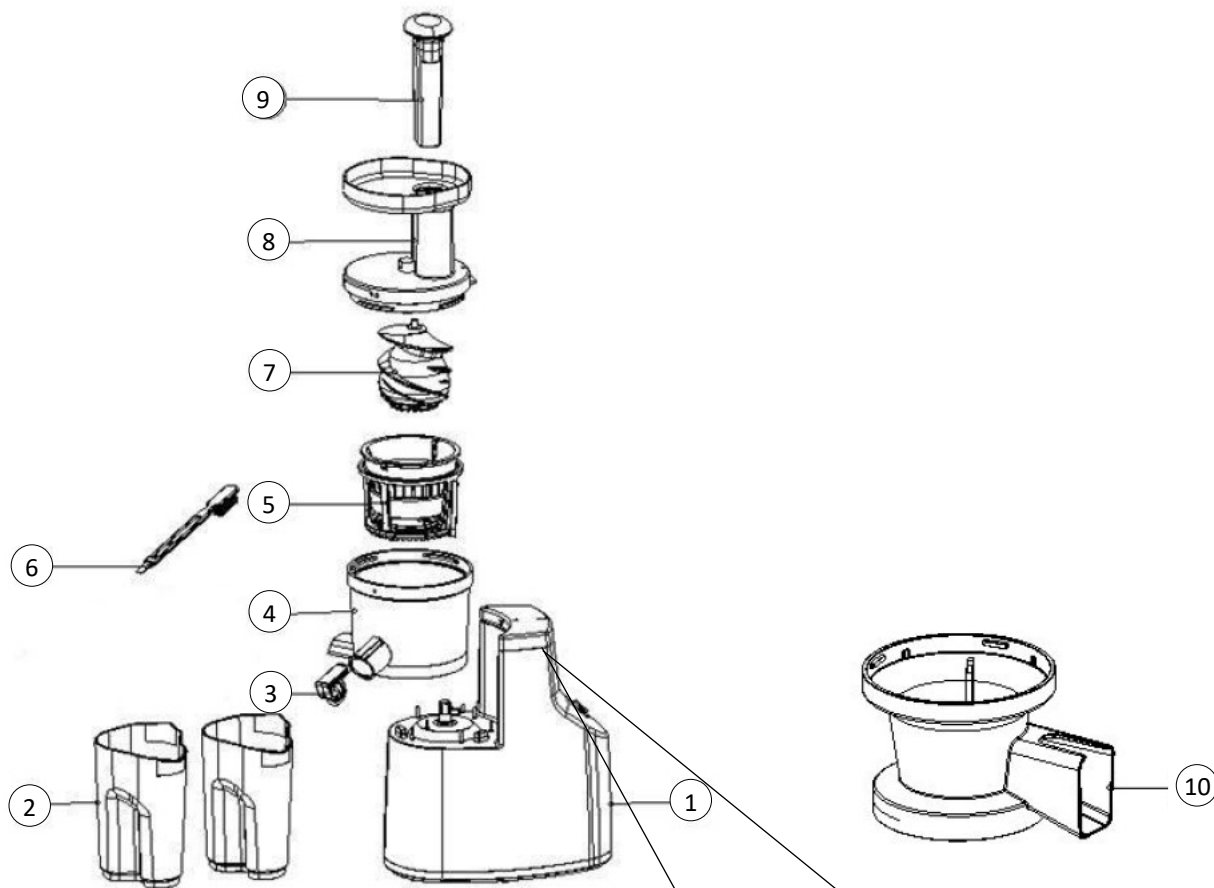

1. Main Motor
2. Juice Cup
3. Juice Outlet Component
4. Container
5. Filter Screen
6. Brush
7. Screw
8. Container Lid
9. Charge Bar
10. Food Processor Cup

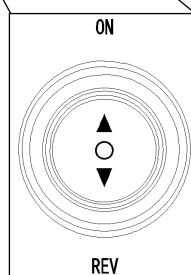


"ON" Button- Turns on the product.

"REV" Button- When the product is blocked or runs un-smoothly, press the reverse button gently and do not release until cleared. Press "ON" to continue to use the product.


JUICER ASSEMBLY

Please run a rinse cycle through the machine before use.


1. Confirm the silicon seal is fully secure to avoid juice leakage.

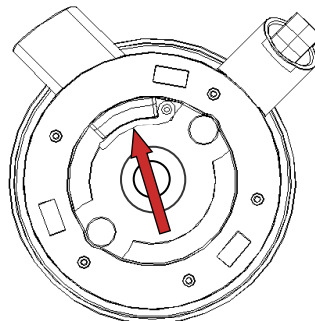

2. Insert the container (part 4) onto the main motor (part 1) and slide down.

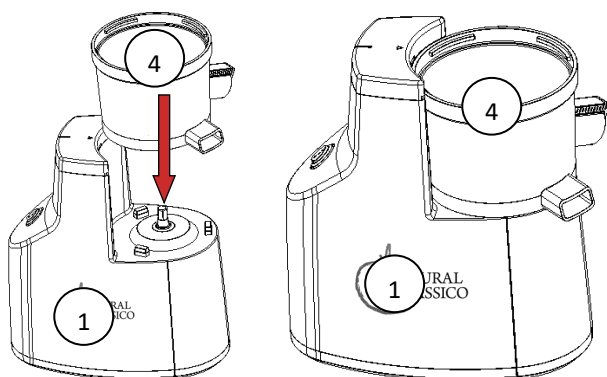


3. Assemble the filter screen (part 5) into the container (part 4). The arrow mark located on top of the filter assembly needs to line up to the triangle mark on the container.


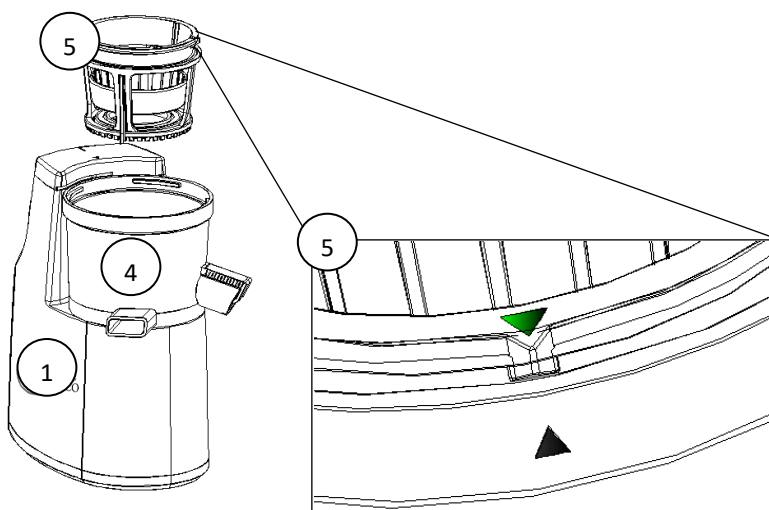


JUICER ASSEMBLY CONTINUED...


4. Insert the screw (part 7) into the central of filter screen support (part 5.)

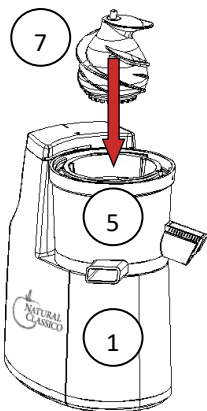

5. Attach the container lid (part 8) to the container (part 4) by lining up the tab on lid into the slot in the container. Twist clockwise to the locked symbol. To remove the lid, twist counter-clockwise to the un-lock symbol as show in the detailed view.

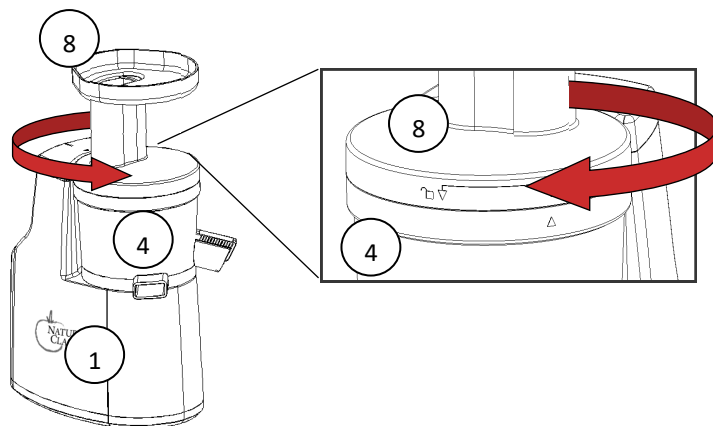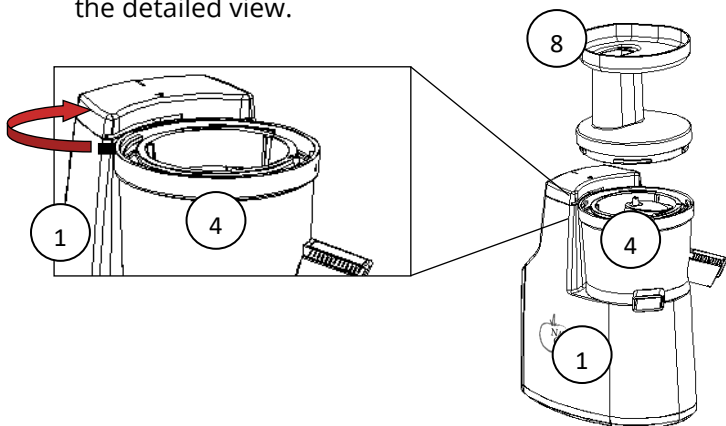

6. Place the juice cups (part 2) under the container (part 4.)

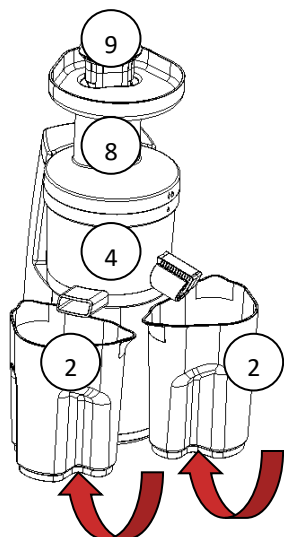

JUICER USER GUIDE


1. Clean and cut the ingredients into small pieces that are able to be inserted into the tube on the container lid.

NOTE: Nucleus (pit), Hard seeds, thick or crusty food must be removed before processing.

2. Insert the ingredients into to top of the feeding tube and then push down gently.


NOTE: Do not use excessive force, the product will automatically stop if overloaded or stalled. After restart if the product will not continue to work, clean the product and try again.

3. To release the juice from the container, slide down the tab from lock to unlock, per the illustration below.

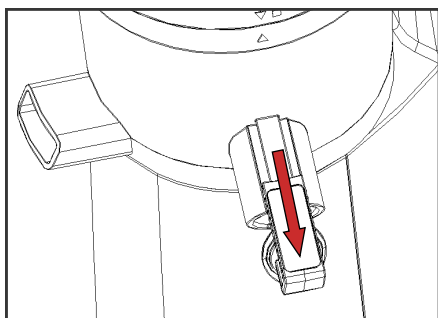

FOOD PROCESSOR ASSEMBLY


1. Insert the food processor (part 10) onto the main motor (part 1) and slide down.

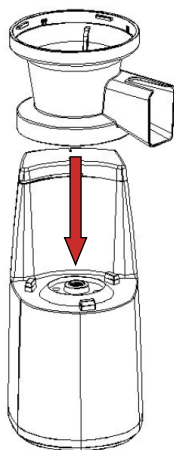


FOOD PROCESSOR ASSEMBLY CONTINUED...



2. Insert the screw (part 7) into the central of filter screen support (part 5.)

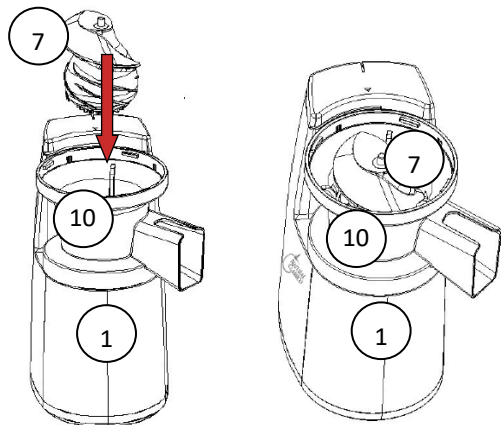

5. Attach the container lid (part 8) to the food processor (part 10) by lining up the tab on lid into the slot in the container. Twist clockwise to the locked symbol. To remove the lid, twist counter-clockwise to the un-lock symbol as show in the detailed view.

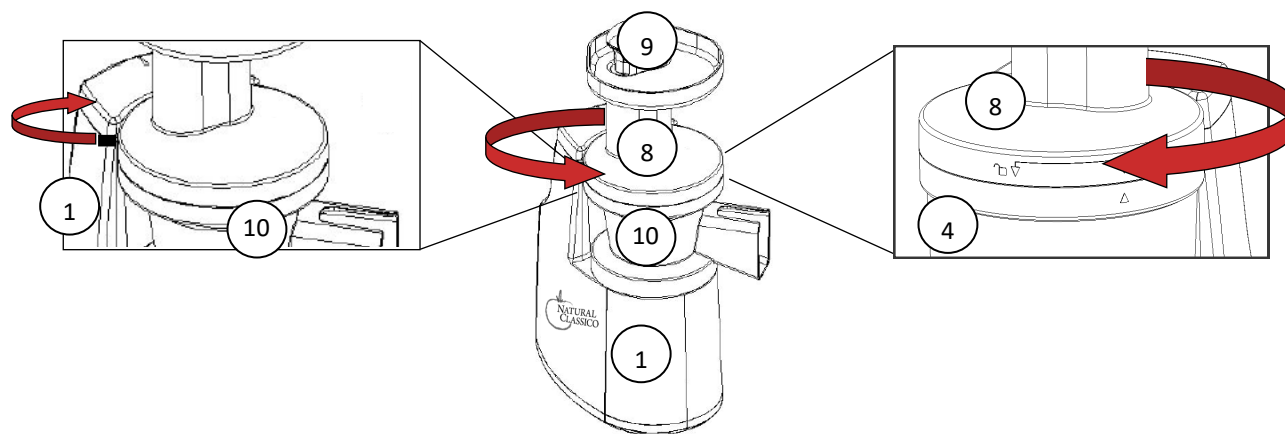

FOOD PROCESSOR USER GUIDE

1. Clean and cut the ingredients into small pieces that are able to be inserted into the tube on the container lid.

NOTE: Nucleus (pit), Hard seeds, thick or crusty food must be removed before processing.

2. Insert the ingredients into to top of the feeding tube and then push down gently.

NOTE: Do not use excessive force, the product will automatically stop if overloaded or stalled. After restart if the product will not continue to work, clean the product and try again.

PRODUCT SPECIFICATIONS

INPUT VOLTAGE	120V~
POWER	200 WATTS
FREQUENCY	60HZ
CONTINUOUS WORKING PERIOD	≤20 MINUTES
SPACING INTERVAL	≥5 MINUTES

TROUBLESHOOTING

ERROR	CAUSE AND POTENTIAL SOLUTION
Product will not turn on/ no feed-back from "ON" or "REV".	Check the power supply. If the product has been running longer than 20 minutes, turn off and re-start after 20 minutes.
Odor coming from the motor.	This is common from a new motor, if the problem continues contact the authorized vendor.
Product stops working.	The product will automatically stop if overloaded or stalled. After restart if the product will not continue to work, clean the product and try again.
Too much pulp in the juice.	Filter may be damaged. DO NOT attempt to disassemble yourself. Call the authorized dealer, a replacement part may be needed.