












Assembly Instructions

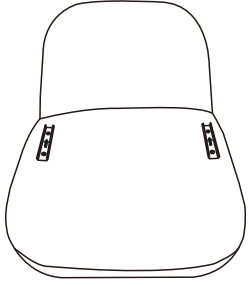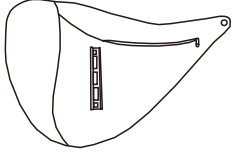Your sofa comes packaged in one box. DO NOT use any sharp object to open plastic wrapped components, as damage to product or components may result.



Carefully remove all of the components from the packaging and set aside for assembly.

Assemble on a soft surface to prevent scratching the finish.


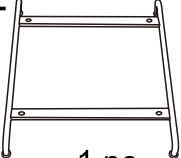
Your sofa style may differ from images. Care for your furniture by periodically tightening all legs. Fabric will fade or discolor in direct sunlight.

A  1 pc	B  1 pc	D  1 pc	F  2 pcs	① M6*30mm  2 pcs	③ φ30mm  2 pcs	⑤  H5 1 pcs	
		C  1 pc	E  1 pc	② M6*60mm  8 pcs	④ φ15mm  8 pcs		


STEP 1

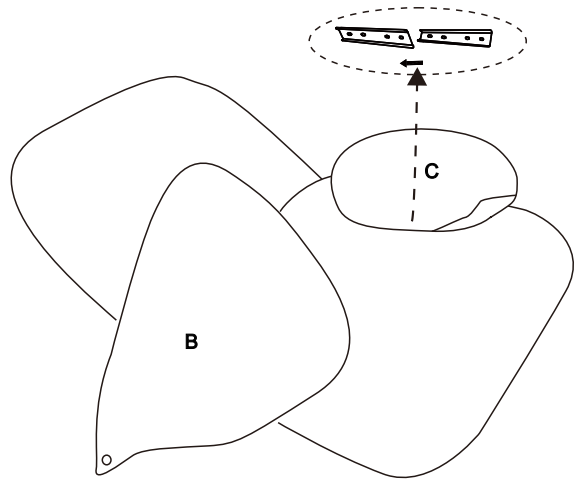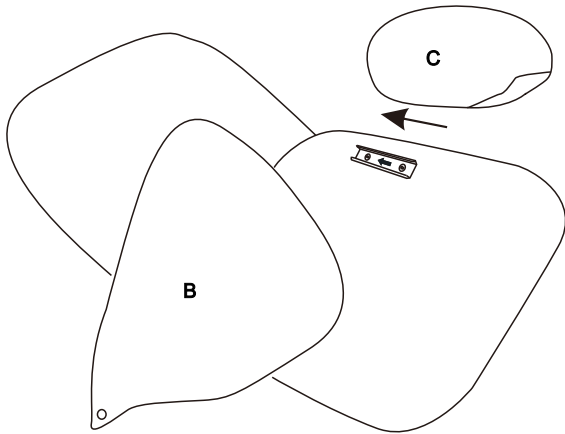


STEP 2

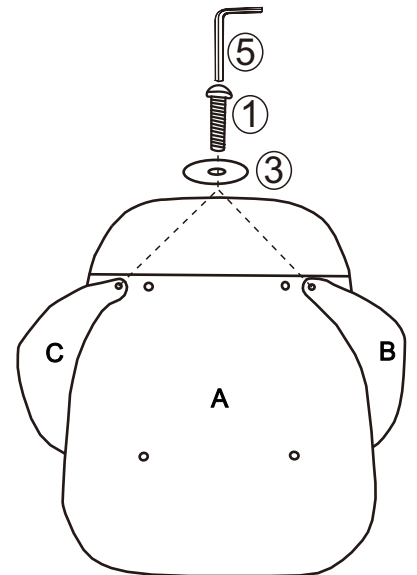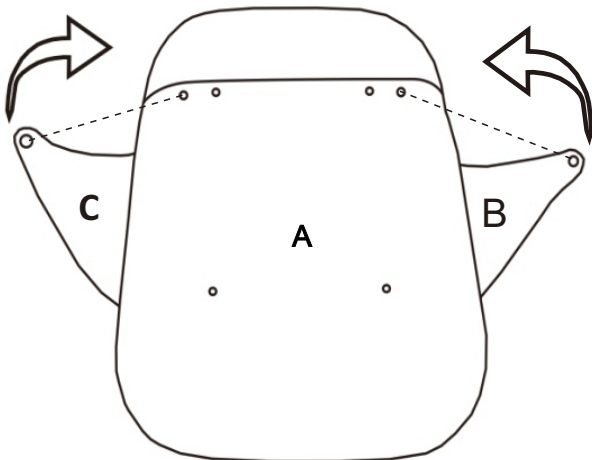

STEP 3

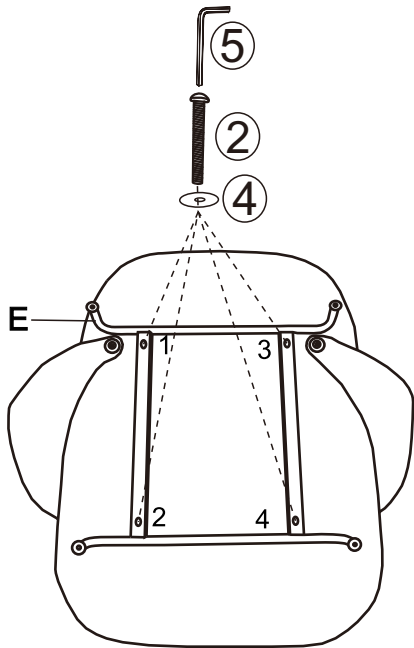


STEP 4

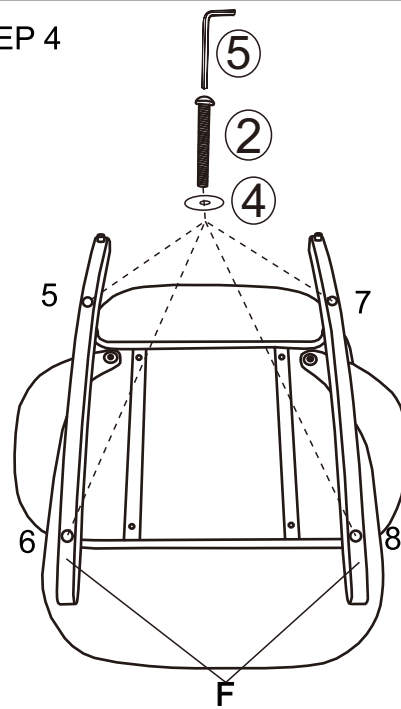


STEP 5

CHAIR COMES IN FLAT POSITION FOR TRANSIT PURPOSE ONLY. PLEASE ADJUST AND LOCK BACK TO UPRIGHT POSITION BEFORE USE. THERE ARE 3 POSITIONS FOR BACK – ONLY USE IN FORWARD POSITION TO AVOID OVER-BALANCING.

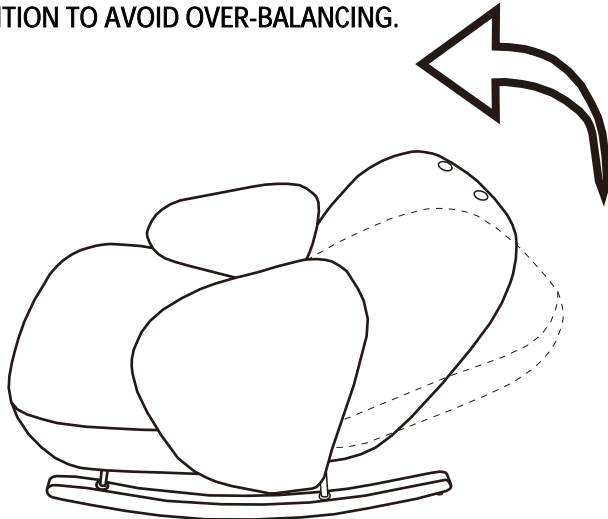


STEP 6

insert

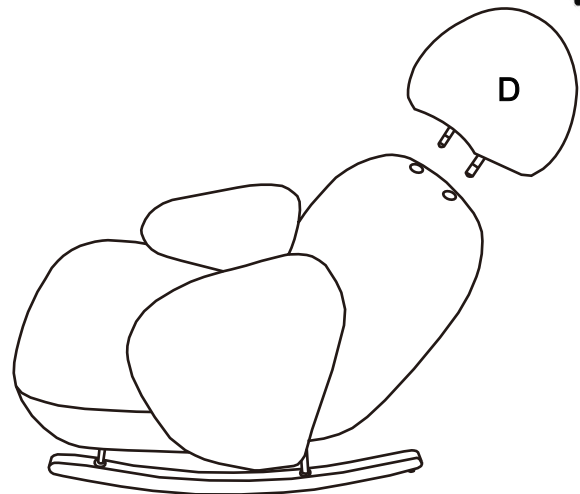

STEP 7

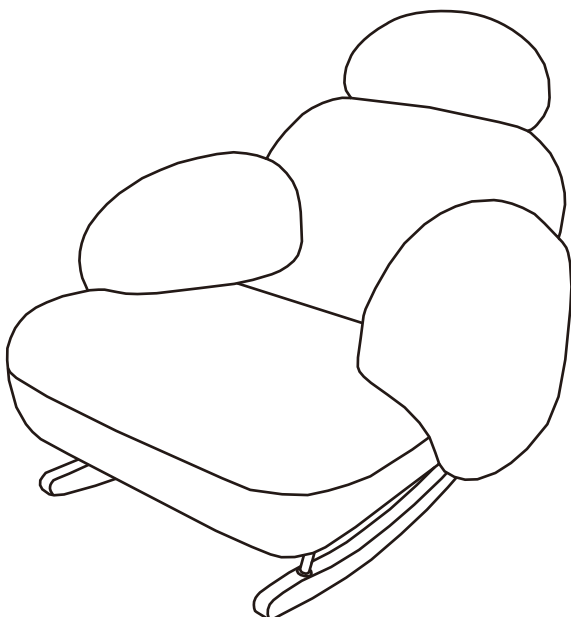

CAUTION: THE CHAIR BACK IS IN FLAT POSITION FOR TRANSIT PURPOSES ONLY.

ONLY USE THE CHAIR ONCE THE CHAIR BACK IS ADJUSTED TO ITS CORRECT UPRIGHT POSITION (STEP 6). USING THE CHAIR WHEN THE BACK IS IN RECLINED POSITION MAY CAUSE THE CHAIR TO OVERBALANCE, TIP OVER WHEN LEANING BACKWARDS AND CAUSE INJURY.