




 



 








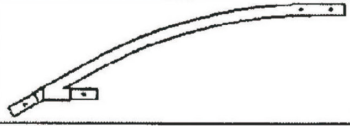

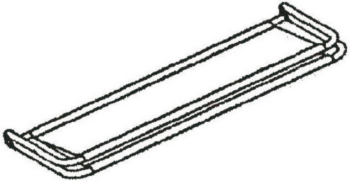
Assembly Instructions




Please Read All Instructions Thoroughly Before Starting Assembly

Package Content

NO.	PARTS	QTY	NO.	PARTS	QTY
#1		2	#8		2
#2		2	#9		2
#3		2	#10		1
#4		1	#11		3
#5		1	#12		2
#6		2	#13		2
#7		1	#14		1
			#15		1

A		M8x80mm	4
B		M8x60mm	4
C		M8x68mm	2
D		M6x68mm	2

Assembly Instructions

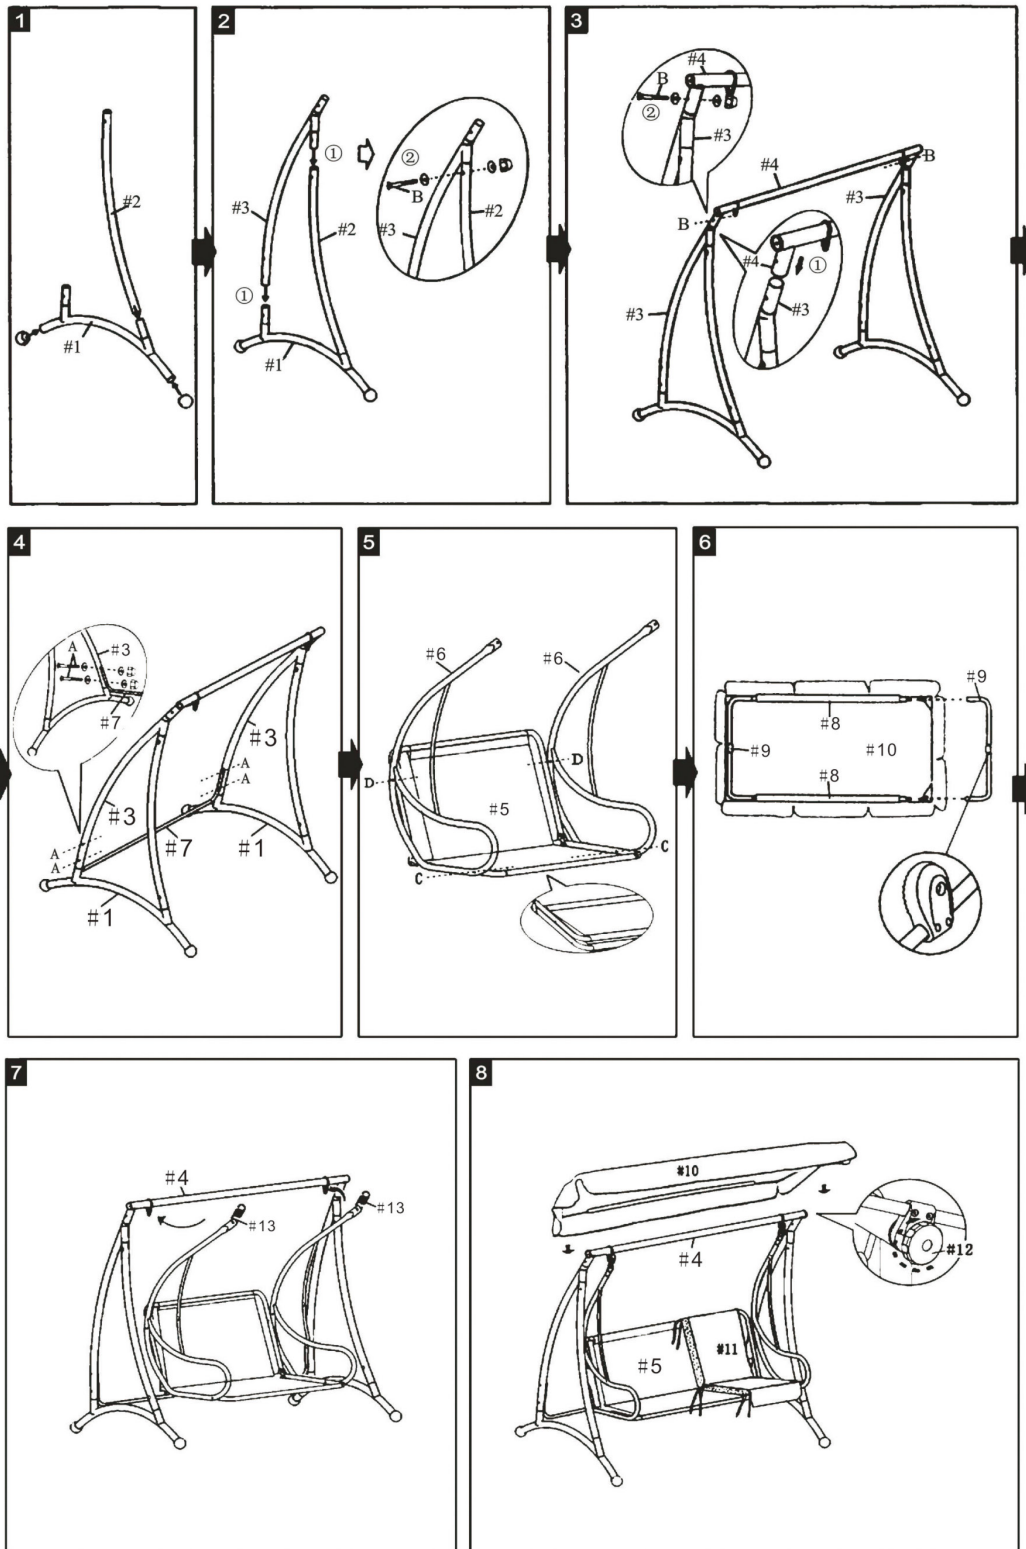

Warnings and Advice

- For domestic and outdoor use only.
- We suggest your spend a short time reading through this leaflet before you start and retain these instructions for future reference.
- When you are ready to start, make sure you have the right tools and plenty of space, carefully check that you have all the parts before beginning assembly.
- Unwrap all packaging material and place the components on a clean surface we recommend that the packaging is used to protect the surfaces during assembly.
- Keep fittings out of children's reach and keep children well away from construction area.
- Please periodically check all fittings and retighten as necessary Please retain the assembly tools, you may need them in the future to re-tighten the bolts, or if you want to dismantle the furniture for storage.
- This product should only be used on firm, level ground while ensuring all of the legs remain in contact with the ground.
- The product is designed for use by competent adults, please ensure any young children or venerable persons are supervised at all times.
- When using the swing, do not swing entirely outside the footprint of the base as you may cause product instability resulting to injury or damage.
- Keep hands away from folding mechanisms to prevent possible entrapment or injury and ensure any safety locks are correctly located and locked in place.
- Do not stand on your chair or sit on the arms of your chair.
- Do not exceed the maximum user weight.
- When moving furniture never drag the pieces across the floor, as this will cause damage to the joints.
- We recommend the use of furniture covers to protect your furniture when not in use, exposure to strong sunlight may cause fading of the products colours.
- During bad weather and over winter please do not leave your product outside. The products should be dismantled where possible and stored in a cool dry place. Please make sure that the product is clean and dry before putting it into storage. "The canopy and seat may be damaged if exposed"
- To clean your items, please use mild detergent in warm water. Rinse with clean water and dry thoroughly. Do not use abrasive cleaners, strong detergents, bleach, acid or solvents on the frame parts. Do not use silicone based furniture polish.

Maximum User Weight: 280 KG