 




INSTALLATION

Product Manual

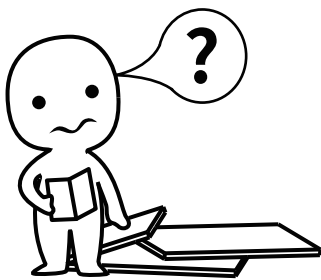


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

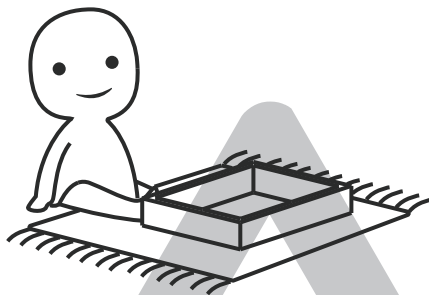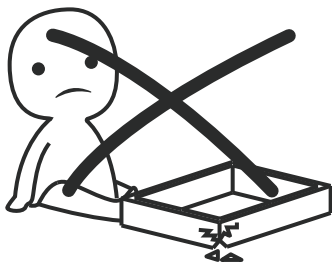



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

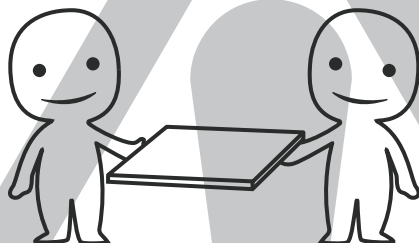

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

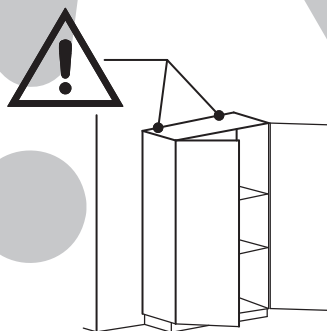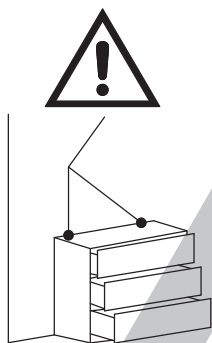

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.







Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



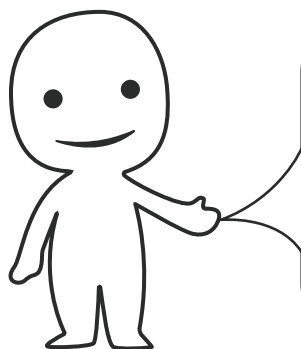


Please prepare the following tools

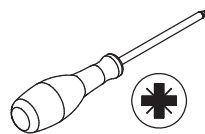 

      When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

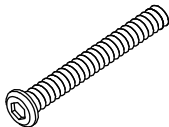A x 24  M5 x 42 mm	B x 24  Ø 15 x 10 mm	C x 23  M5 x 40 mm	D x 48  M3.5 x 12 mm	E x 2  M5 x 10 mm
F x 10  M6 x 10 mm	G x 2  M6 x 25 mm	H x 4  M6 x 30 mm	I x 8  M6 x 50 mm	J x 8  M8 x 40 mm
K x 4  1904	L x 4  M4 x 16 mm	M x 2  M4 x 45 mm	N x 2  M4 mm	O x 4  M6 mm
P x 3  15D	Q x 4  M8 x 45 mm	x 1  #5	x 1  #4	x 1  M4 mm
x 1  10mm 12mm				

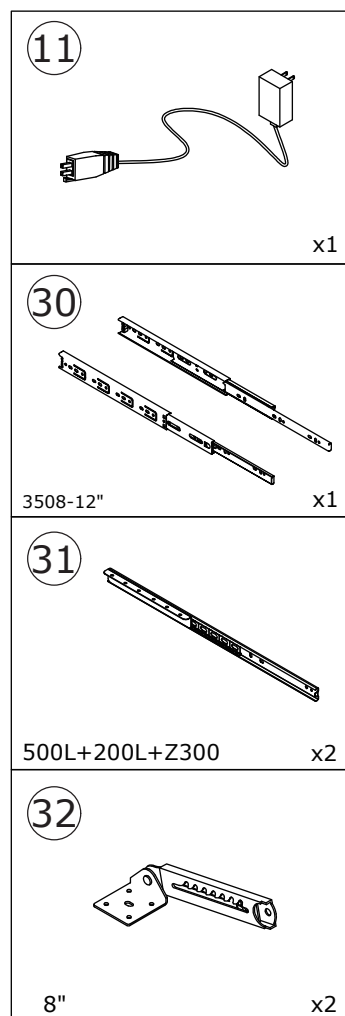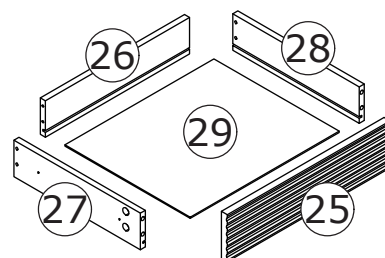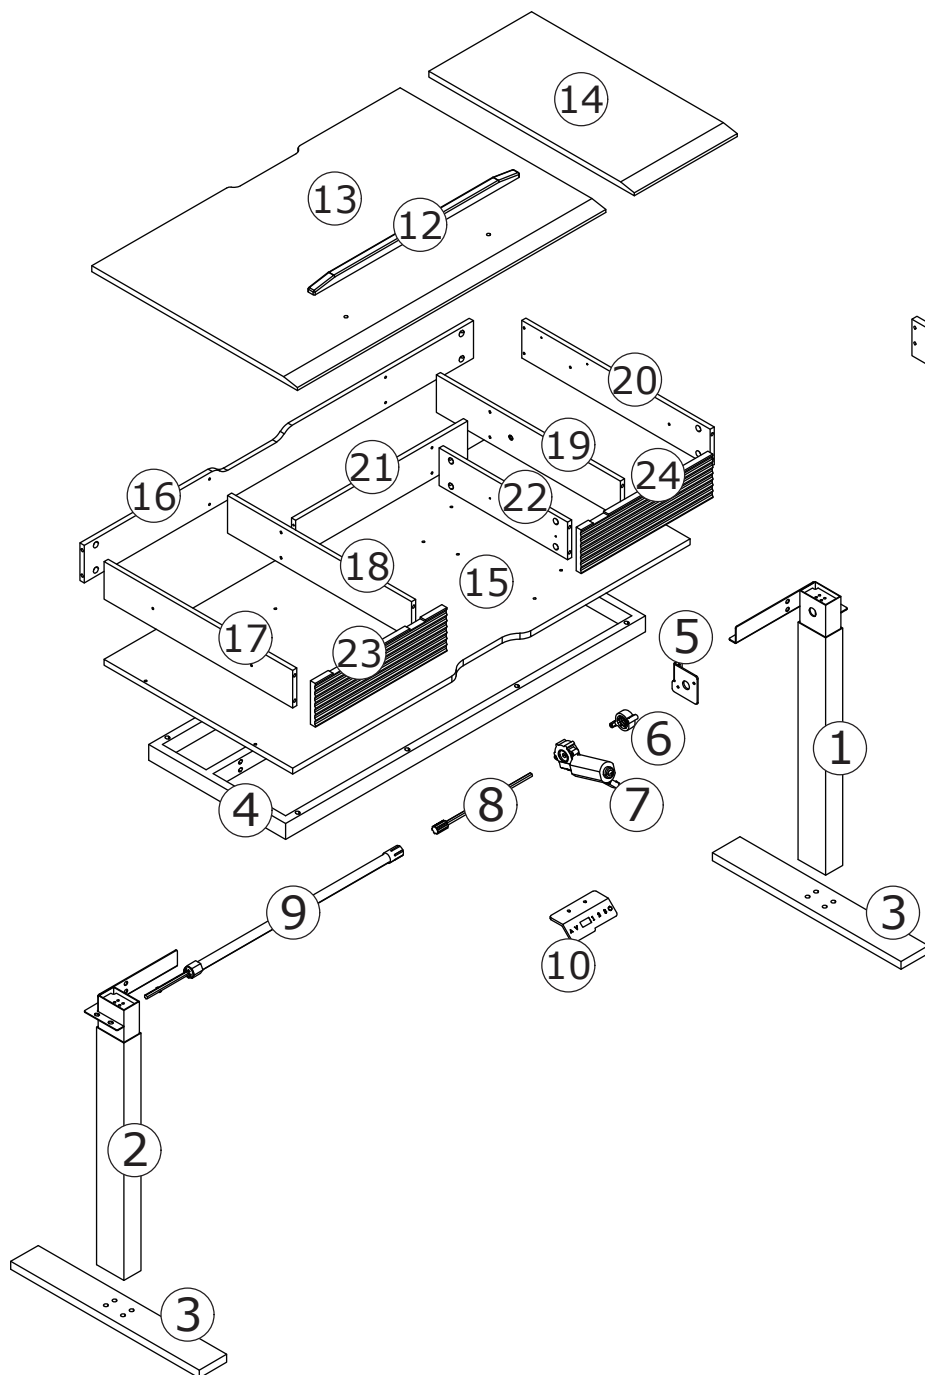   


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

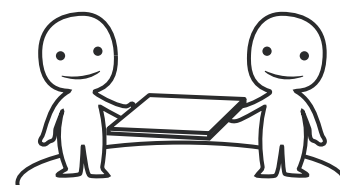


ASSEMBLED BY 2 ADULTS


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

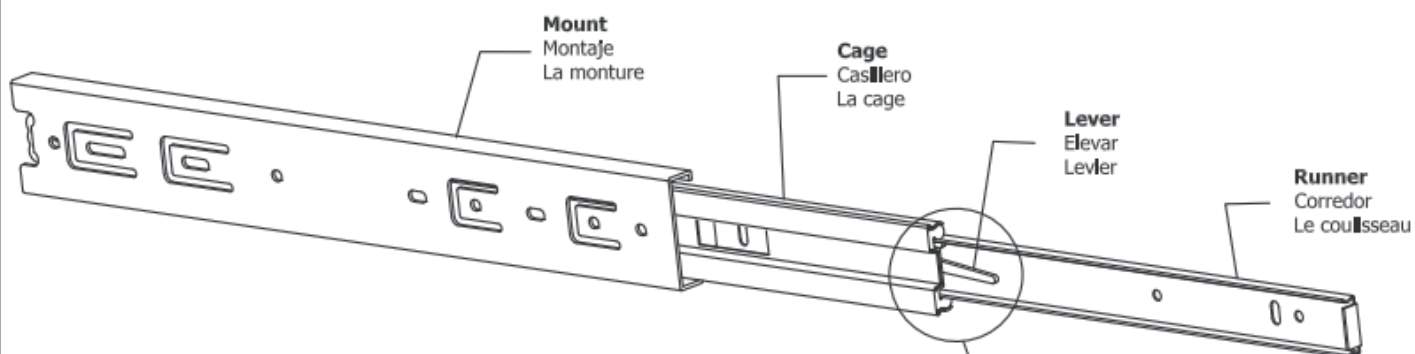

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

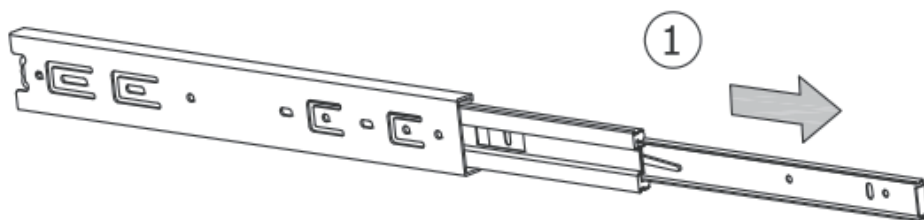



 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

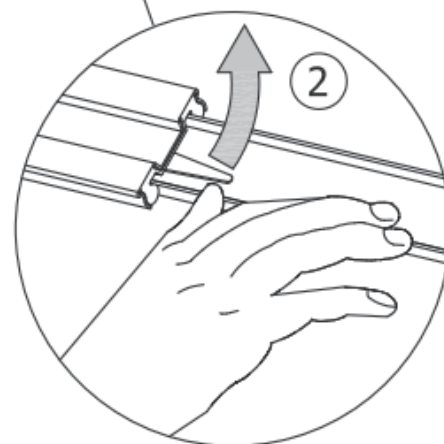

 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

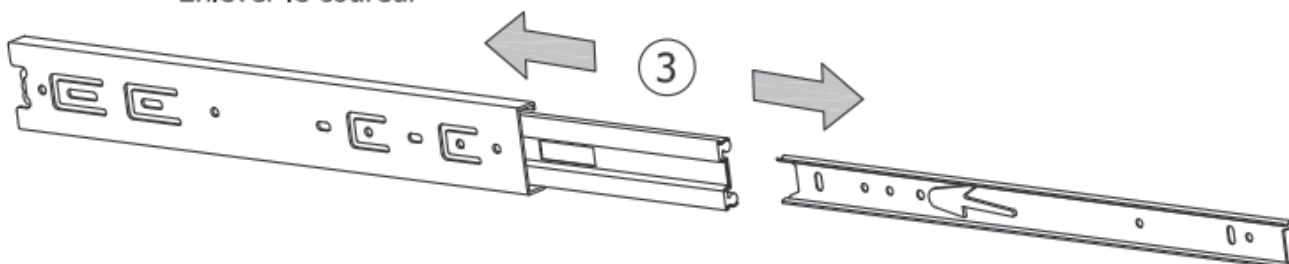

1

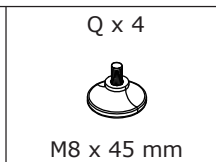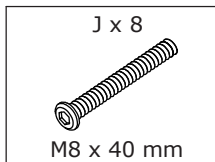   


 Connect Part 1 and 2 to Part 3 using screw (J).
Attach foot pad (Q) to Part 3.

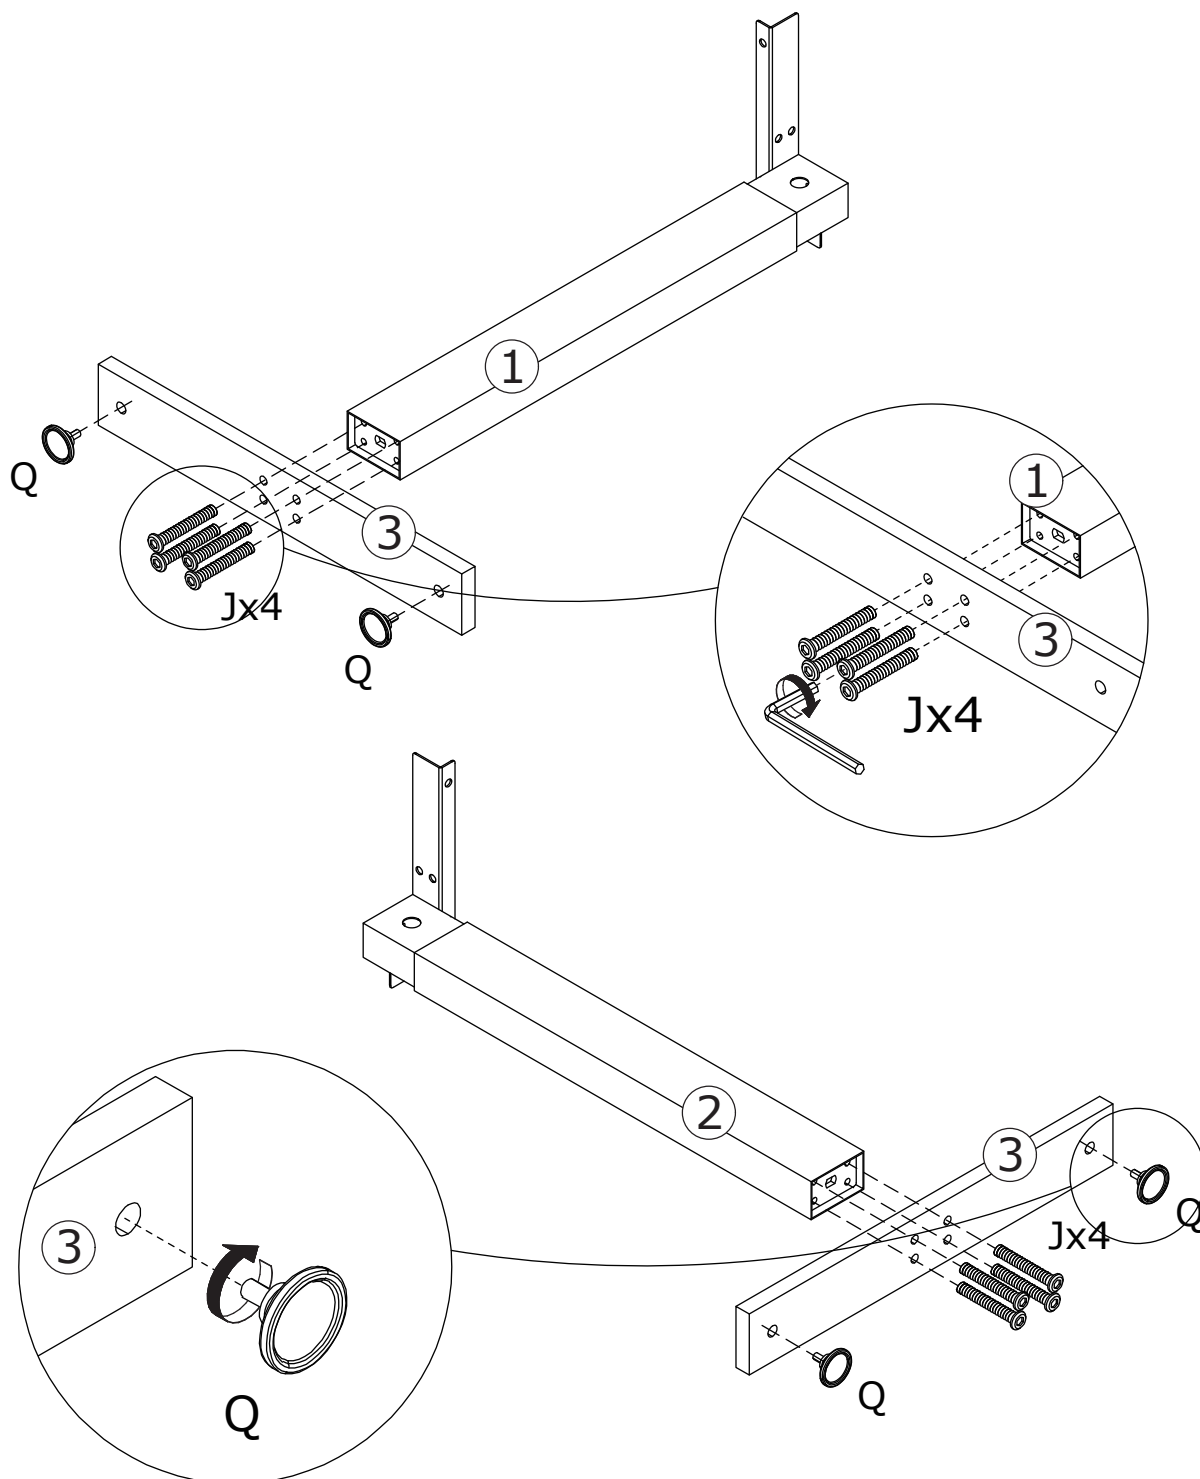


2

 
Press down on both lifting legs to retract them to their lowest position, ensuring they remain at the same height.

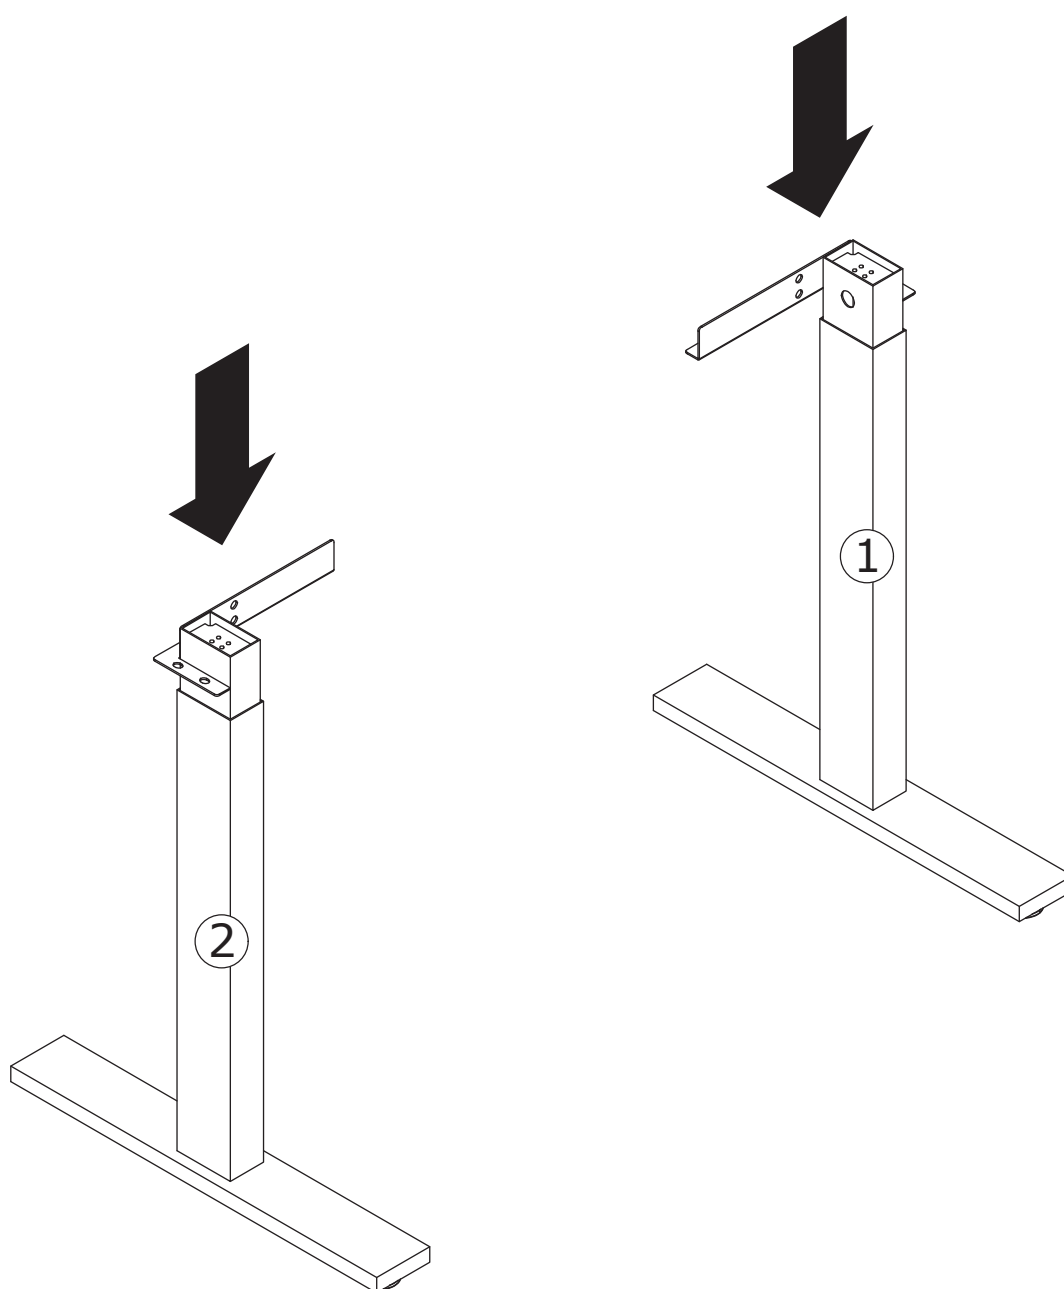

3

 F x 8  M6 x 10 mm	H x 2  M6 x 30 mm	O x 2  M6 mm	
--	--	---	---

 Secure Part 1 and 2 to Part 4 using screw (F), (H) and nut (O), as shown.

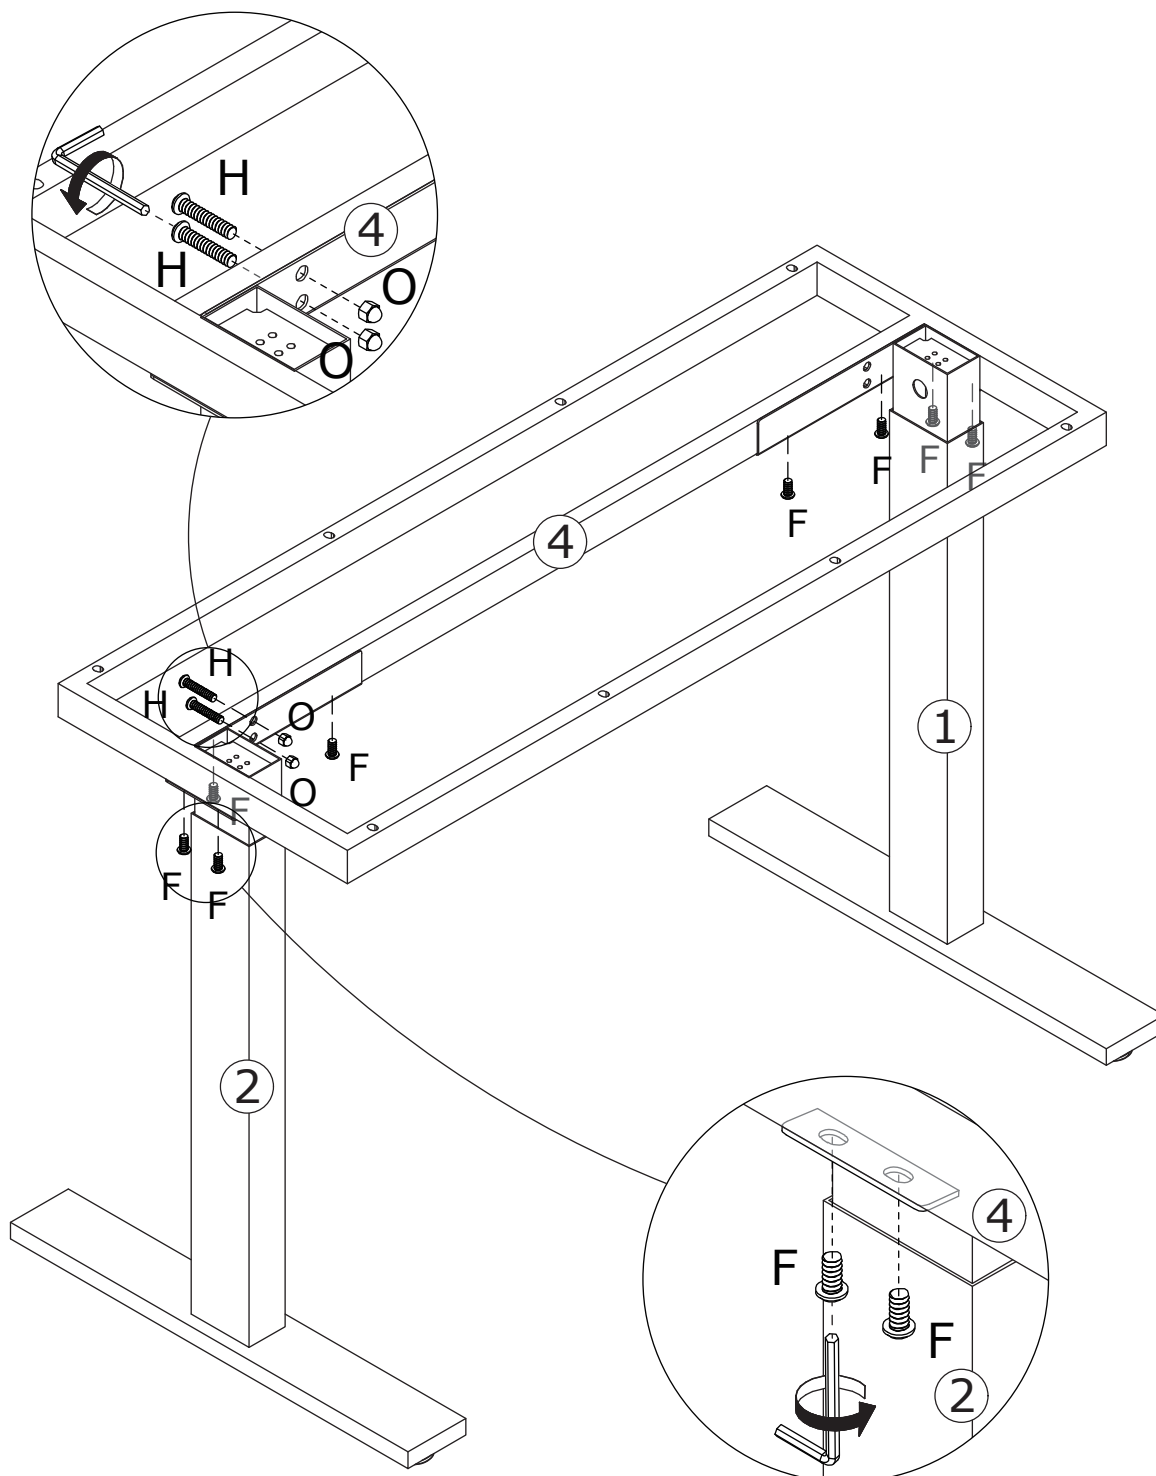

4

M x 2

 


M4 x 45 mm


N x 2



M4 mm



 Connect Part 5, 6, 7, and 8 using screw (M) and (N), as shown.

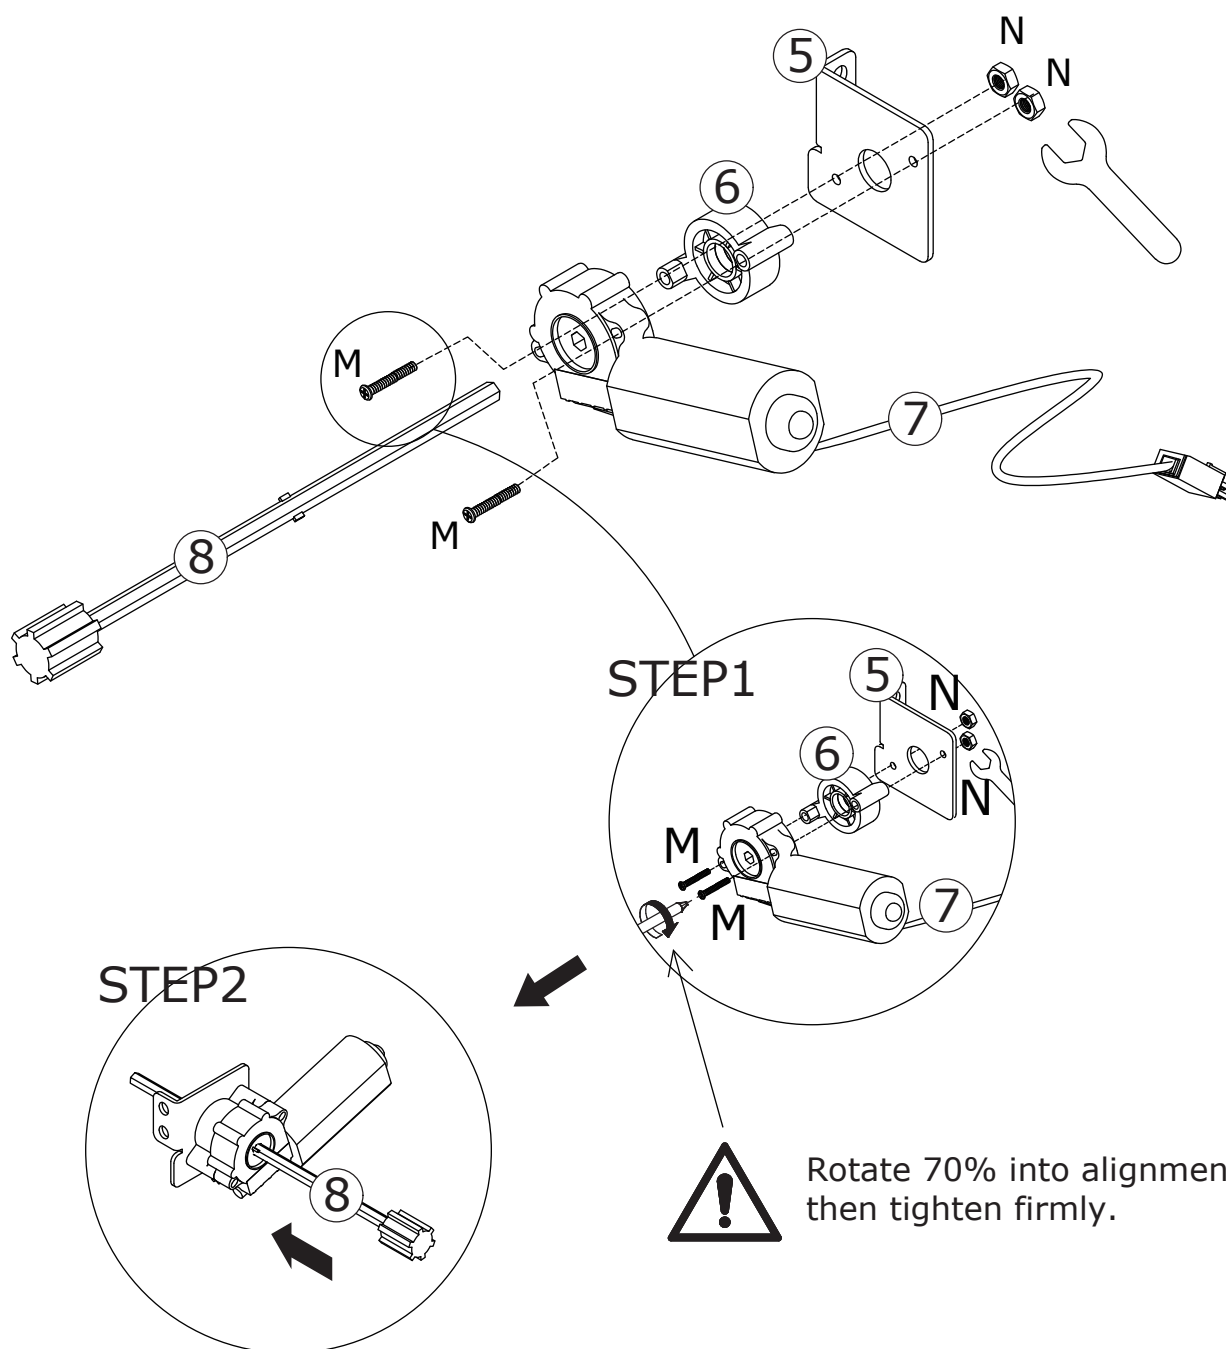

5

H x 2

 


M6 x 30 mm

O x 2





M6 mm




Secure Part 8 to Part 1 and 4 using screw (H) and nut (O), as shown.

STEP1

  STEP2

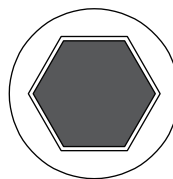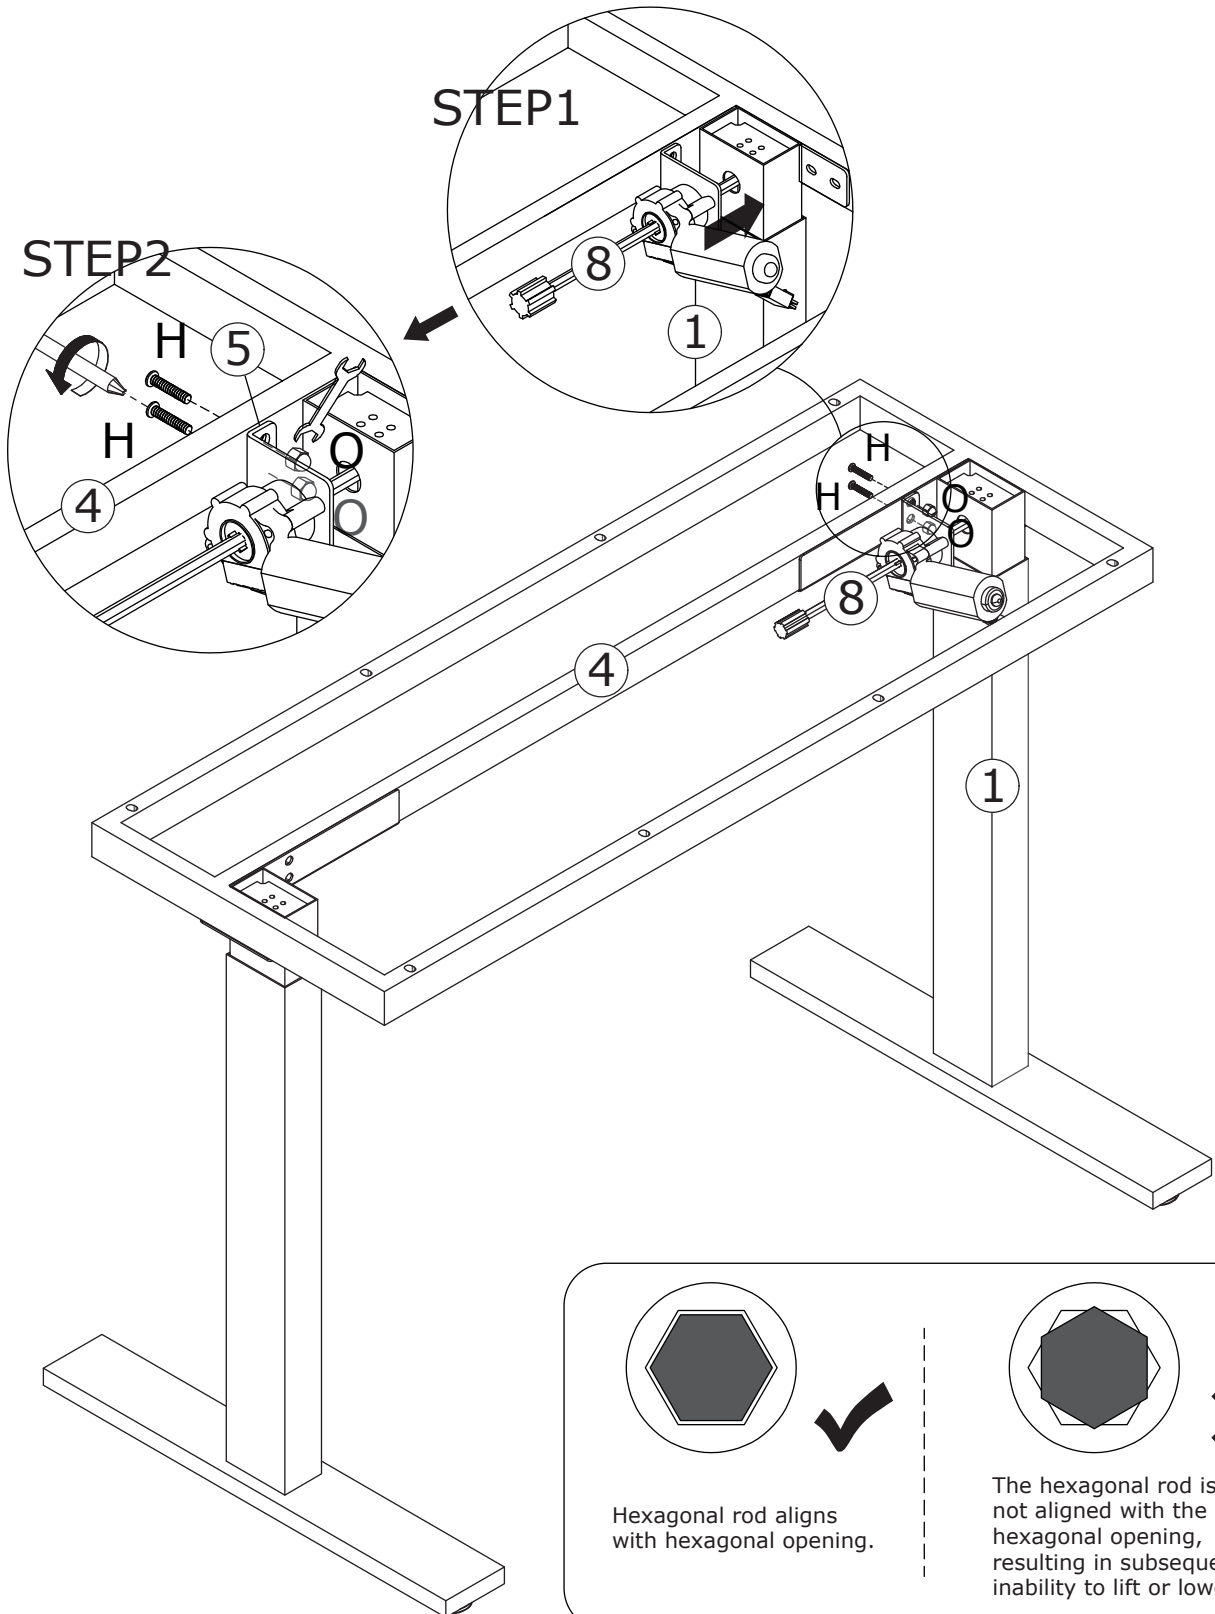


 Hexagonal rod aligns with hexagonal opening.

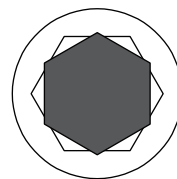


The hexagonal rod is not aligned with the hexagonal opening, resulting in subsequent inability to lift or lower.

 6

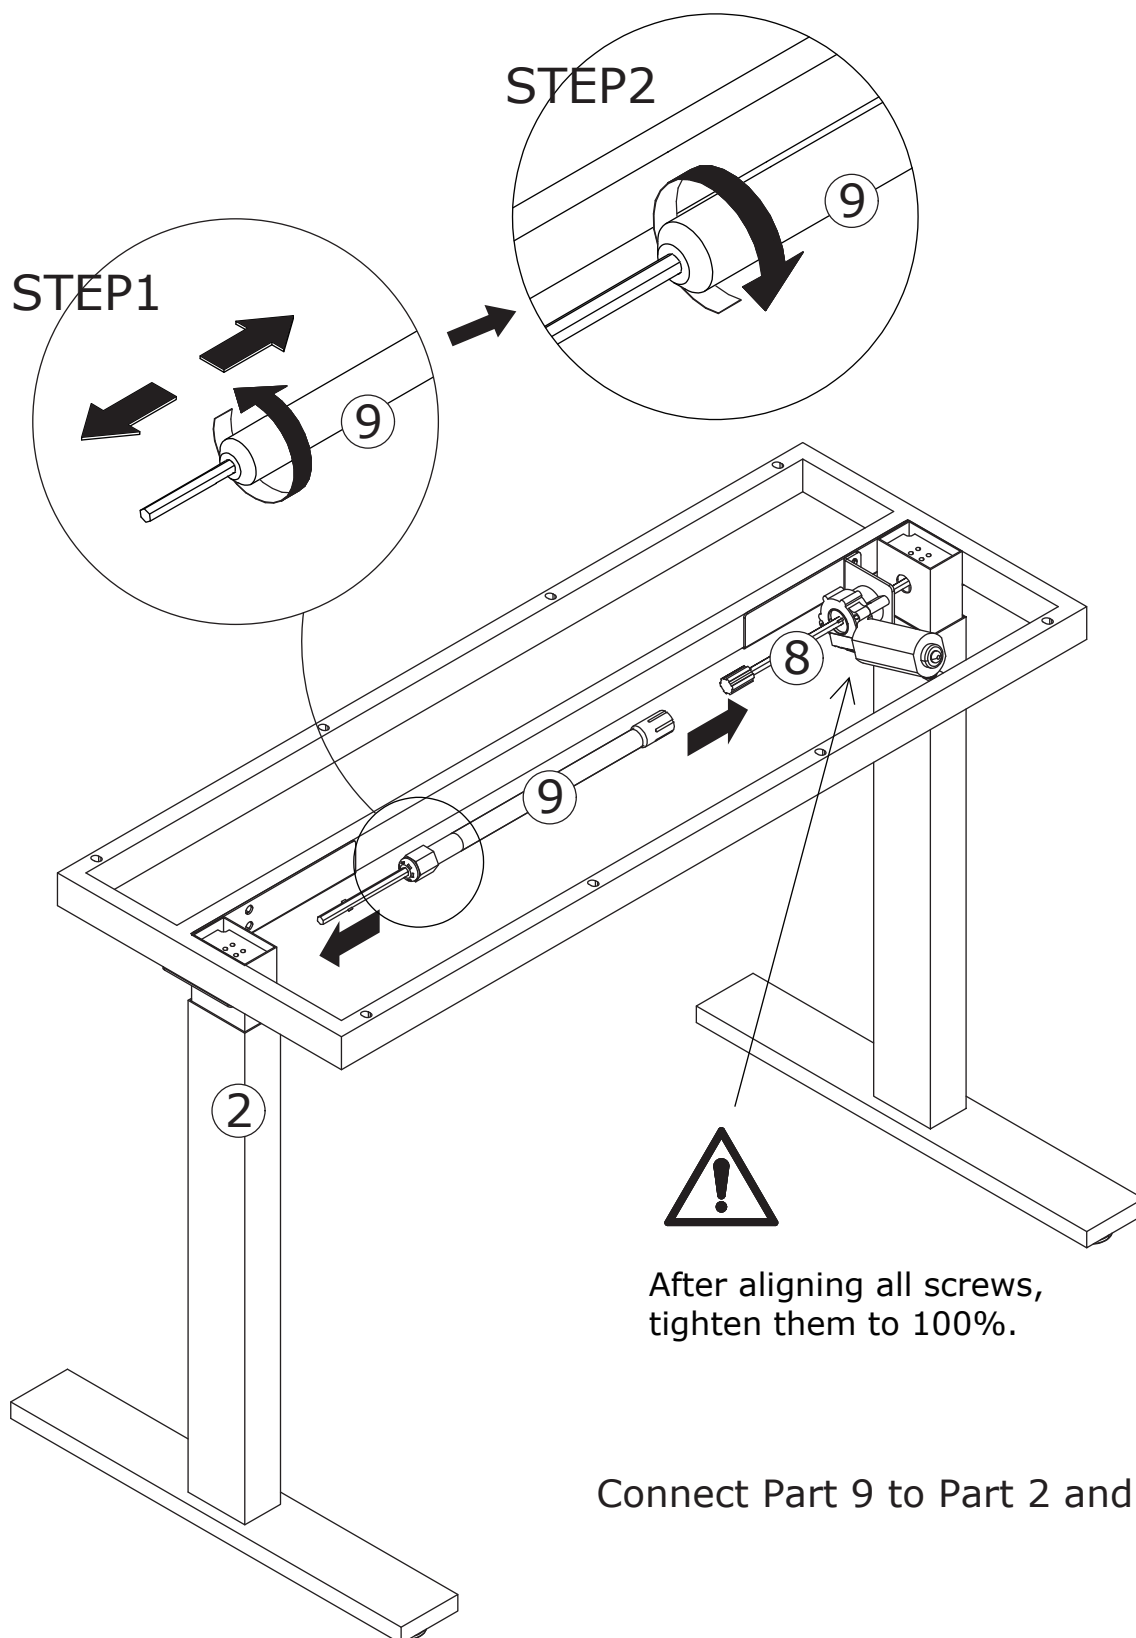


7

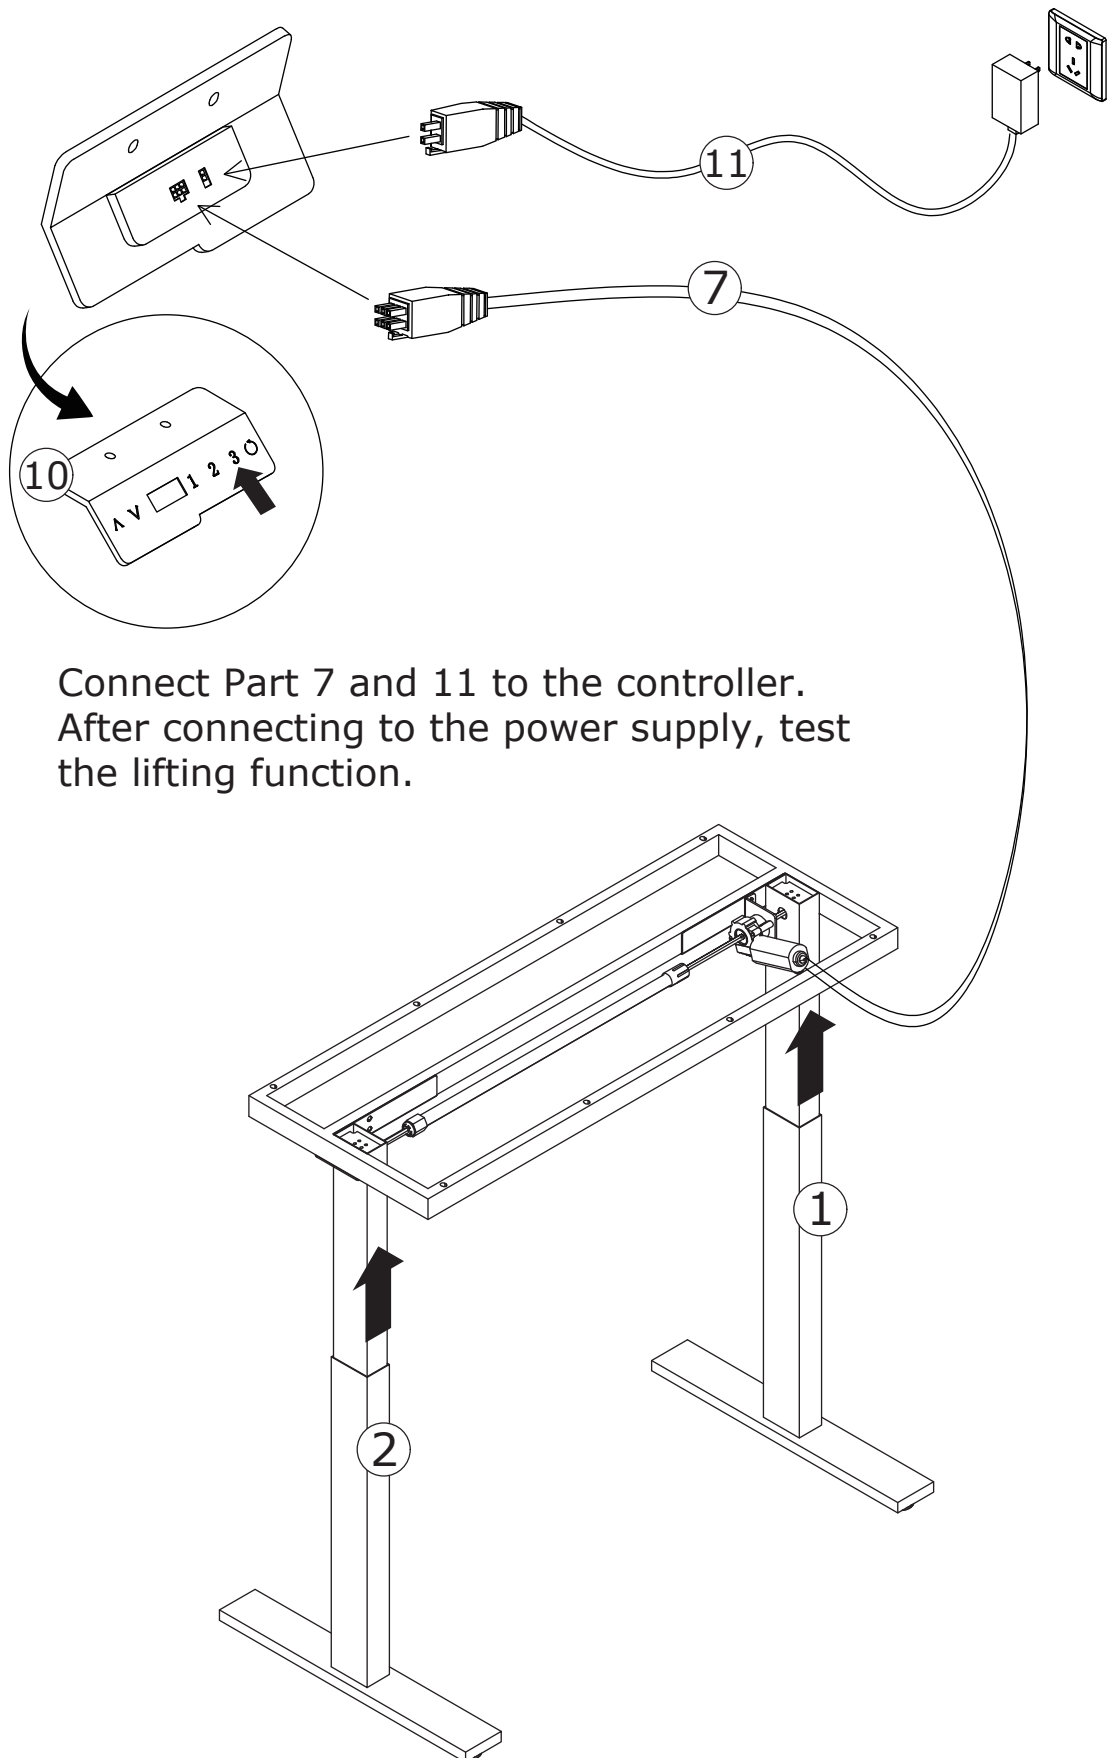 




Connect Part 7 and 11 to the controller.
After connecting to the power supply, test
the lifting function.

8

 D x 4
M3.5 x 12 mm




   Secure slide rail 30 to Part 22 and 18 using screw (D).

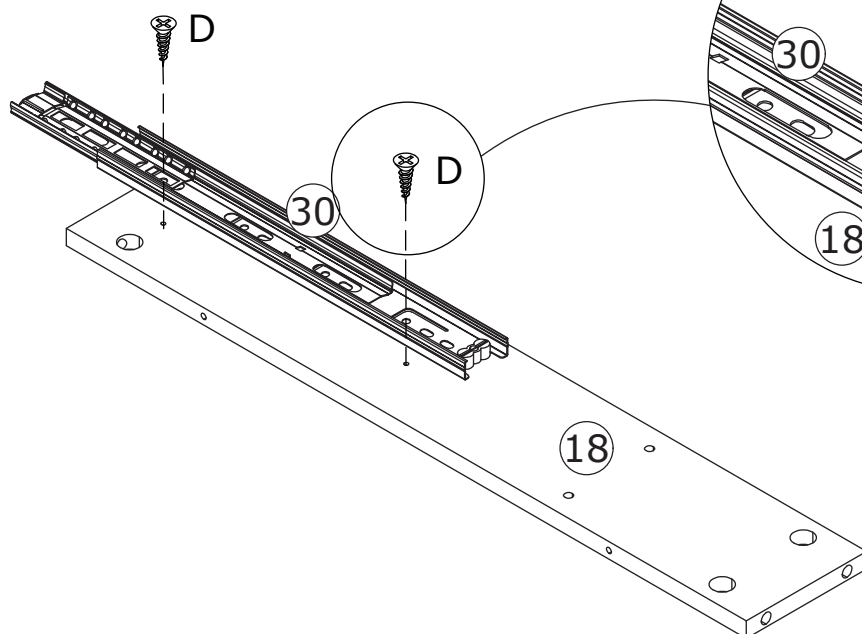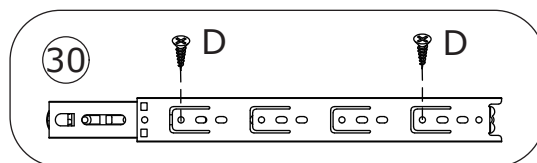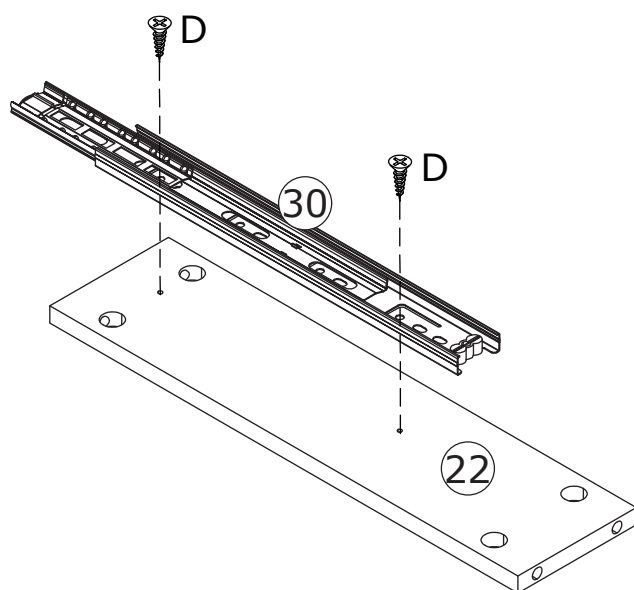

9

 A x 2




M5 x 42 mm



B x 2



 Ø 15 x 10 mm




  Screw eccentric rod (A) onto Part 21.
Connect Part 21 to Part 22, then tighten
by turning cam lock (B) clockwise.

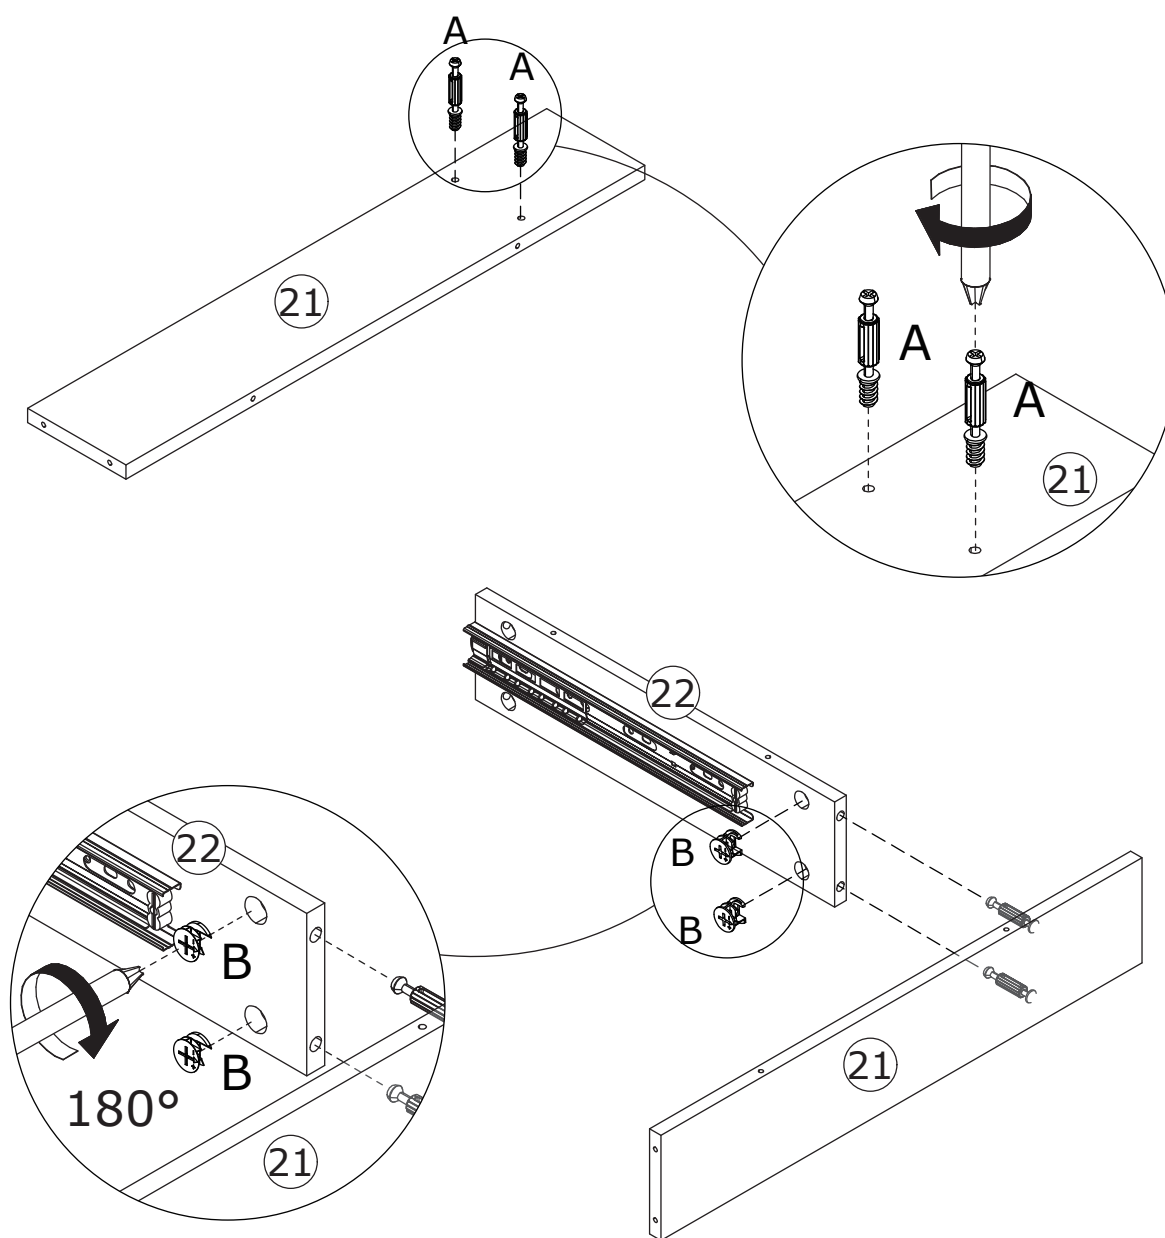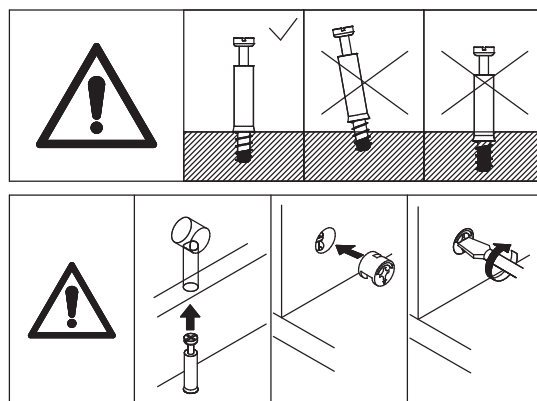


10

 C x 4
M5 x 40 mm





 Connect Part 18, 19, and 21 using screw (C).

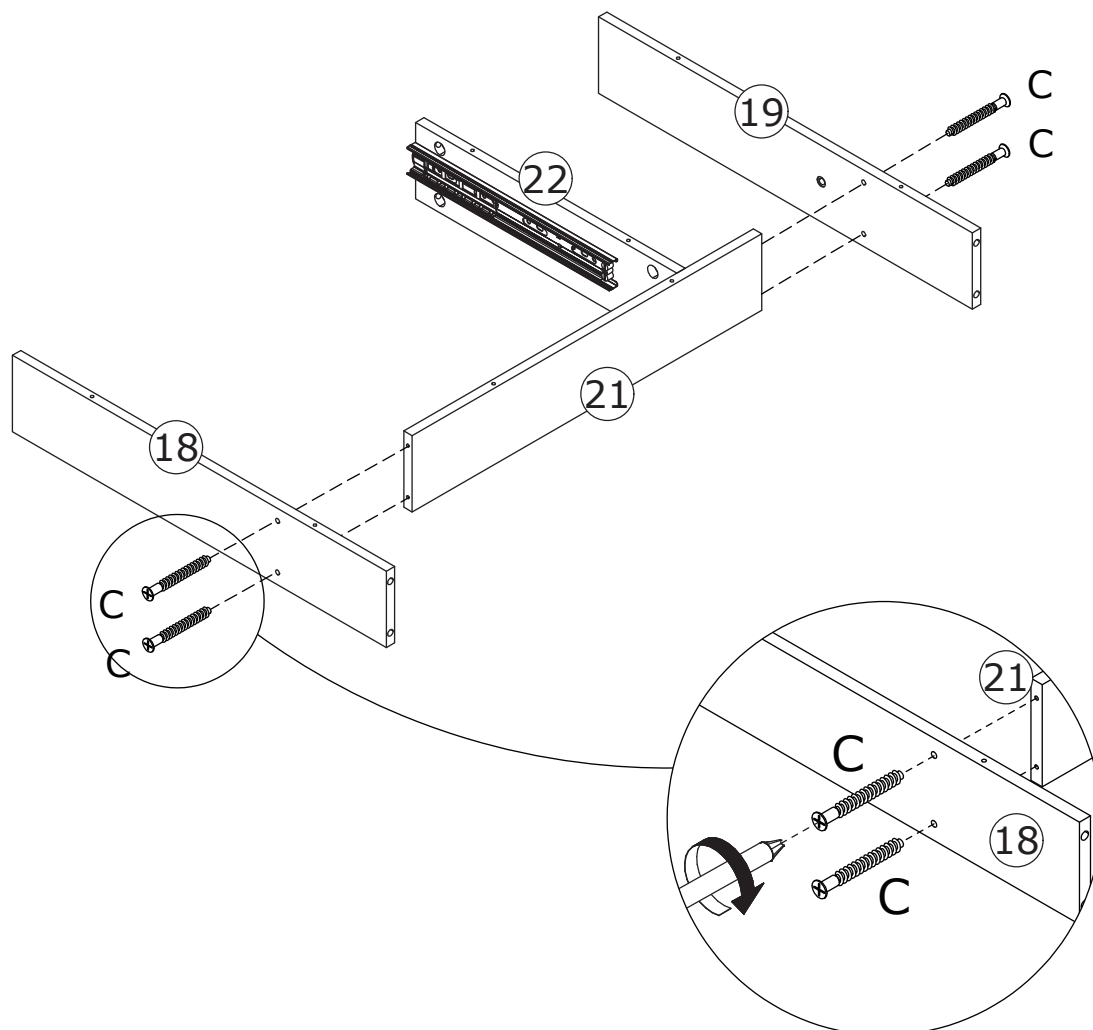


11

  A x 4
M5 x 42 mm

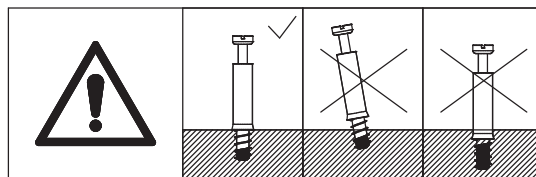

Screw eccentric rod (A) onto Part 16.




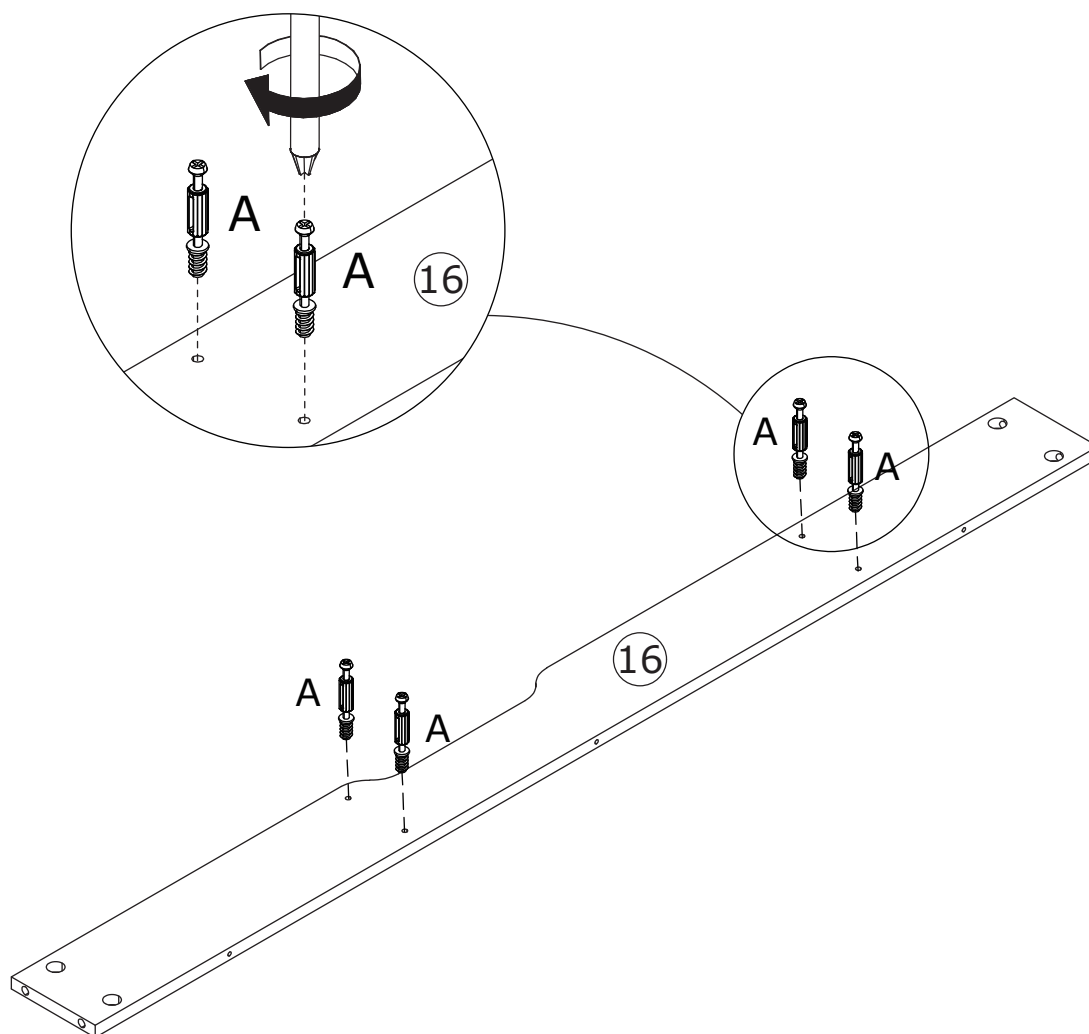 


12


B x 4



    Ø 15 x 10 mm

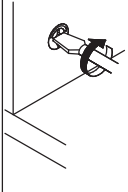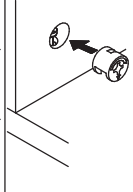



 Connect Part 16 to Part 18 and 19, then tighten by turning cam lock (B) clockwise.

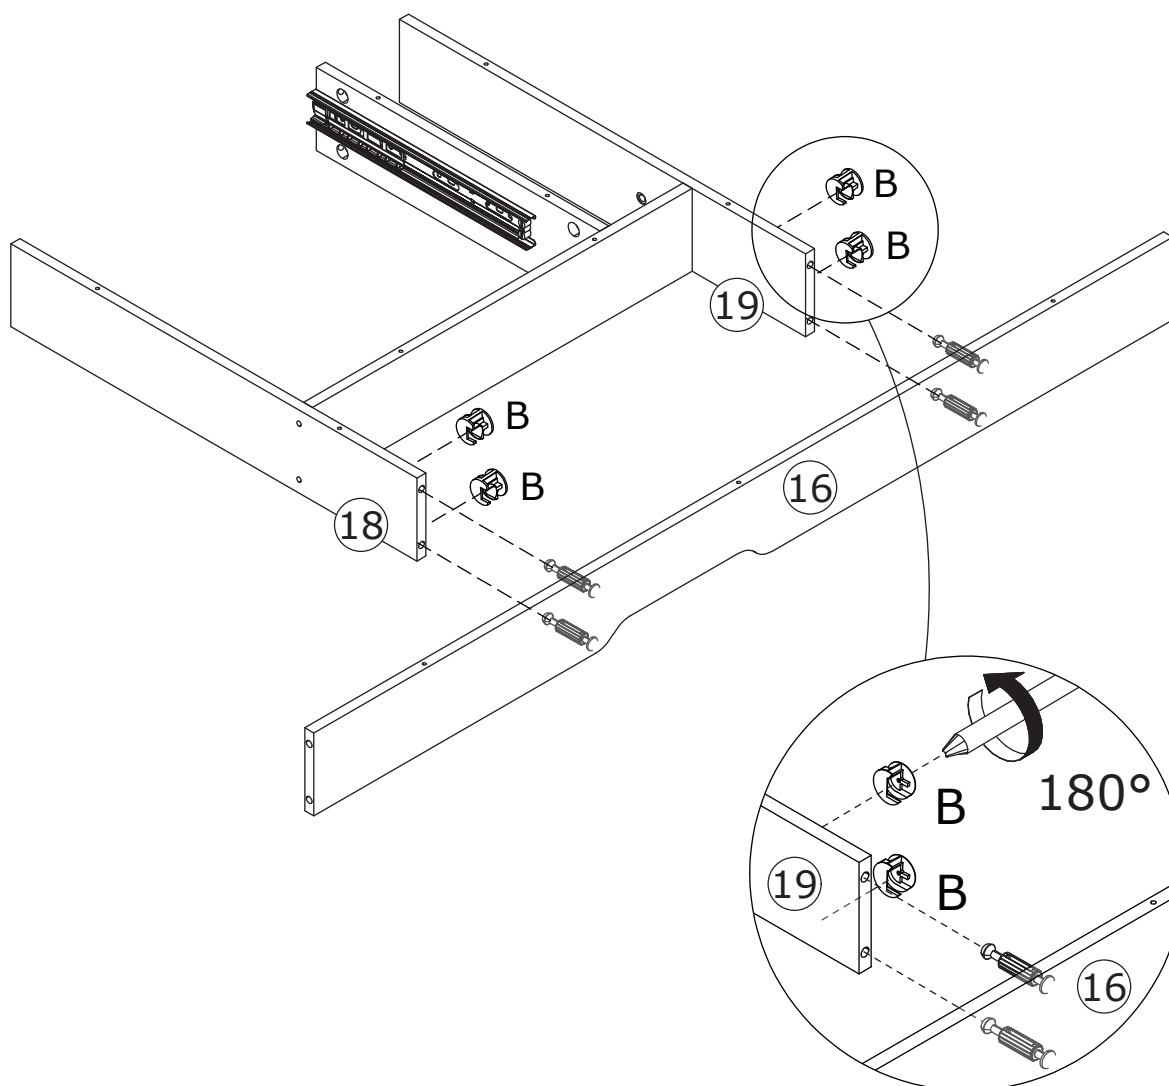


13

  A x 4
M5 x 42 mm

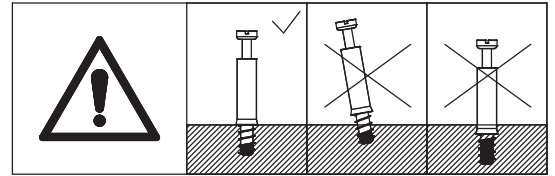

 Screw eccentric rod (A) onto Part 17 and 20.


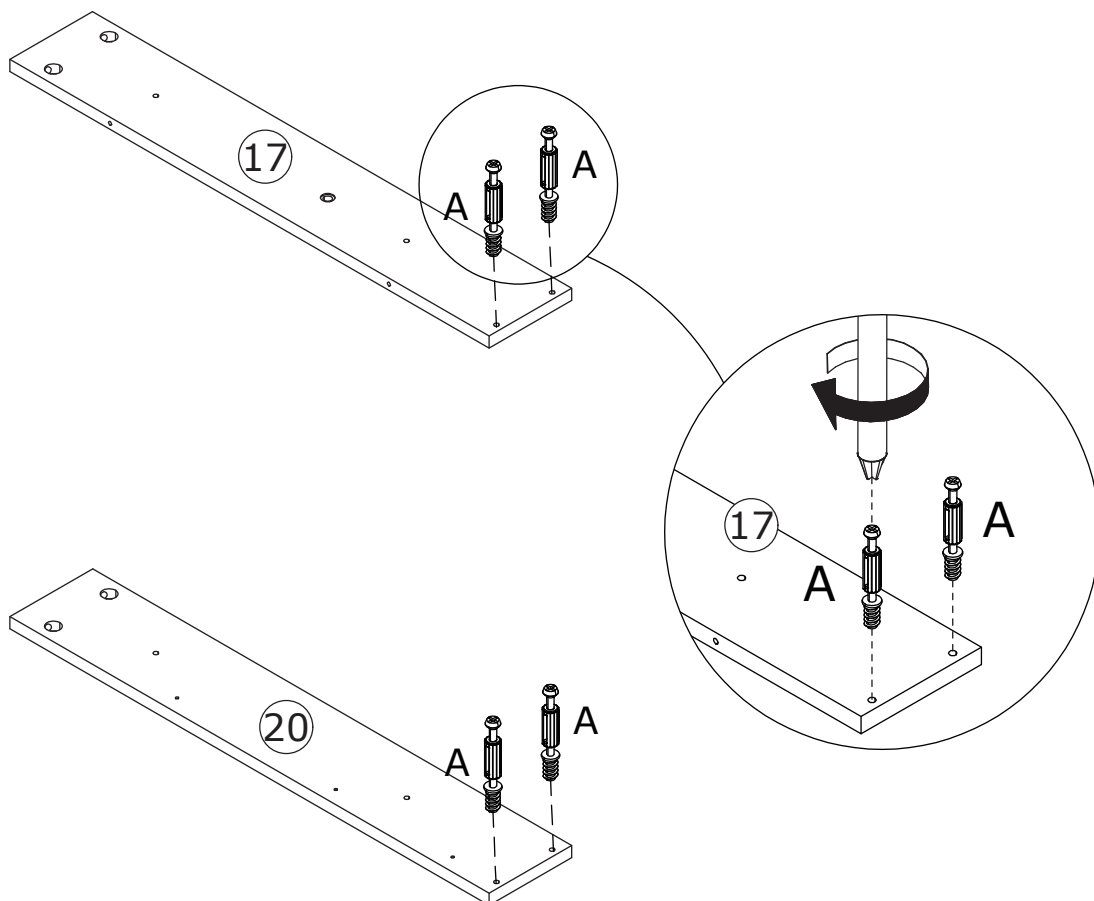


14


B x 4



  Ø 15 x 10 mm

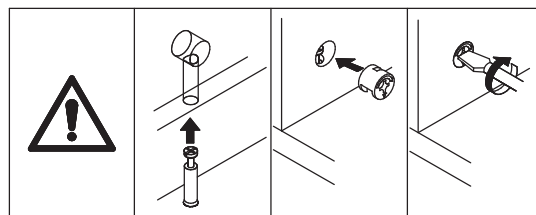



 Connect Part 16 to Part 17 and 20, then tighten by turning cam lock (B) clockwise.

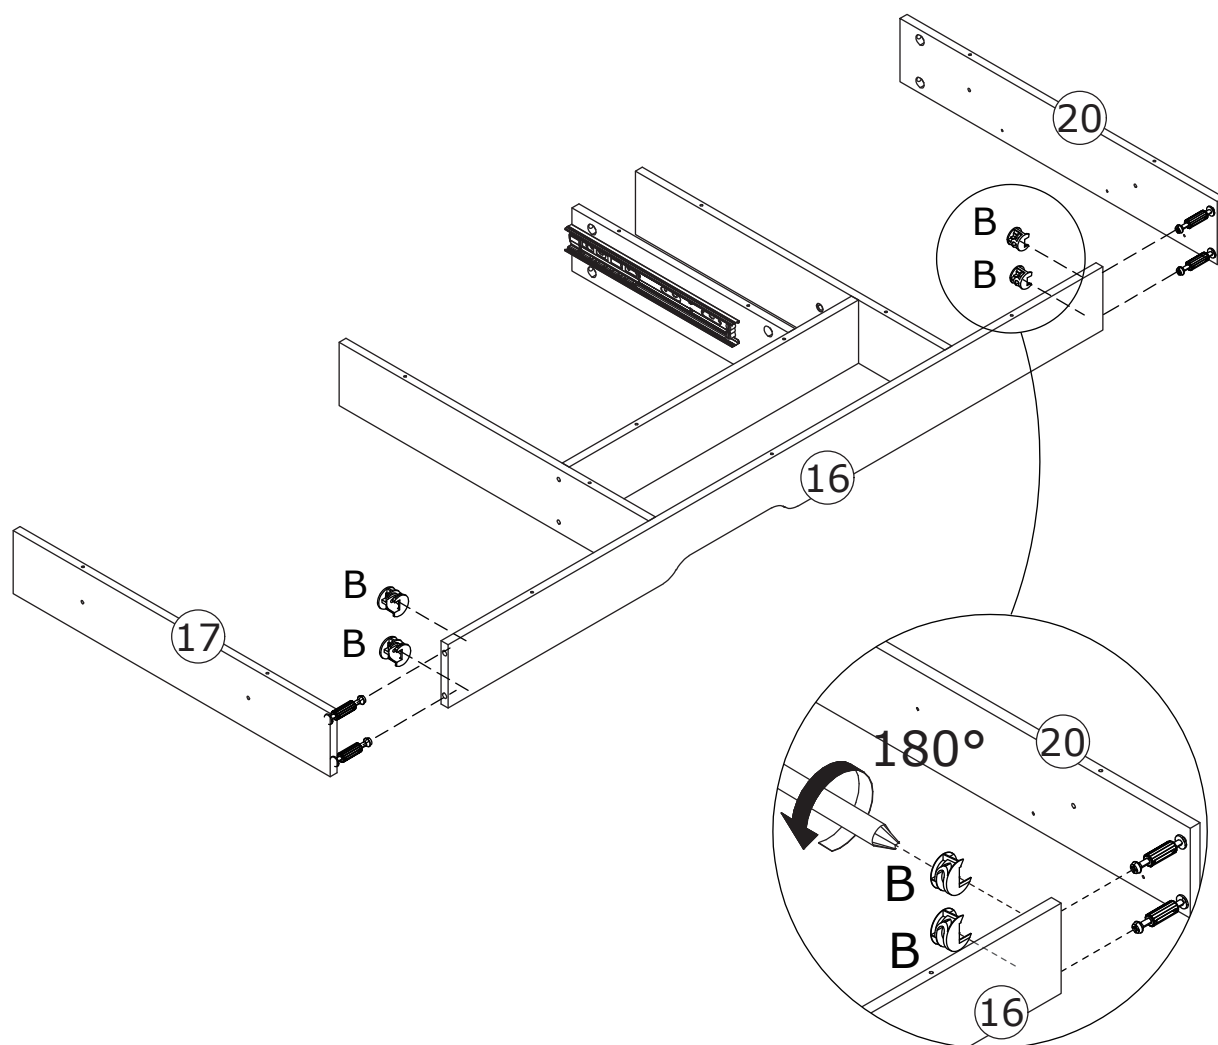


15

  A x 10
M5 x 42 mm

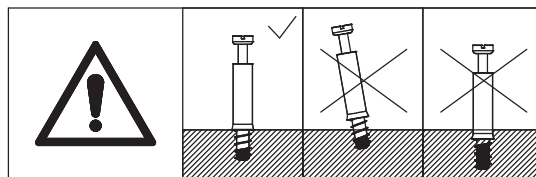

 Screw eccentric rod (A) onto Part 23 and 24.




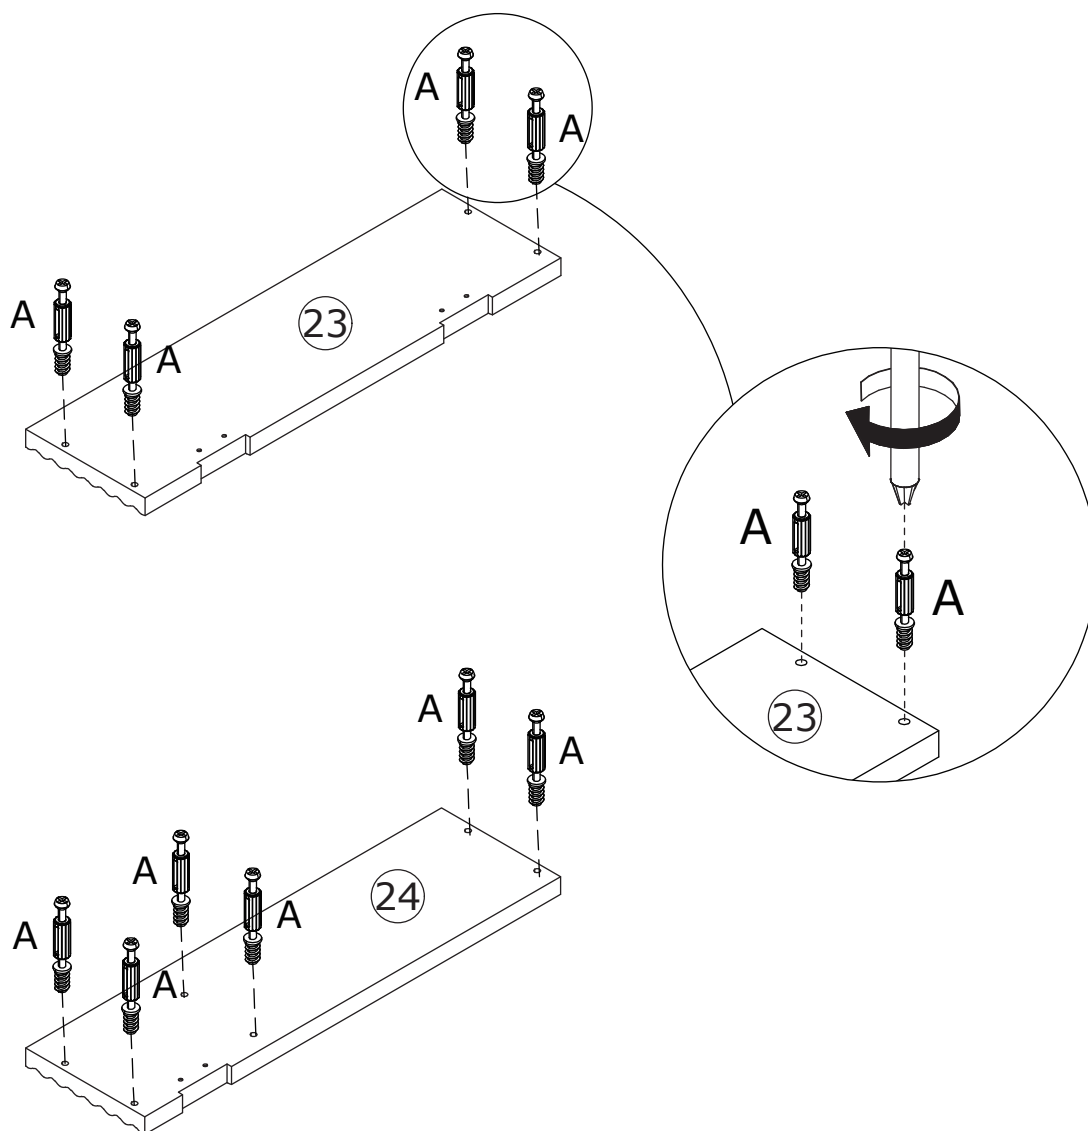


16



B x 10



    Ø 15 x 10 mm

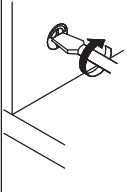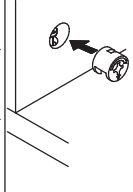

  Connect Part 23 and 24 to Part 17, 18, 19, and 20, then tighten by turning cam lock (B) clockwise.

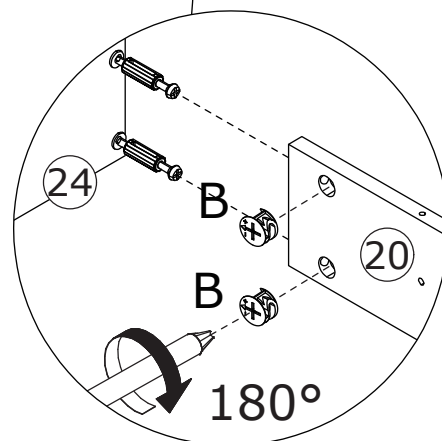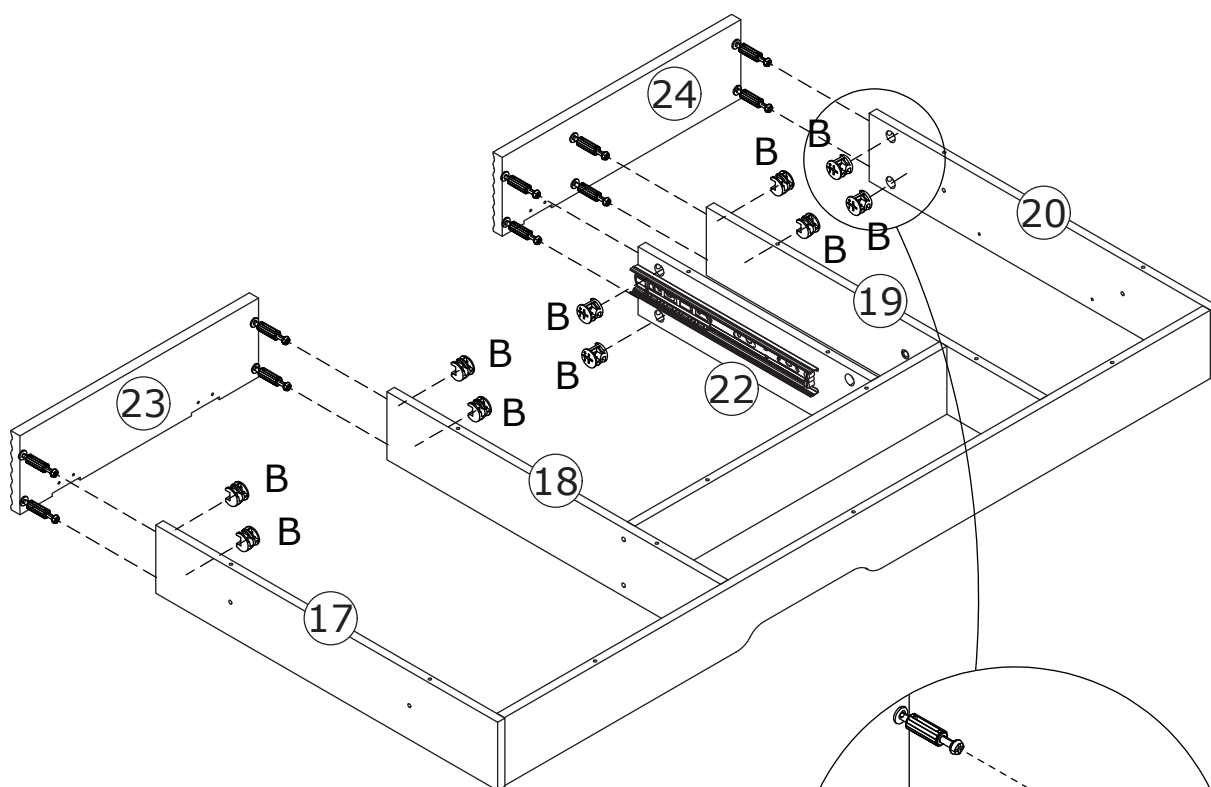


17

D x 6




M3.5 x 12 mm

 
P x 3



15D

 

 Secure hinge (P) to Part 13 using screw (D).

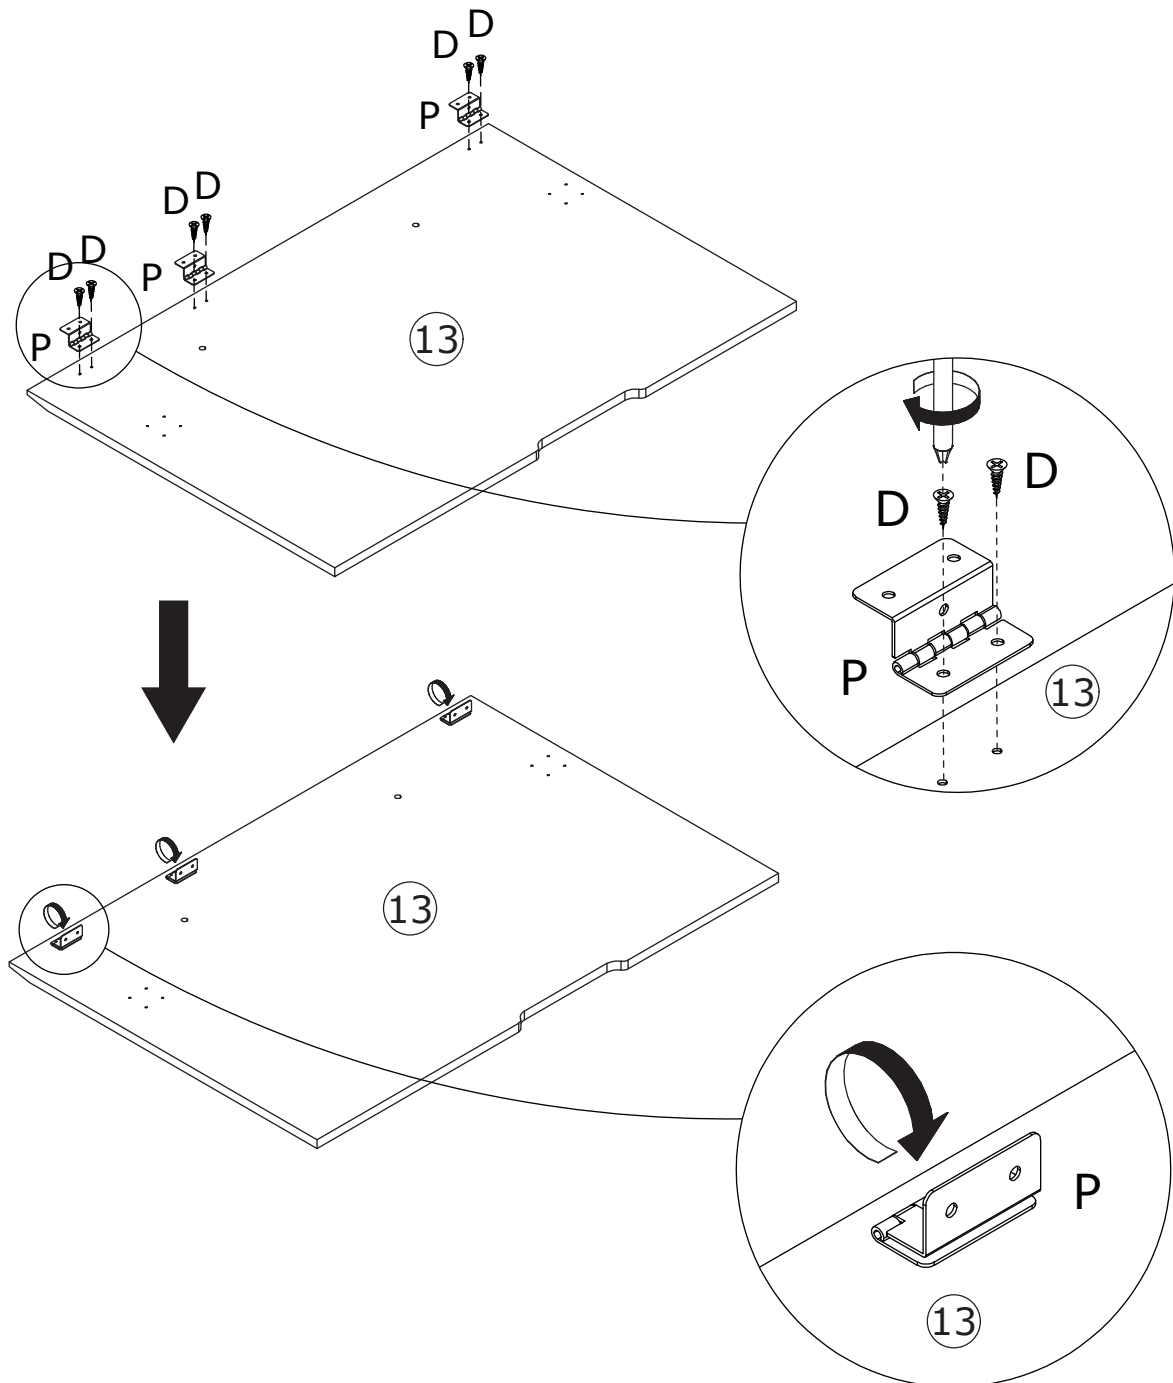


18


D x 6



 M3.5 x 12 mm



 Secure Part 13 and 14 to Part 23 and 24 using screw (D).

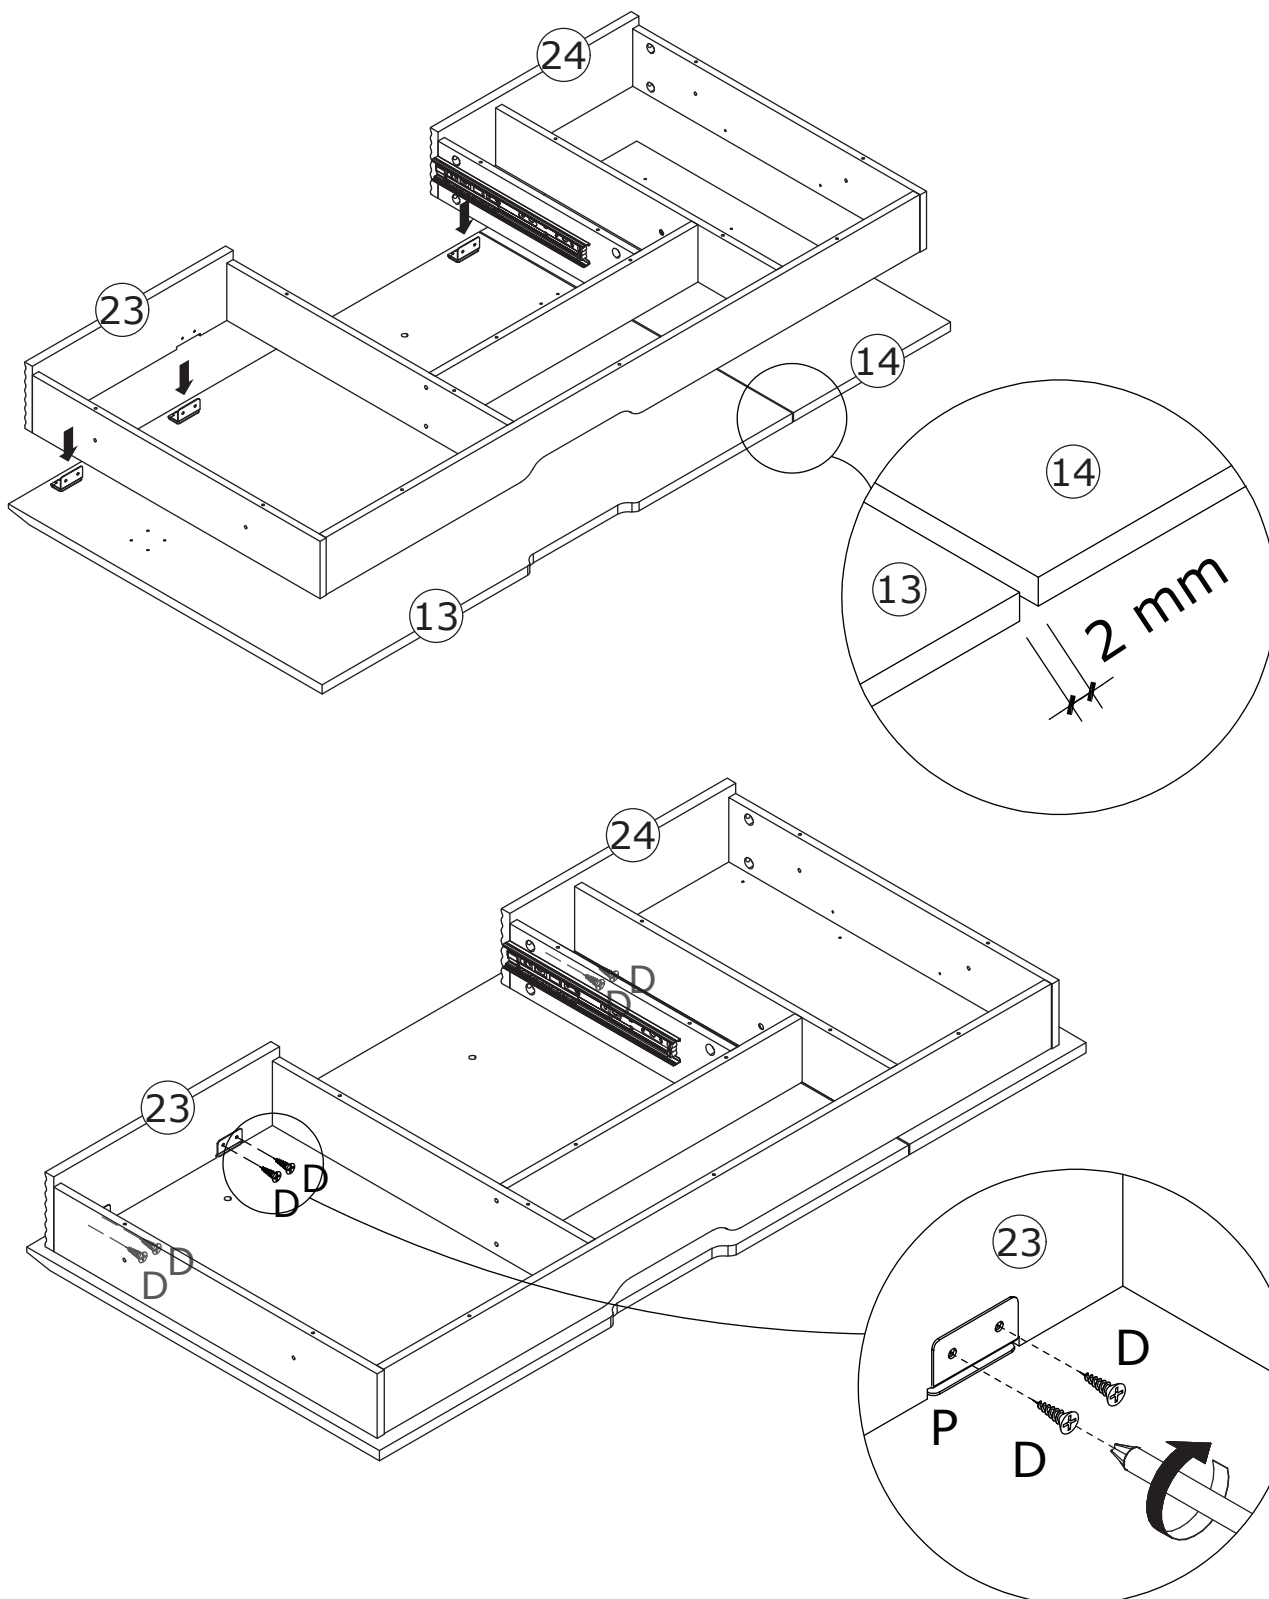

19

K x 4

 


1904


L x 4





M4 x 16 mm



 
Secure knob (K) to Part 17 and 20 using screw (L).

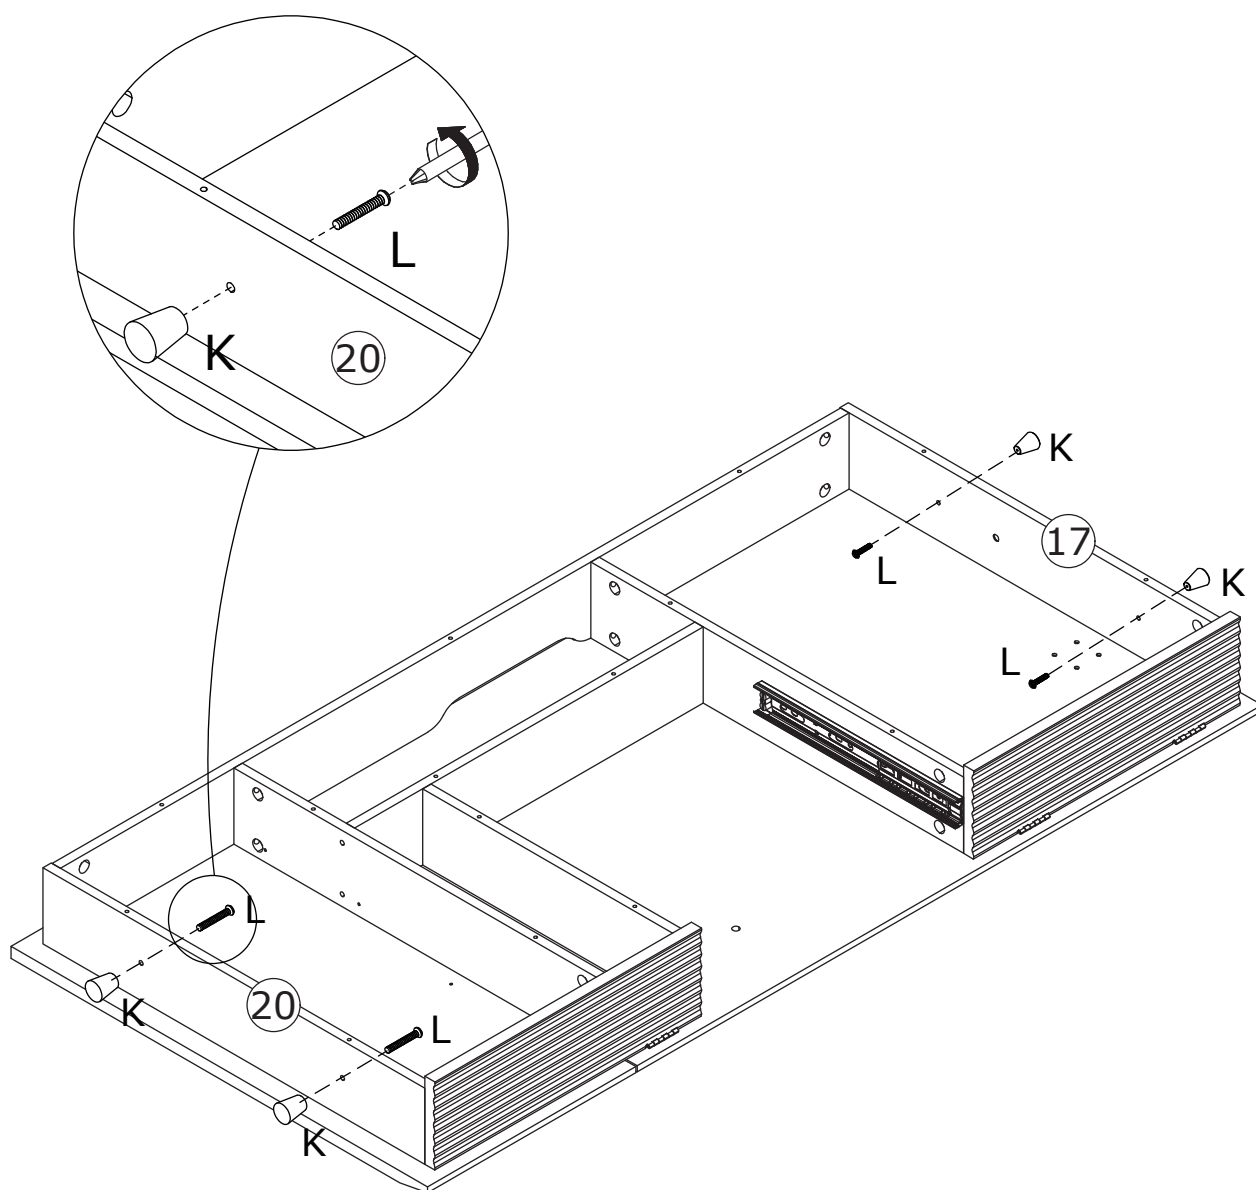

20

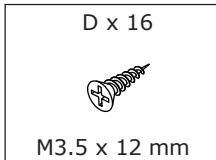  


 Secure slide rail 31 to Part 14, 19, 20, and 31 using screw (D).

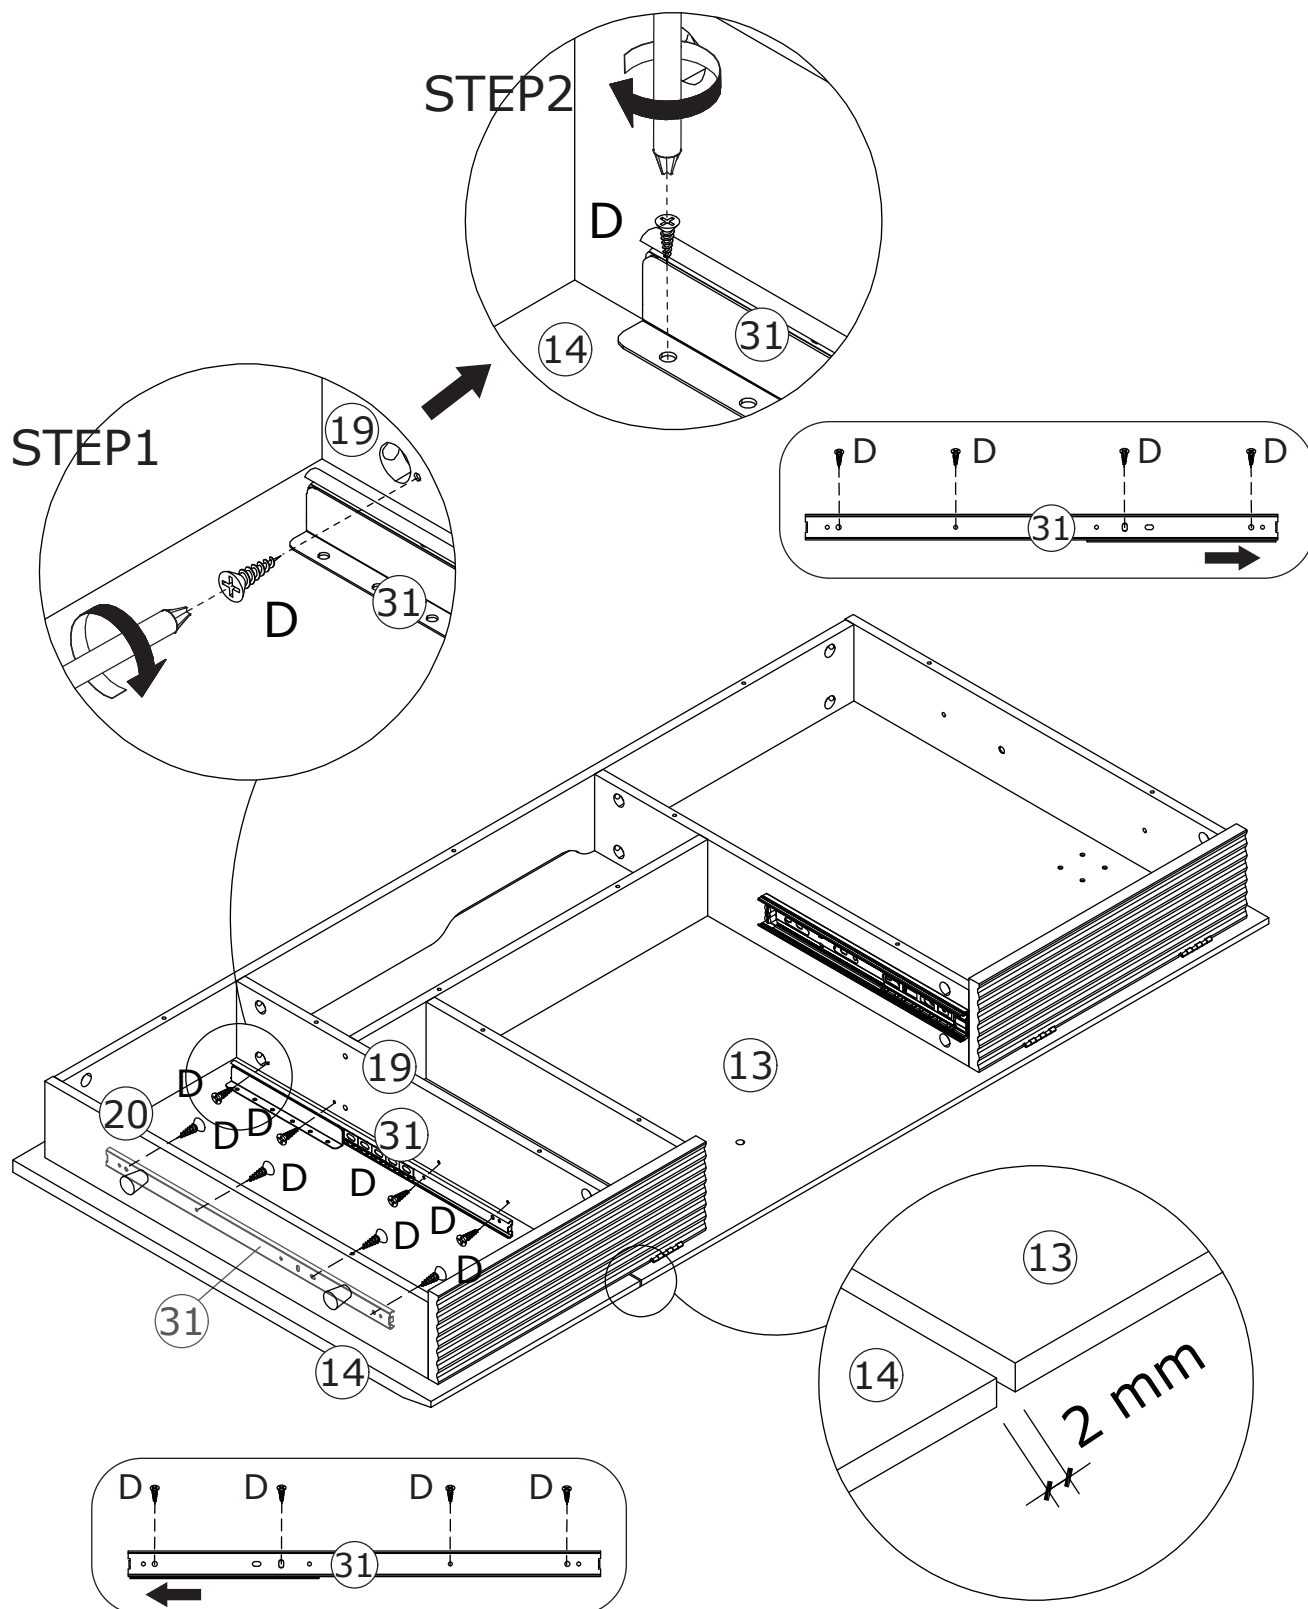


21

 C x 15
M5 x 40 mm



 Secure Part 15 to the component using screw (C).

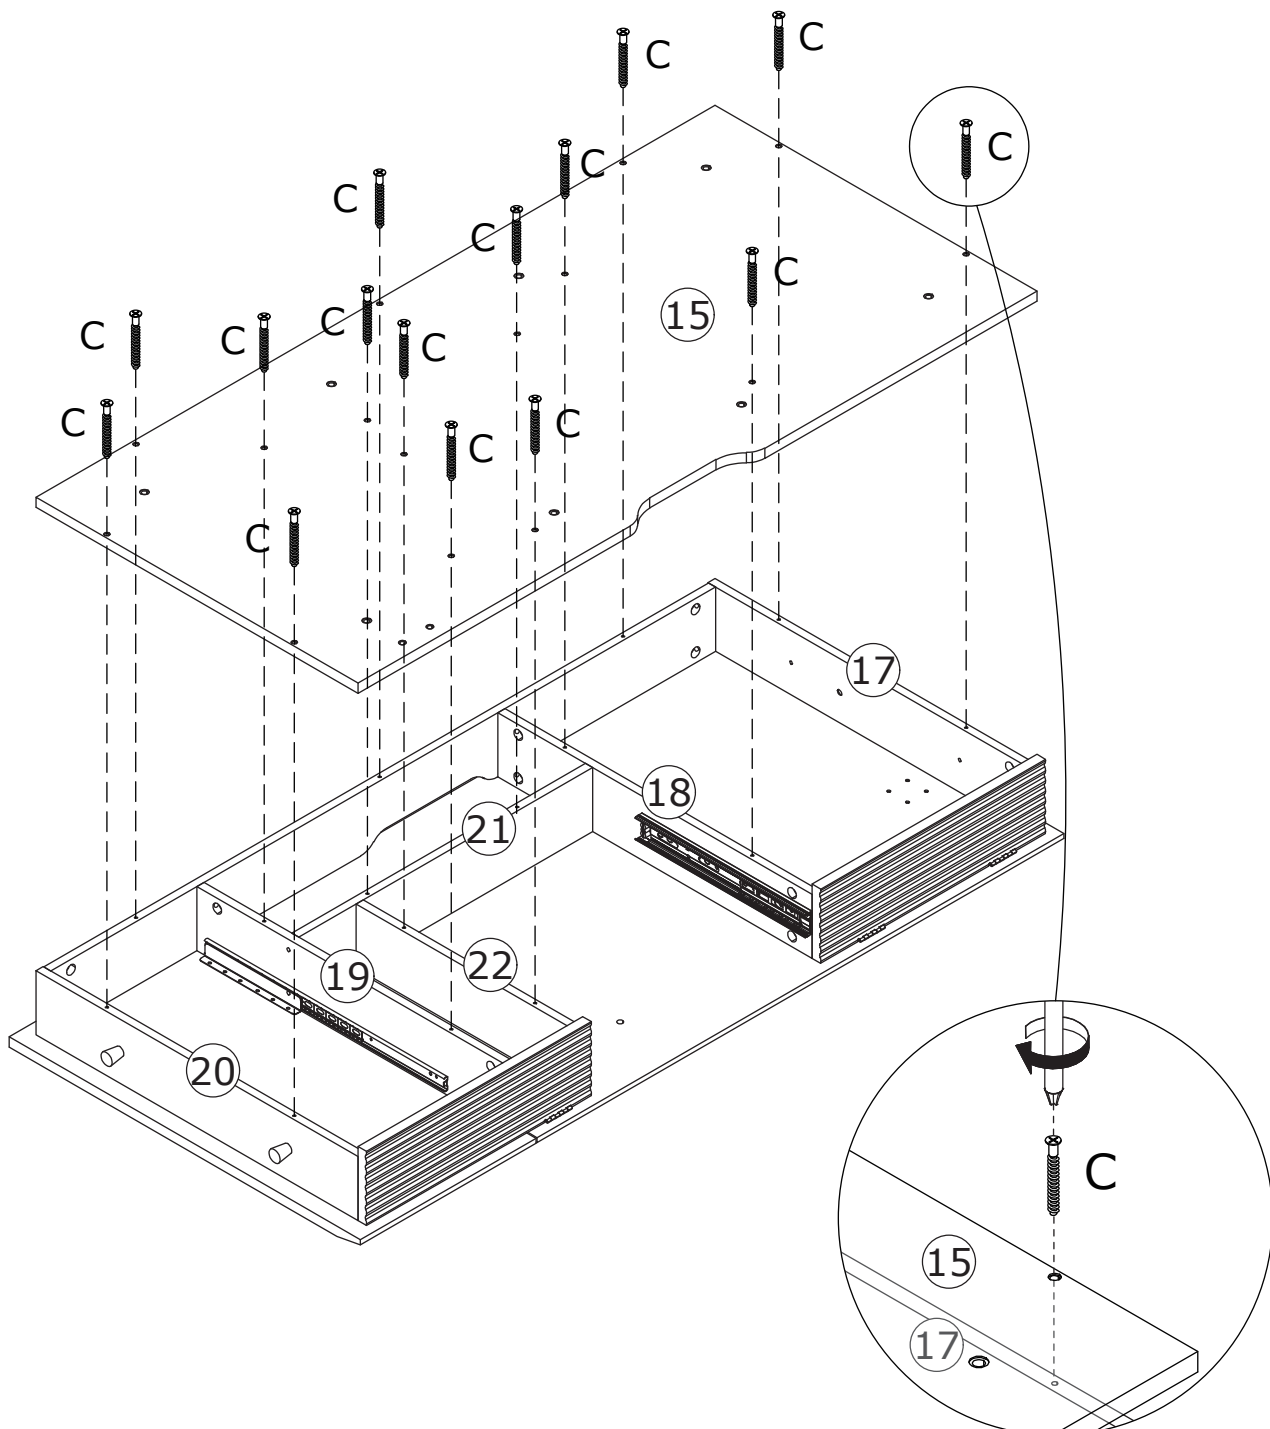


22

D x 4





 M3.5 x 12 mm



Flip the assembly over and connect Part 13 to Part 23 and 24 using screw (D).

  FLIP OVER

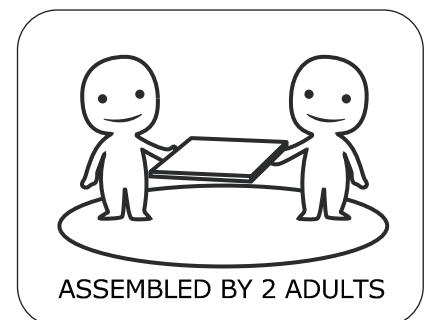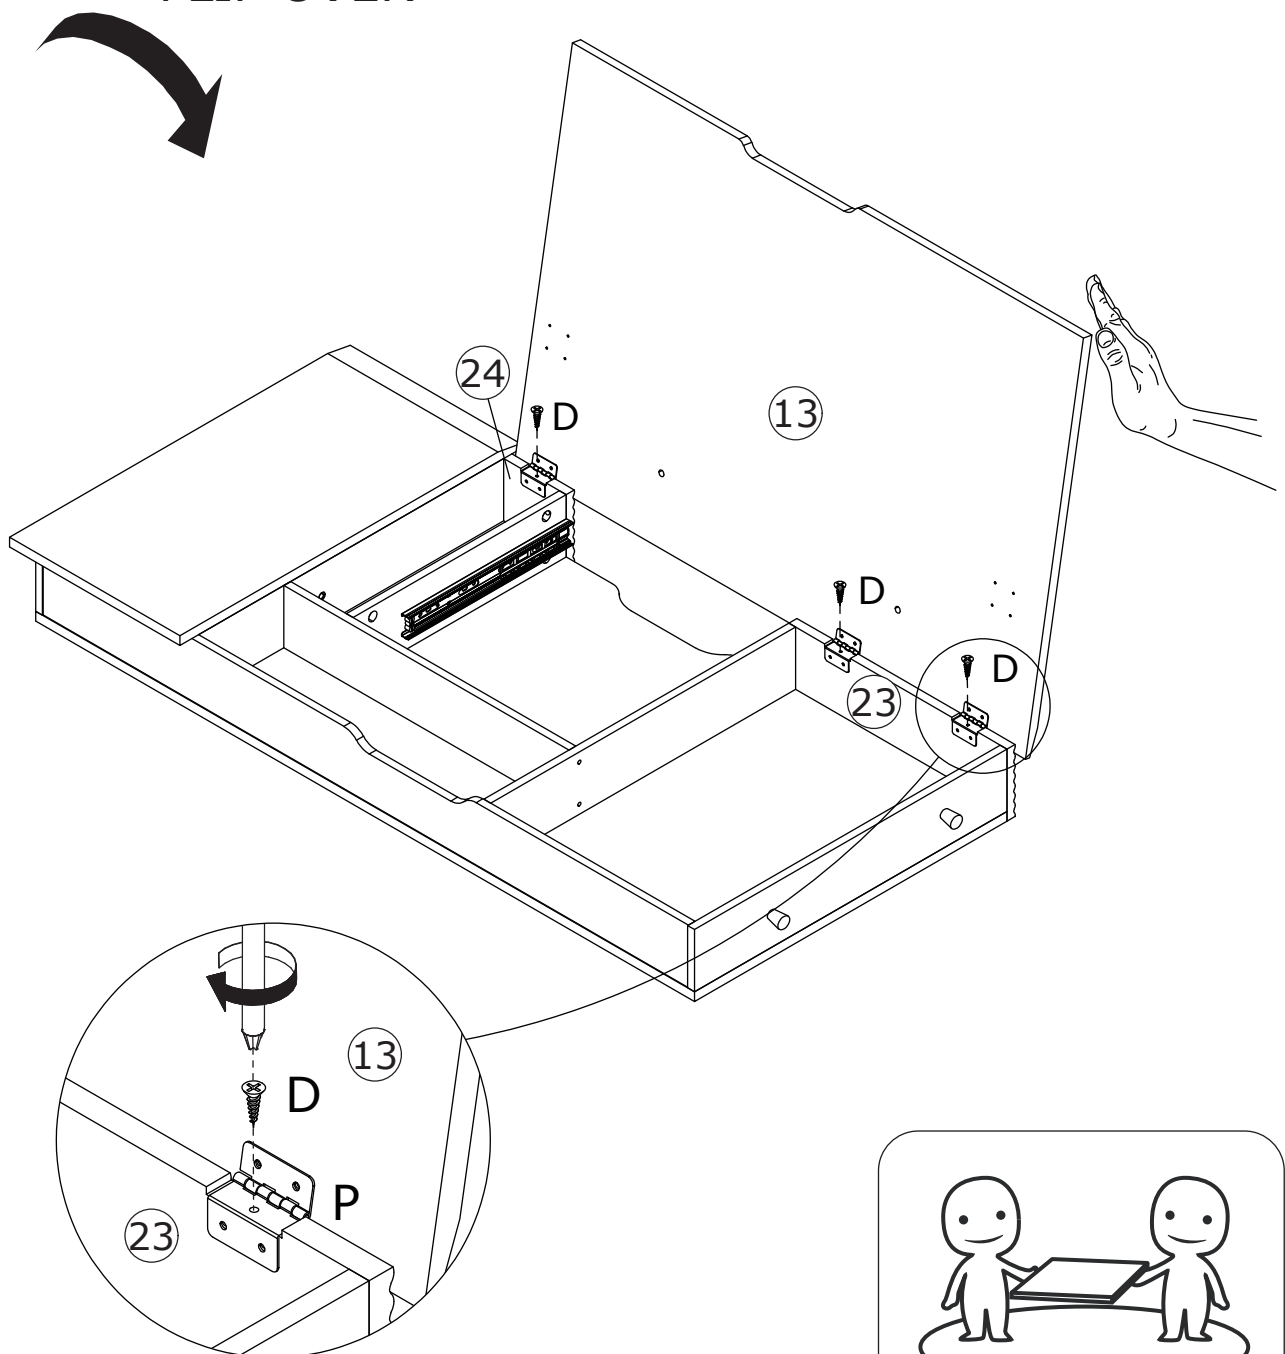


23




D x 8



 M3.5 x 12 mm



   Connect Part 32 to Part 13 using screw (D).

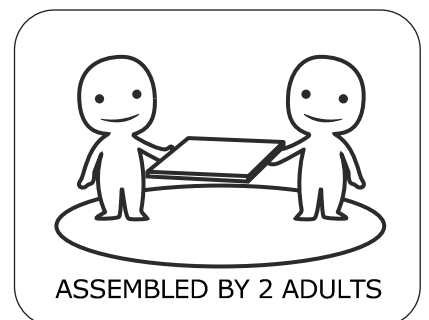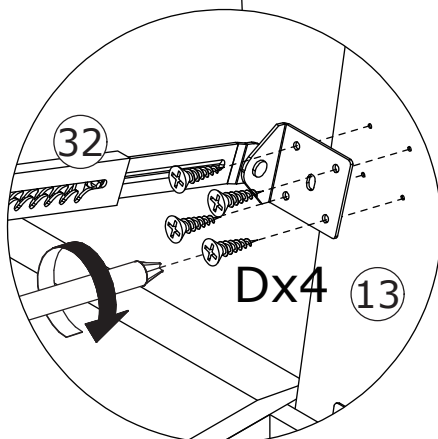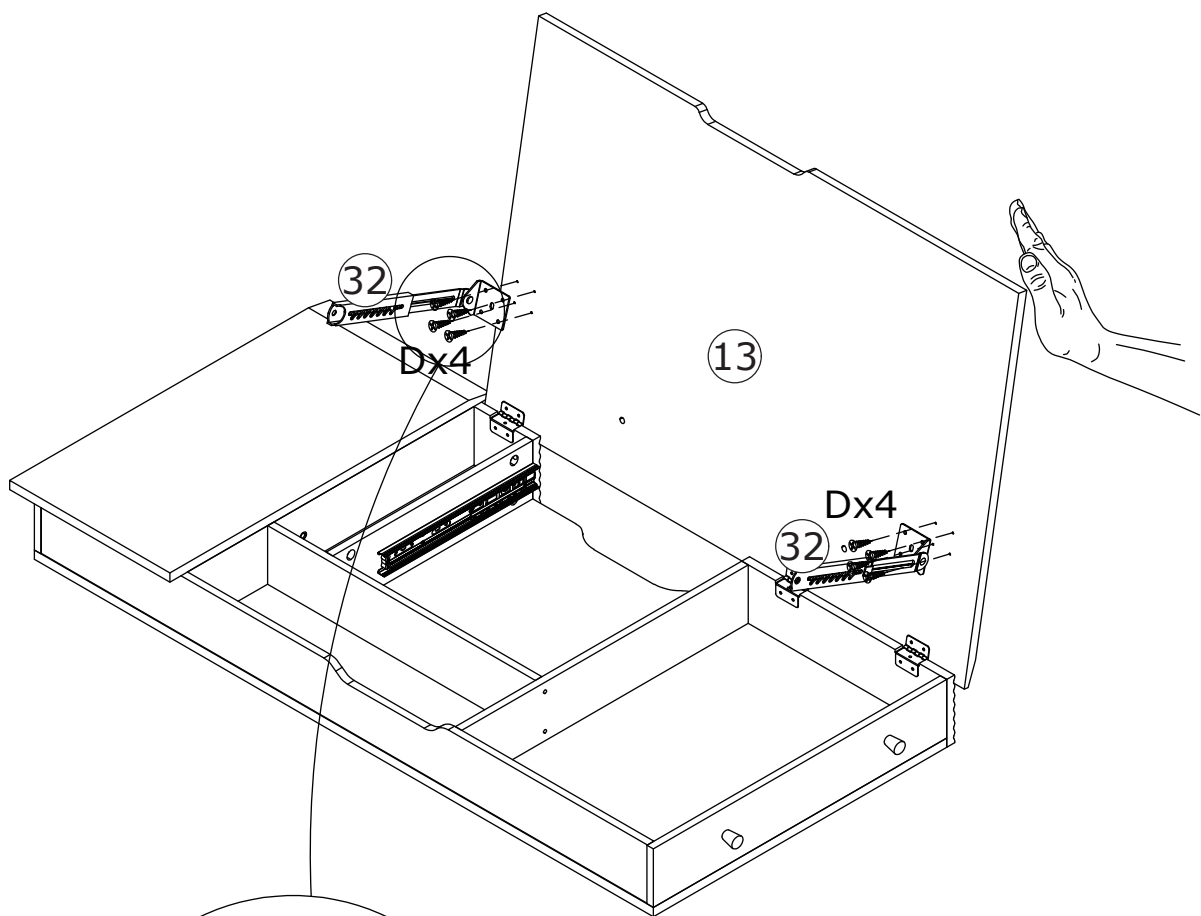


ASSEMBLED BY 2 ADULTS

24



F x 2



 M6 x 10 mm



  Connect Part 32 to Part 17 and 19
using screw (F).

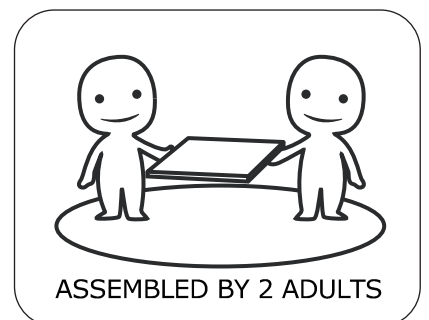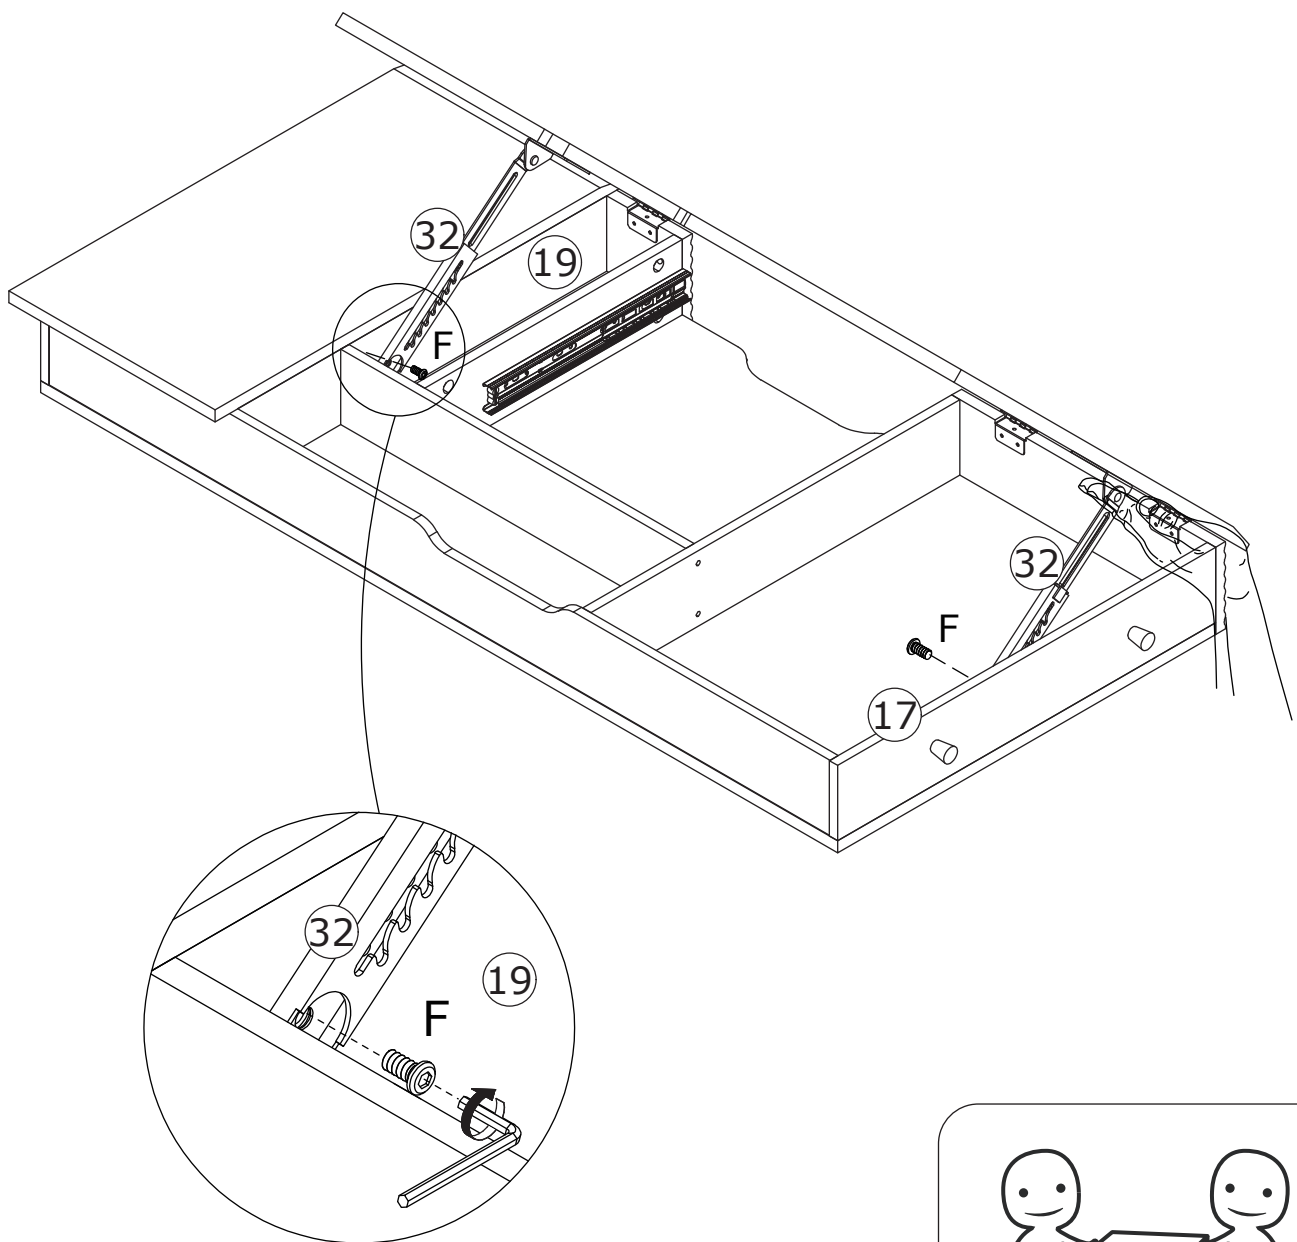


ASSEMBLED BY 2 ADULTS

25


G x 2



 M6 x 25 mm




 Connect Part 12 to Part 13 using screw (G).

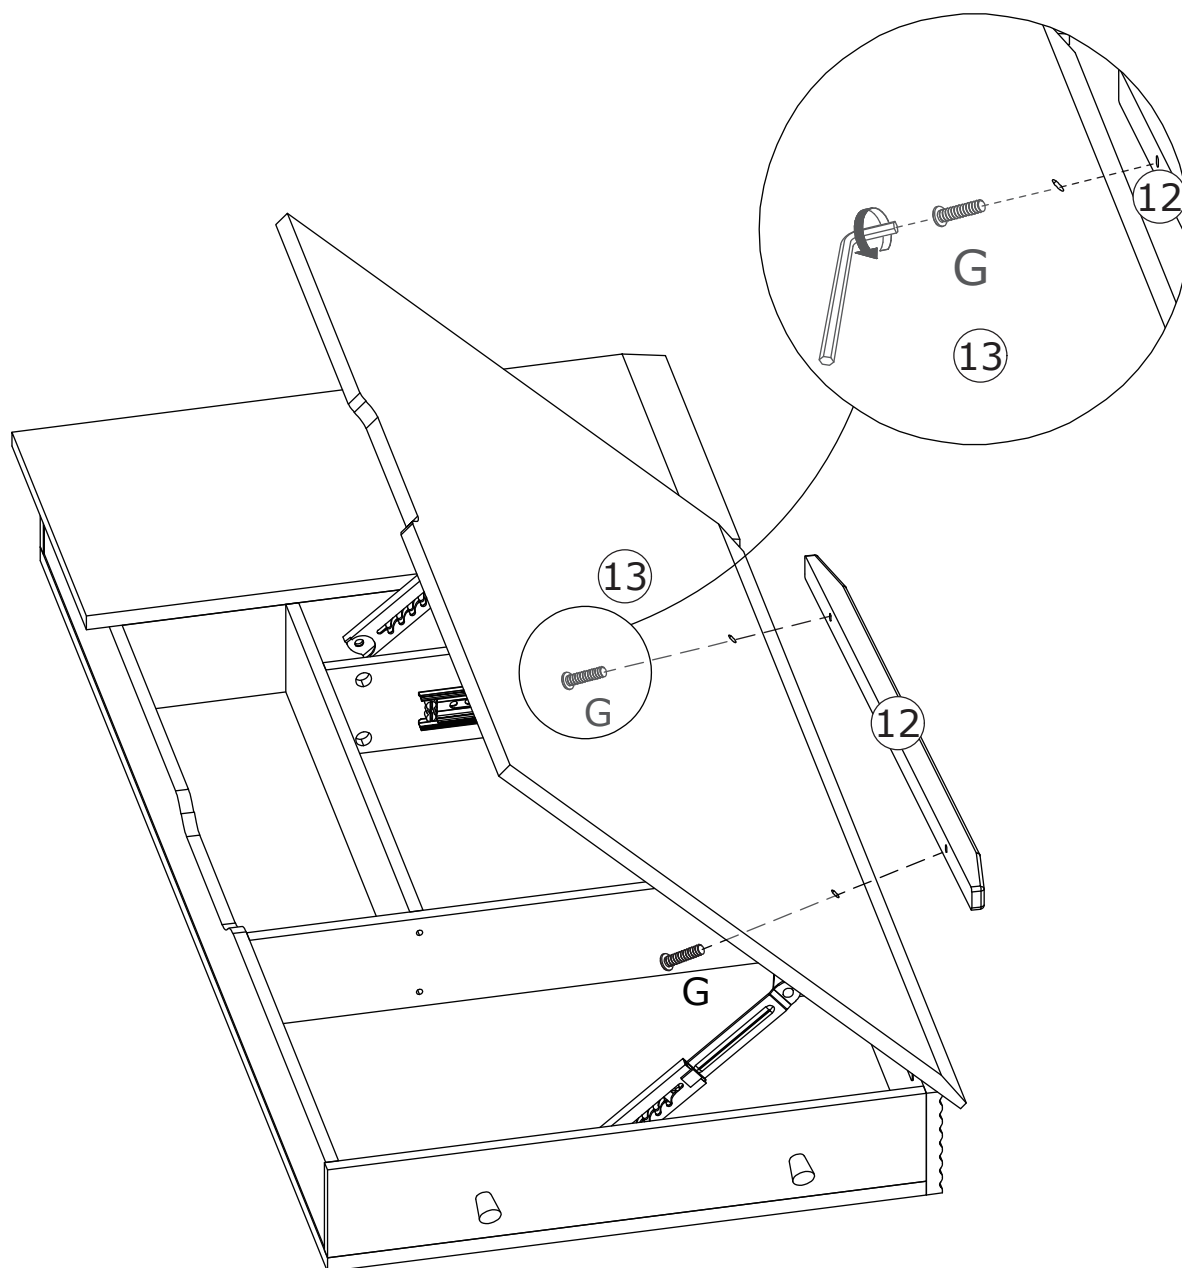


26

 C x 4
M5 x 40 mm




 Connect Part 26, 27, and 28 using screw (C).

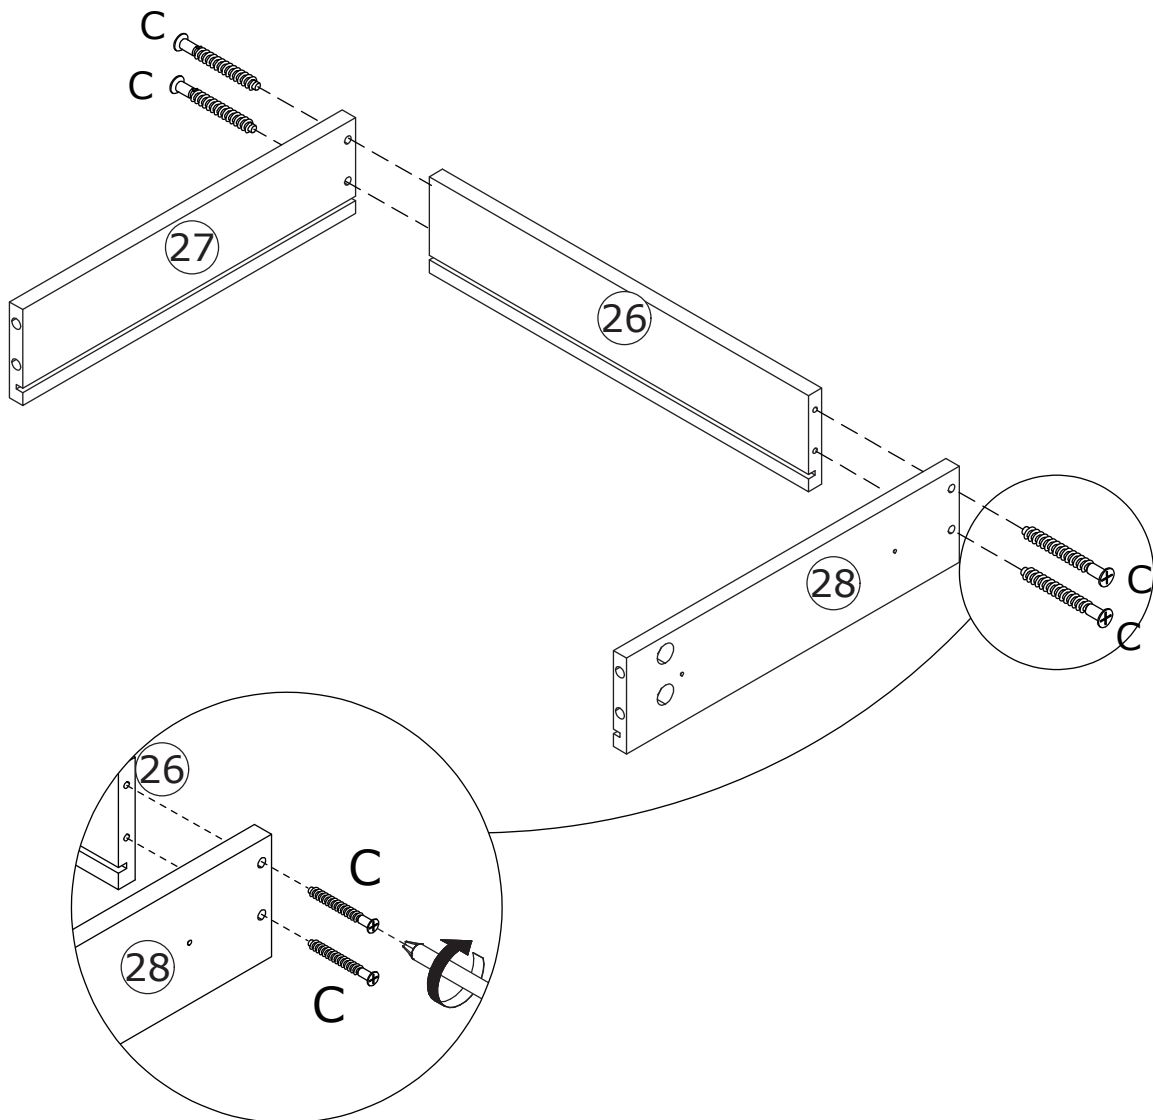


27

 Insert Part 29 along the available grooves.

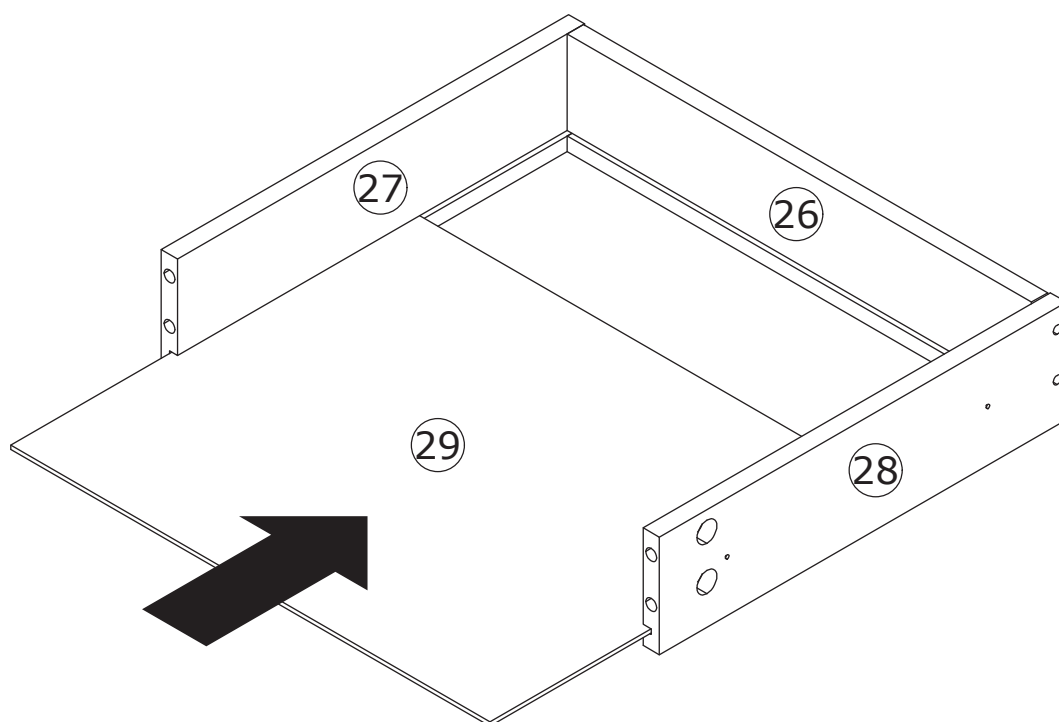

28

 A x 4






M5 x 42 mm




B x 4



   Ø15 x 10 mm

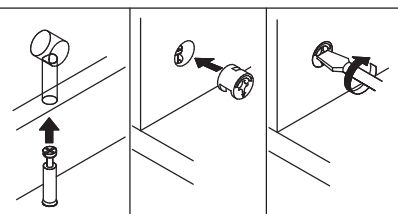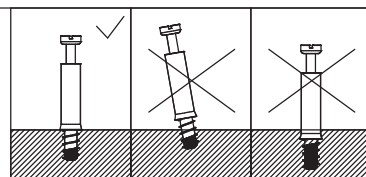

   Screw eccentric rod (A) onto Part 25.
Connect Part 25 to Part 27 and 28, then
tighten by turning cam lock (B) clockwise.

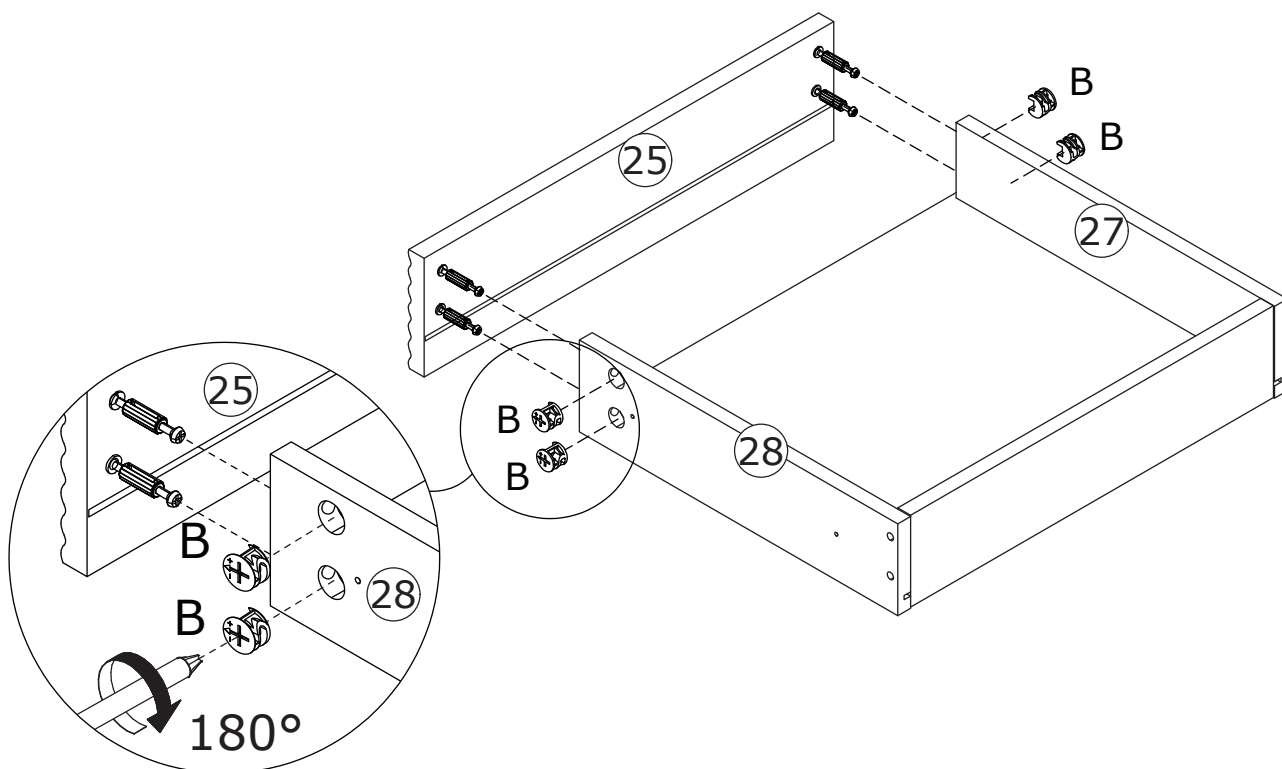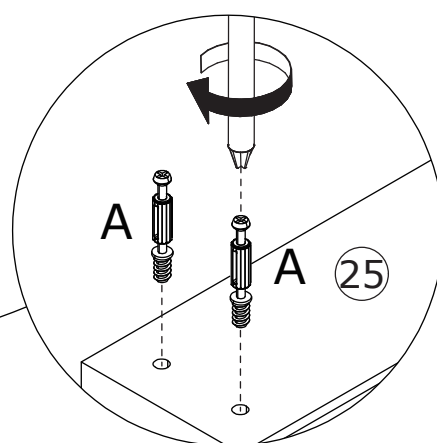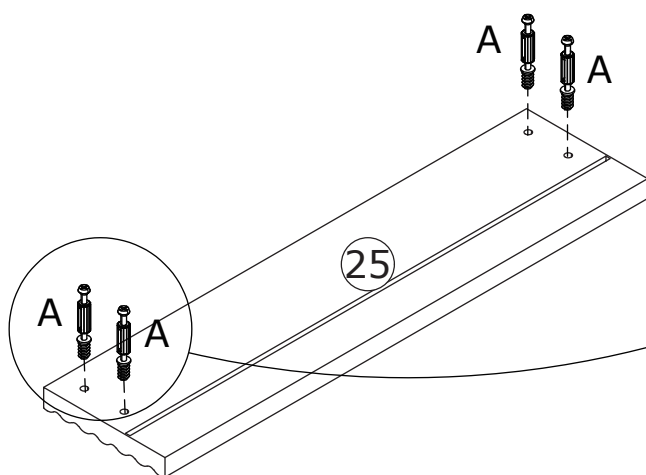


29


D x 4



 
M3.5 x 12 mm



 Secure slide rail 30 to Part 27 and 28 using screw (D).

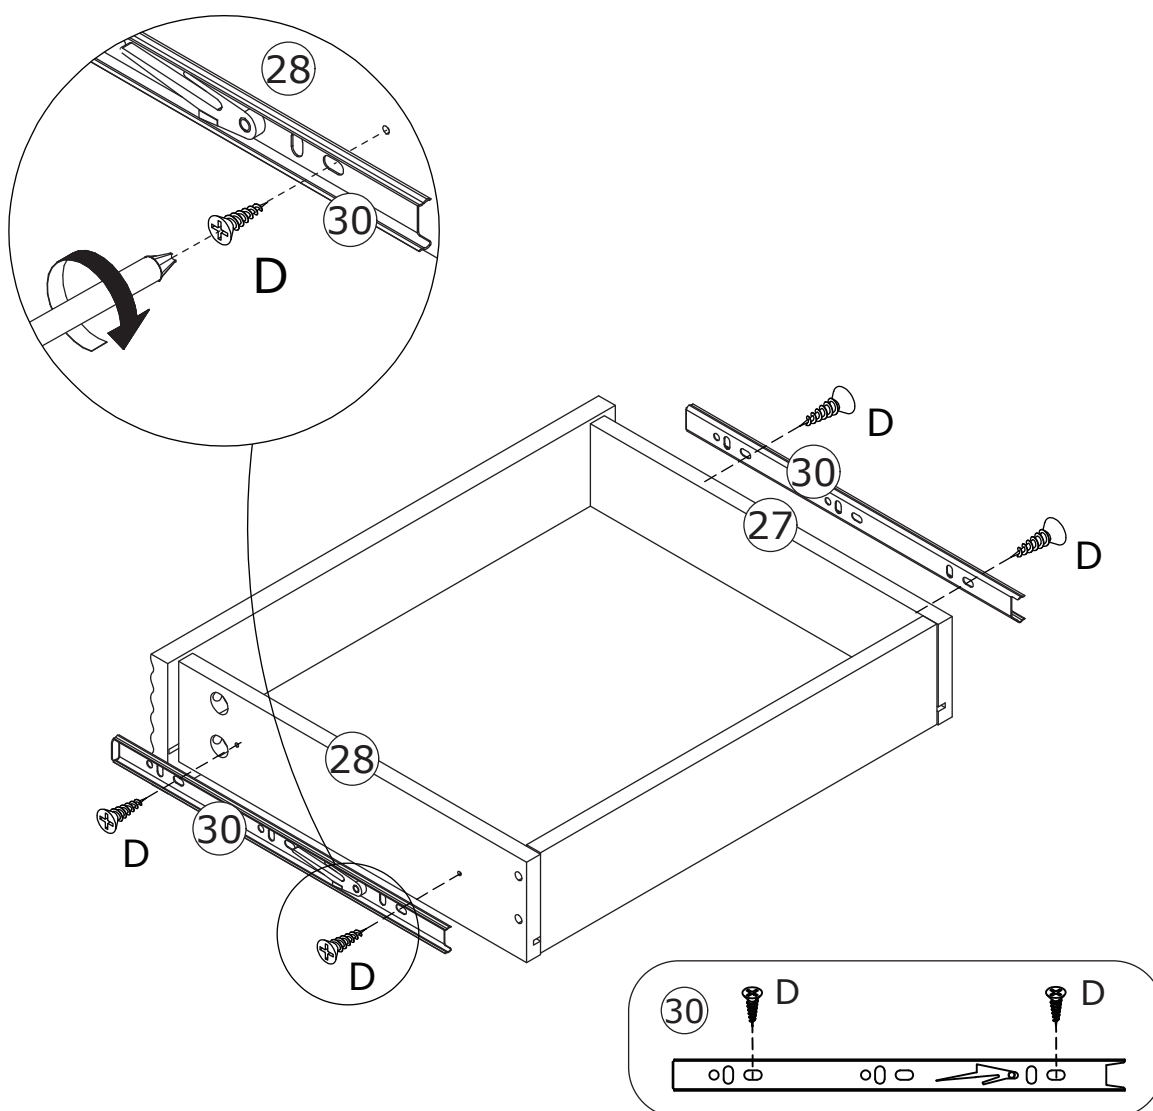


 This accessory needs to be extended to its full length before it can be retracted.

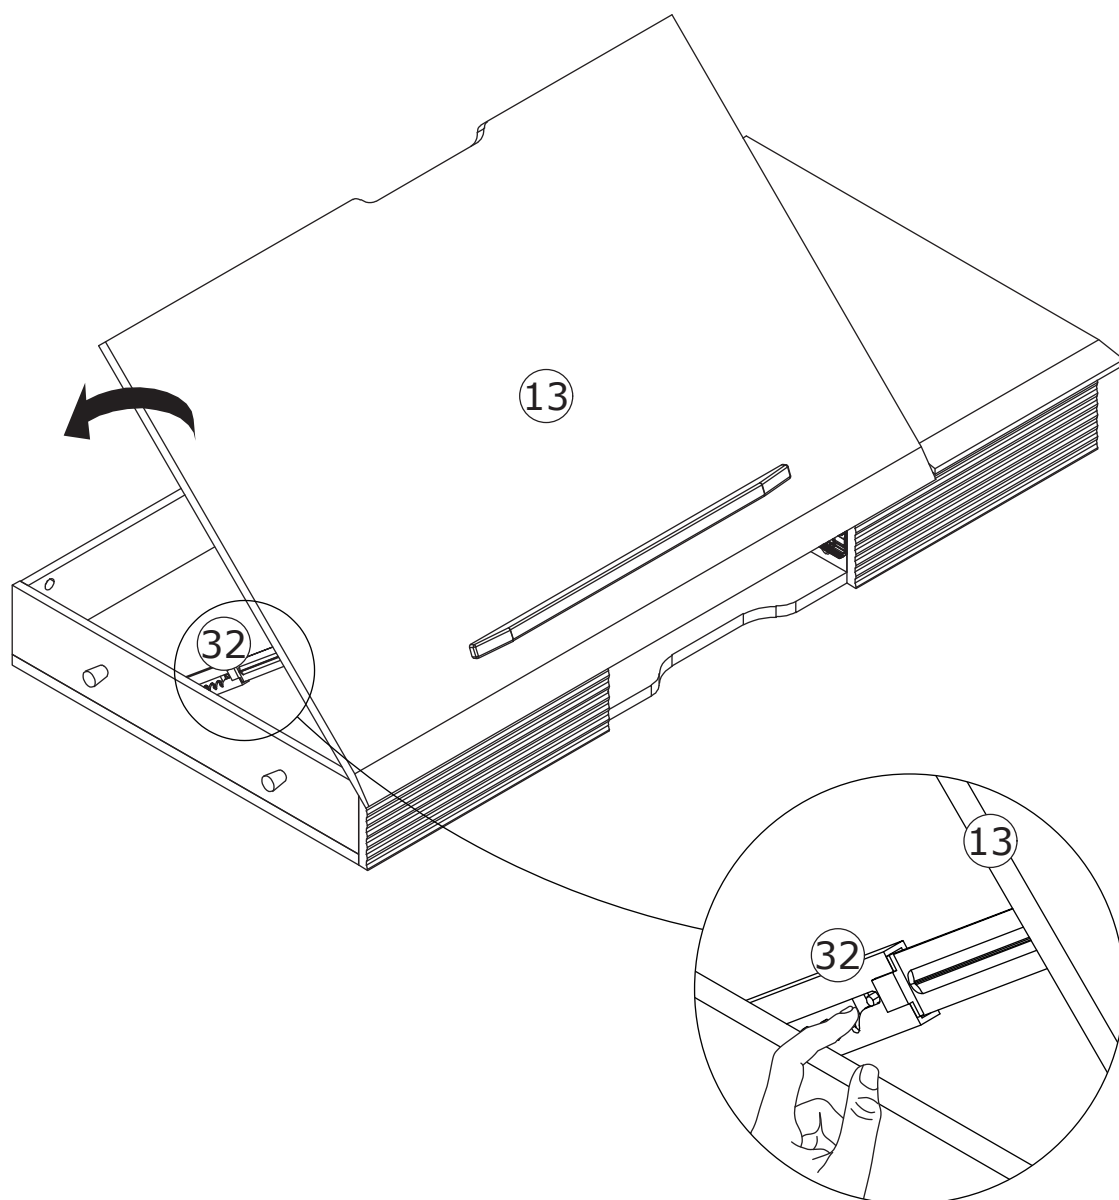


31

 I x 8
M6 x 50 mm




Connect Part 4 and 15 using screw (I).

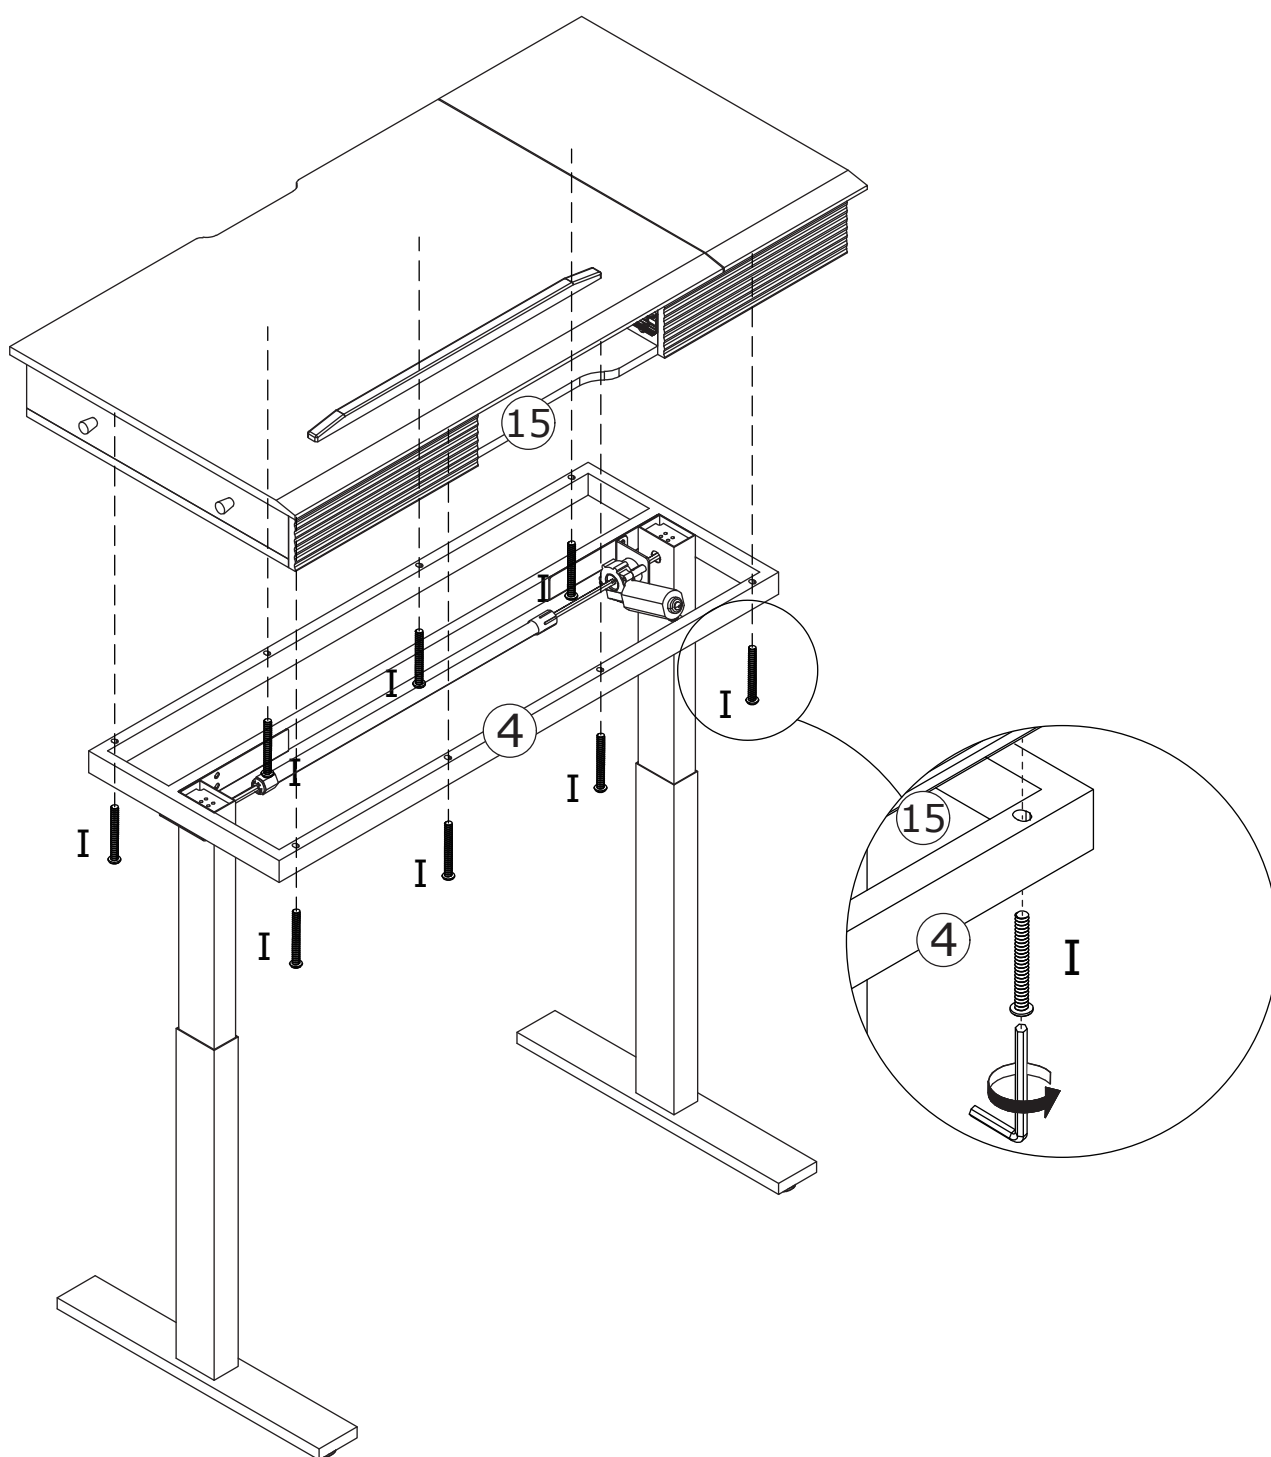 

32

 Slide the drawer along the guide rails.

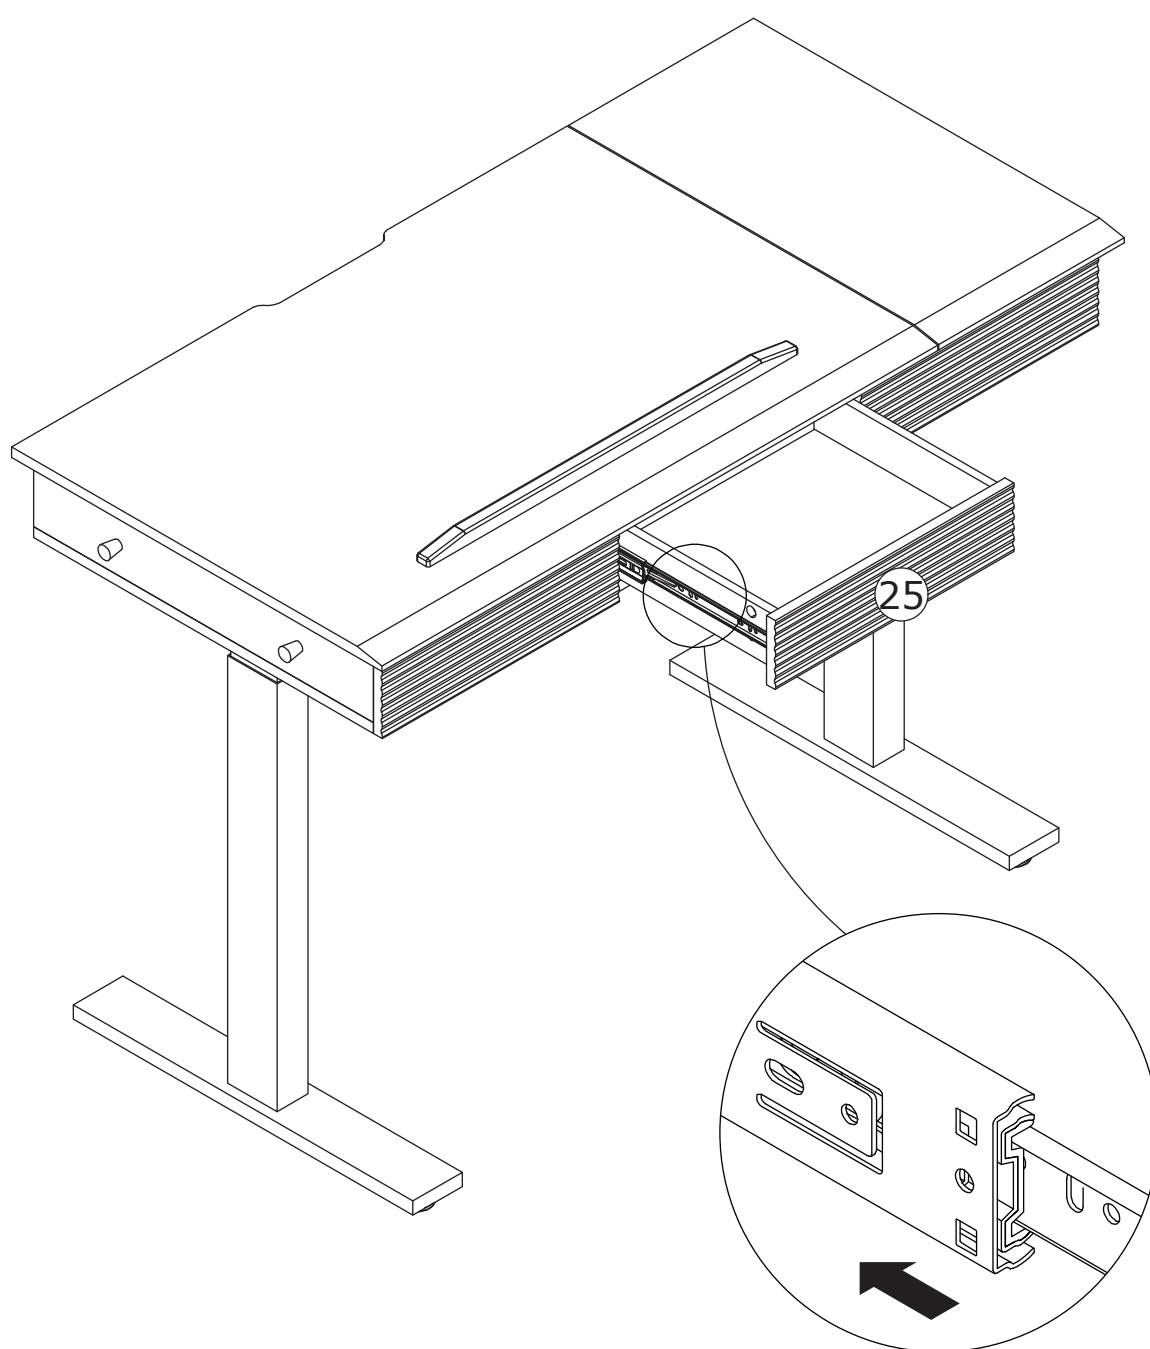


33


E x 2



 M5 x 10 mm



 Secure Part 10 to Part 15 using
screw (E).

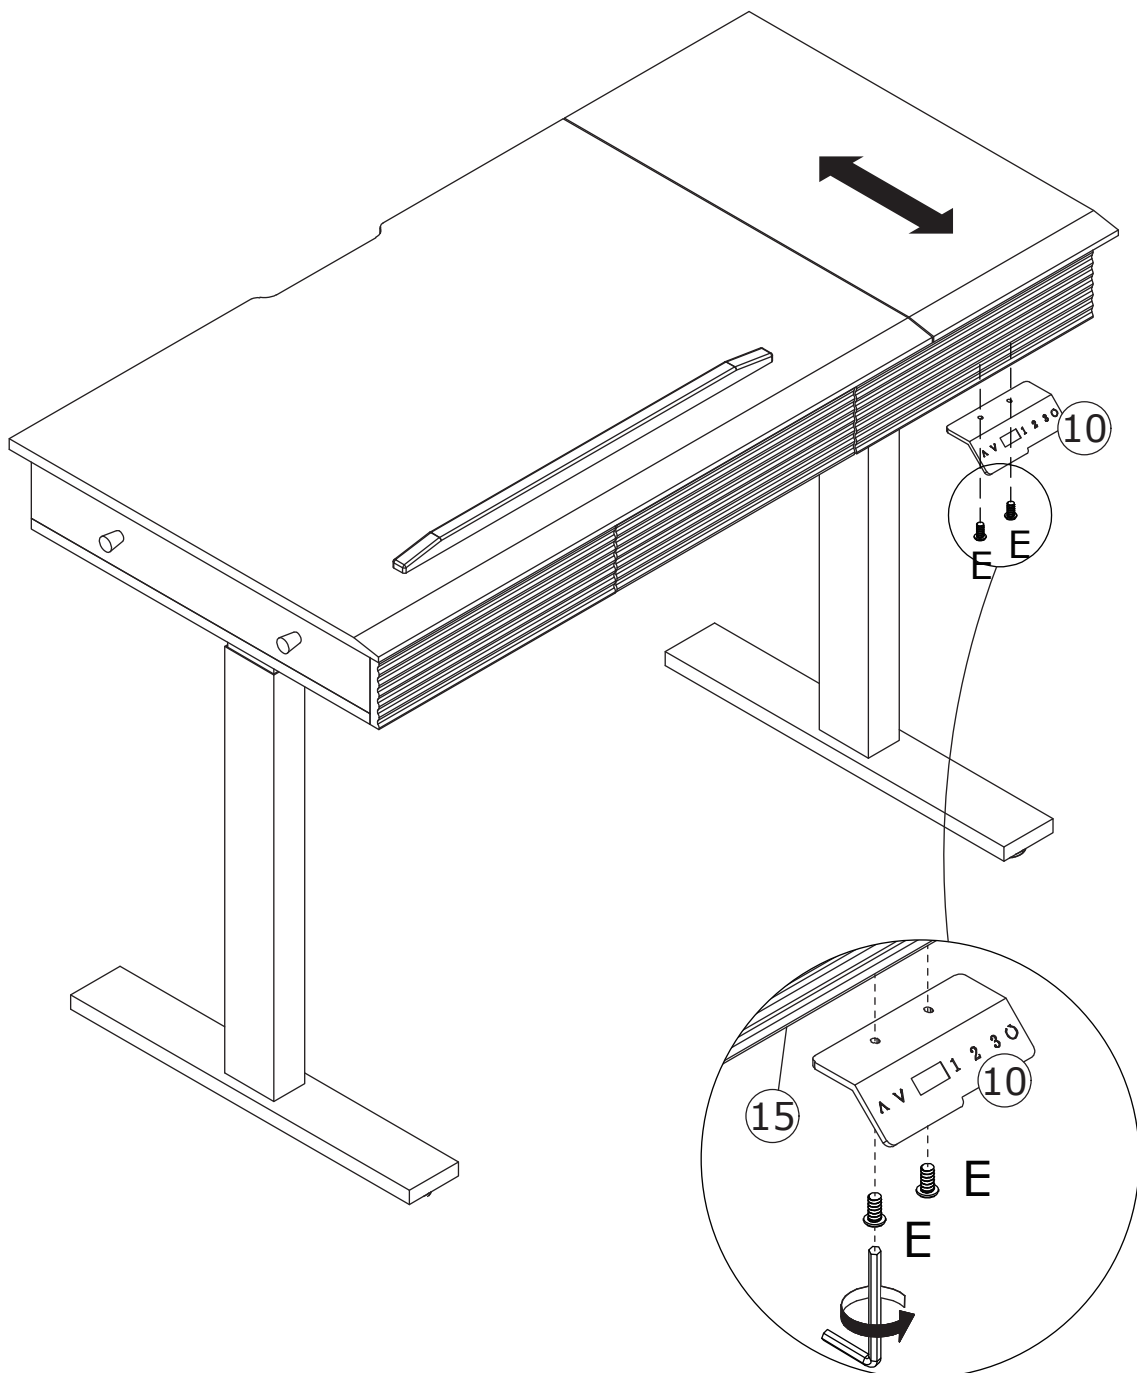

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.