


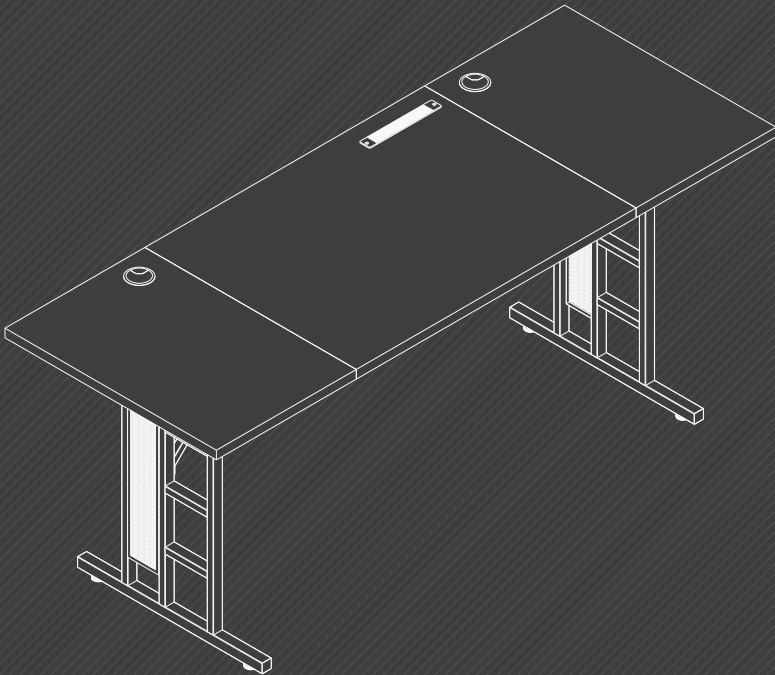

Large Office Desk with USB




USER MANUAL

Safety Instructions

Thank You For Choosing Our Product

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included. Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!


Precautions

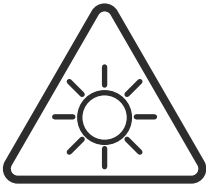

- Avoid long-term direct sunlight exposure.



- Keep away from sharp objects.

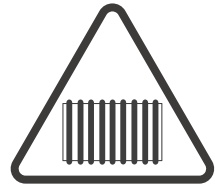


- Keep away from heat.



- Keep infants/children away from assembly parts to avoid choking and suffocation.




- Keep away from corrosive substances.

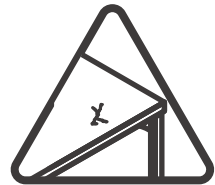

- Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.

Disassembly Diagram

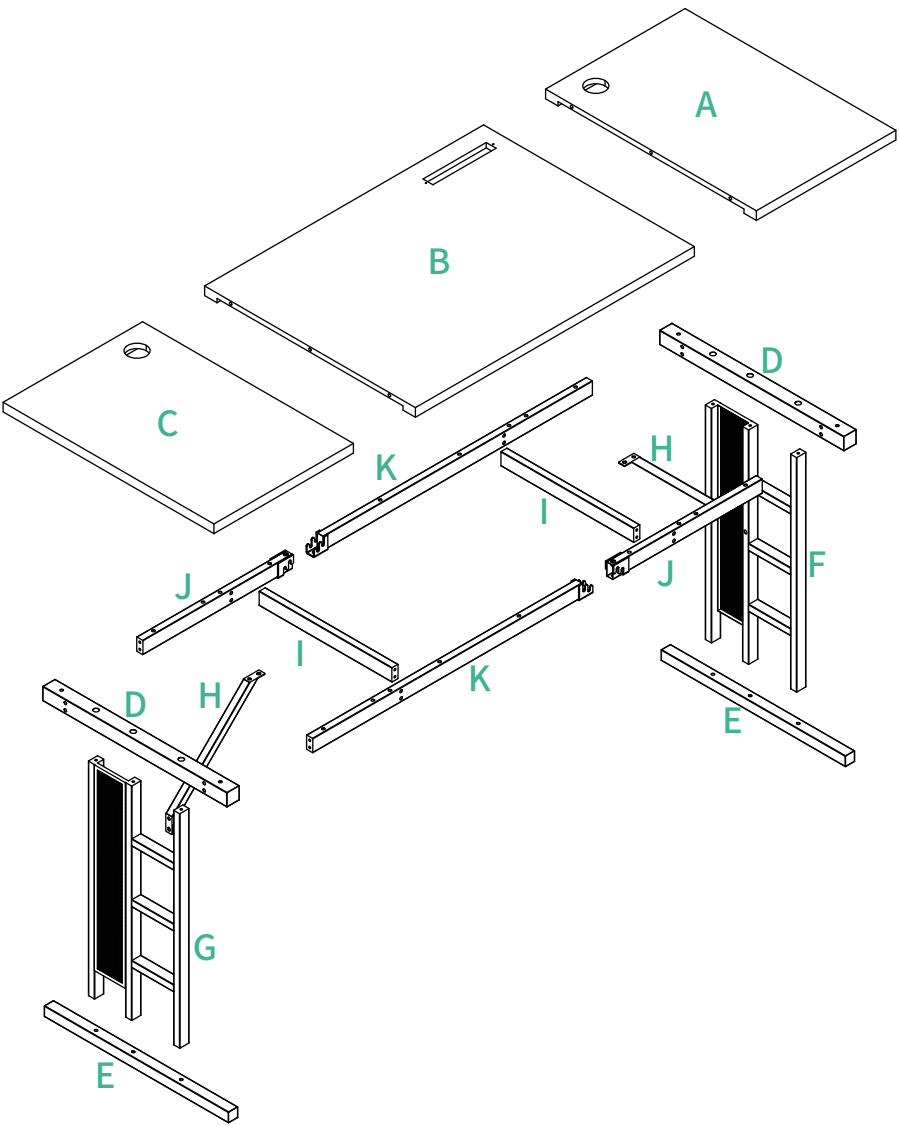

Parts List


For ease and safety, we recommend two people for assembly.



A x1 	B x1 	C x1 	D x2
E x2 	F x1 	G x1 	H x2
I x2 	J x2 	K x2 	1 x31 M6x60 3 Spares
2 x27 M6x50 3 Spares	3 x3 M3.5x12 1 Spare	4 x1 	5 x2
6 x5 1 Spare	7 x2 1 Spare	8 x1 	9 x5 M6x12 1 Spare 10 x7 Ø8*40 1 Spare

Assembly Instructions


1

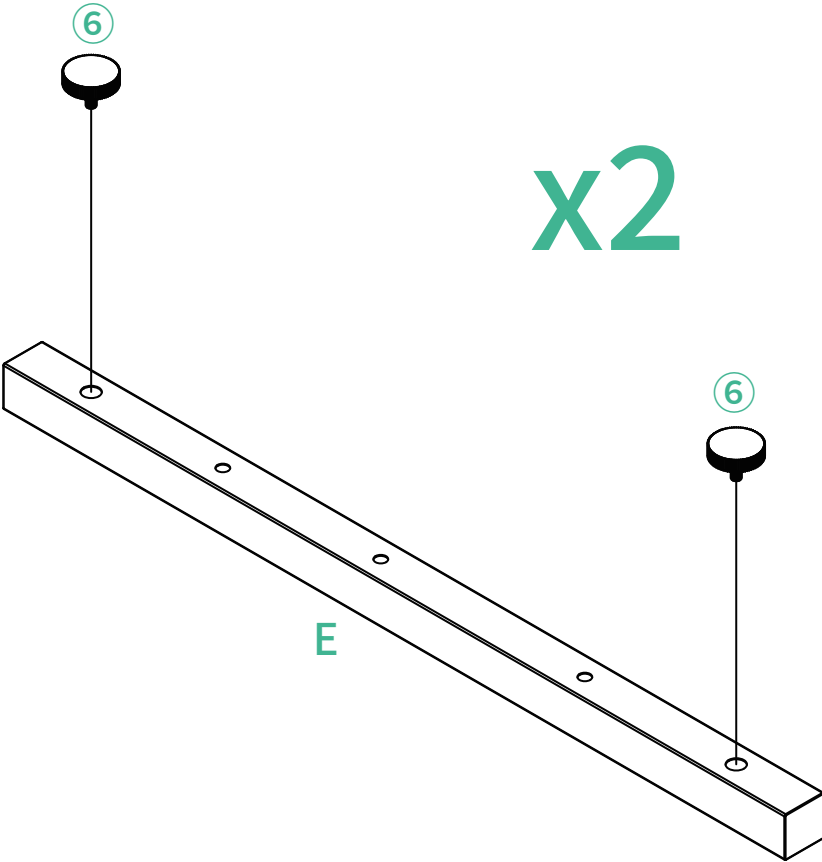

Assembly Instructions

2

Please note that the screws should be embedded into Part D during installation.

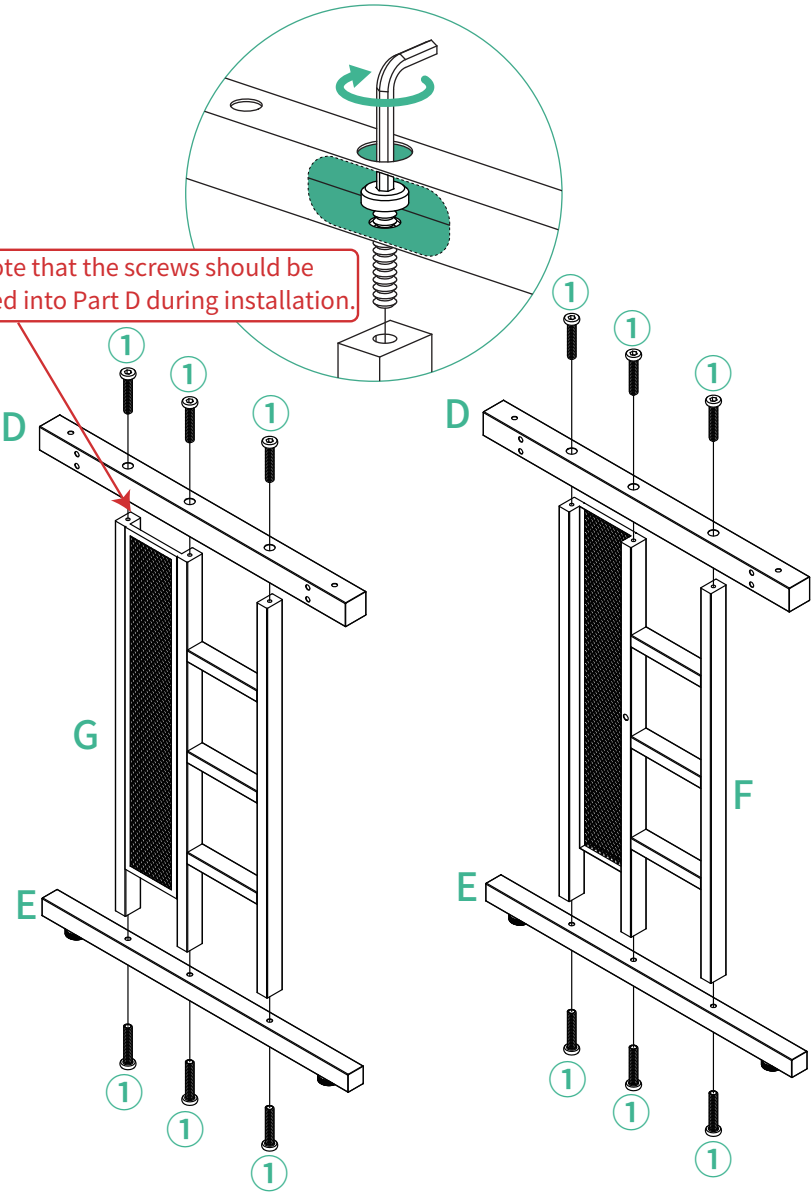


F		G		D		1		7	
x1		x1		x2		x12		x1	


Assembly Instructions

3

Please knock Part K & J lightly if it is hard to connect them, and make sure the surface is flat when finished Step 3.

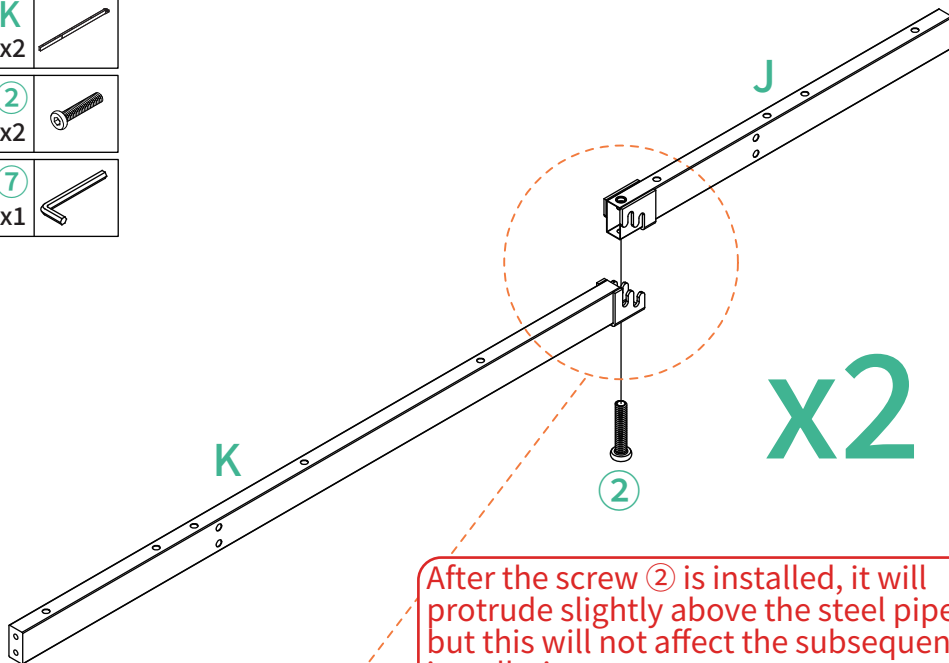


After the screw ② is installed, it will protrude slightly above the steel pipe, but this will not affect the subsequent installation steps.

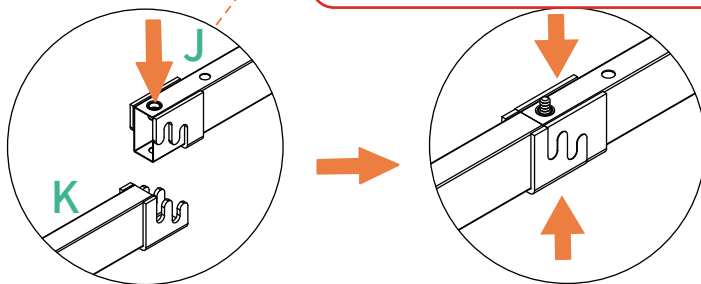



When connecting Parts J and K, if the parts do not align properly, you can tap gently with a tool to achieve a perfect fit.

Assembly Instructions

4

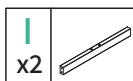

Please ensure the two joints are installed facing opposite directions, as shown in the diagram.

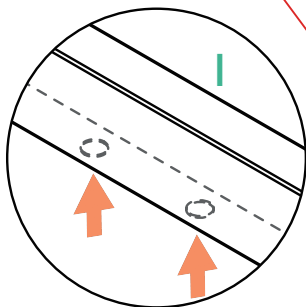
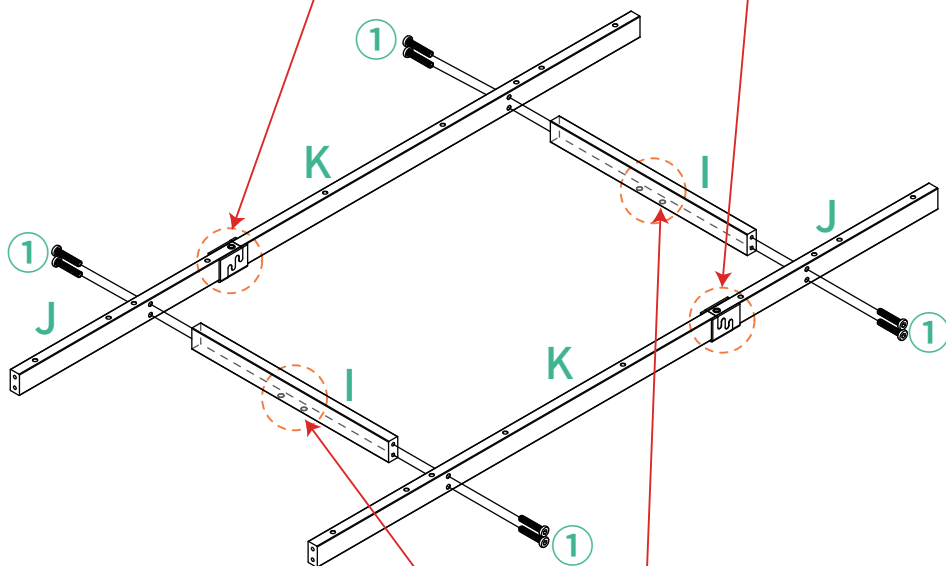


When installing Part I, make sure both holes are facing downward.

Assembly Instructions

5


Please pay attention to the direction of the joints of parts K and J, ensuring they match the orientation shown in the enlarged diagram.

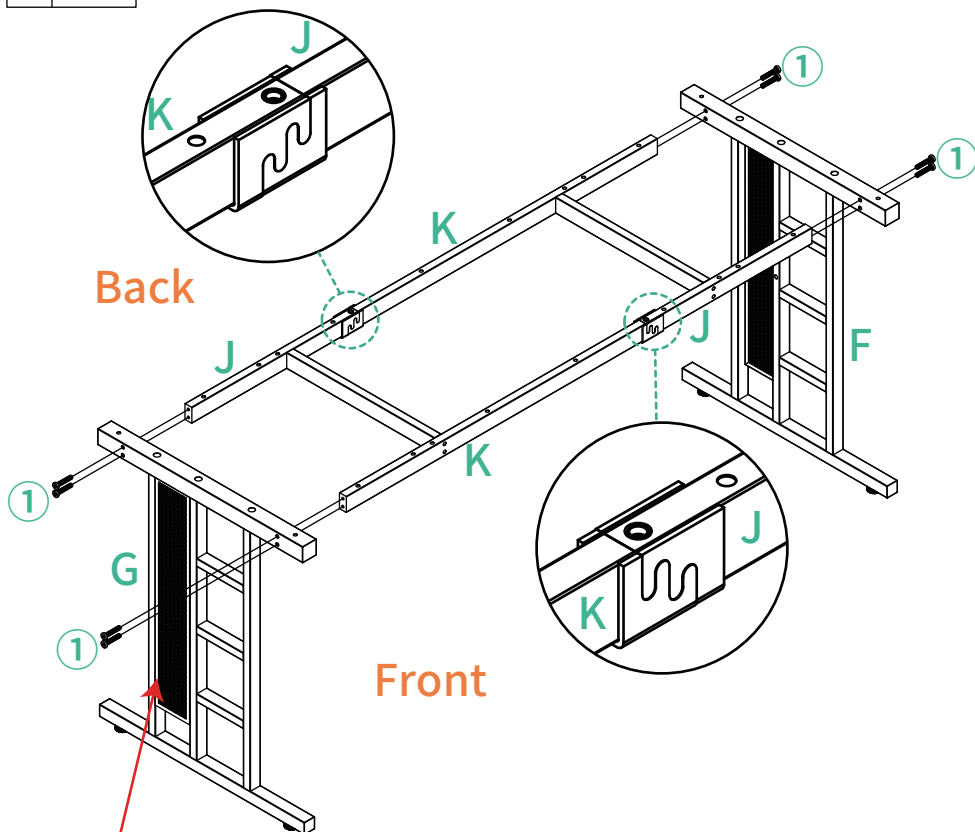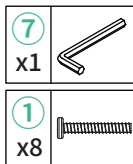


When installing Parts G and F, the flat side of grid should face outward.

Assembly Instructions

6

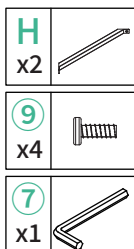

Assemble and tighten properly, or the table will shake.

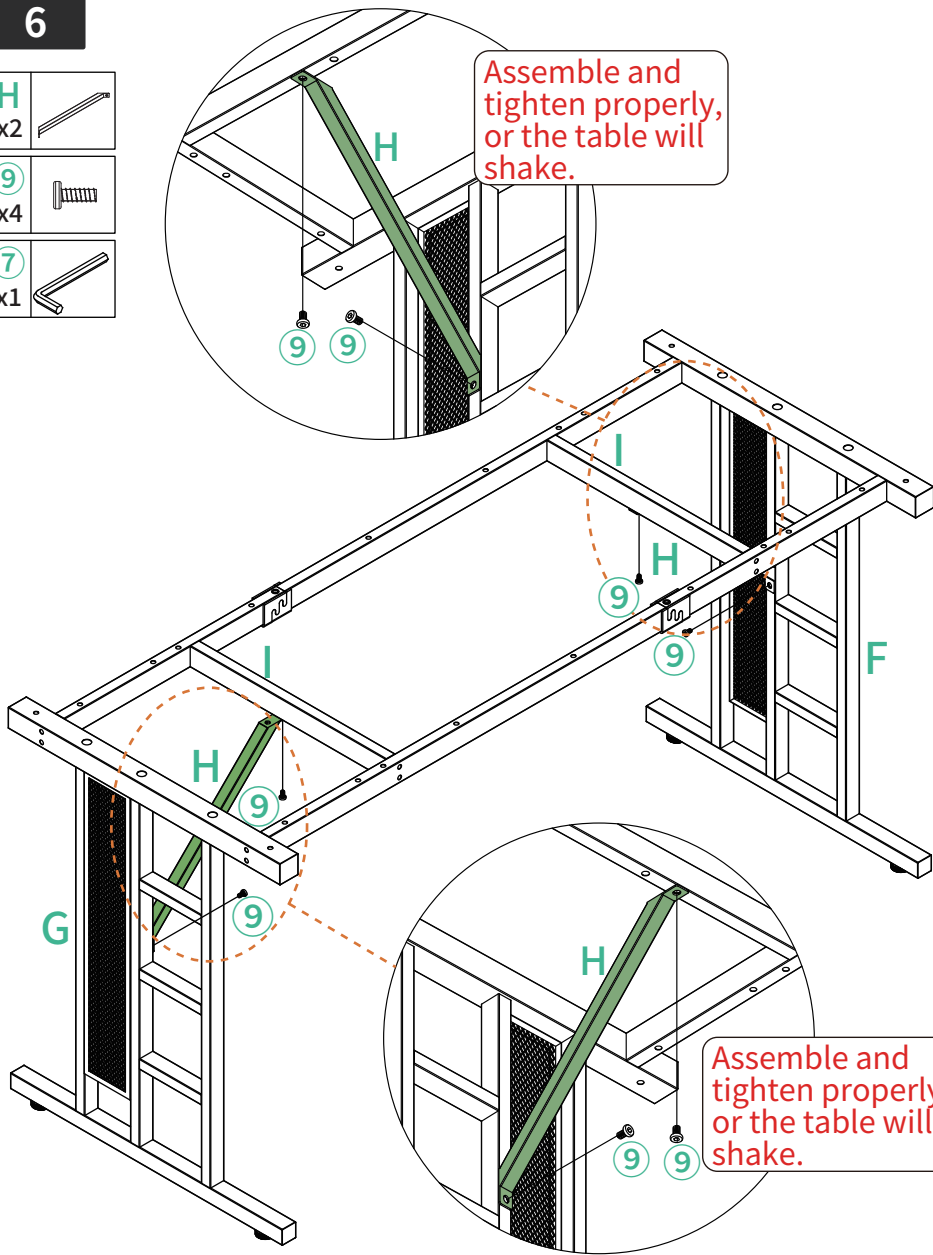





Assemble and tighten properly, or the table will shake.

Assembly Instructions

7


Pay attention to the splice of Desktop and the orientation of the holes.

   Tighten the screws to 70% first to ensure that the tabletop A, B, and C are aligned, then fully tighten all screws.

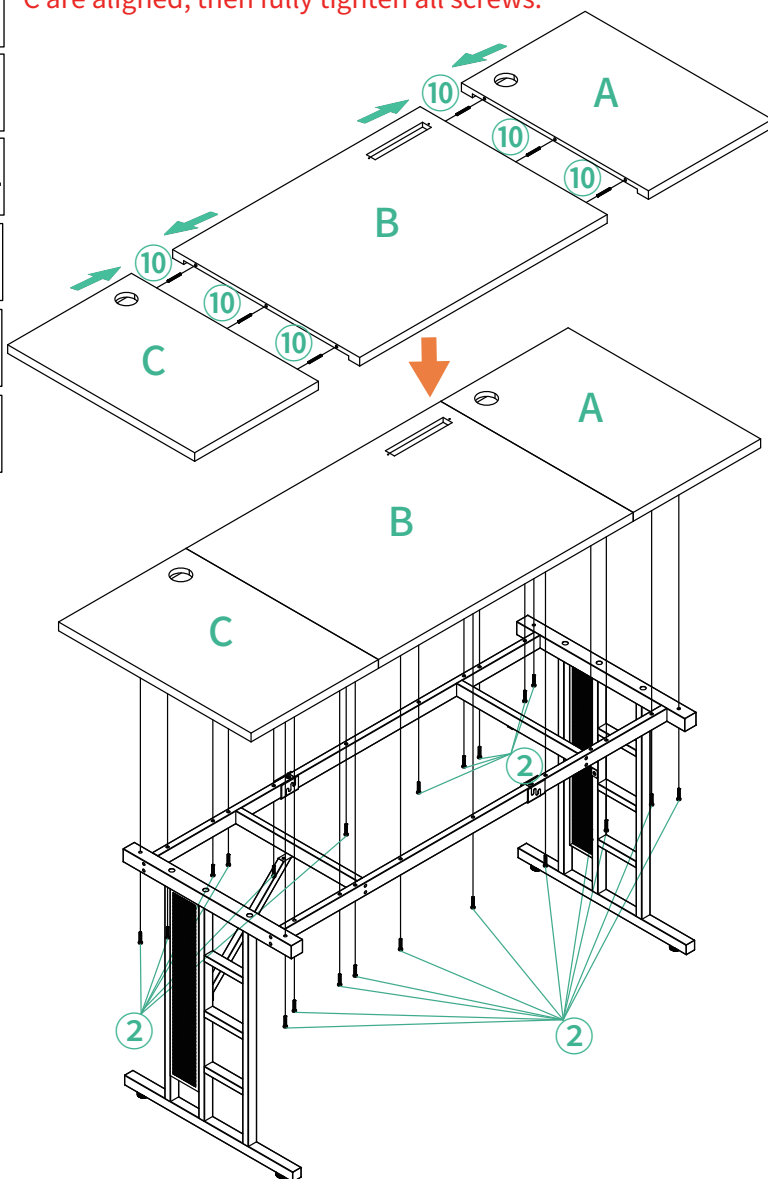


Assembly Instructions


8

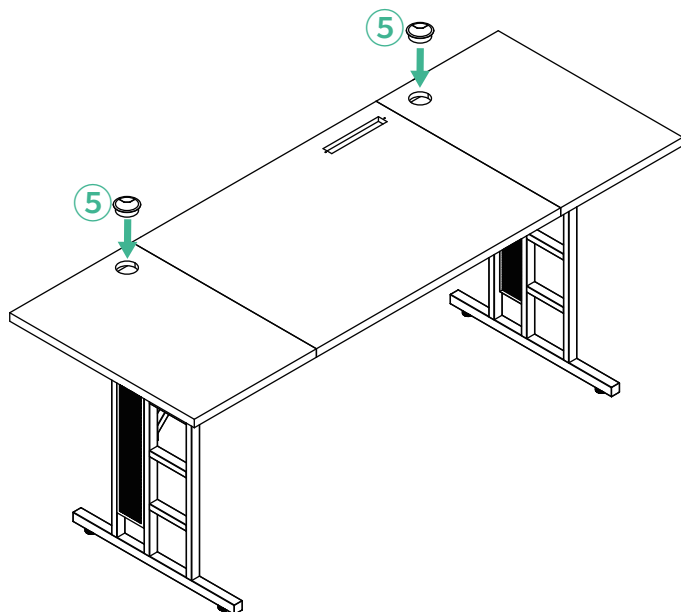

9

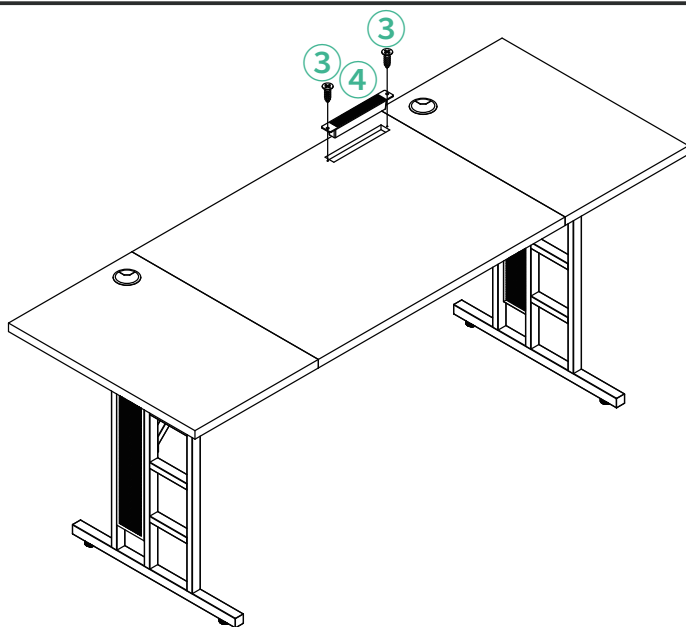

10

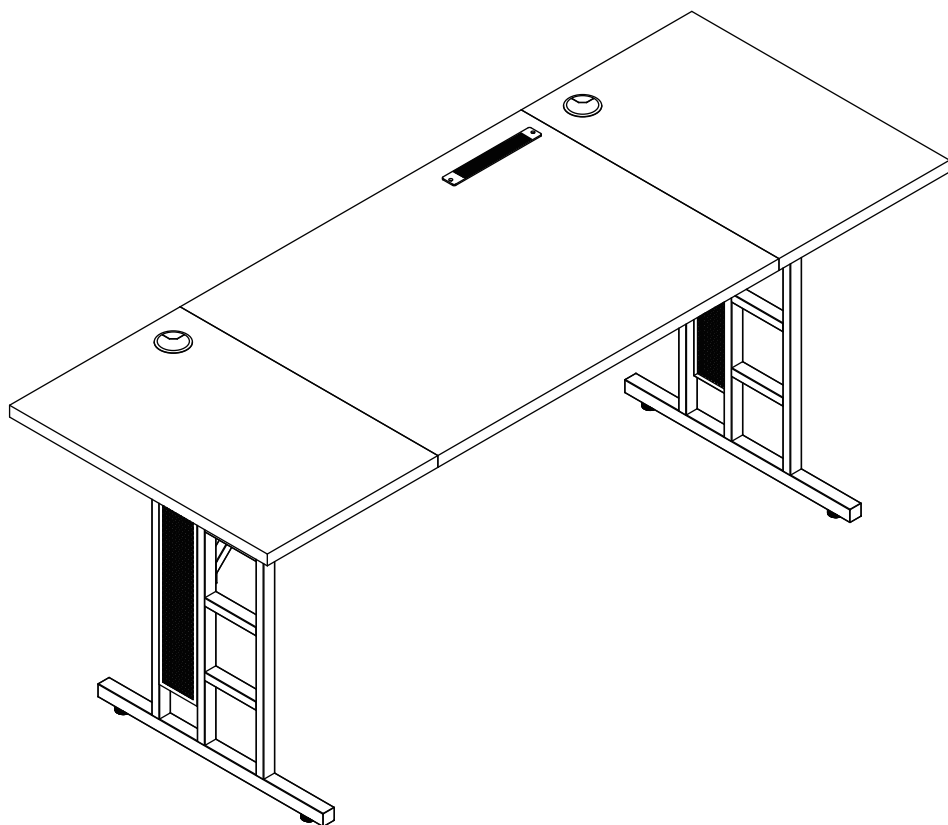



30 DAY Return Policy

If you're not completely satisfied with your purchase, please return the merchandise via our Official Customer Support. Unused merchandise can be refunded or exchanged within 30 days of purchase.



1-Year Warranty

We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one. Replacement is free and all shipping costs are covered.



Quick Response within 24 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Having issue(s) while reading the instruction or completing the assembly.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Furniture Surface	Surface is broken, scratched or lack of some screw holes.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The screw holes that on the board and the frame don't line up.	1. Tighten the screws only 70% of the way. Do not fully tighten the screws until all parts are aligned. 2. Adjust the board and frame until the holes align, then fully tighten all screws.
	Surface is uneven or not tight that has gaps after being assembled.	1. Loosen the screws in the uneven or gap positions; adjust until the surface is flat and tight, and then tighten the screws. 2. If your problem still can't be solved, please feel free to contact us.
Structure Frame	Components are bent, broken, chipped, rusted, or damaged.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The furniture is unstable after being assembled.	1. Check if all screws are fully tightened. 2. Read through the manual and check if any parts are installed incorrectly or missing. 3. If the problem persists, please contact us.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.