

ASSEMBLY INSTRUCTION

H08-HK-001

Ax1 	Bx1
Cx1 	Dx1
Ex1 	Fx1
Gx1 	Hx1
Ix1 	Jx1
Kx2 	Lx1
Mx12 	Nx4
Ox8 	Px16
Qx1 	

