 
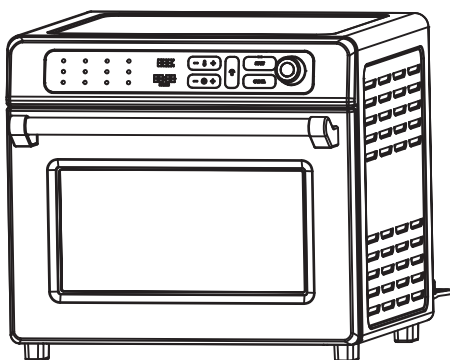 


# TOAST OVEN AIR FRYER USER MANUAL

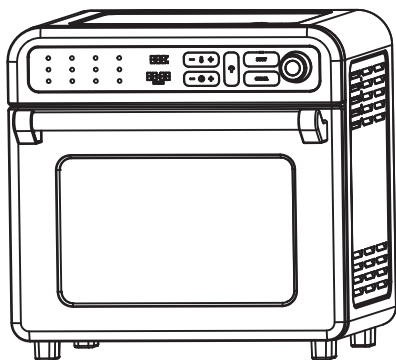

---

<b>Model No.</b>	TE-184B
<b>Item No.</b>	93184KAF1 93184KAF2 93184KAF3
<b>Voltage</b>	120V~ 60Hz
<b>Power</b>	1400W
<b>Capacity</b>	18L

---

---

<b>Model No.</b>	TE-204Z
<b>Item No.</b>	93204KAF1 93204KAF2 93204KAF3
<b>Voltage</b>	120V~ 60Hz
<b>Power</b>	1700W
<b>Capacity</b>	24L

---

Read this booklet thoroughly before using and save it for future reference

Thank you for purchasing the Digital Air Fryer Oven. Please read the User Manual carefully before use and keep it in a convenient place for future reference.

## IMPORTANT SAFETY GUIDES

Please read, understand, and comply with all of the instructions provided in this manual before using the electrical appliance. Failure to comply with the instructions given in this manual may cause serious personal injury or equipment damage.

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:

### General Safety

 
 
1. Read all instructions.
2. Unplug from the outlet when not in use and before cleaning. Allow to cool before cleaning or handling, putting on, or taking off parts.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electric shock, do not place any part of the Air Fryer Oven in water or other liquids. See instructions for cleaning.
5. This appliance should not be used by or near children or individuals with certain disabilities.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way or has been dropped in water. Return the Air Fryer Oven to the store or retailer where purchased for examination or repair or adjustment.
7. Using accessory attachments not recommended by the instruction book may cause injury.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of the table or countertop, where it could be pulled on inadvertently by children or pets or touch hot surfaces, damaging the cord.
10. Do not place the Air Fryer Oven on or near a hot gas, electric burner, or heated oven.
11. Do not use this Air Fryer Oven for anything other than its intended purpose.
12. Extreme caution should be exercised when using containers constructed of materials other than metal or glass in the oven.
13. To avoid burns, use extreme caution when removing Air Fryer Oven accessories or disposing of hot grease.
14. When not in use, always unplug the unit. Do not store materials other than the manufacturer's recommended ovenproof accessories in this Air Fryer Oven.
15. Do not place any of the following materials in the Air Fryer Oven: paper, cardboard, plastic, and similar products.
16. Do not cover the Crumb Tray or any oven part with metal foil. This will cause overheating of the oven.
17. Oversize foods, metal foil packages and utensils must not be inserted in the Air Fryer Oven, as they may involve a fire or electric shock risk.

# IMPORTANT SAFETY GUIDES

18. A fire may occur if the Air Fryer Oven is covered or touching flammable materials such as curtains; draperies or walls when in operation. Do not store any items on top of the appliance when in operation. Do not operate under wall cabinets.
19. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electric shock.
20. Do not attempt to dislodge food when the Air Fryer Oven is plugged into an electrical outlet.
21. Warning: To avoid possibility of fire, NEVER leave Air Fryer Oven unattended during use.
22. Use recommended temperature settings for all cooking/baking, toasting and Air Frying.
23. Do not rest cooking utensils or baking dishes on glass door.
24. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the cord from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
25. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
26. To disconnect, press CANCEL to ensure cooking is stopped, then remove plug from wall outlet.
27. Type Y attachment: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**SAVE THESE INSTRUCTIONS  
HOUSEHOLD USE ONLY**


# GETTING TO KNOW YOUR AIR FRYER OVEN

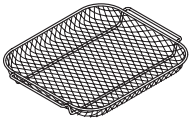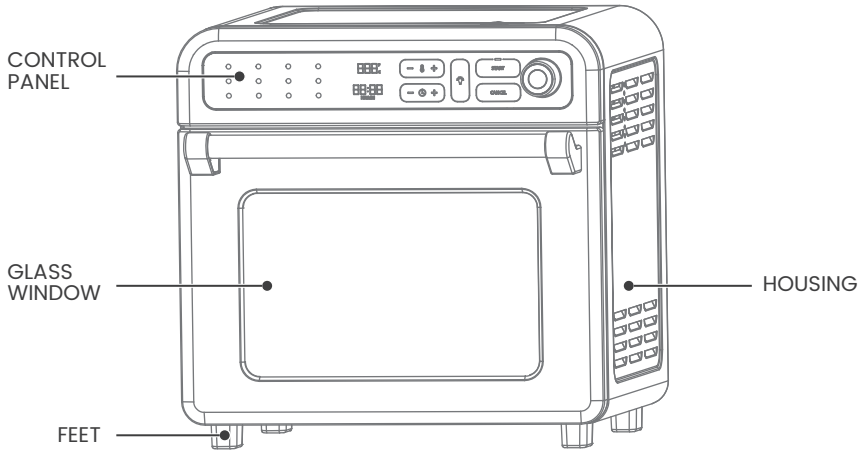


FRYER BASKET



 WIRE RACK

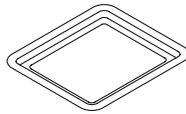


BAKE TRAY

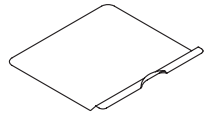 

CRUMB TRAY


## Control Panel

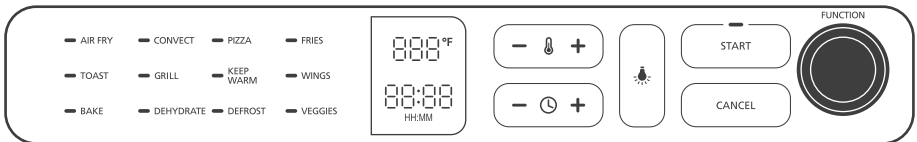 

# BEFORE THE FIRST USE

1. Remove all accessories and parts from the oven.
2. Use warm water to clean accessories such as pans. Wipe the inside of the oven with a soft, soapy cloth and allow it to dry completely.
3. Ensure there is enough space around the oven, with at least 10 cm between its surface and other objects. Do not place any objects on top of the oven.
4. Before using the oven for the first time, plug in the unit.
  - a. Press the Temp button once and use the + button to set it to 400°F.
  - b. Press the Time button once and use the + button to set it to 5 minutes.
  - c. Press the START button and let the unit run for 5 minutes at 400°F in order to burn off any residue left from manufacturing.
5. Note: You may notice a slight burning smell, which is normal and will dissipate after a few minutes.
 
# USING YOUR AIR FRYER OVEN

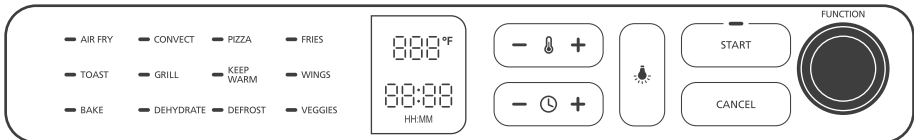

## 1. Power On / Standby Mode

- Plug in the oven. The buzzer will beep once and the digital display will turn on.
- The oven will enter standby mode: the first menu (AIR FRY) or the last used menu will light up. The display will show the preset temperature and time. The START button light will flash.
- If there is no operation within 2 minutes in standby mode, the oven will shut down automatically.

## 2. Menu Selection

- Each preset menu has default temperature and time values. You can adjust them based on your recipe or preference.
- Refer to the preset menu table for details.

# USING YOUR AIR FRYER OVEN

Menu	Default TEMP.(°F)	TEMP. Range (°F)	Default Time(Min)	Time Range	Cooking TEMP. Adjustment	Cooking Time Adjustment
Toast	4 (Shade)	1-7 (Shade)	1. 1:35 2. 4:00 3. 4:45 4. 6:30 5. 7:30 6. 8:50 7. 12:30	N/A	Cooking TEMP and Cooking Time cannot be adjusted, user can select shade level 1 to 7 by pressing the temperature buttons and time buttons.	
Air Fry	400	250-450	25:00	1-60 mins	±25°F increased	<30mins, ±1 min increased ≥30mins, ±5mins increased
Bake	350	250-450	25:00	1-90 mins	±25°F increased	<30mins, ±1 min increased ≥30mins, ±5mins increased
Convection	325	250-450	30:00	1-90 mins	±25°F increased	<30mins, ±1 min increased ≥30mins, ±5mins increased
Grill	450	250-450	30:00	1-90 mins	±25°F increased	<30mins, ±1 min increased ≥30mins, ±5mins increased
Dehydrate	120	95-175	8 hours	5mins-12hours	±25°F increased	<30mins, ±1 min increased ≥30mins, ±30mins increased
Pizza	400	350-450	20:00	1-90 mins	±25°F increased	<30mins, ±1 min increased ≥30mins, ±5mins increased
Veggies	400	250-450	20:00	1-60 mins	±25°F increased	<30mins, ±1 min increased ≥30mins, ±5mins increased
Deforst	150	N/A	15:00	1-90 mins	Cooking TEMP. cannot be adjusted	<30mins, ±1 min increased ≥30mins, ±5mins increased
Fries	450	250-450	15:00	1-60 mins	±25°F increased	<30mins, ±1 min increased ≥30mins, ±5mins increased
Wings	400	350-425	25:00	1-60 mins	±25°F increased	<30mins, ±1 min increased ≥30mins, ±5mins increased
Keep Warm	200	N/A	20:00	1-90 mins	Cooking TEMP. cannot be adjusted	<30mins, ±1 min increased ≥30mins, ±5mins increased

## 3. Setting Cooking Time and Temperature

- Turn the knob to select a cooking menu, then press START to begin cooking.  
**Note:** The oven will only operate when the front door is fully closed.
- To customize temperature and/or time:  
Press the TEMP or TIME button.  
Use the + / - buttons to adjust.
- Temperature and time can be adjusted either before cooking starts or during cooking.
- To stop cooking at any time, press the CANCEL button.

# USING YOUR AIR FRYER OVEN

## 4. Light Function

- Press the LIGHT button once to turn the oven light on or off.
- **Note:** The light will remain on for 1 minute each time it is turned on unless switched off manually.

## 5. When Finished Cooking

- When cooking ends, the oven will beep 5 times, stop heating, and the START button light will flash. The display will show the default temperature and time.
- When removing the basket, trays, or other accessories, do not touch them with bare hands. Use oven mitts or the cage tong.
- **Note:** If food is not cooked to your satisfaction:  
Adjust temperature/time and resume cooking.  
Next time, try changing tray position or adjusting Temp & Time settings.
- After cooking, unplug the oven from the wall outlet.

## 6. Some Tips:

- You can adjust the temperatures and time according to food type, size, thickness, and personal taste.
- Wrapping or covering food with aluminum foil can help lock in moisture and heat evenly.

# CLEANING & MAINTENANCE

1. Unplug the power cord before cleaning the oven and allow the oven to cool down completely.
2. The inner and outer surfaces of the electric oven, baking trays and baking nets can be cleaned with a soft cotton cloth or sponge with a neutral detergent and cleaned with water.
3. Do not use hard brushes or articles for cleaning to avoid damaging the inner surface of the electric oven and the protective layer of the baking tray and baking net.
4. Do not use toxic and corrosive cleaning agents such as gasoline, thinners, or polish.
5. The cleaned parts must be wiped dry before plugging in the oven.
6. Please do not clean the heating tube. The heating tube cleans itself.
7. Do not immerse the oven in liquids.

# TROUBLESHOOTING

Problem	Possible Cause	Solution
<b>Overcooked / Undercooked Food</b>	<ol style="list-style-type: none"><li>1. Incorrect temperature or time setting.</li><li>2. Because your countertop oven is smaller than a regular oven, it heats up faster and generally cooks in shorter periods of time.</li></ol>	<ol style="list-style-type: none"><li>1. You may need to adjust the temperature and cooking time to achieve the desired results.</li><li>2. Monitor cooking closely and reduce time or temperature if necessary.</li></ol>
<b>Burnt Smell</b>	<ol style="list-style-type: none"><li>1. First-time use and manufacturing residue inside the oven.</li><li>2. Food build-up inside the oven, on heating elements, or in the crumb tray.</li></ol>	<ol style="list-style-type: none"><li>1. Preheat the oven empty at 400°F for about 15 minutes to burn off any manufacturing residue.</li><li>2. Clean the crumb tray and remove any food debris promptly.</li></ol>

# TROUBLESHOOTING

Problem	Possible Cause	Solution
<b>Oven Will Not Turn On</b>	Oven is unplugged.	Plug the countertop oven into a properly rated electrical outlet.
<b>Oven Light is Not On</b>	<ol style="list-style-type: none"><li>1. The oven light timer has timed out and turned the light off automatically.</li><li>2. The light bulb has burnt out.</li></ol>	<ol style="list-style-type: none"><li>1. Press the LIGHT button to turn the light back on. The light will stay on for 1 minute unless turned off manually.</li><li>2. Contact the service center for bulb replacement.</li></ol>
<b>Noise From Accessories</b>	<ol style="list-style-type: none"><li>1. Accessories are not properly seated in the rack channels.</li><li>2. Unused accessories are placed on top of the unit while running.</li><li>3. Expansion and contraction of the oven's outer layer when heating and cooling.</li></ol>	<ol style="list-style-type: none"><li>1. Make sure the wire rack or baking pan is properly positioned in the rack channels. If using the air fry basket, ensure all feet are resting on the baking pan.</li><li>2. Remove all items from the top of the oven before use.</li><li>3. Some noise from metal expansion/contraction is normal and does not affect performance.</li></ol>