


Step 1: Screw off the Nut inside of the base

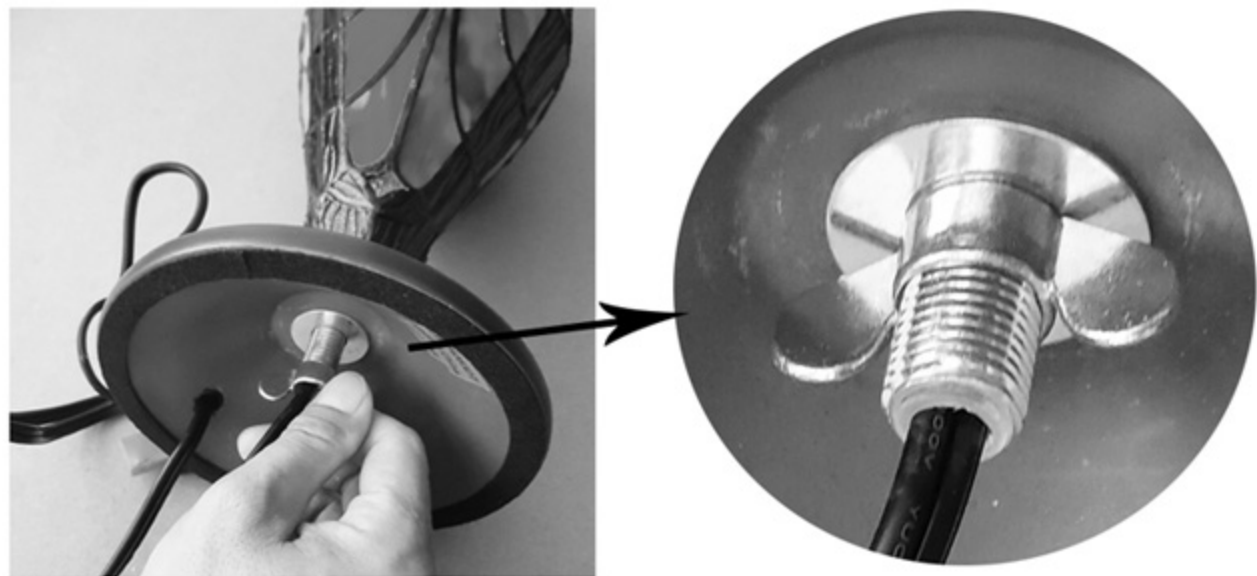

Step 2: Tear off the base one by one, and then you can change the bulb easily

