

Prior to assembly, ensure all parts are accounted for before disposing of packaging. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


Assemble components on a soft, clean surface to avoid scratching or damaging the finish.



Choking Hazard — This item contains small parts that can be swallowed. Keep children away during assembly.

NO.	Parts	Qty.
A	Spark Screen Handle	1
B	Spark Screen	1
C	1/4 Top Ring	4
D	Fire Bowl	1
E	Bracket	4
F	Log Grate	1
G	Leg	3

NO.	Hardware	Qty.
L	Rain Cover	1
T1	Bolt (M6 x 10mm)	6
T2	Bolt (M6 x 20mm)	4
U	Washer	5
V	Nut	5
X	Allen Wrench	1
Y	Spanner	1
Z	Poker	1

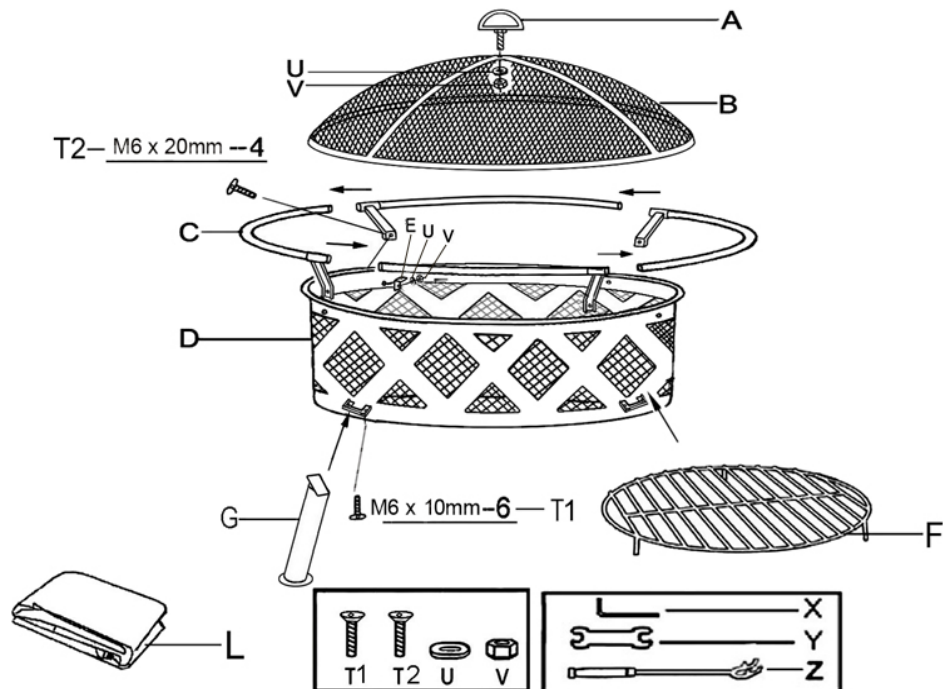

Assembly:

Tools Required (included): Allen Wrench (X), Spanner (Y)

- Assemble 3x Leg (G) to Fire Bowl (D) with 6x Bolt (T1).
- Attach 1x 1/4 Top Ring (C) to Fire Bowl (D) by hand-tightening 1x Bolt (T2), 1x Bracket (E), 1x Washer (U) and 1x Nut (V).
DO NOT fully tighten hardware until after the entire ring has been attached.
- Slide the second 1/4 Top Ring (C) into the one that is attached to the Fire Bowl (B) and attach it to the fire bowl by hand-tightening 1x Bolt (T2), 1x Bracket (E), 1x Washer (U) and 1x Nut (V).
- Repeat Step 3 to attach the remaining 1/4 Top Rings (C) to Fire bowl(D).
Adjust the bracket horizontal, then tighten all the bolts.
- Place Log Grate (F) into bottom of Fire Bowl (D).
- Assemble Spark Screen Handle (A) to the Fire Screen (B) using 1x Washer (U) and 1x Nut (V).
- Place the assembled spark screen onto the fire pit.

NOTE: When not in use, and after the fire pit is completely cool, use Cover (L) to prevent exposure to water.

**WARNING:**

FOR OUTDOOR USE ONLY! NEVER LEAVE FIRE UNATTENDED!

Supervise children and pets when the fire pit is in use.

DO NOT use this unit on a wood deck or on combustible surfaces such as dry grass, leaves, mulch, etc.

When in use, the fire pit should be 10 to 20 feet away from buildings and structures.

CAUTIONS:

1. Only burn wood in the fire pit. DO NOT use gasoline or kerosene to start a fire.
2. **Do not** touch the outside of your fire pit while it is in use.
3. Use the poker to move the lift the spark screen during use.
4. Always have a fire extinguisher nearby when burning.
5. **Do not** extinguish your fire pit with water. Water may cause distortion, flaking paint, and rust.
Use a fire extinguisher, or allow attended fire to die out on its own.
6. **Do not** use during inclement weather.

Care And Maintenance:

1. To extend the life of your fire pit, clean the bowl after each use and cover the unit to protect it from the elements.
2. To maintain the coating color, cover the bottom of the fire bowl with small stones or sandstones before each use.
3. To maintain the finish, clean the surface by using a soft cloth. Do not use a metal brush.
4. If metal is scratched, the fire pit may need touch up painting. Ask your local paint store representative which paint is best for your type of fire pit. To prevent rusting, coat the exposed surface immediately.
5. If you do not plan to use your fire pit for an extended period of time, cover and store it in a dry location; this will protect it from the elements and dust buildup. Do not allow the fire pit to be exposed to water.
The manufacturer is not liable for rust due to weather conditions.
6. DO NOT USE CHEMICAL-BASED CLEANERS as this may damage the product and/or ignite a flame during the next use.
7. **It is recommended that rain cover protected chimeneas/fire pits from the rain when not in use.**

The fire pit should be completely cleaned and dried after each use.

Cover the fire pit when not in use to prevent rust.

Manufacturer is not liable for rust due to weather conditions.

*****Any modification or failure to follow recommended care will void the product warranty.*****