

TV Stand Installation Manual

INSTRUCTION MANUAL

IMPORTANT WARRANTY INFORMATION

PLEASE READ CAREFULLY

AFTER-SALES CONTACT US

Questions? Concern? Contact our Customer Support Team. Your satisfaction is our priority. Our team is available 24/7 to assist you. We respond to all inquiries within 24 hours.

All items can be returned or replaced for any reason within 30 days of the receipt as long as the item is returned in its original product package and all accessories of its original shipment are included.

About Replacement:

Missing or Damaged Parts? Do not return the entire unit. Contact us with your Order ID, and we will ship replacement parts free of charge.

About Returns:


1. To initiate a return, email with your Order ID. For damaged items, please include a photo to expedite your replacement.
We will provide a **PREPAID RETURN LABEL** by E-mail.
2. **Please Note: Returns made without a pre-authorized label may be subject to shipping fees at the customer's expense. Seller will not bear the fee of the customer's own purchase of the return label.**
3. If the product is damaged by the customer, we can refuse to provide a prepaid return label, and the customer needs to pay for the return shipping.
4. Boxes for return shipping will not be provided by the seller. Items must be returned in their original packaging. If original packaging is unavailable, the customer is responsible for providing suitable shipping cartons.
5. After all returned items arrive at the Return Center, please contact the After-sales team and we will fully refund back to the original payment method.

WARRANTY:


This product is warranted to be free from defects in material and workmanship for a period of 6 months from the date of original purchase. This warranty does not cover damage resulting from misuse, abuse, neglect, alteration, normal wear and tear, or accidental damage.




Please raise up the cabinet by holding the bottom when you move it

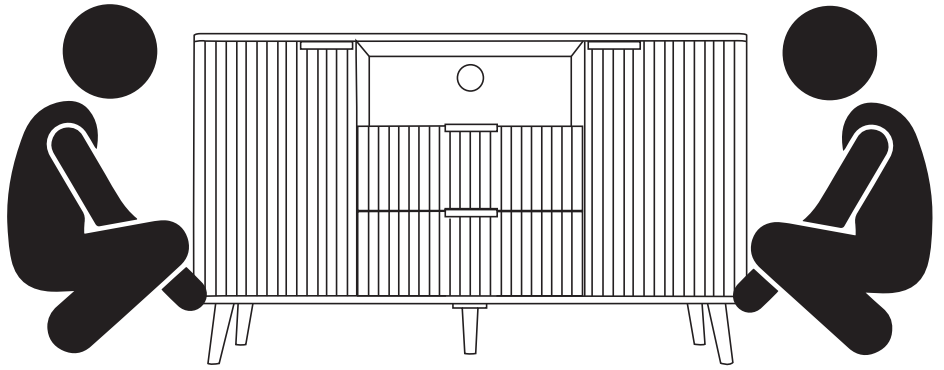


DON'T try to raise up the cabinet by holding the Top Plank

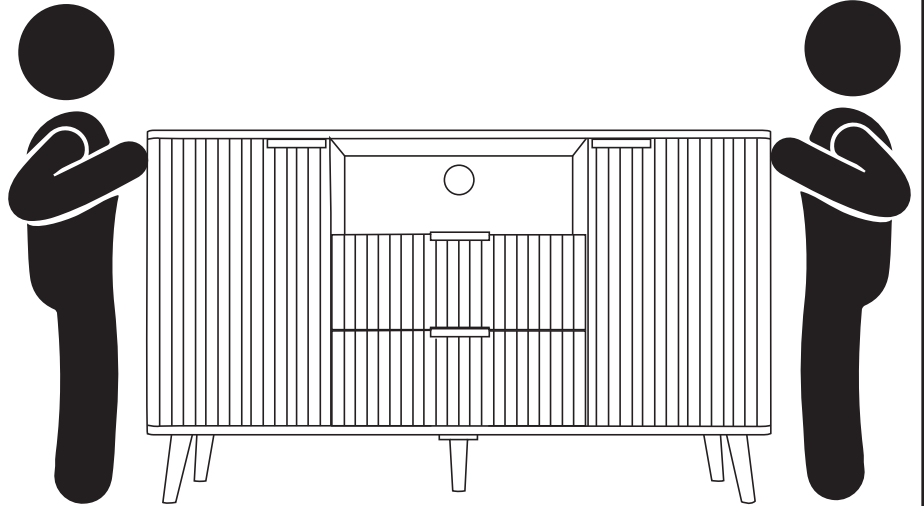

DON'T try to move the cabinet by holding the Side Plank

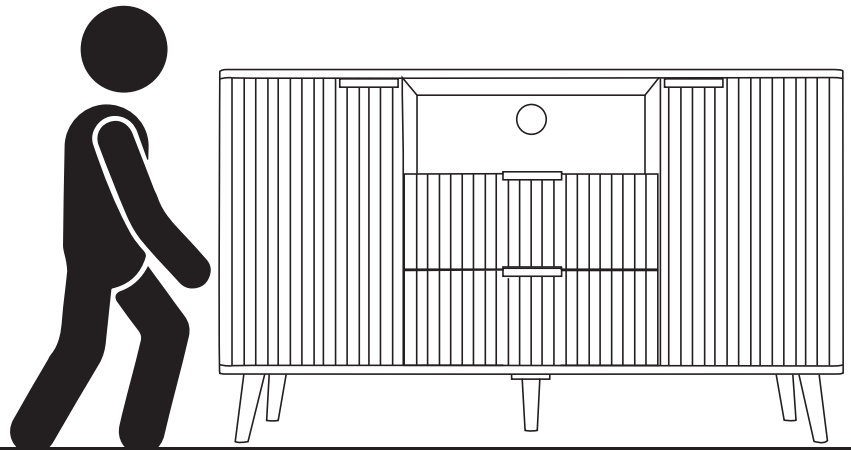


DON'T try to move the cabinet by holding the Top Plank

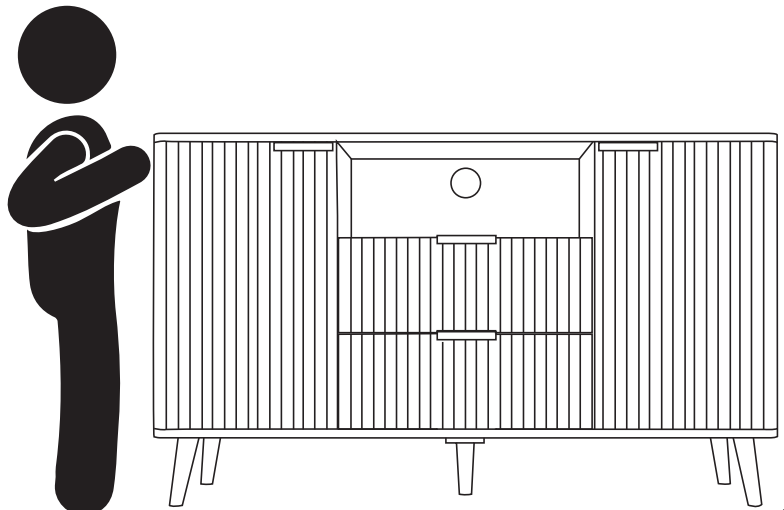


Tips before you start:

CAM BOLTS

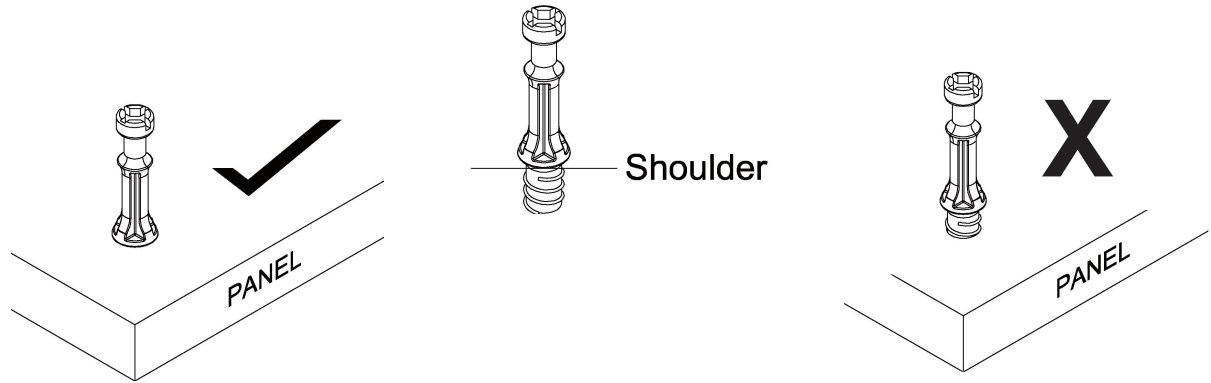

Tighten Cam Bolts until shoulder is flush with panel. Do not overtighten or undertighten.

CAMLOCK

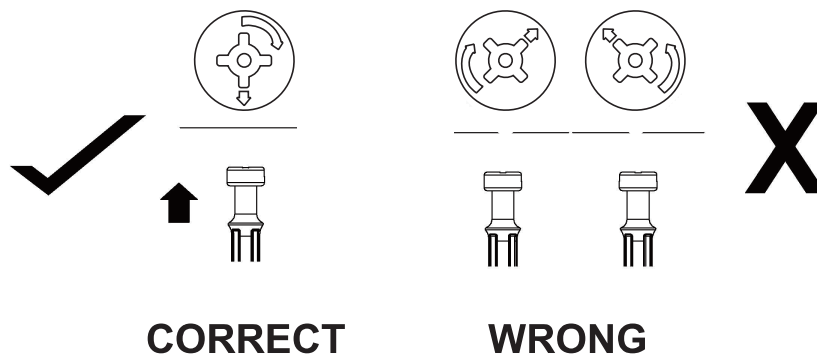


When fitting cam lock, ensure starting position is correct before you insert connecting Cam Bolts.


LOCKING-IN

Cam Bolts head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before Cam Bolts.

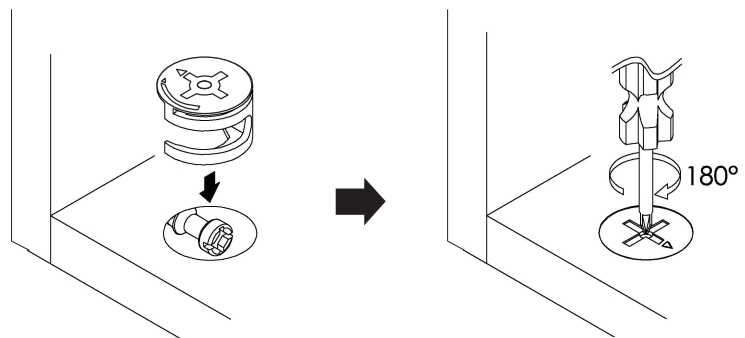


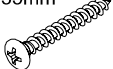


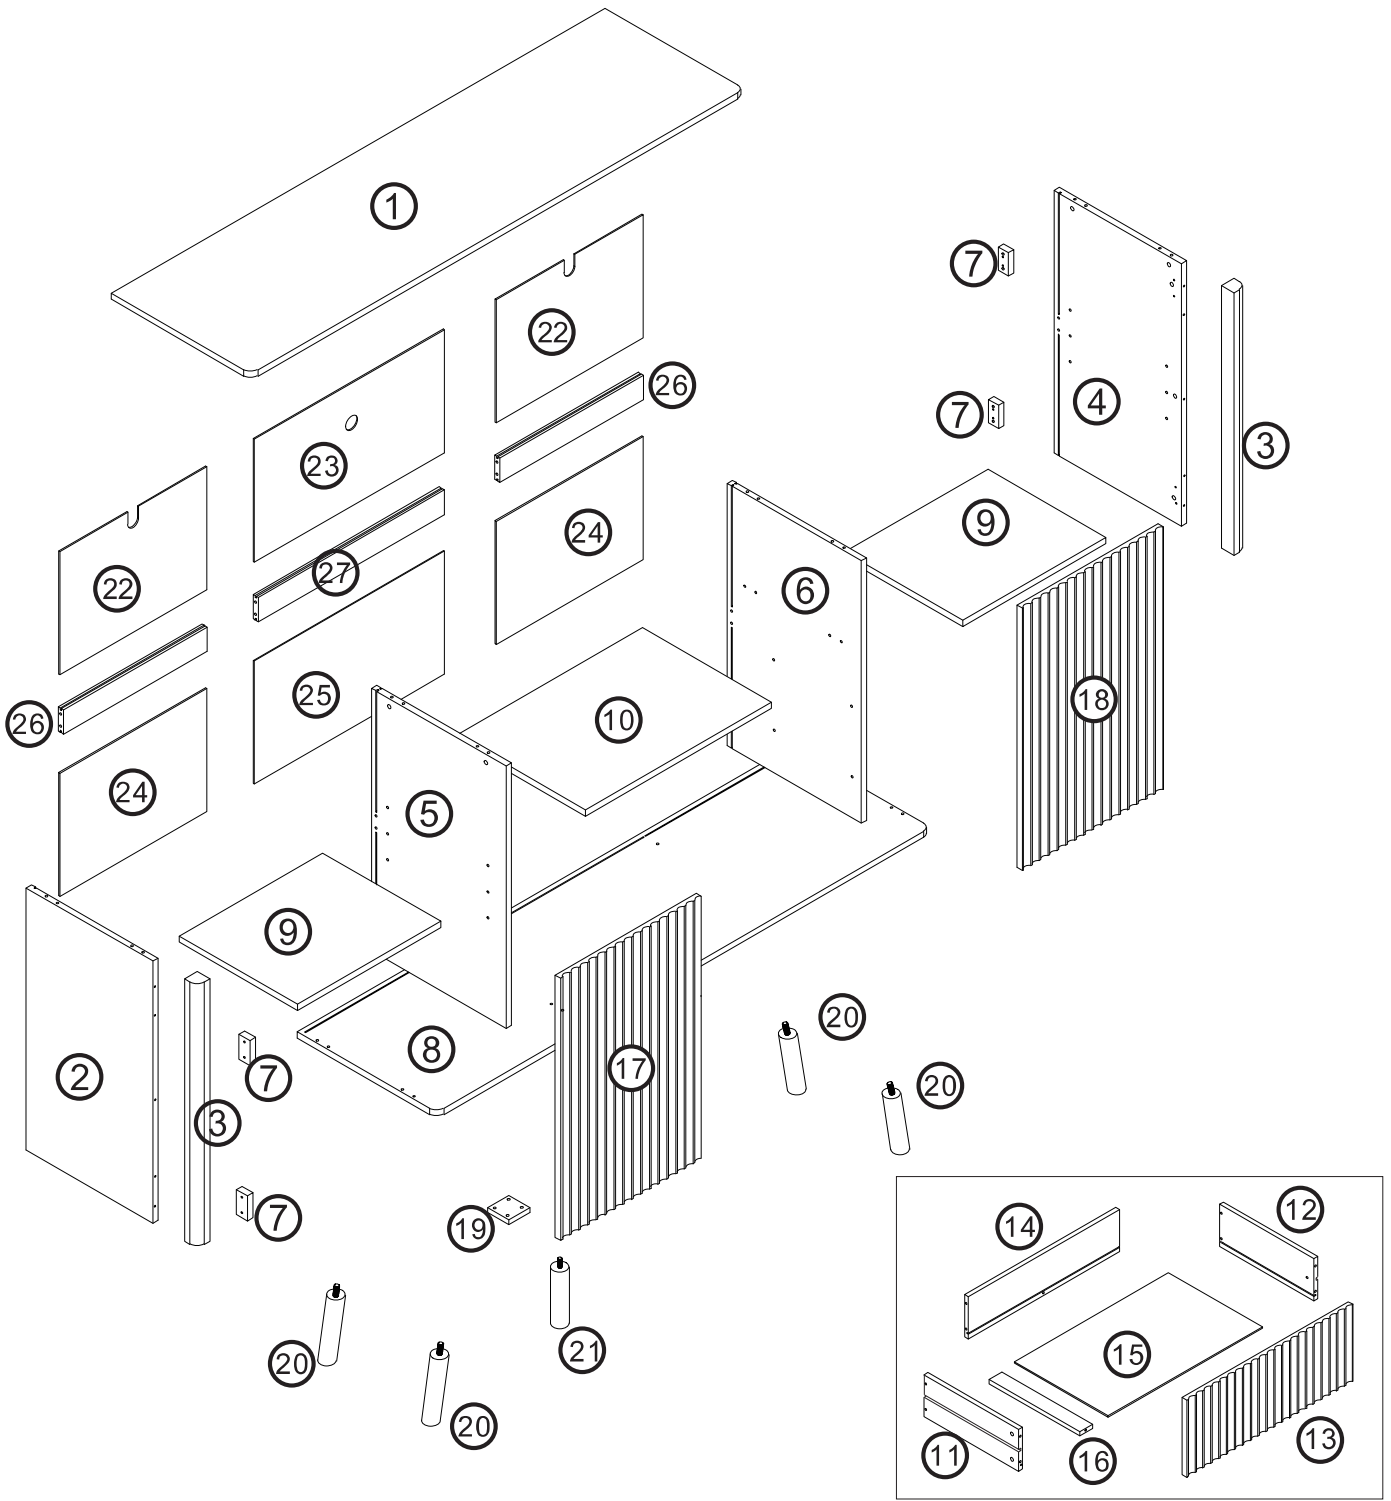
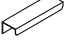 



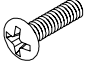


 



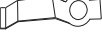 


Turn camlock clockwise to tighten.





PARTS LIST

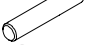x2



 A x 40+2	 B x 40+2	M6 x 30mm  C x 24+2	M4 x 35mm  D x 18+2	M3.5 x 12mm  E x 20+2	M4 x 12mm  F x 24+2
M4 x 30mm  G x 8+1	 H x 4	 I x 12	 J x 4	 K x 4	M4 x 10mm  L x 4+1
M4 x 14mm  M x 16+2	 N x 4	 O x 8	 P x 2	M4 x 25mm  Q x 4+1	 R x 1
 S x 4					

Step 1

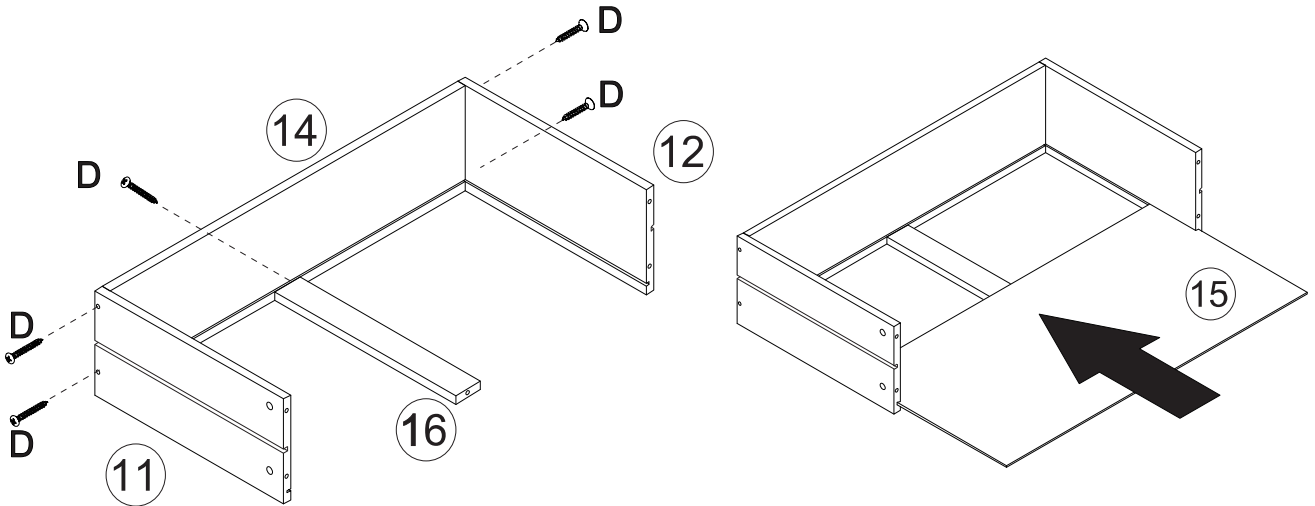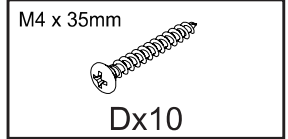


x2

  Step 2

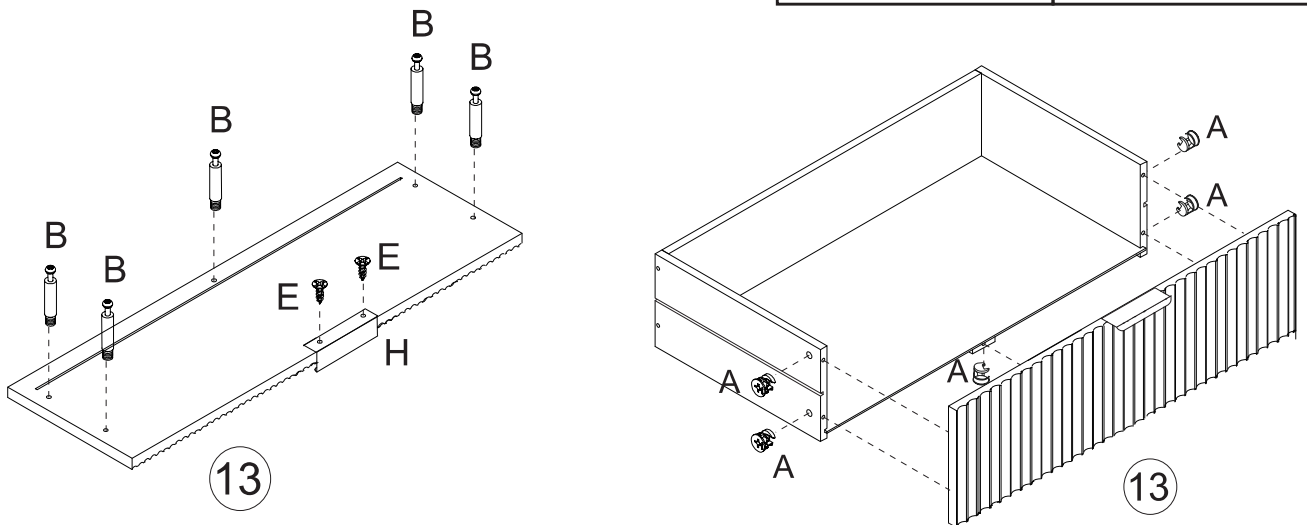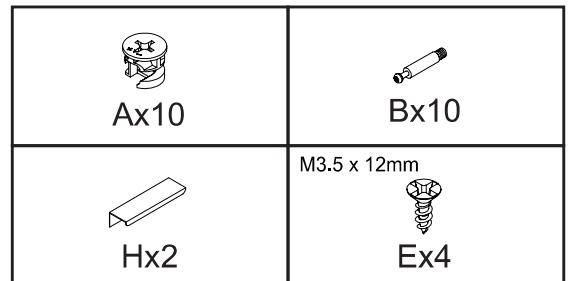


x2


Step 3

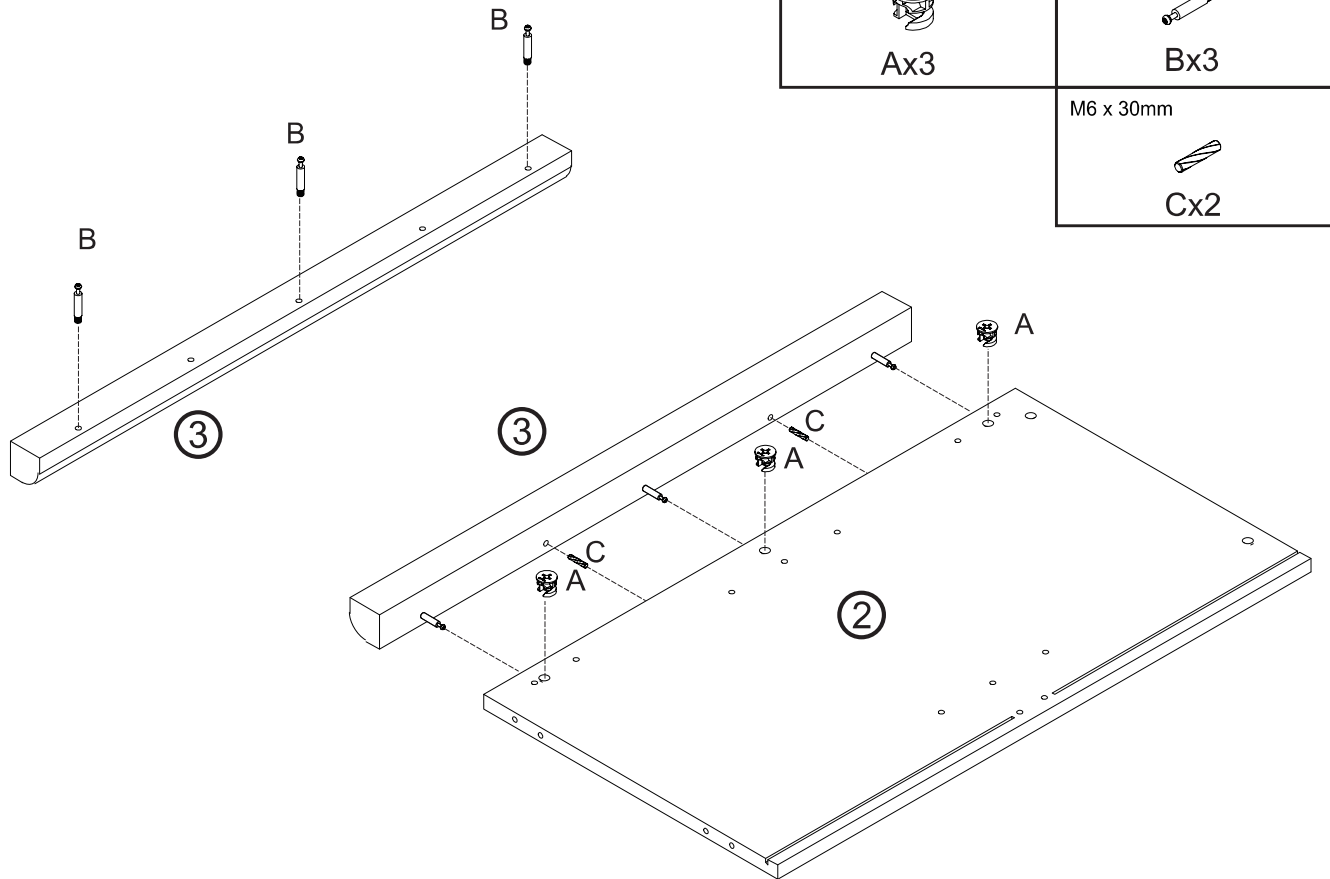


Step 4

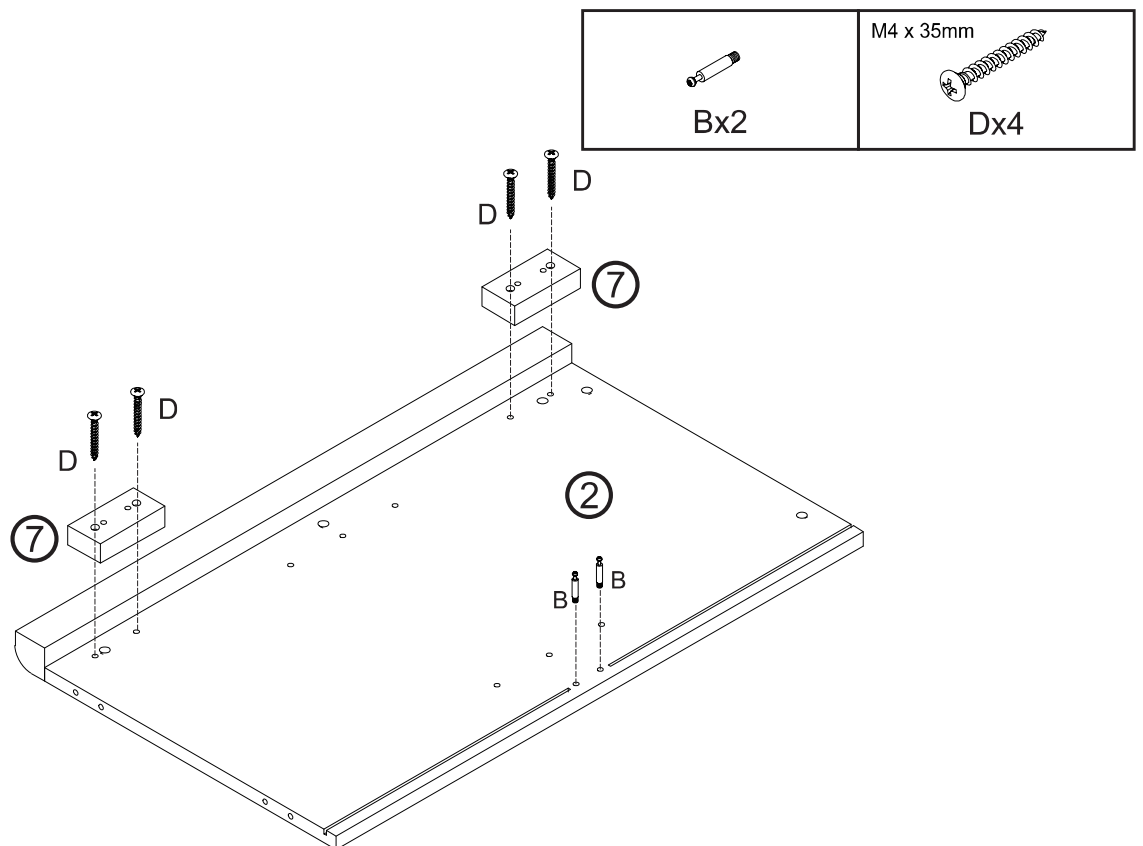

Step 5

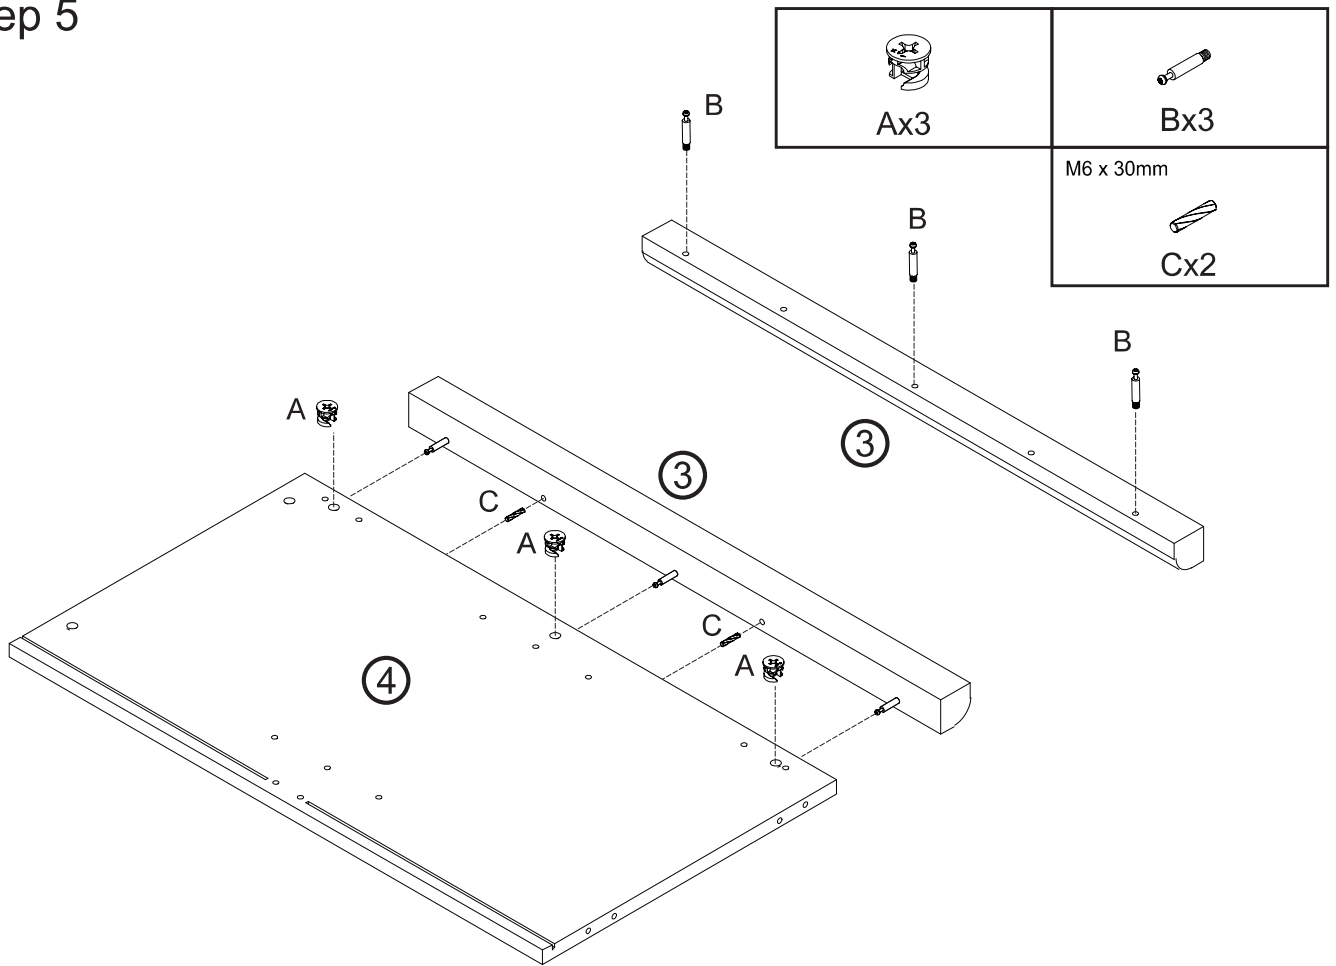



Step 6

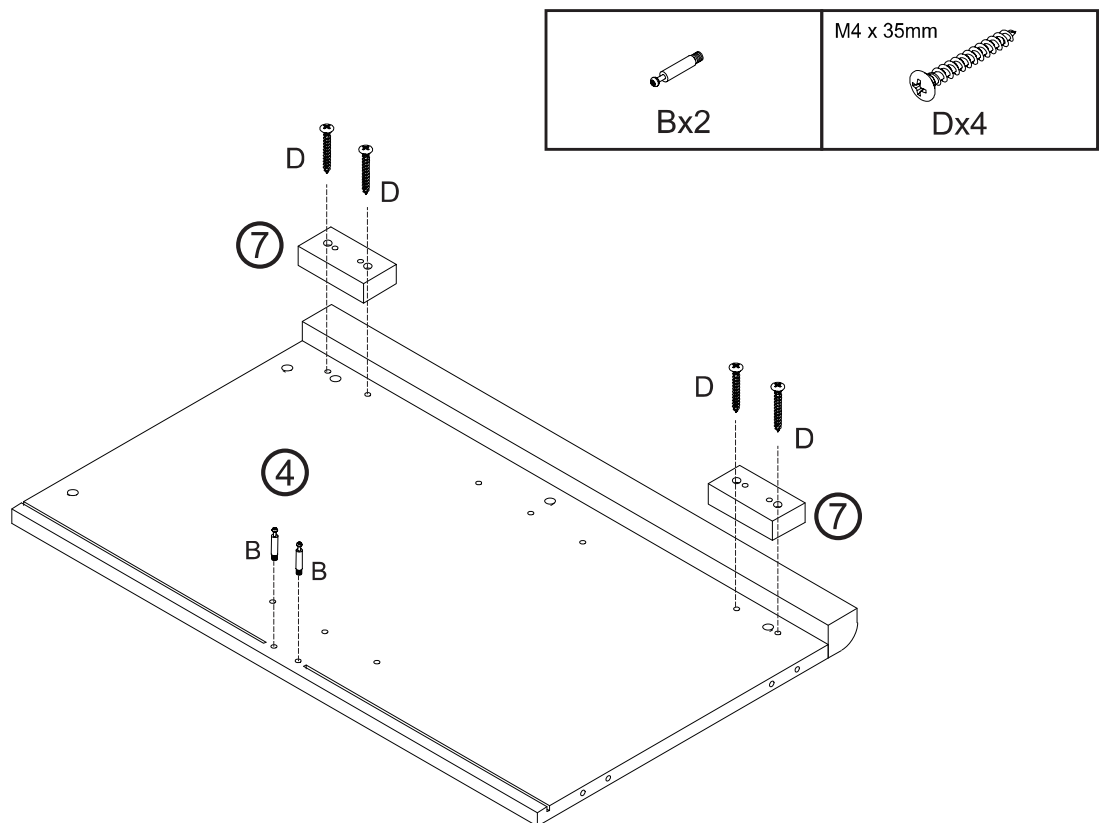



Step 7

Important:

The slide rails must be secured by the fixing holes shown in this step. Follow the indicated hole positions in each step precisely to avoid installation errors.

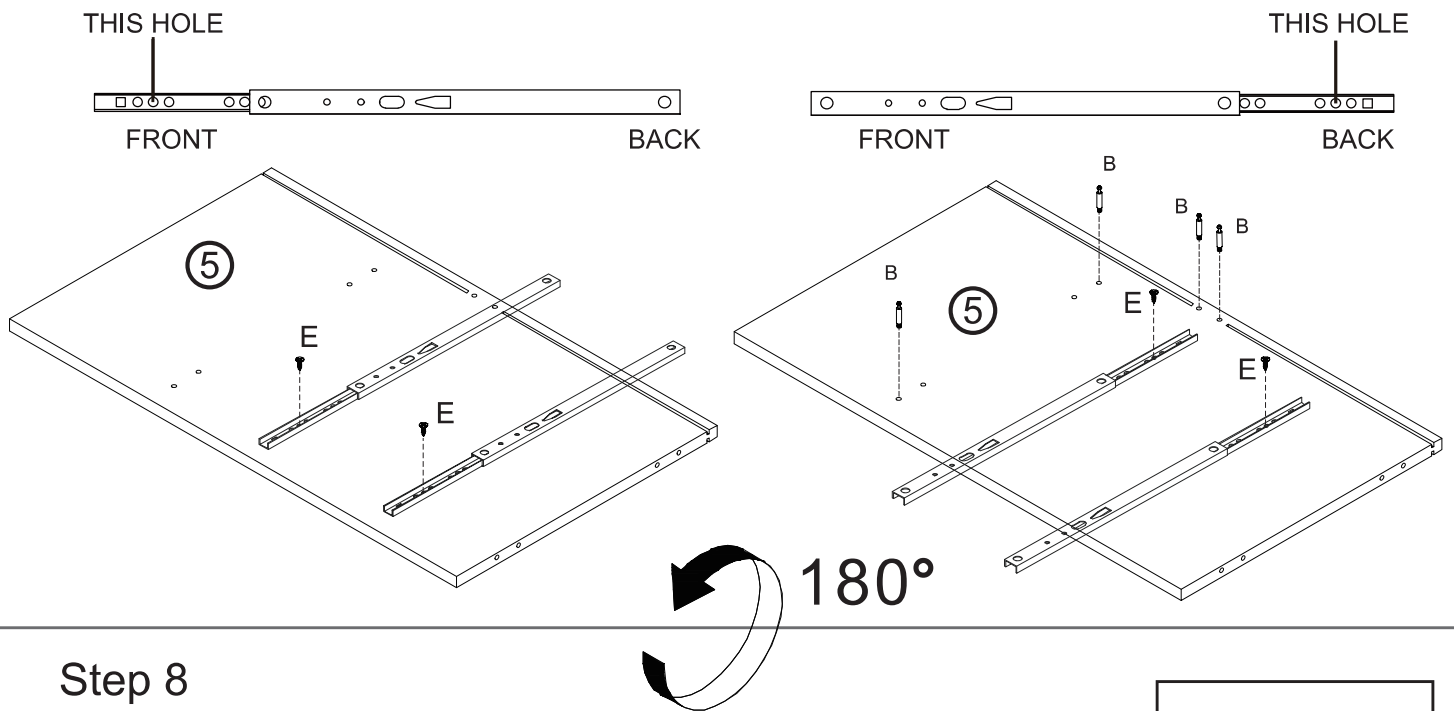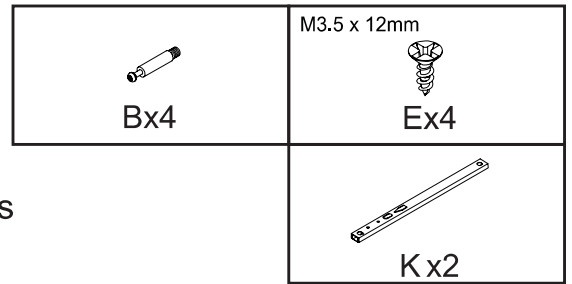



Step 8

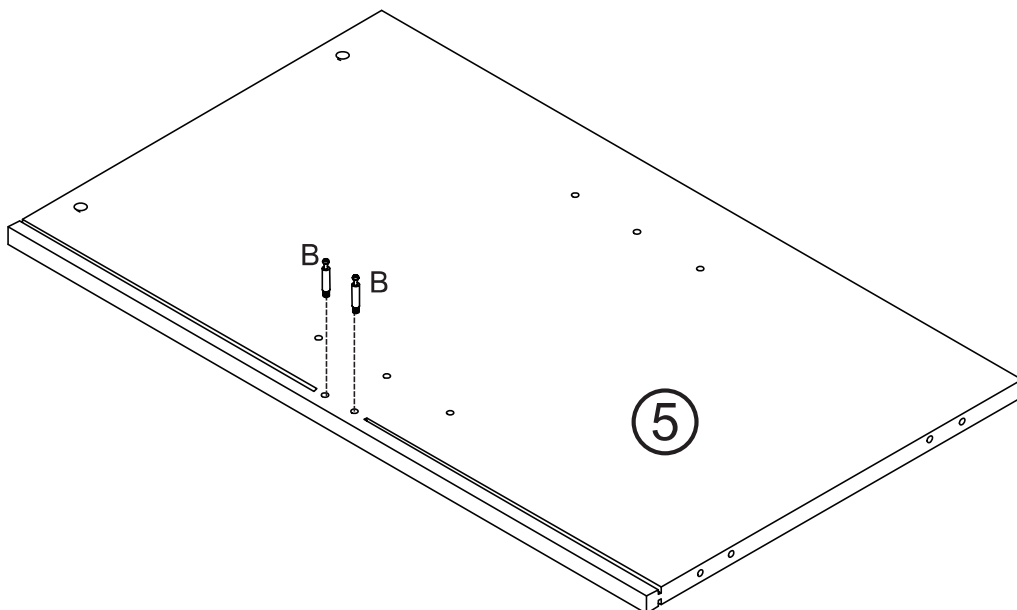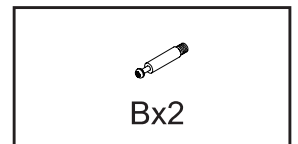



Step 9

Important:

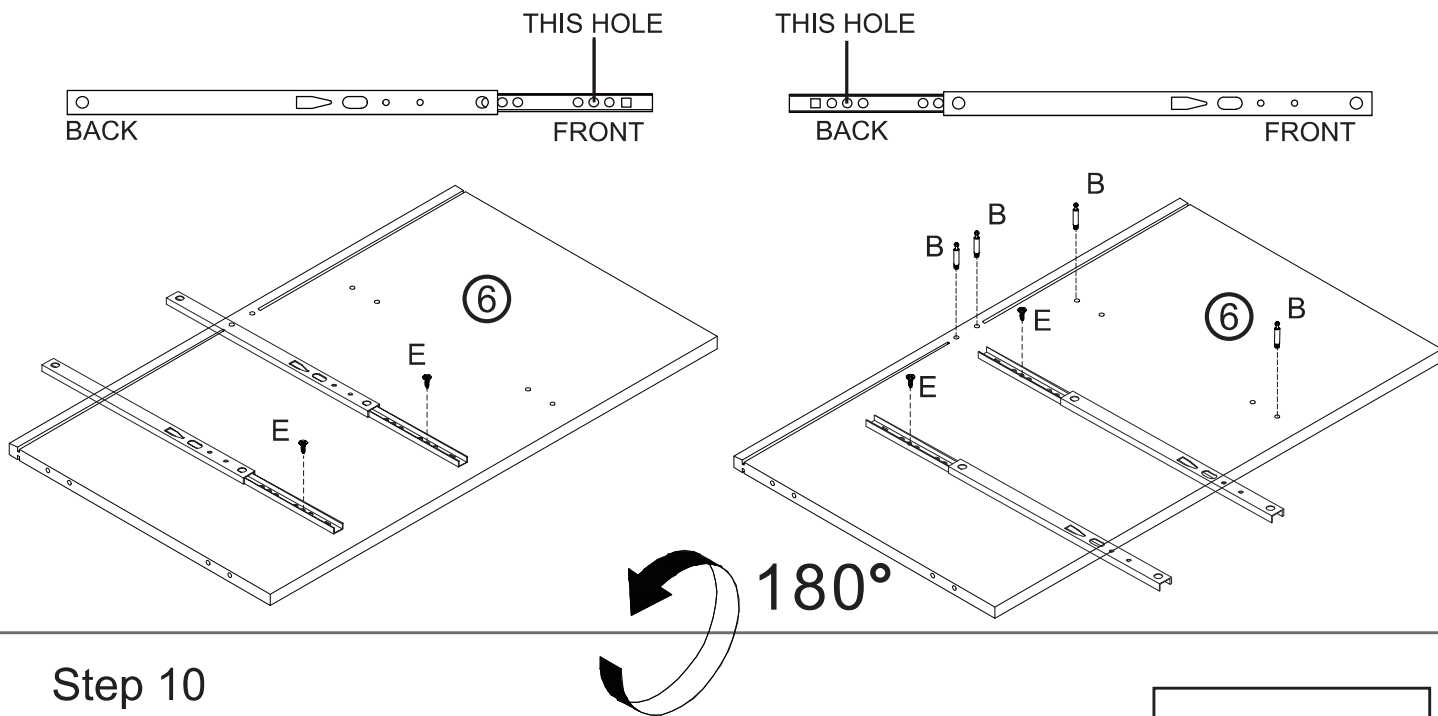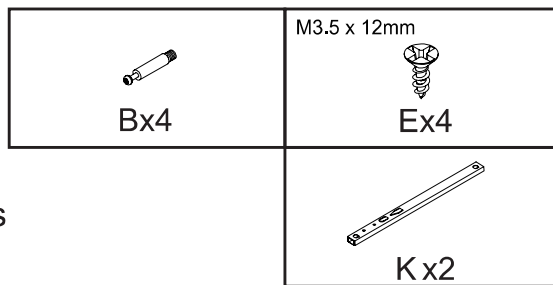

The slide rails must be secured by the fixing holes shown in this step. Follow the indicated hole positions in each step precisely to avoid installation errors.

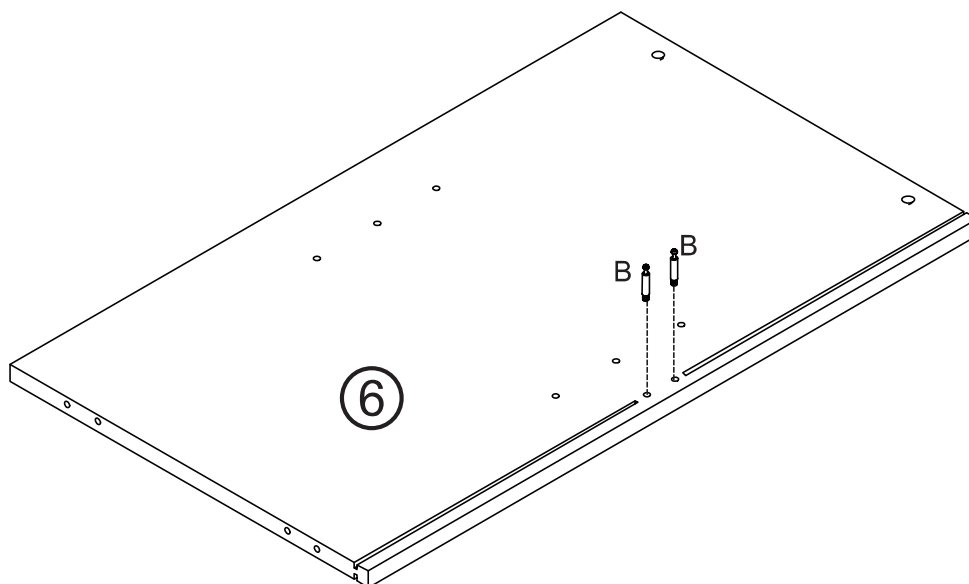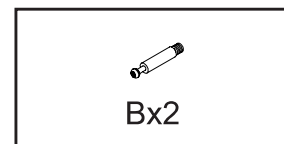


Step 10






Step 11

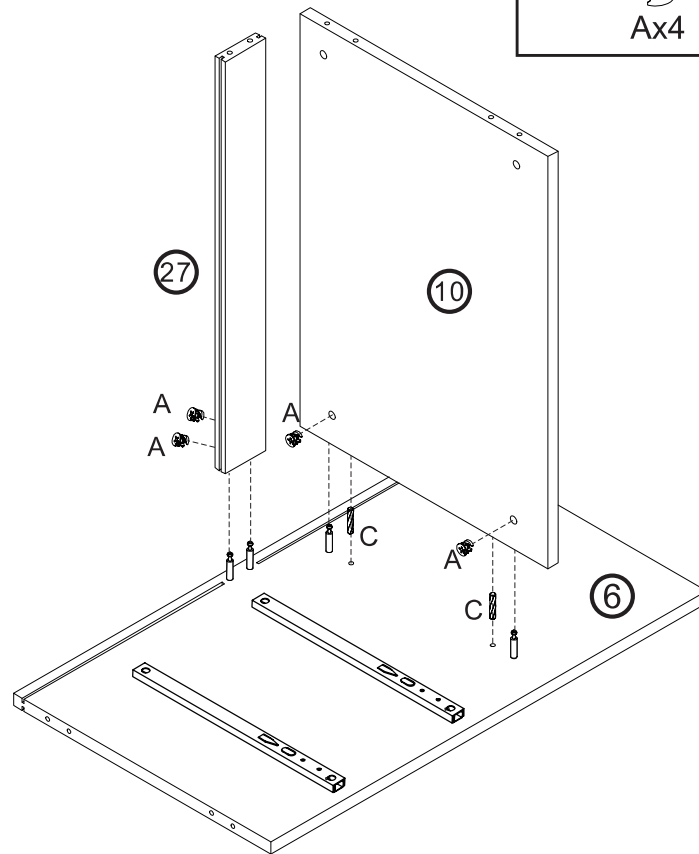 Ax4	M6 x 30mm  Cx2
--	---





Step 12



 Ax4	M6 x 30mm  Cx2
--	---

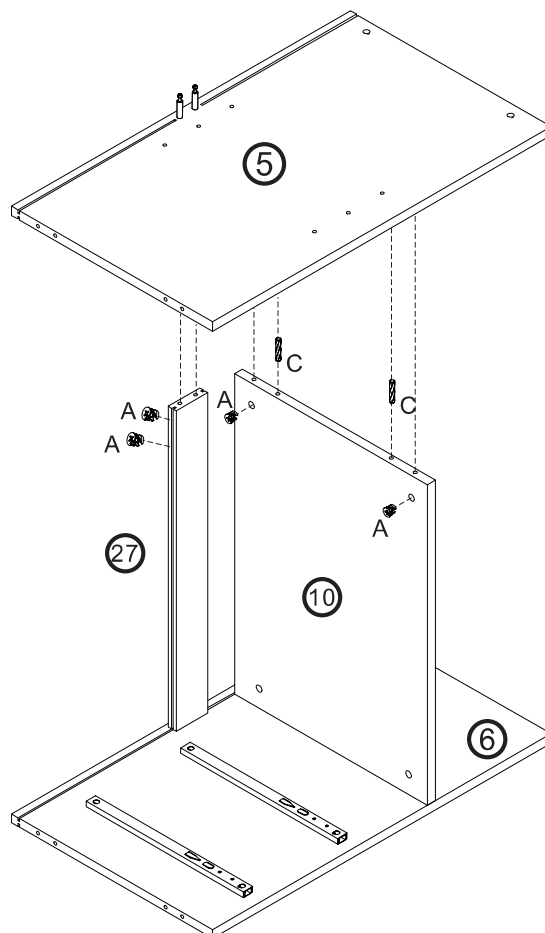

  
Step 13

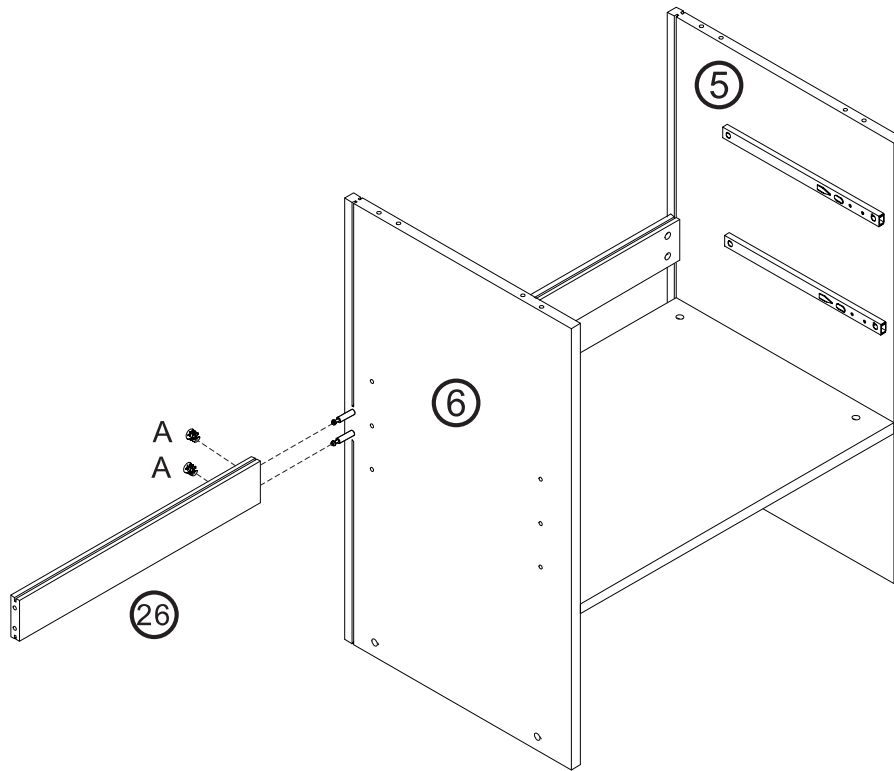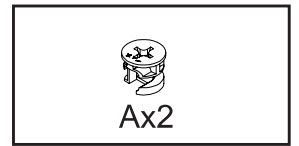

 
 
Step 14

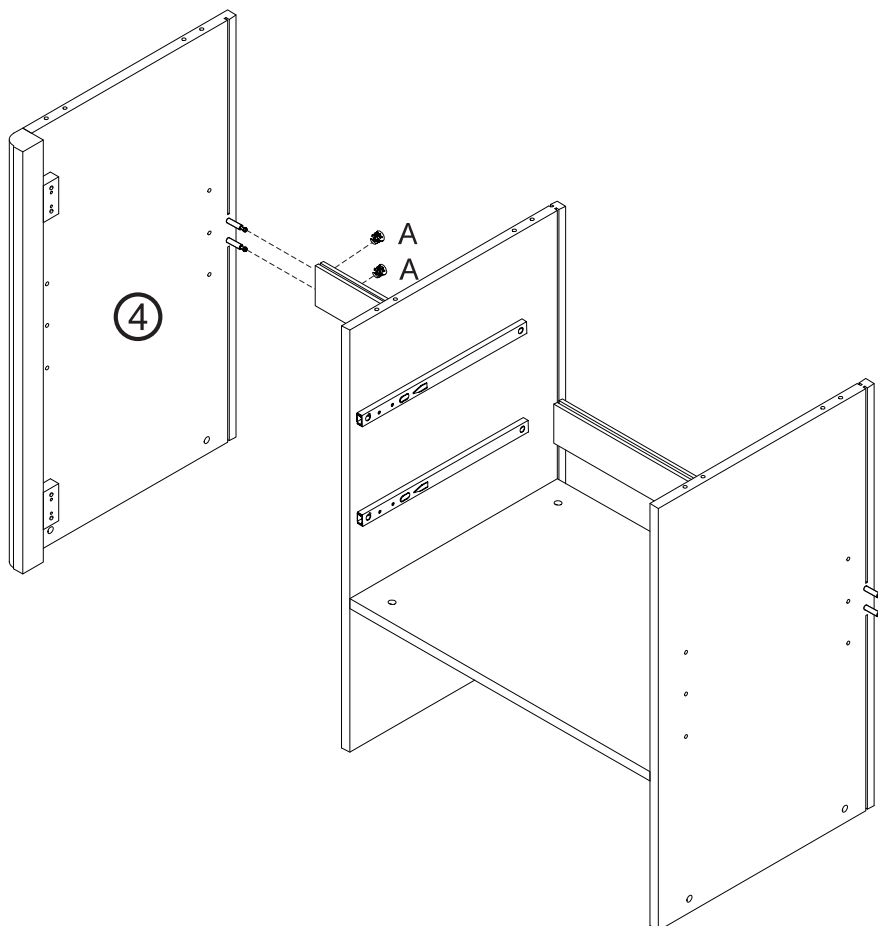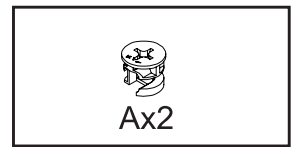

 
Step 15

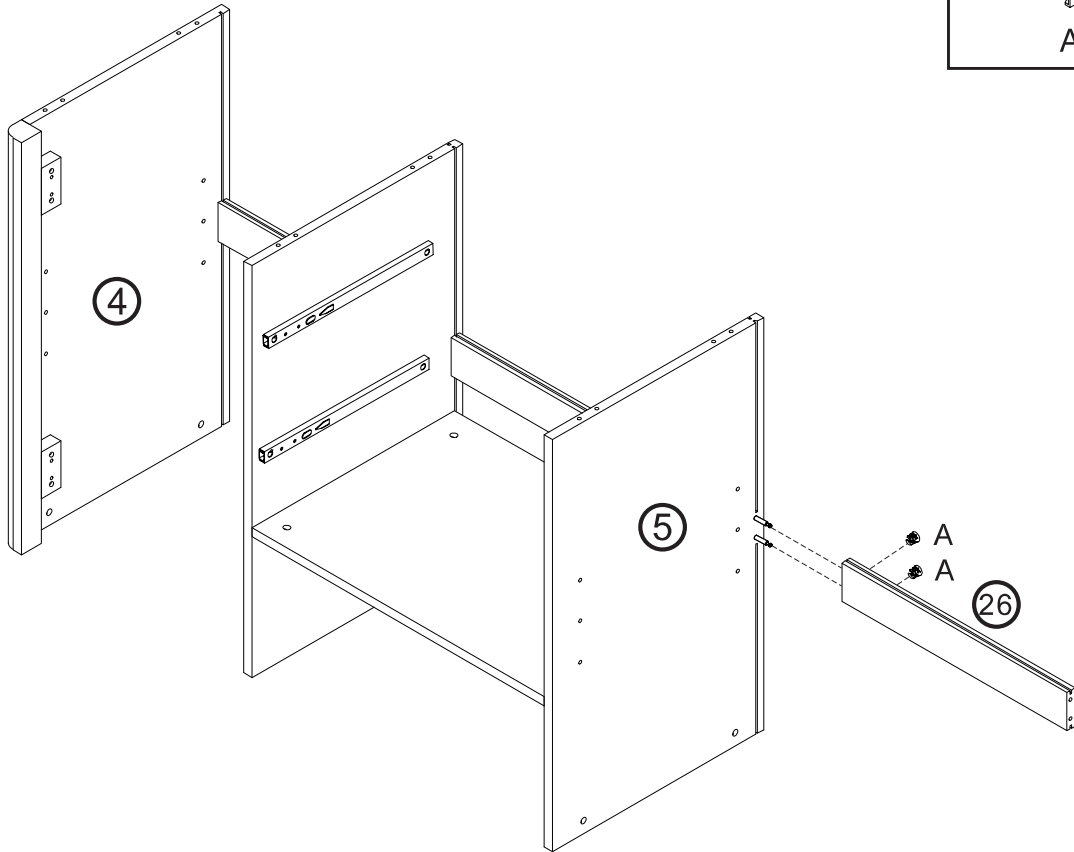

  
Step 16

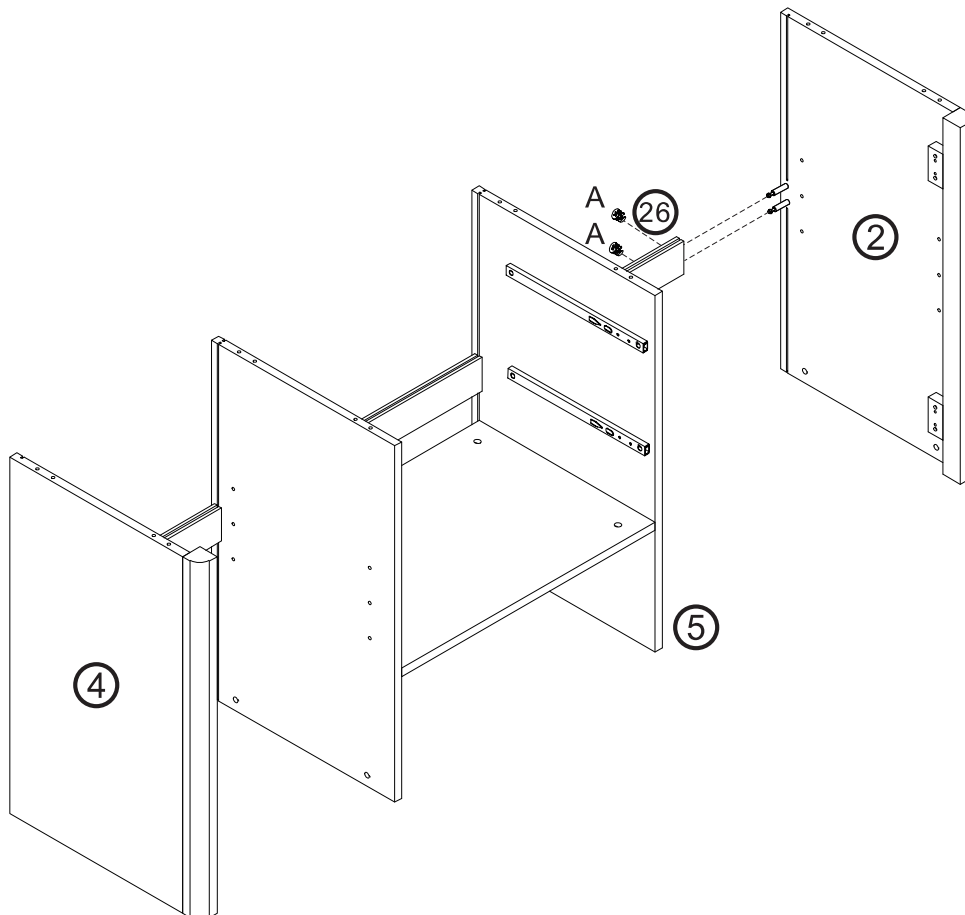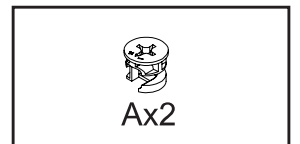
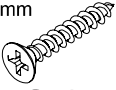


Step 17

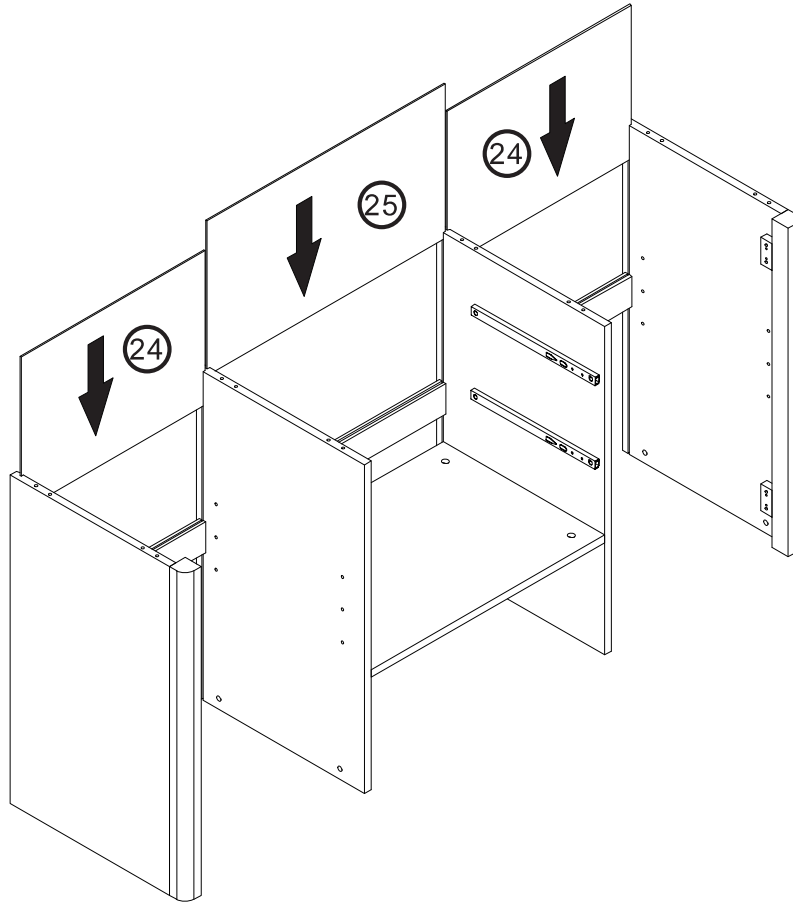

Step 18

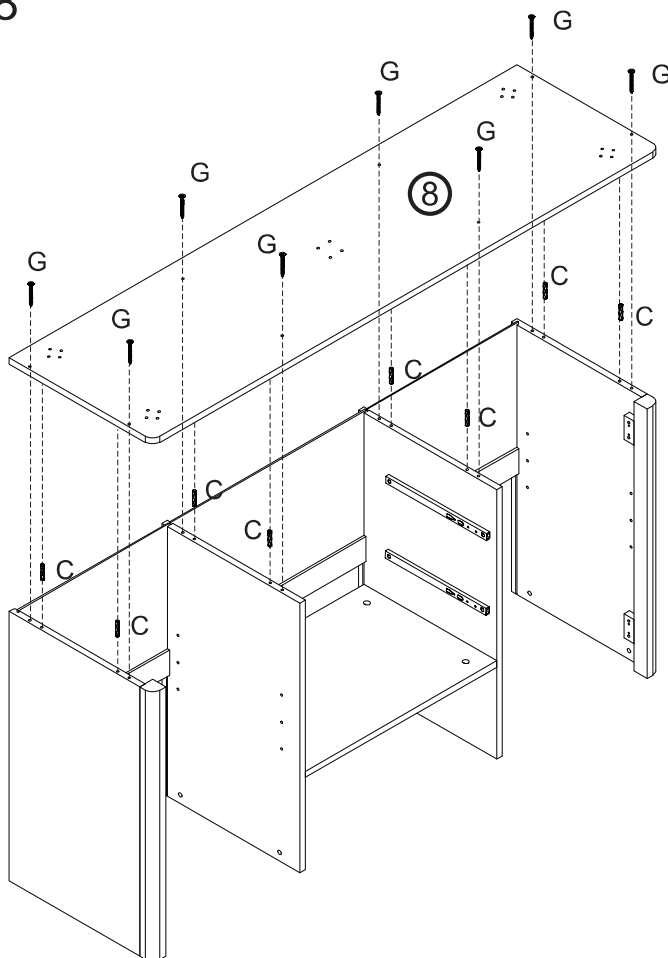

M6 x 30mm  Cx8	M4 x 30mm  Gx8
---	---

Step 19



M4 x 14mm



Mx16



  Nx4

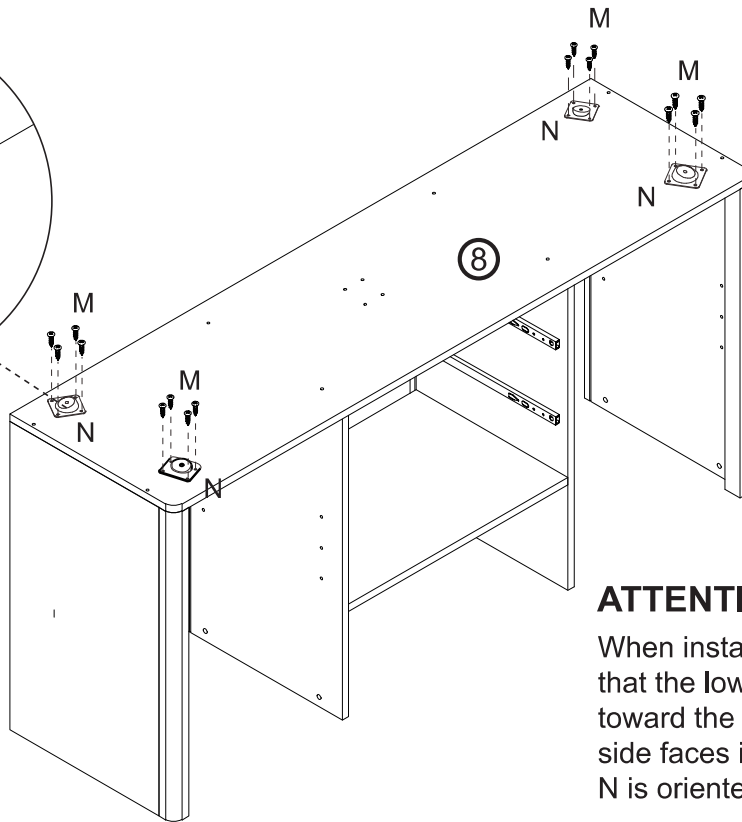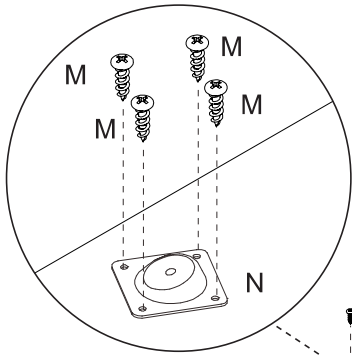

ATTENTION:




When installing part N onto part 8, ensure that the lower side of part N is positioned toward the corner of part 8, while the higher side faces inward. This confirms that part N is oriented correctly.

Step 20

M4 x 25mm




Qx4

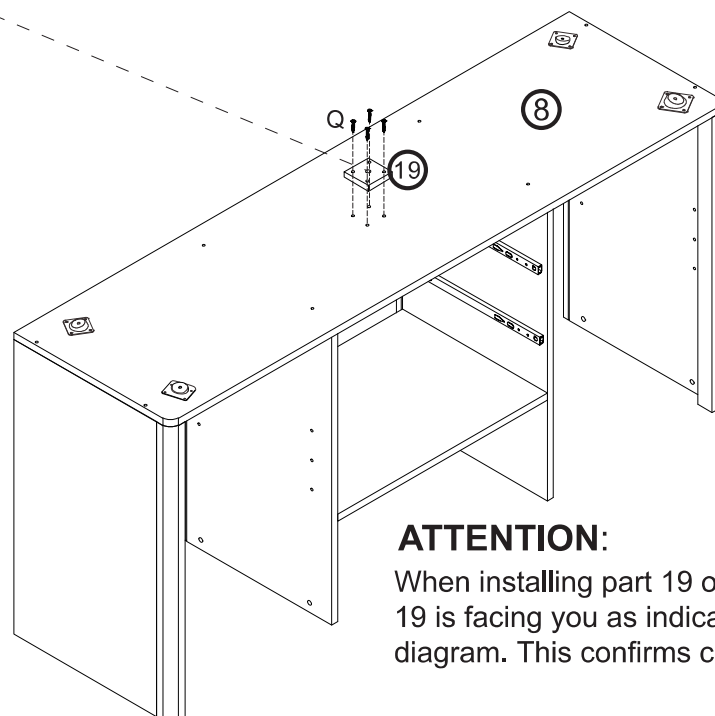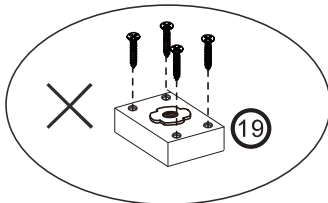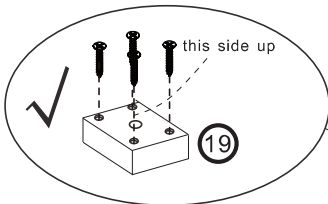


ATTENTION:

When installing part 19 onto part 8, ensure that part 19 is facing you as indicated by the ✓ symbol in the diagram. This confirms correct orientation.


Step 21

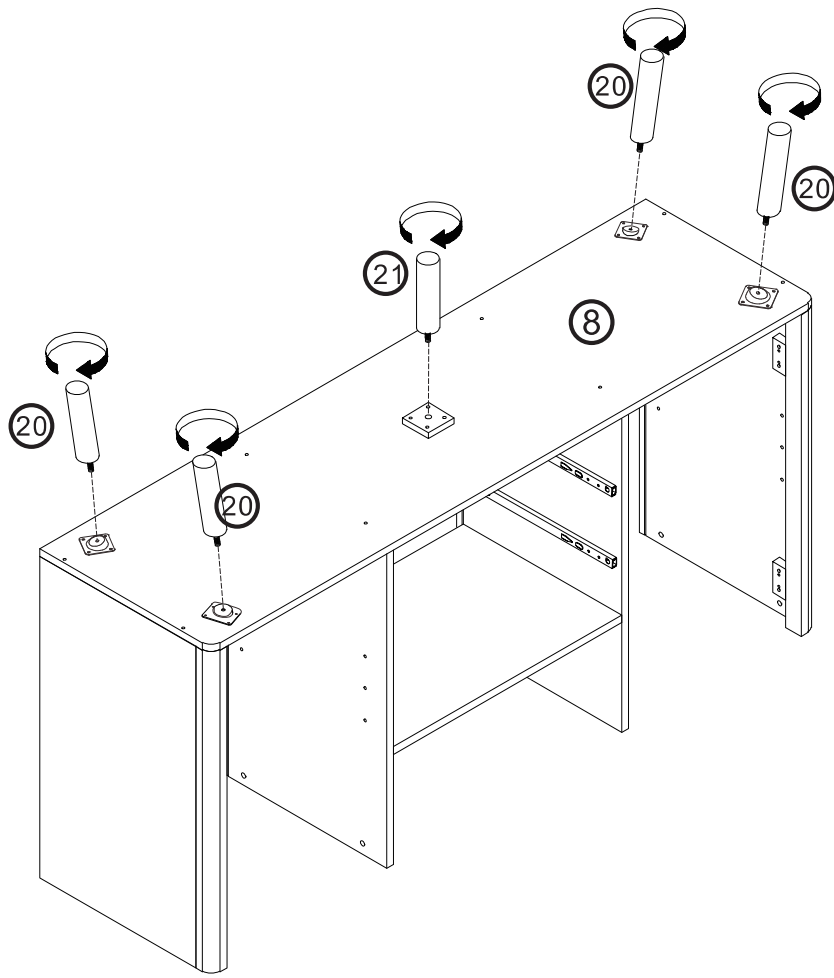
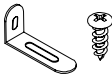


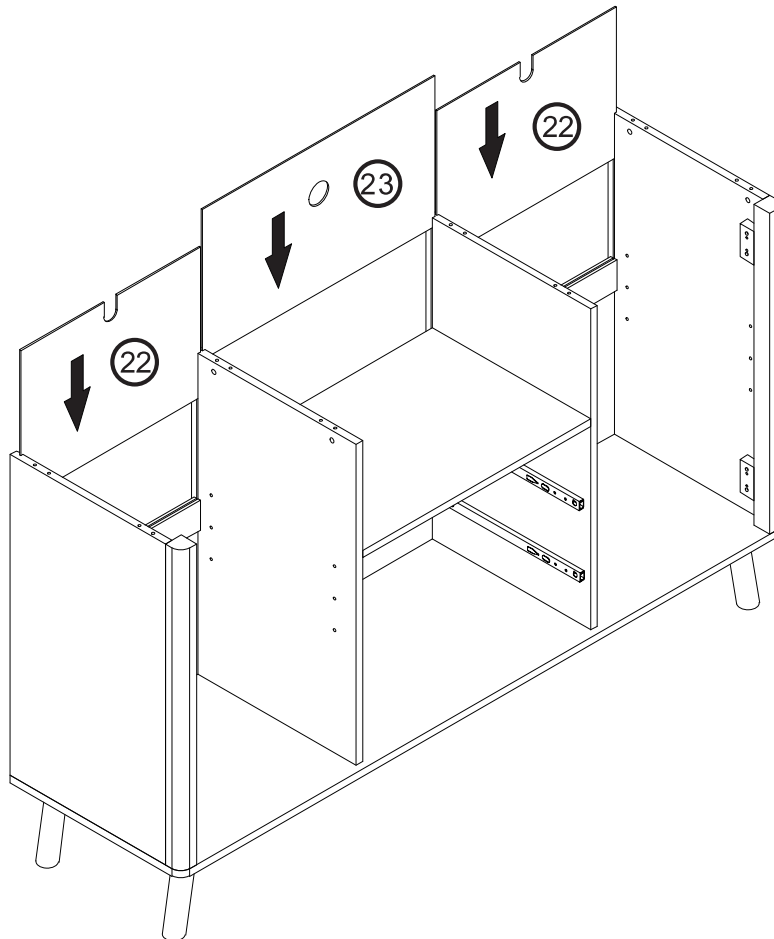


Step 22



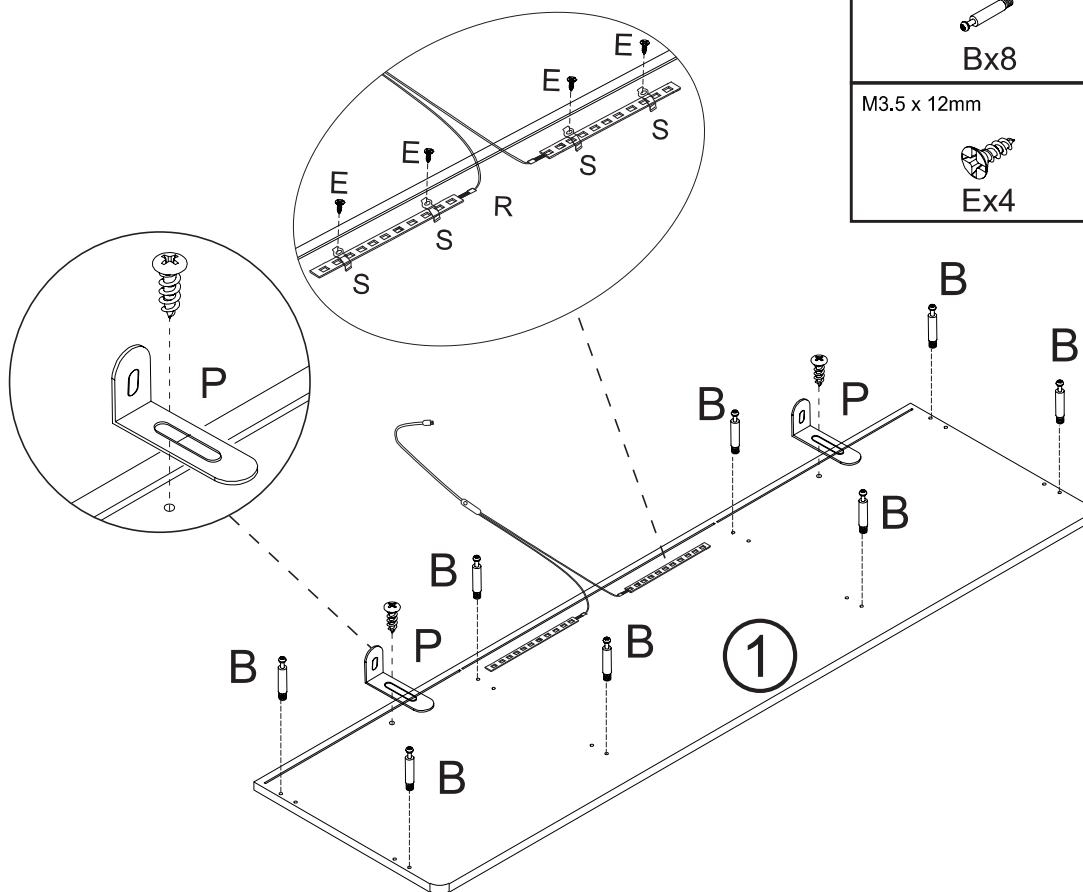


Step 23





 Bx8	 Px2
M3.5 x 12mm  Ex4	 Rx1
 Sx4	

Step 24

 Ax8	M6 x 30mm  Cx8
--	---

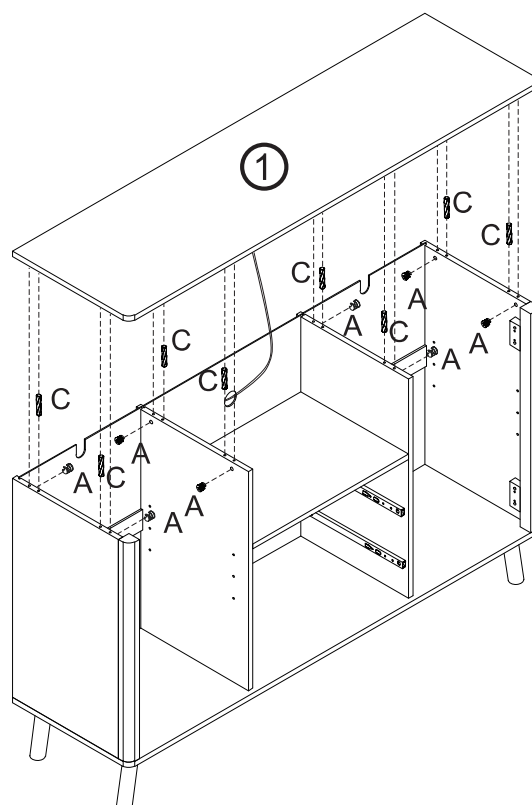


   Step 25

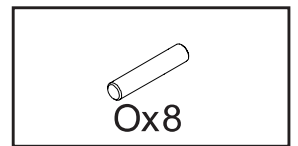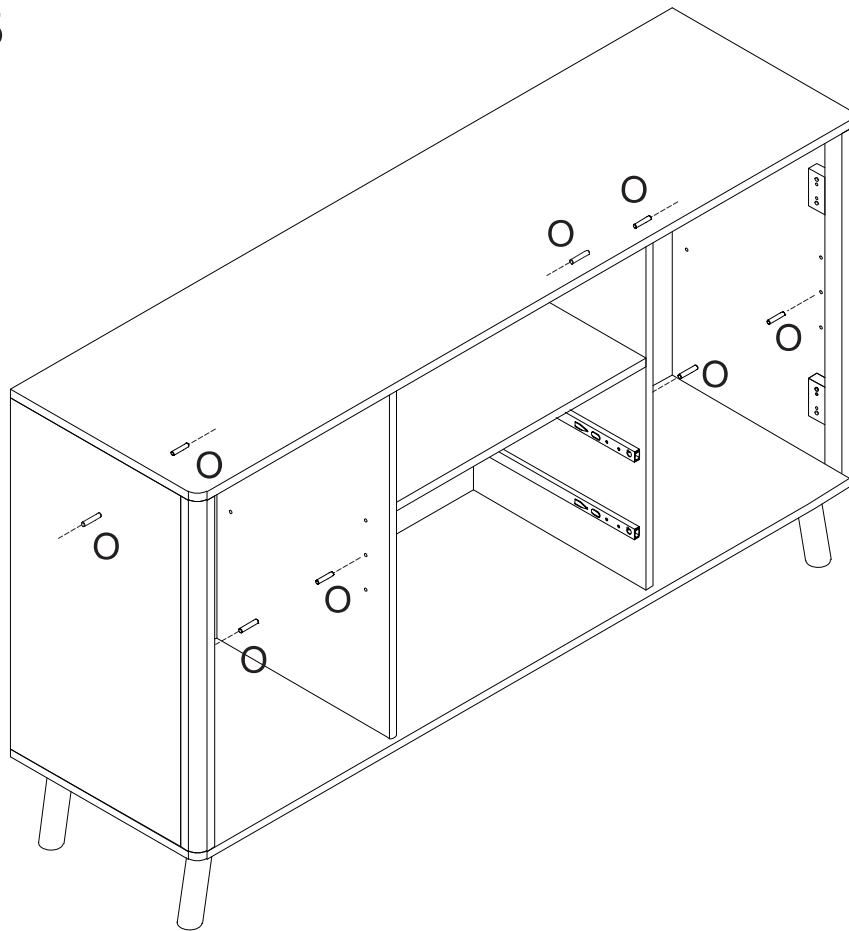



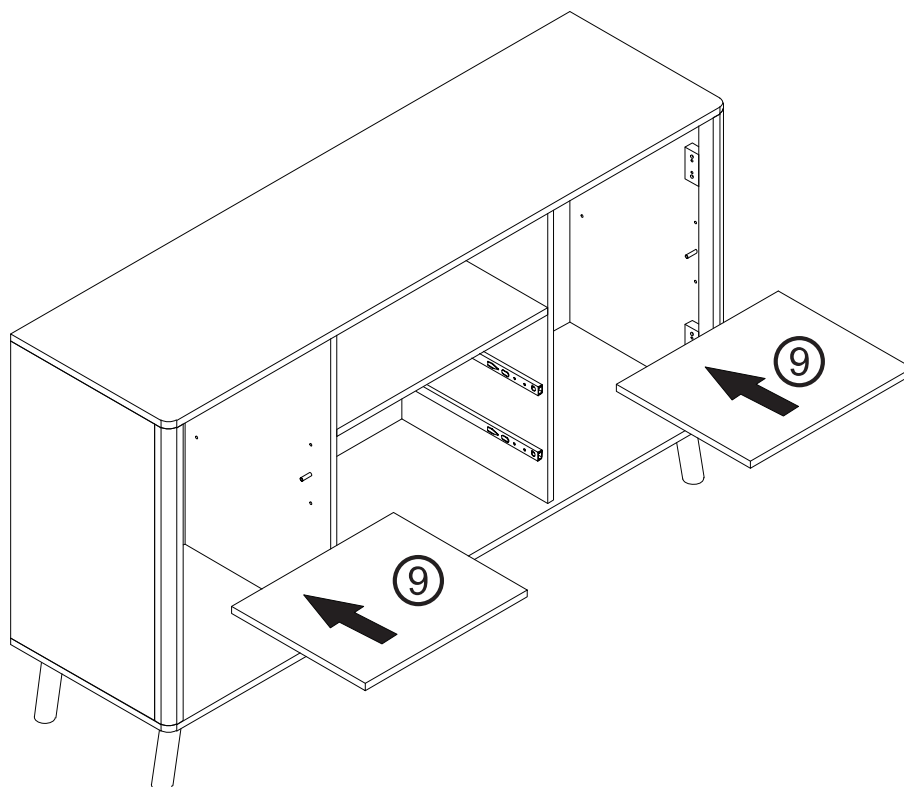


Install Part O inside the cabinet at your desired shelf height.

 Step 26




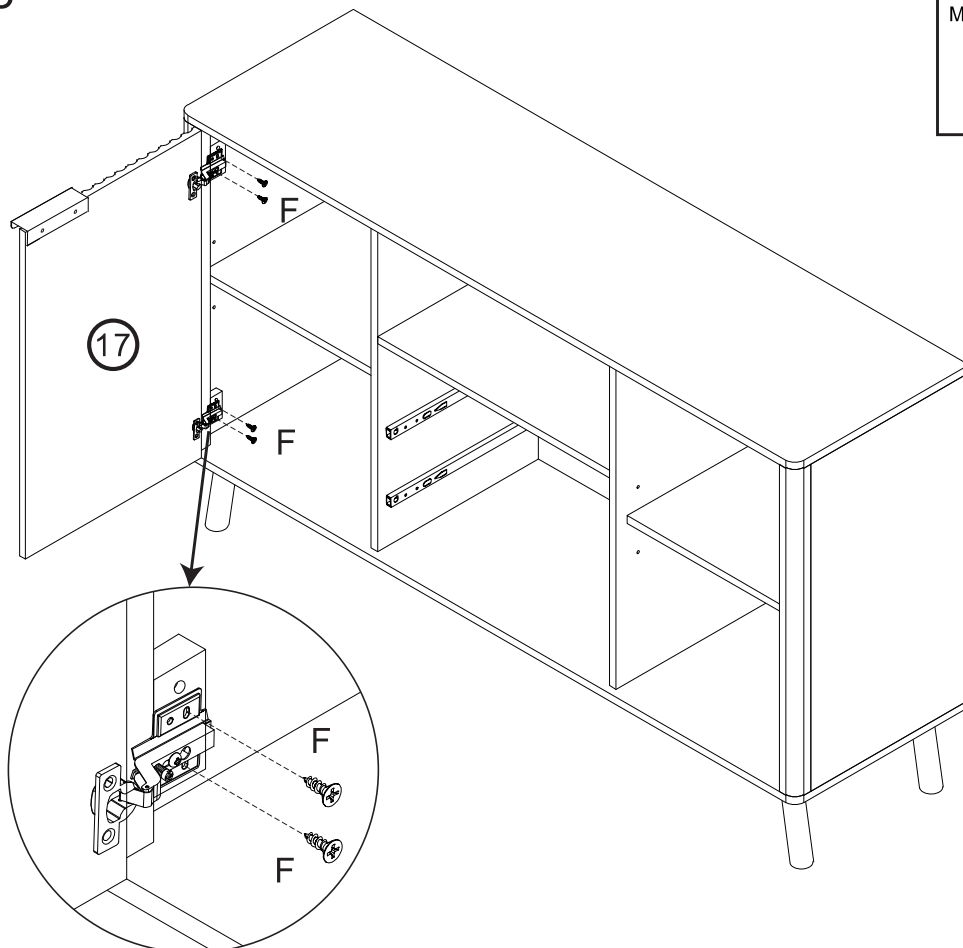
Step 27

M3.5 x 12mm  Ex4	 Hx2
M4 x 12mm  Fx8	 Jx4

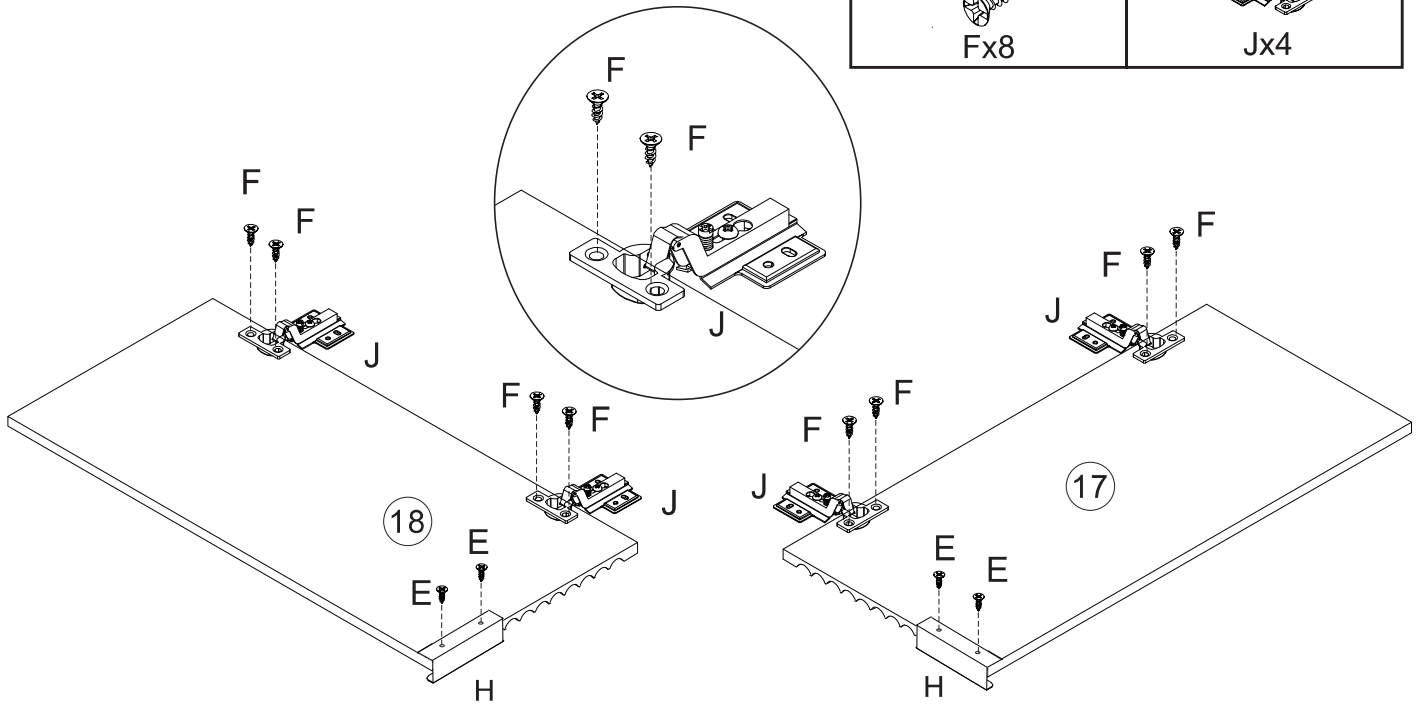

Step 28

M4 x 12mm  Fx4




Step 29


M4 x 12mm



Fx4

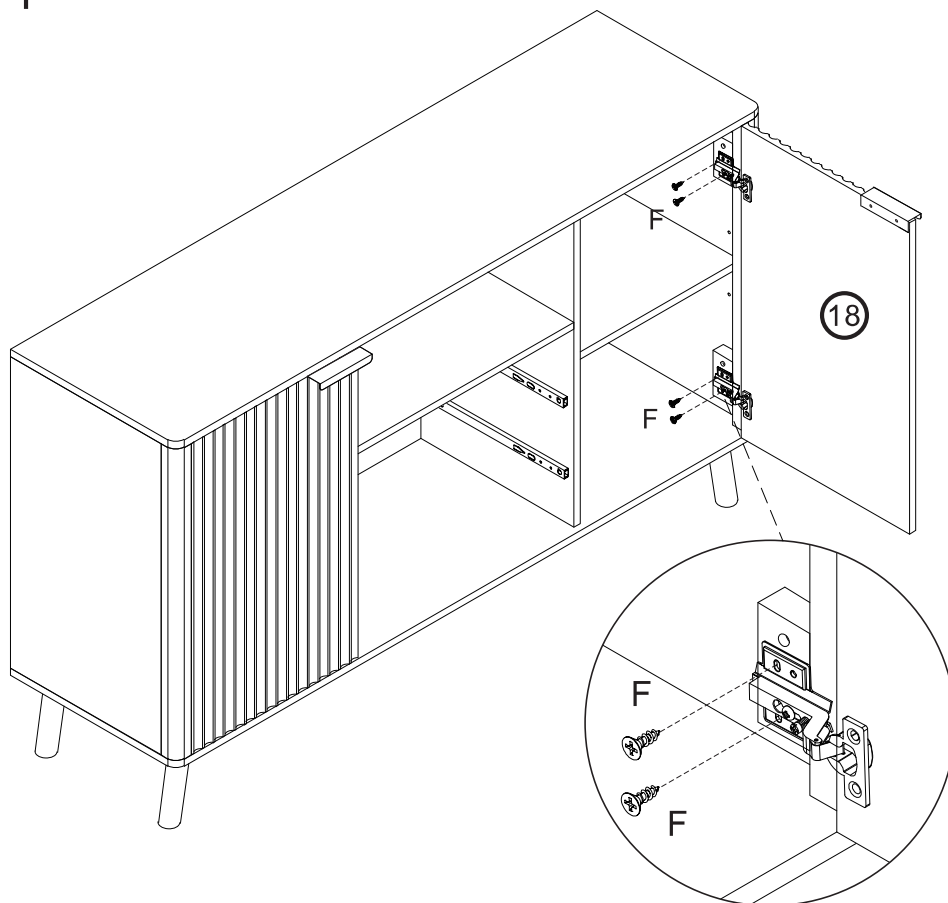


Step 30

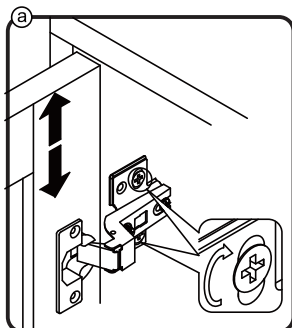


1. Vertical Adjustment

Loosen the screw as shown and move the door up or down to the desired height.

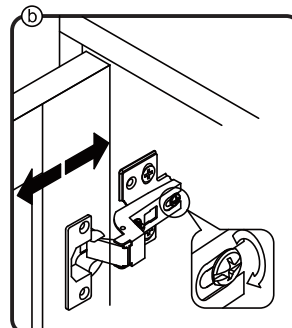


2. Depth Adjustment

Turn the screw clockwise or counter clockwise for proper alignment with the cabinet frame.

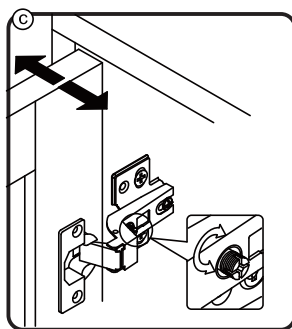

3. Lateral Adjustment

Turn the screw as shown to move the door left or right, adjusting the gap between the door and the cabinet frame.

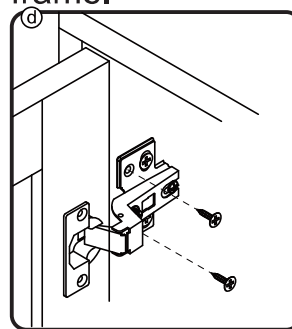

4. Final Fixing

Tighten all screws securely to ensure door stability.

M4 x 12mm



Fx8

Step 31



M4 x 10mm




Lx4

NOTE:



- 1. Align the grooves in the drawer sides with the drawer glides on the side panels, then slide the drawer into place.
- 2. Open the drawer and push each drawer glide forward until it is flush with the front panel of the drawer.
- 3. From inside the drawer, locate the hole on the drawer side and secure the glide with a screw.

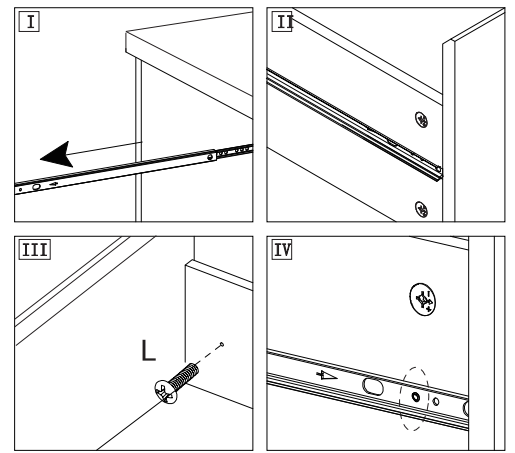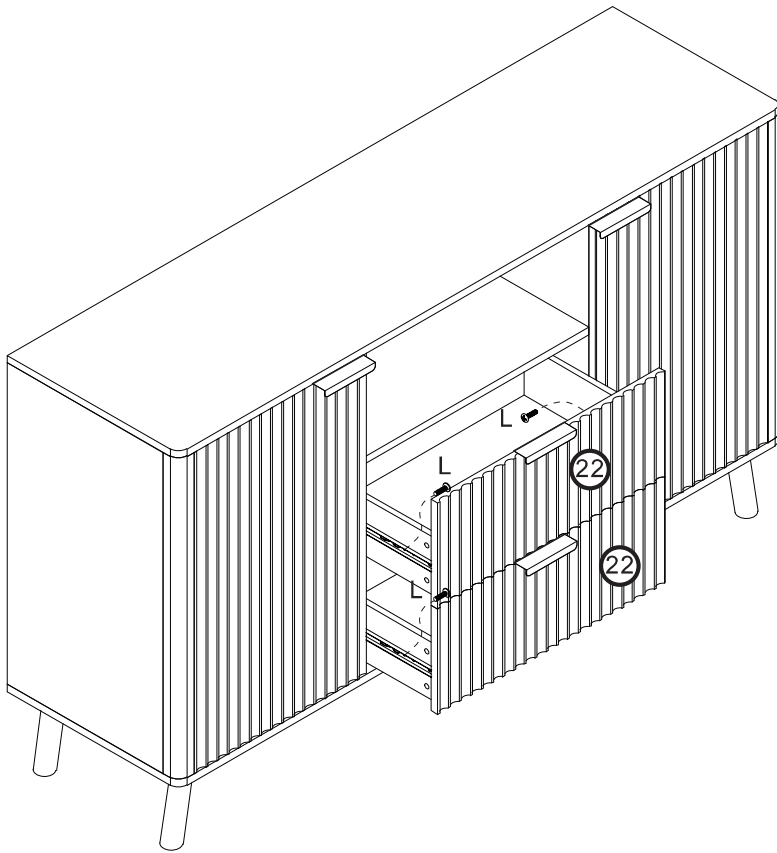

 Step 32




lx12


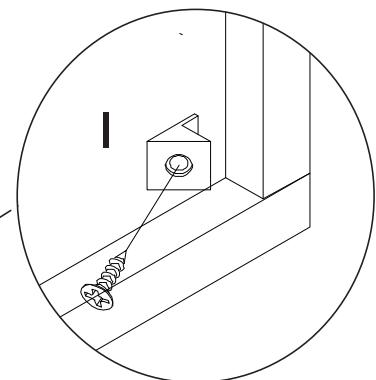
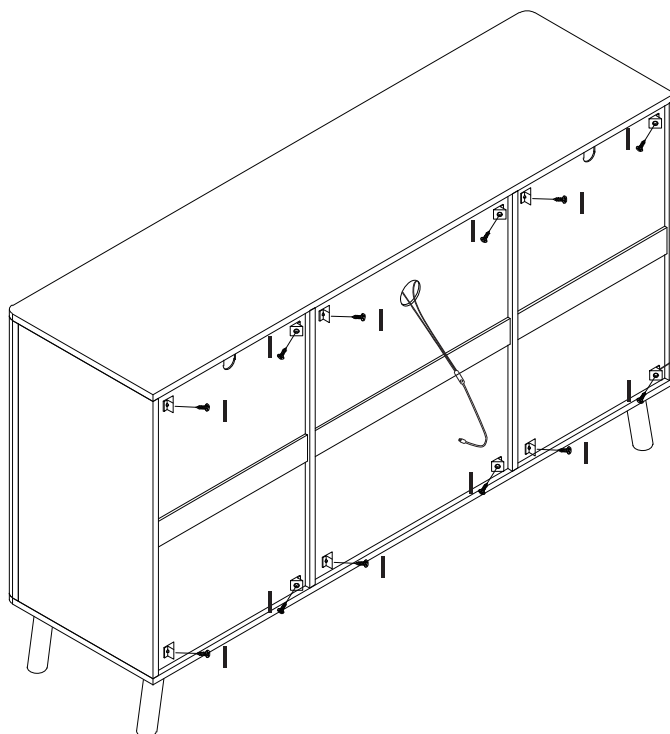


Step 33

Note: Before securing the anti-tip bracket, make sure all cables are properly routed.

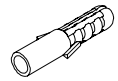


Px2

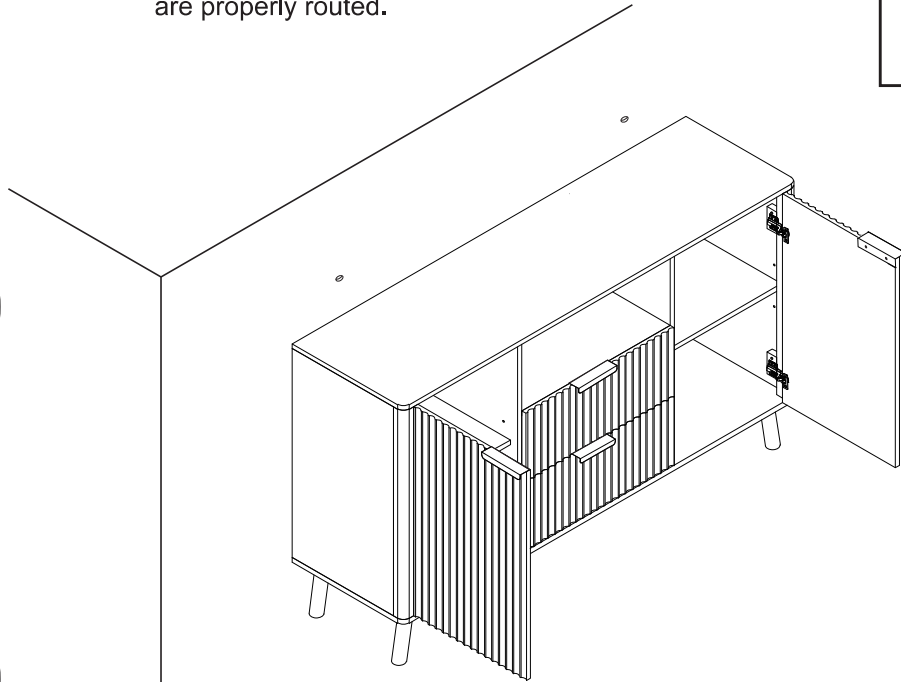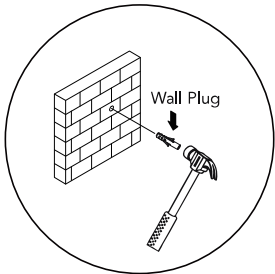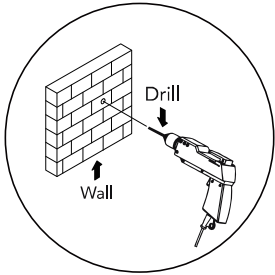


Anti-tip Installation Instructions

- Move the TV stand to its final position against the wall.
- Mark two drilling points on the wall through the holes of the anti-tip bracket.
- Move the TV stand away and drill two holes at the marked points.
- Insert the wall plugs into the holes.

Step 34

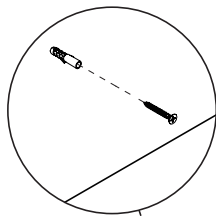

Px2

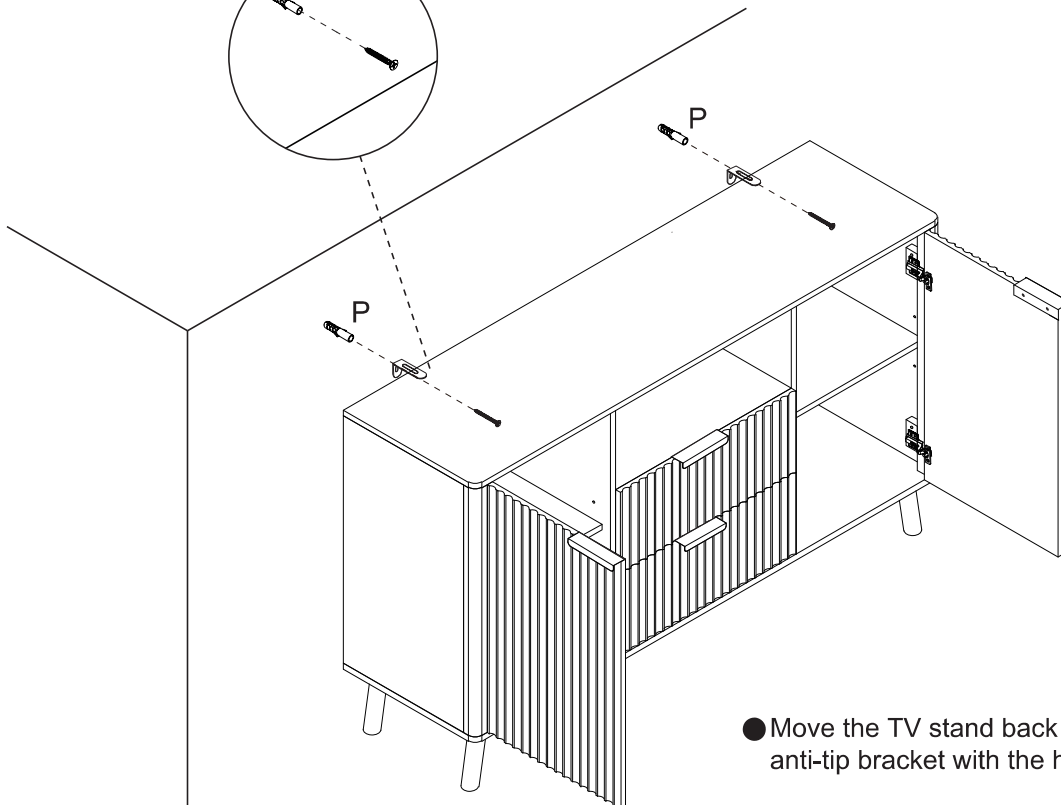

- Move the TV stand back into position and align the anti-tip bracket with the holes.
- Secure the anti-tip brackets to the wall with the screws.