## TV STAND

# **ASSEMBLY INSTRUCTION**




# Assembly Instruction

#### ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly


### A Warning !

- 1. Don't attempt to repair or modify parts are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commerical establishment.

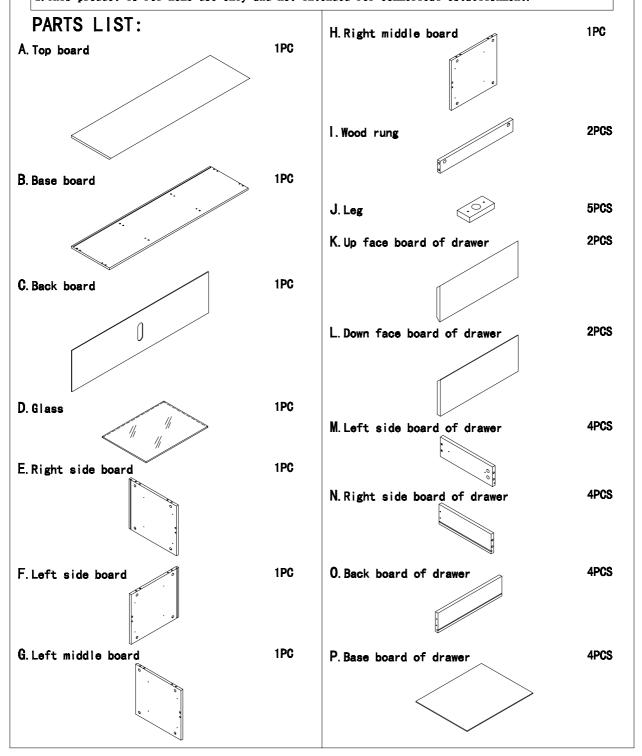



HARDW	ARE LIST:			
NO.	DESCRIPTION		FIGURE	QTY
1		BOLT		36PCS
2		BOLT CAP	3	36PCS
3	Ø8 <b>*3</b> 0	WOOD PLUG		20PCS
4	M4*25	SCREW	Descriptor.	10PCS
5	M4*35	SCREW	Distriction	16PCS
6		SLIDE RAIL	601 01	8PCS
7	M3. 5*12	SCREW	<b>Diagrap</b>	48PCS
8		SHELF PIN	<b>∅</b> ♥	4SET

STEP 1:Separate the slide rail (6) into two part.

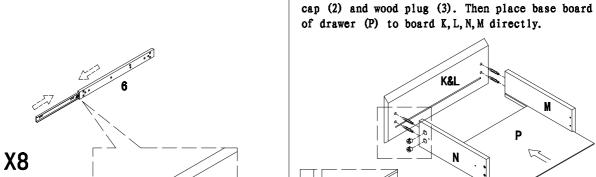

STEP 3: Attach back board of drawer (0) to side of drawer (M)&(N), using screw (5) assemble though the holes on the side board of drawer.

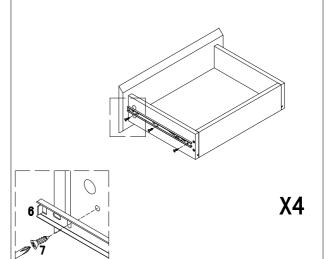

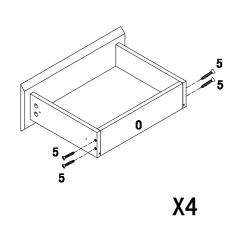


STEP 4:Lock the base part of the slide sail to the side board of the drawer (M)&(N), using screw (7).


**X4** 

STEP 2: Attach face board of drawer (K) & (L) to the side board of drawer (M) & (N), using bolt (1), bolt


STEP 5:Lock other part of slide rail on the side board (E)&(F), using screw (7).

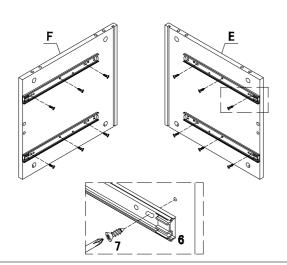


STEP 6:Lock other part of slide rail on the middle board (G)&(H), using screw (7).

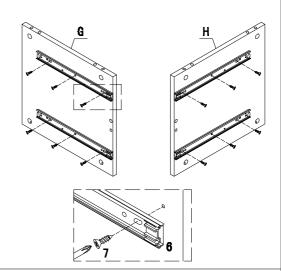


STEP 7:Attach right side board (E) and right middle STEP 8:Attach left side board (F) and left (H) board through wood rung (I), using bolt (1), bolt cap(2) and wood plug (3).

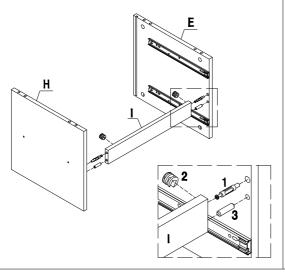



middle board (G) through wood rung (I), using bolt (1), bolt cap(2) and wood plug(3).

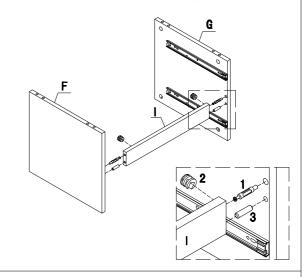


 
STEP 9:Lock leg (J) to the base board, using screw (4).

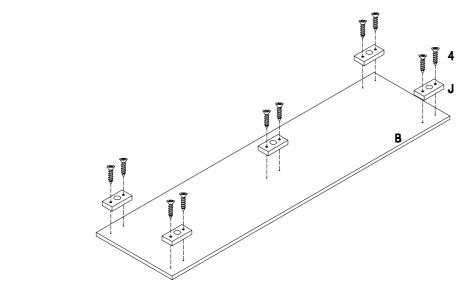

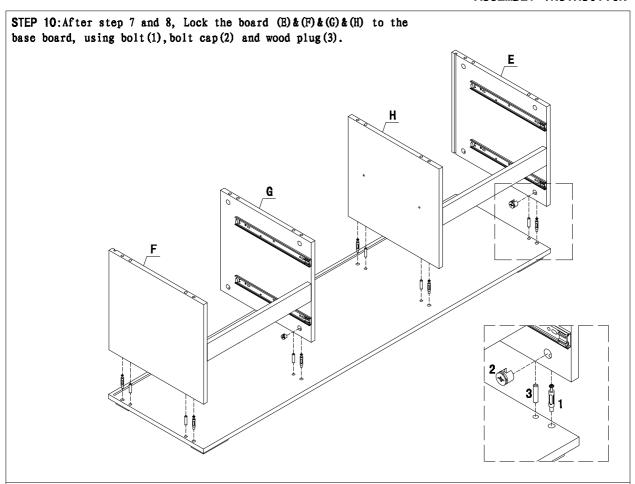



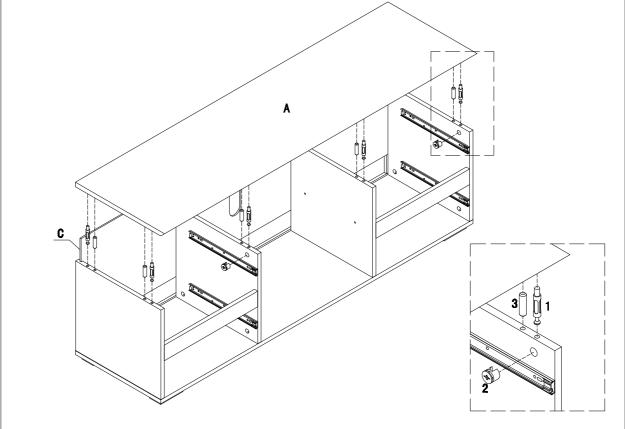

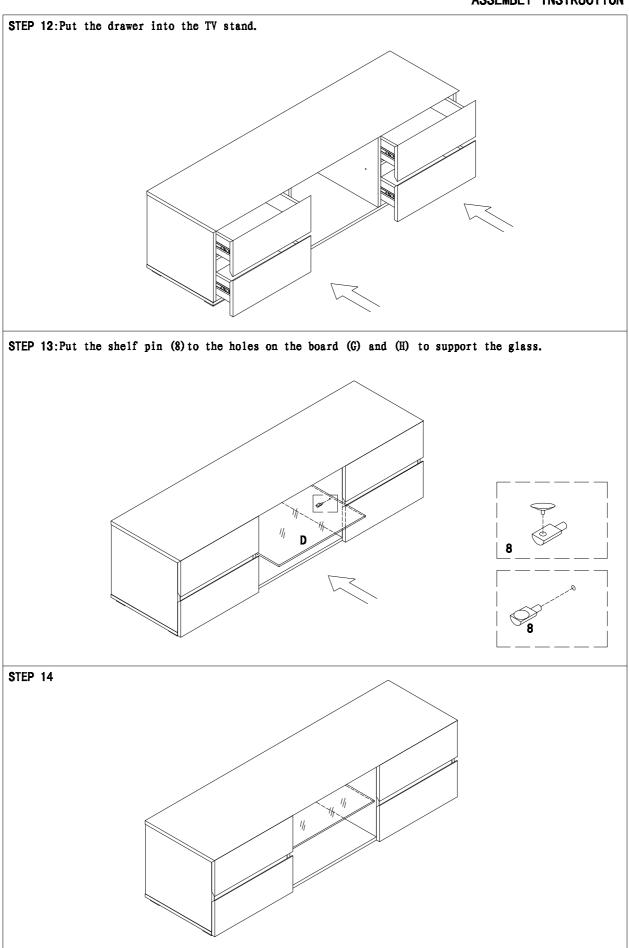

Page 6 of 6