

Assembly Instructions

Caution: You must read this Assembly Instructions before you proceed

 
SAFETY WARNING

Never adjust chaise lounge or recliner backrest while seated.

Always make sure the backrest is flat before moving the chaise lounge.

Keep all limbs clear from under the backrest when it is in a raised position.

Serious finger, hand, or other bodily injuries may result from adjusting the chaise lounge backrest position while seated.

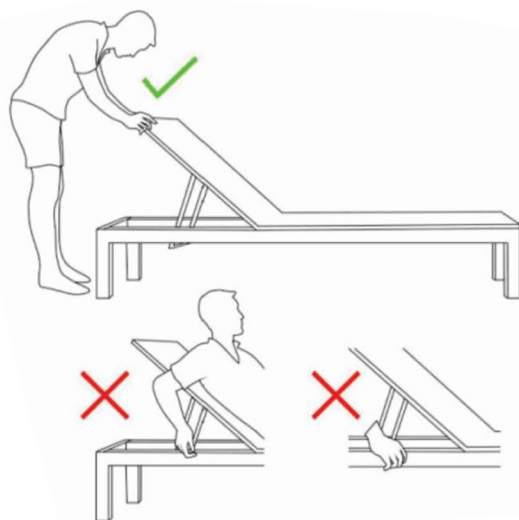

The examples pictured above are non exhaustive and are for your reference only.

Care & Maintenance



- Not for commercial use. For residential use only.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- To obtain the longest lifespan of your outdoor product minimizing exposure to direct sunlight is recommended.



- Children should not climb or jump on the furniture.



- Do not write on furniture without a padded barrier to protect the surface.



- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



 
- Stains may be removed with mild soap solution and damp cloth.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.











Please look underneath the Seat Panel for hardware packs.

CHAISE LOUNGE



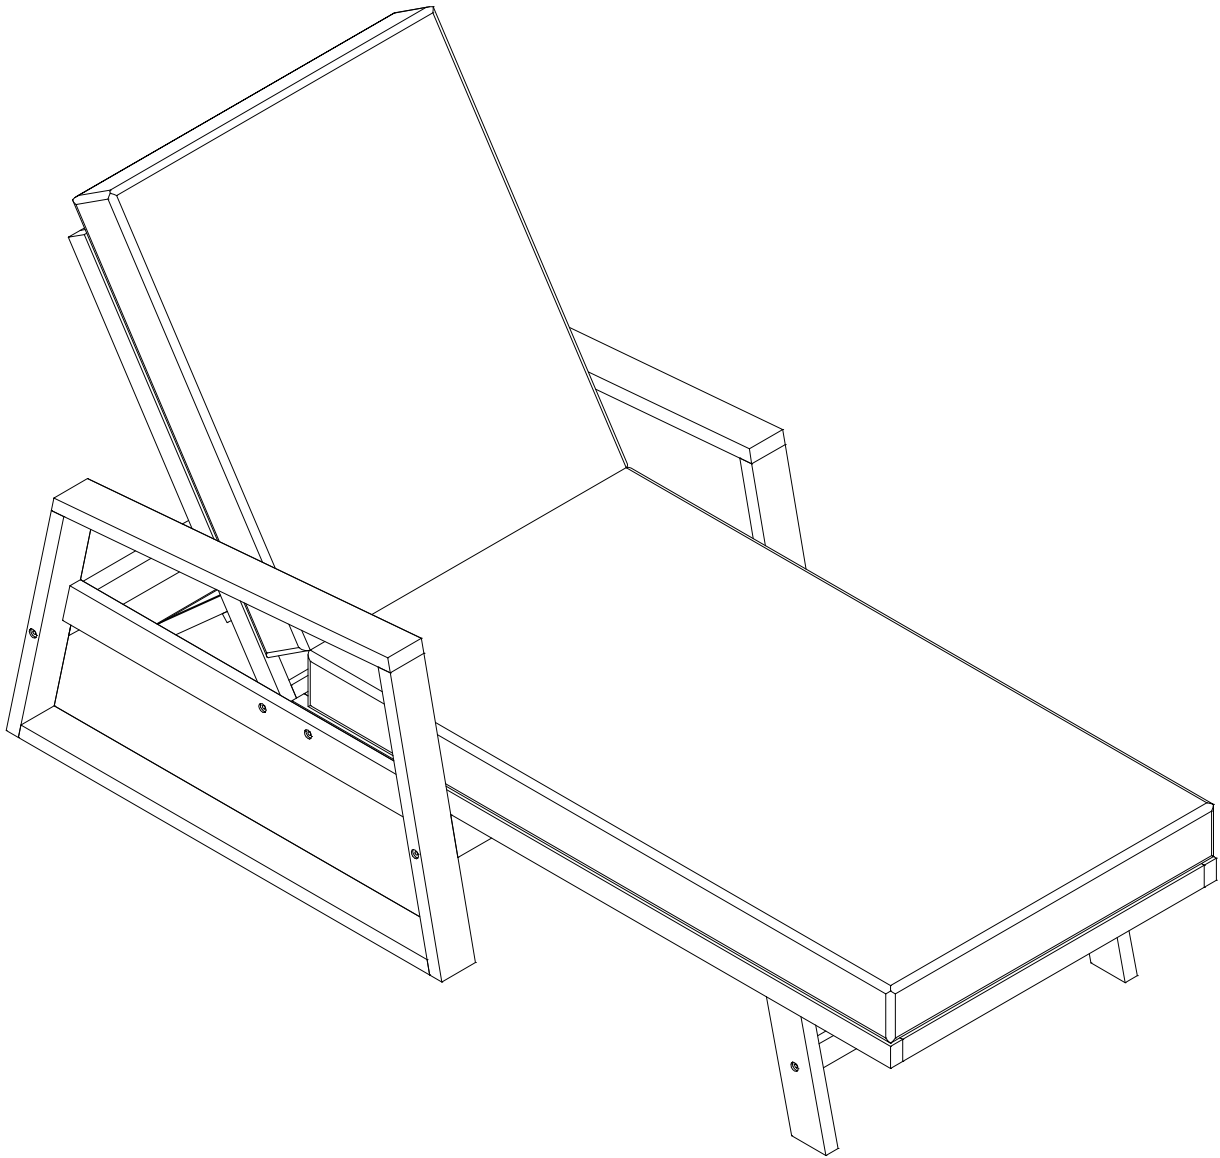


Caution: This Chaise Lounge is NOT a TOY.
Keep children away from the assembly area.
Whenever moving/lifting the Chaise Lounge and to prevent damage to the Chaise Lounge, two adult partners may be needed to execute these actions.

          Parts List:

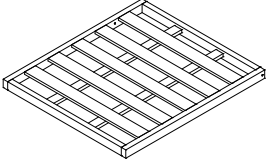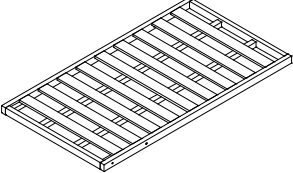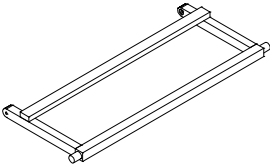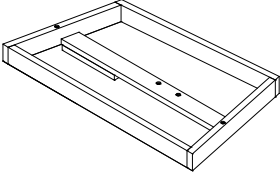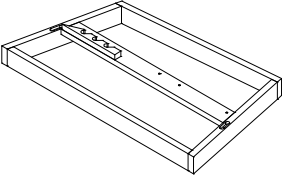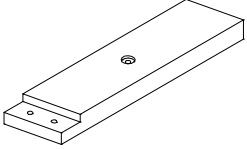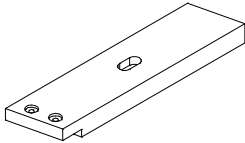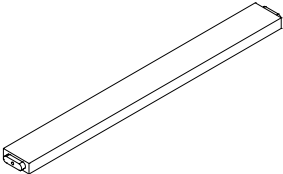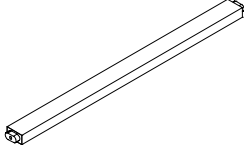
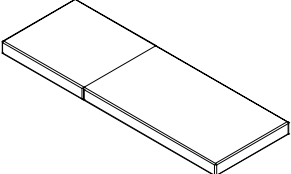
Label	Picture	Description	QTY
A		Backrest Panel	1
B		Seat Panel	1
C		Reclining Mechanism	1
D		Back Left Leg	1
E		Back Right Leg	1
F		Front Right Leg	1
G		Front Left Leg	1
H		Back Connecting Bar	2
I		Front Connecting Bar	1
J		Cushion	1

   Hardware List:

No	Picture	Description	QTY
①		Bolt (M6x40mm)	7
②		Bolt (M6x35mm)	3
③		Bolt (M6x30mm)	5
④		Washer (5mm)	7
⑤		Washer (2mm)	3
⑥		Screws (M6x90mm)	5
⑦		Screws (M6x50mm)	3
⑧		Bolt Cover	6
⑨		Allen Wrench	2

Assembly Preparation:

  Before Beginning Assembly:

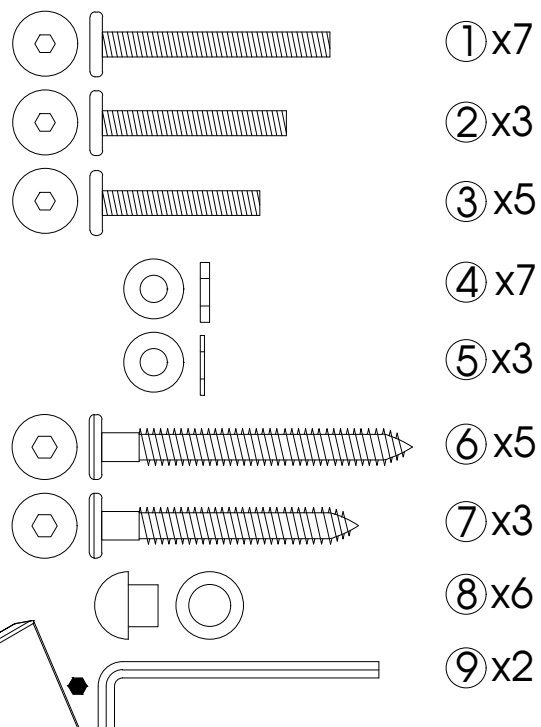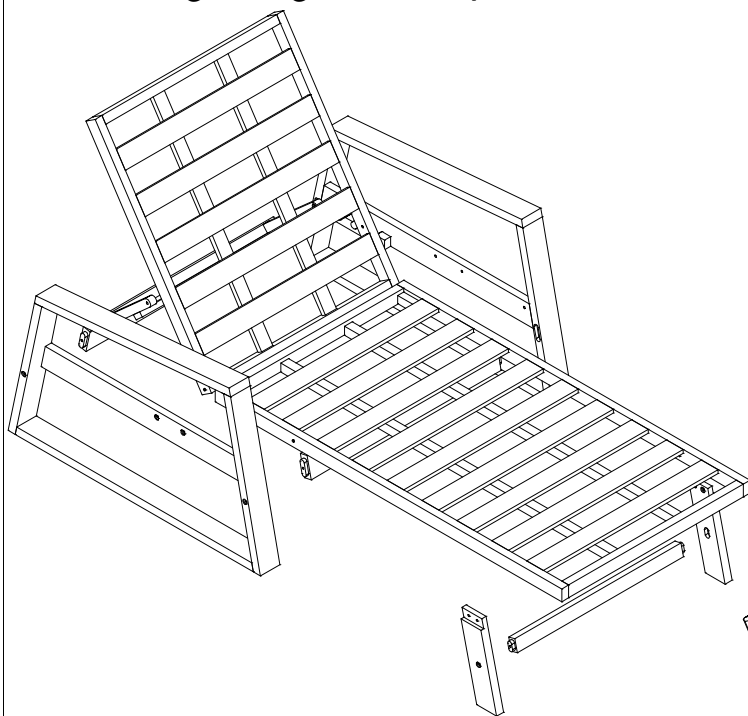

• Read instructions, cover to cover.



• Have 2 adults on hand for assembly.



• Do not assemble on flooring or carpet.



 
• Assemble on a clean non-marring surface (packing foam).



• Save all packaging until finished.


Assembly Steps:

Overview:

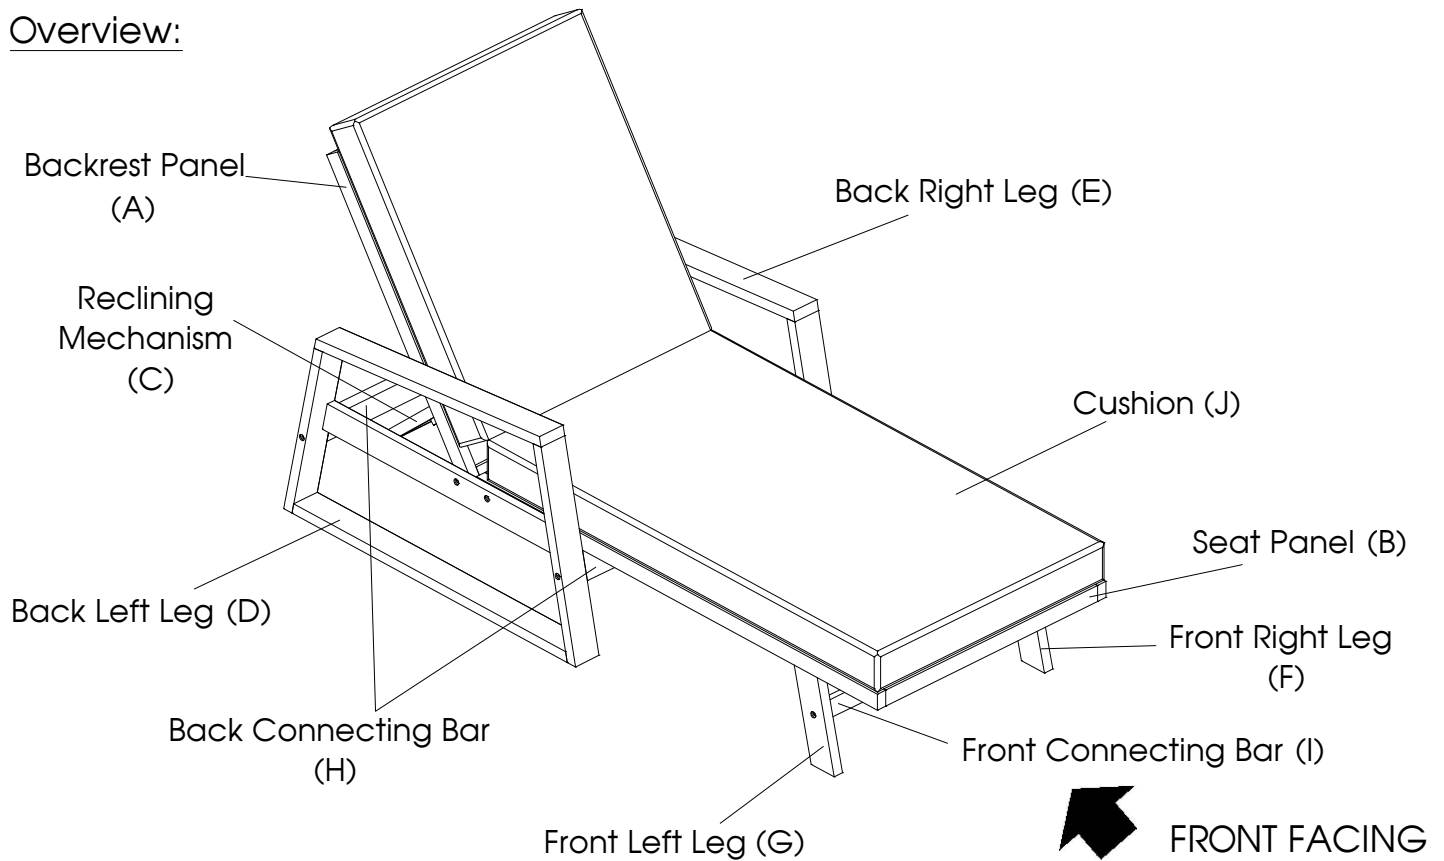


This Chaise Lounge has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chaise Lounge parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 Step 1:

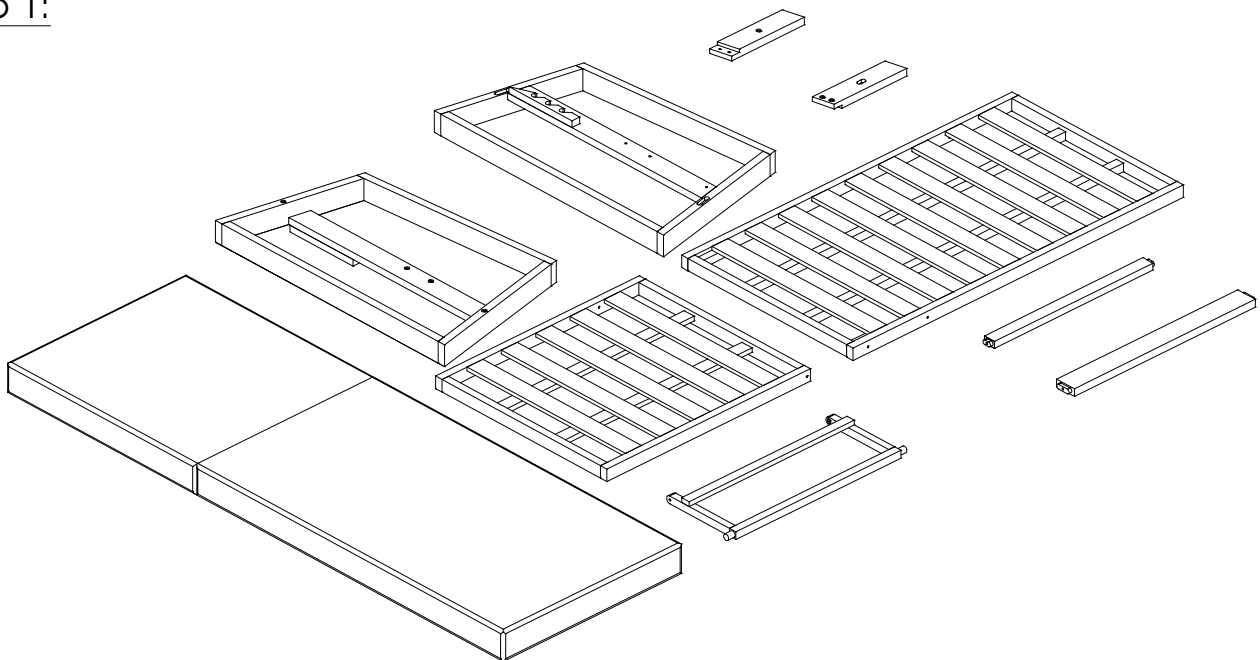

Unpack and place all parts on a clean, non-marring surface.

 
Step 2:

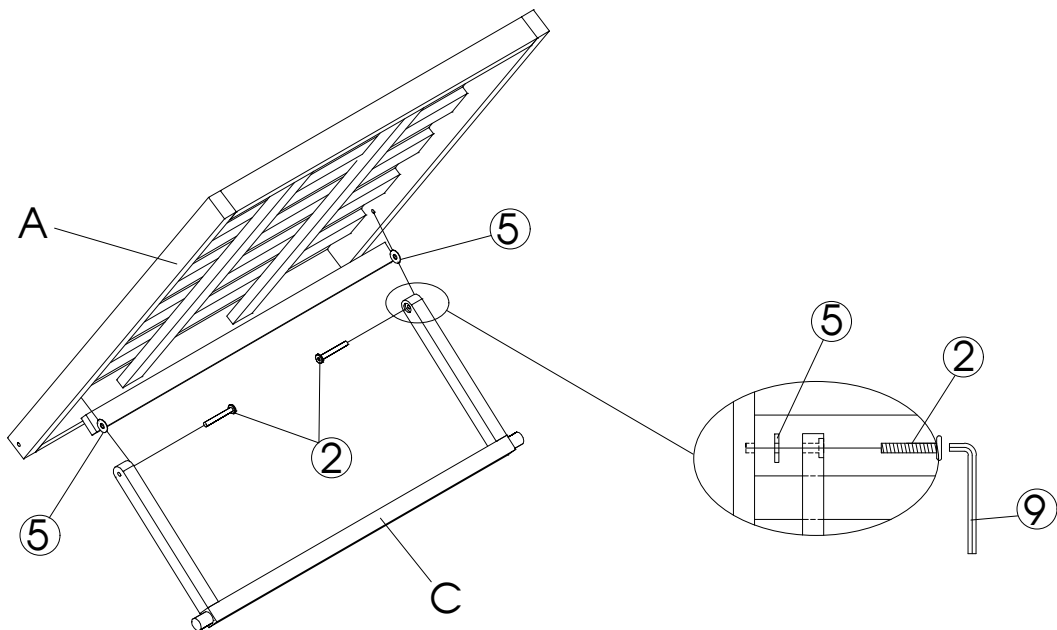

With assistance from your adult partners, attach the Reclining Mechanism (C) to the Backrest Panel (A) by using 2 pcs of Bolts (2) and 2 pcs of Plastic Washers (5) with the Allen Wrench (9).

DO NOT fully tighten the Bolts at this time.

 
Step 3:

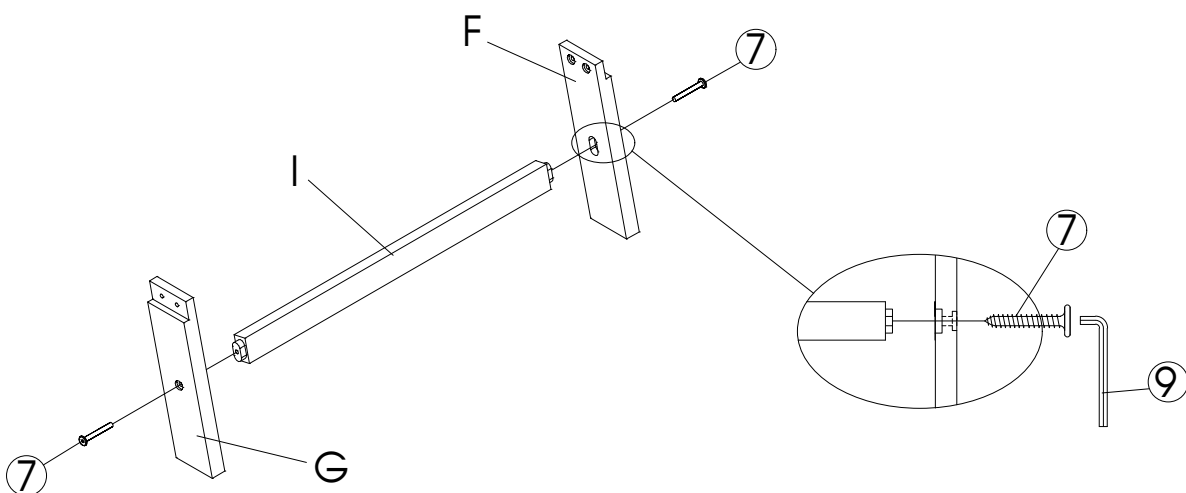

Attach the Front Left Leg (G) and Front Right Leg (F) to the Front Connecting Bar (I) by using 02 pcs of Screws (7) and the Allen Wrench (9).


DO NOT fully tighten the Screws at this time.

 Step 4:

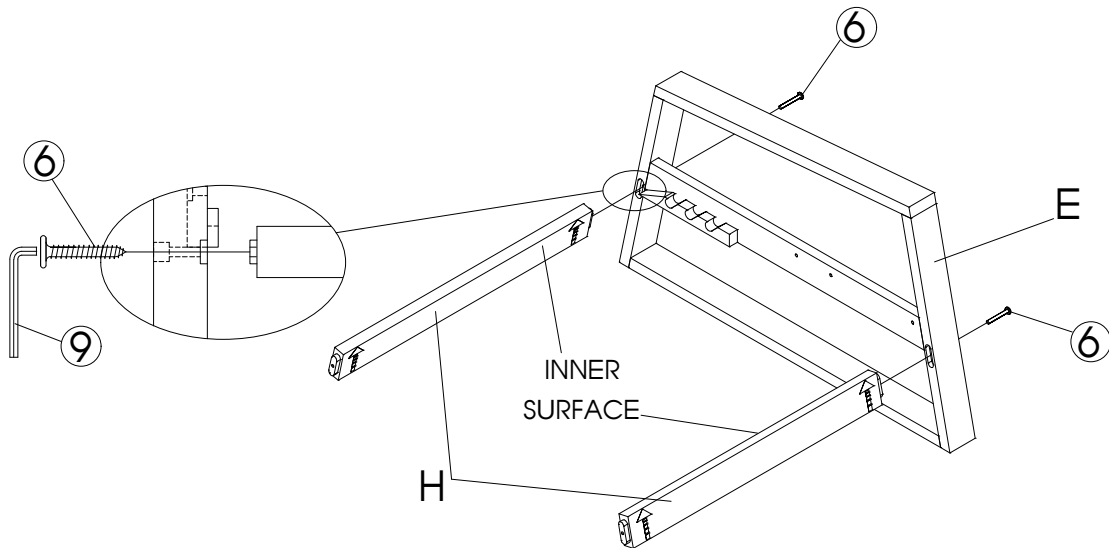


Attach 2 pcs of Back Connecting Bars (H) to the Back Right Leg (E) by using 2 pcs of Screws (6) with the Allen Wrench (9).
DO NOT fully tighten the Screws at this time.

 Step 5:

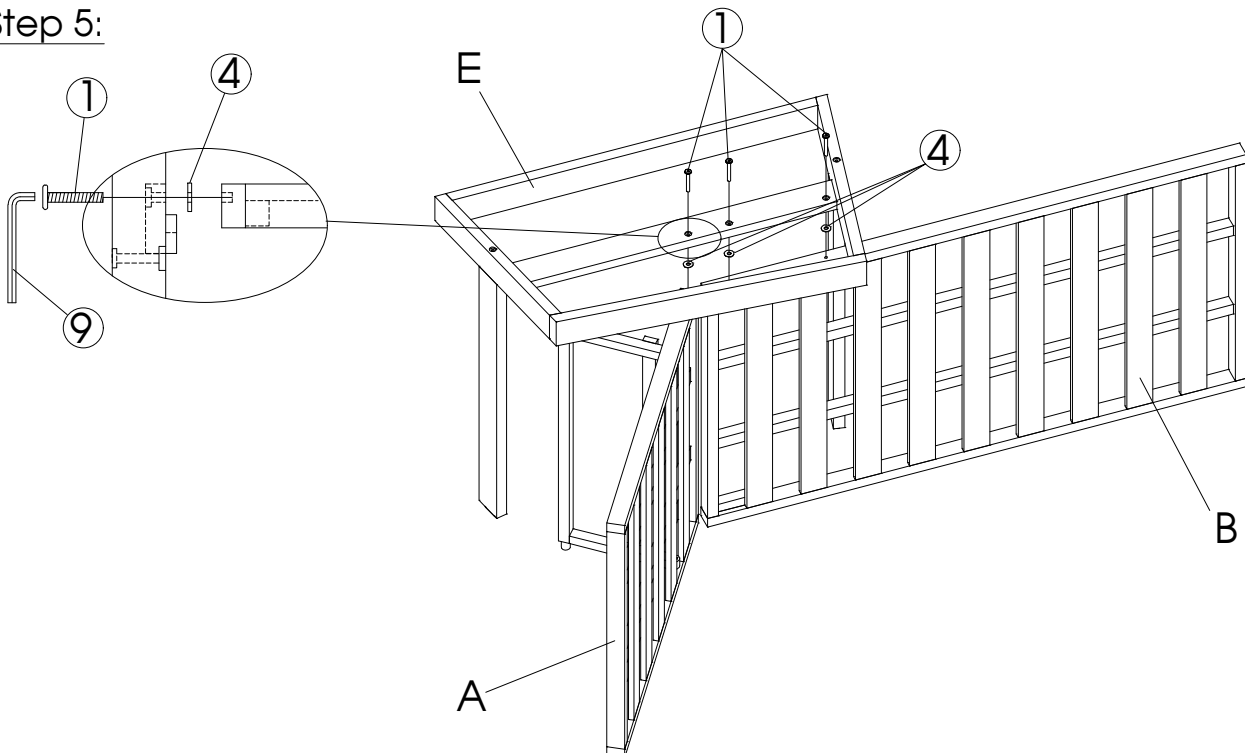

With assistance from your adult partners, attach the Seat panel (B) and Backrest panel (A) to the Back Right Leg (E) by using 3 pcs of Bolts (1) and 3 pcs of Plastic Washers (4) with the Allen Wrench (9).
DO NOT fully tighten the Bolts at this time.

 Step 6:

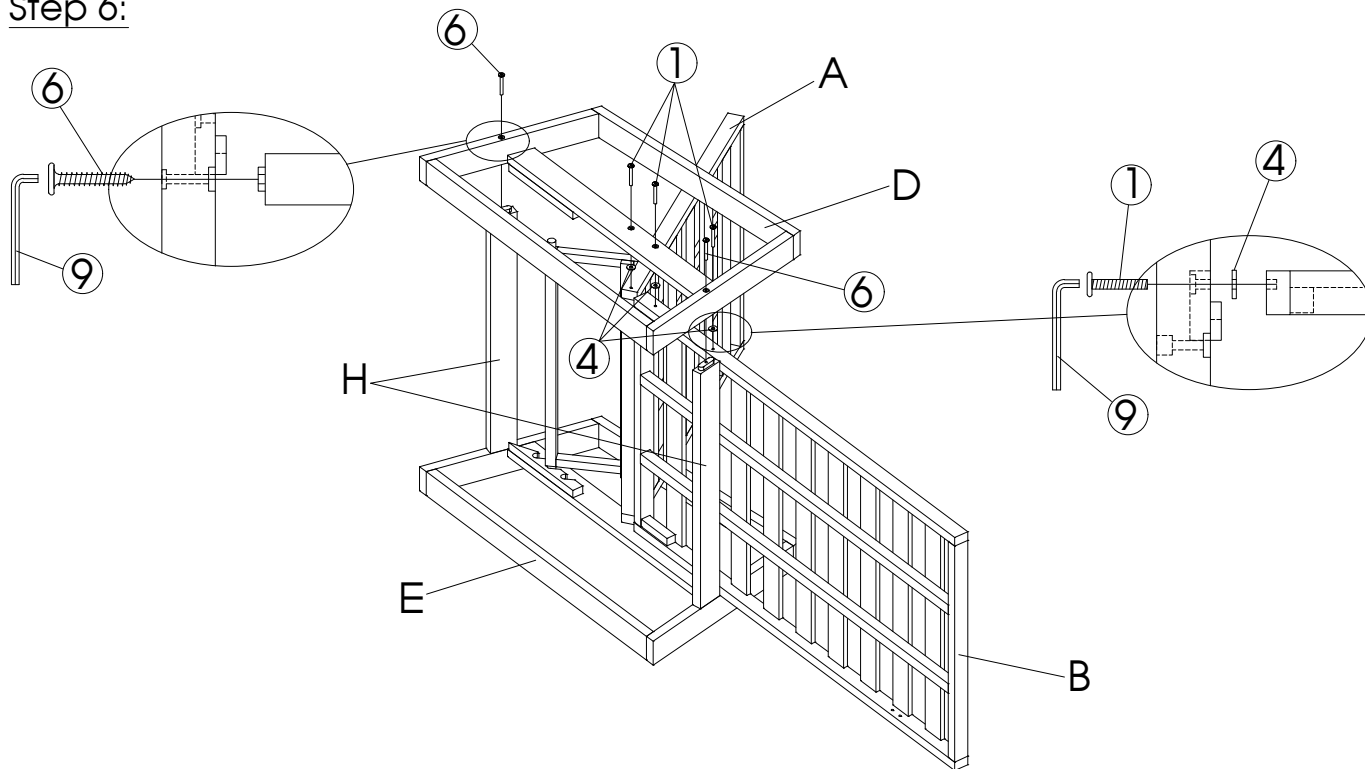


With assistance from your adult partners, turn pre-assemble part from Step 4 on its side; then place the Back Left Leg (D) in position.

Attach the Seat Panel (B) and Backrest Panel (A) to the Back Left Leg (D) by using 3 pcs of Bolts (1) and 3 pcs of Plastic Washers (4) with the Allen Wrench (9).

Then, secure 2 pcs of Back Connecting Bars (H) to the Back Left Leg (D) by using 2 pcs of Screws (6) with the Allen Wrench (9).

DO NOT fully tighten the Bolts and Screws at this time.

 
Step 7:

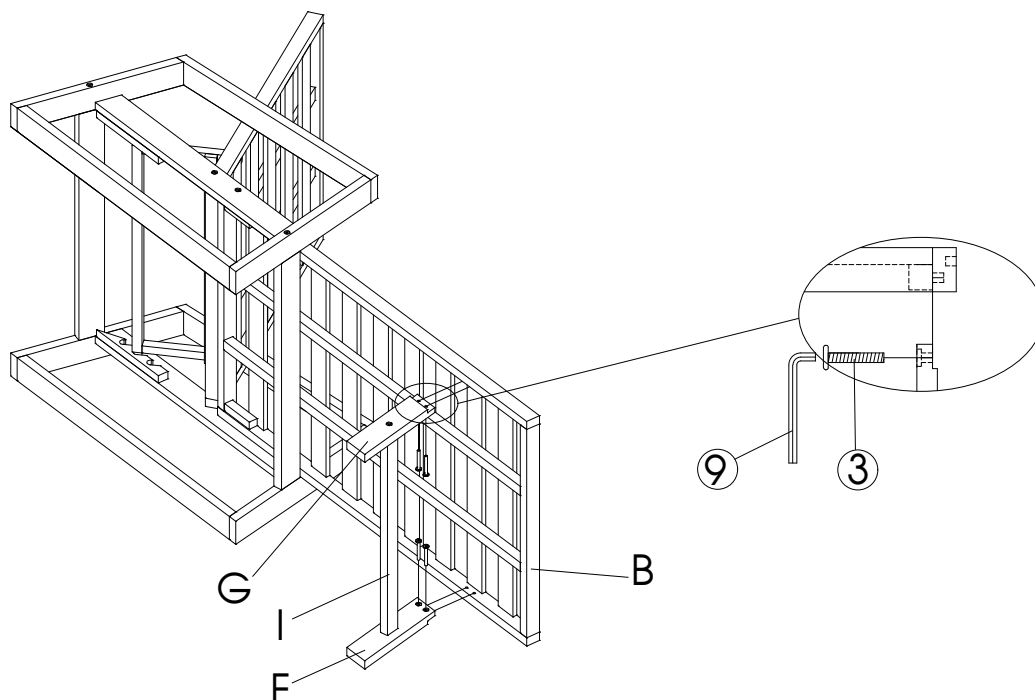

Attach the Front Leg Panel (G, F) from Step 3 to the Seat Panel (B) by using 4 pcs of Bolts (3) with the Allen Wrench (9).


DO NOT fully tighten the Bolts at this time.

 Step 8:

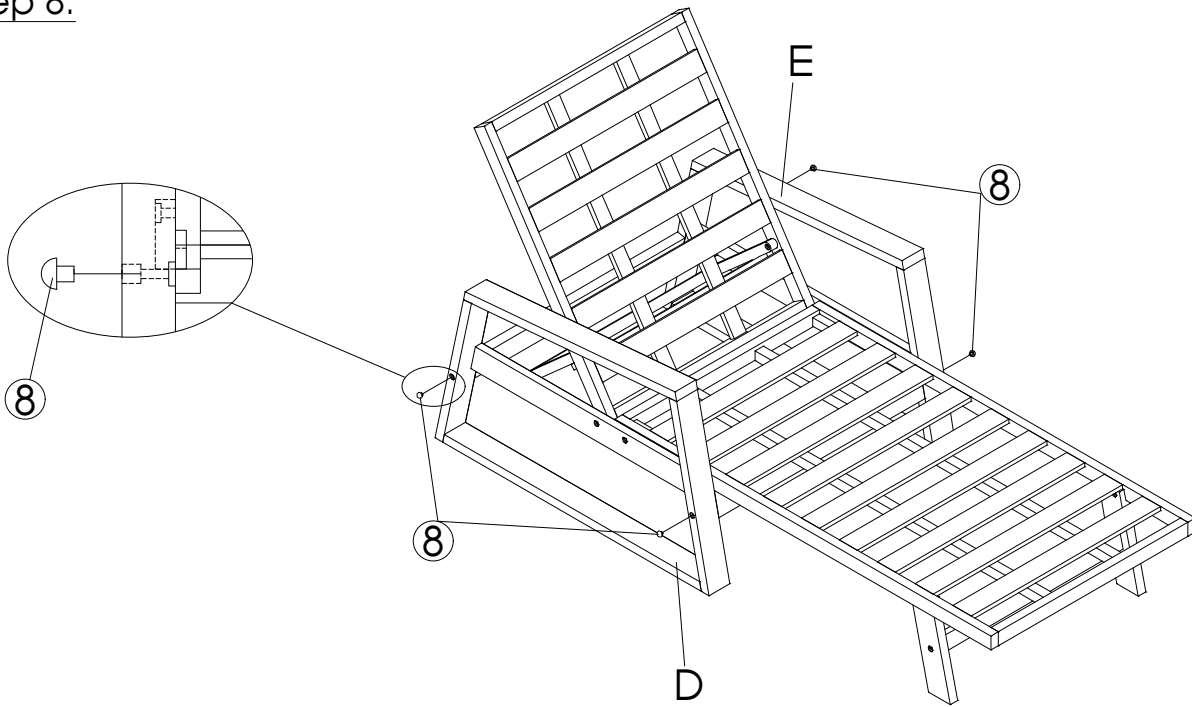


Insert 4 pcs of Bolt Covers (8) into the exposed holes.

 Step 9:

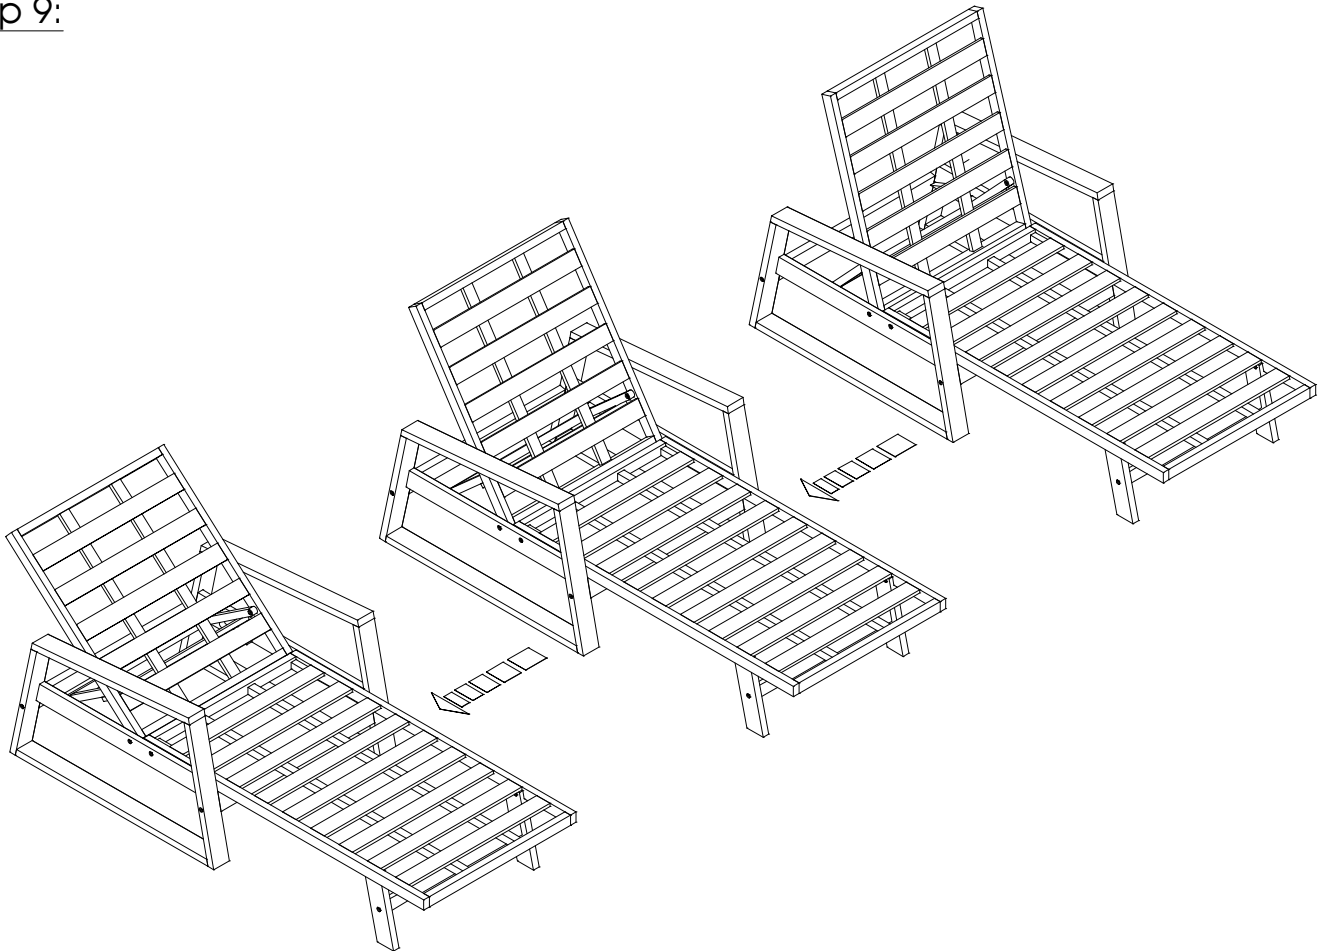

The Backrest of the Chaise Lounge is adjustable to multiple reclining positions.

 Step 10:

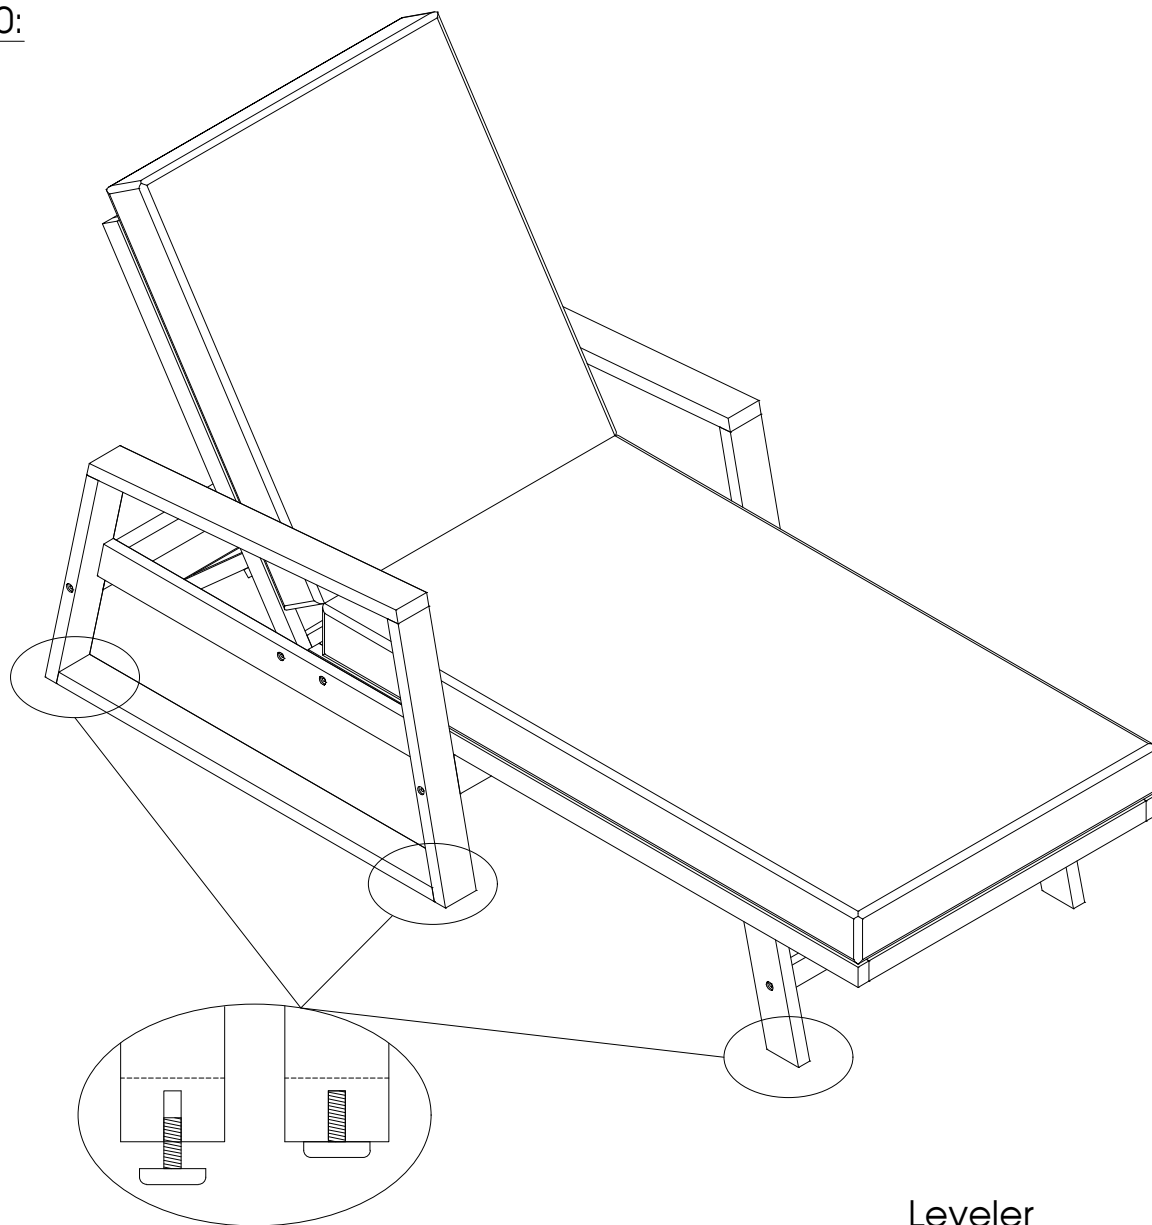

Leveler

Adjust high for balance

Adjust low for balance

Adjust Pre-installed Levelers height for balance

With assistance from your adult partners, turn the Chaise Lounge back to normal flat ground. Check for wobbles on a LEVEL surface. If no wobbles are found, proceed to tighten the Bolts and Screws in a sequential manner, until evenly secured.

CAUTION: When tightening these screws, tighten sequentially.

 
 
 
 
DO NOT tighten any screw fully and then move towards the next one. This could cause the frame to warp.

WARNING!! IF THE CHAISE LOUNGE IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT

If there are still wobbles, loosen the Bolts and Screws and execute the same above process.

With assistance from your adult partners, adjust the Levelers to the desired height to eliminate any remaining wobbles.

Step 11:

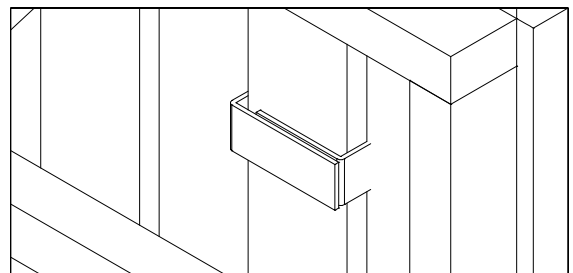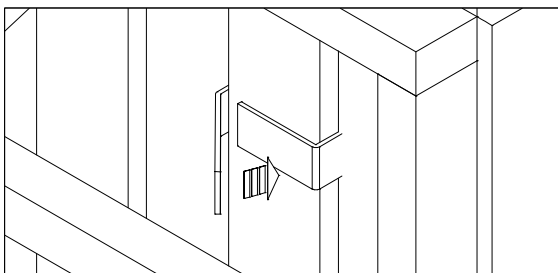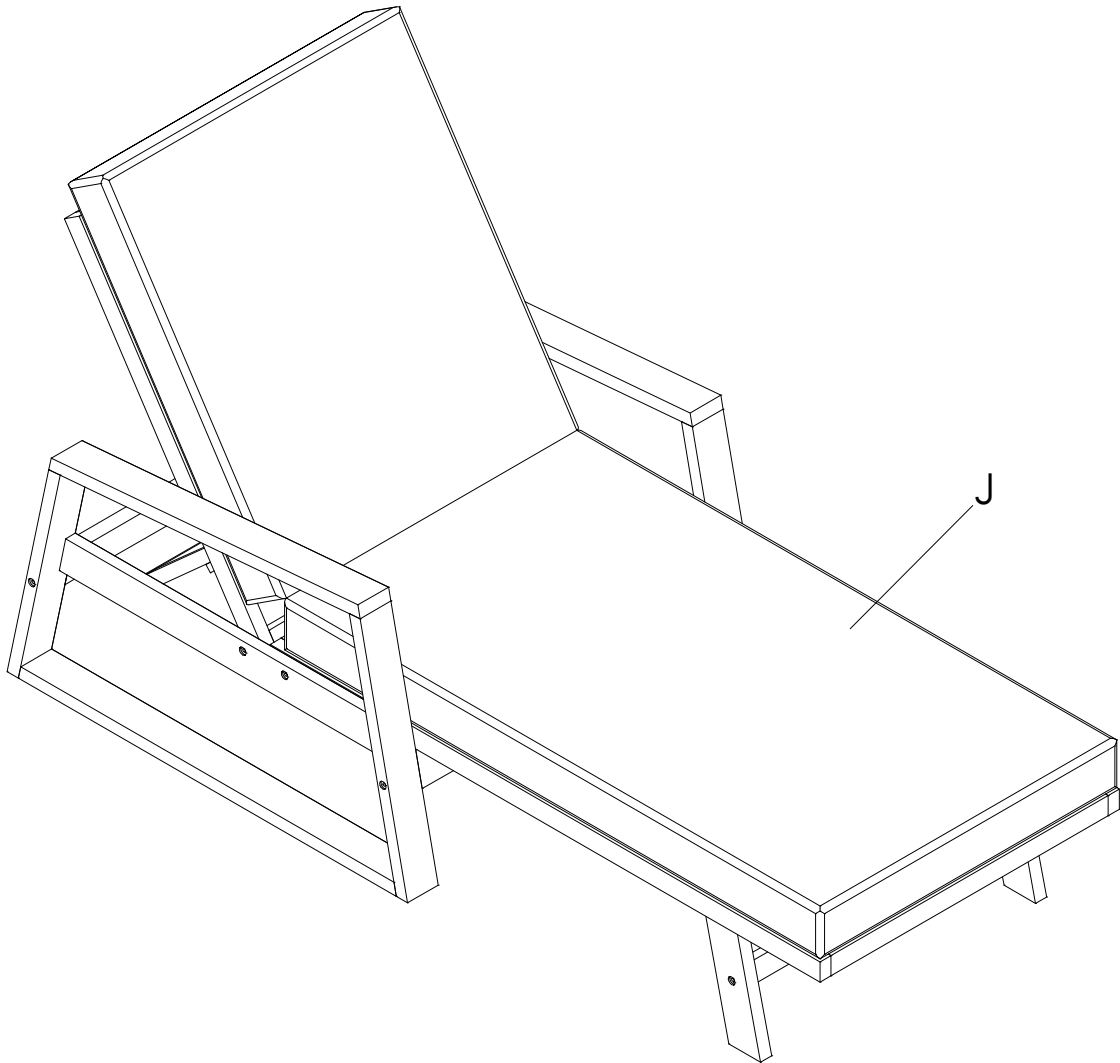

Place the Cushion (J) onto the Chaise Lounge as shown above.
Tie the magic tape directly to the Chaise Lounge frame.
Place the Chaise Lounge on a LEVEL surface
Inspect it and make sure all parts are adequately connected.
Align the Backrest of the Chaise Lounge in position you want as picture above.

Your Chaise Lounge is ready for use.
This Chaise Lounge can only be used on a flat, level surface.