 
 


 

 
 



 
 




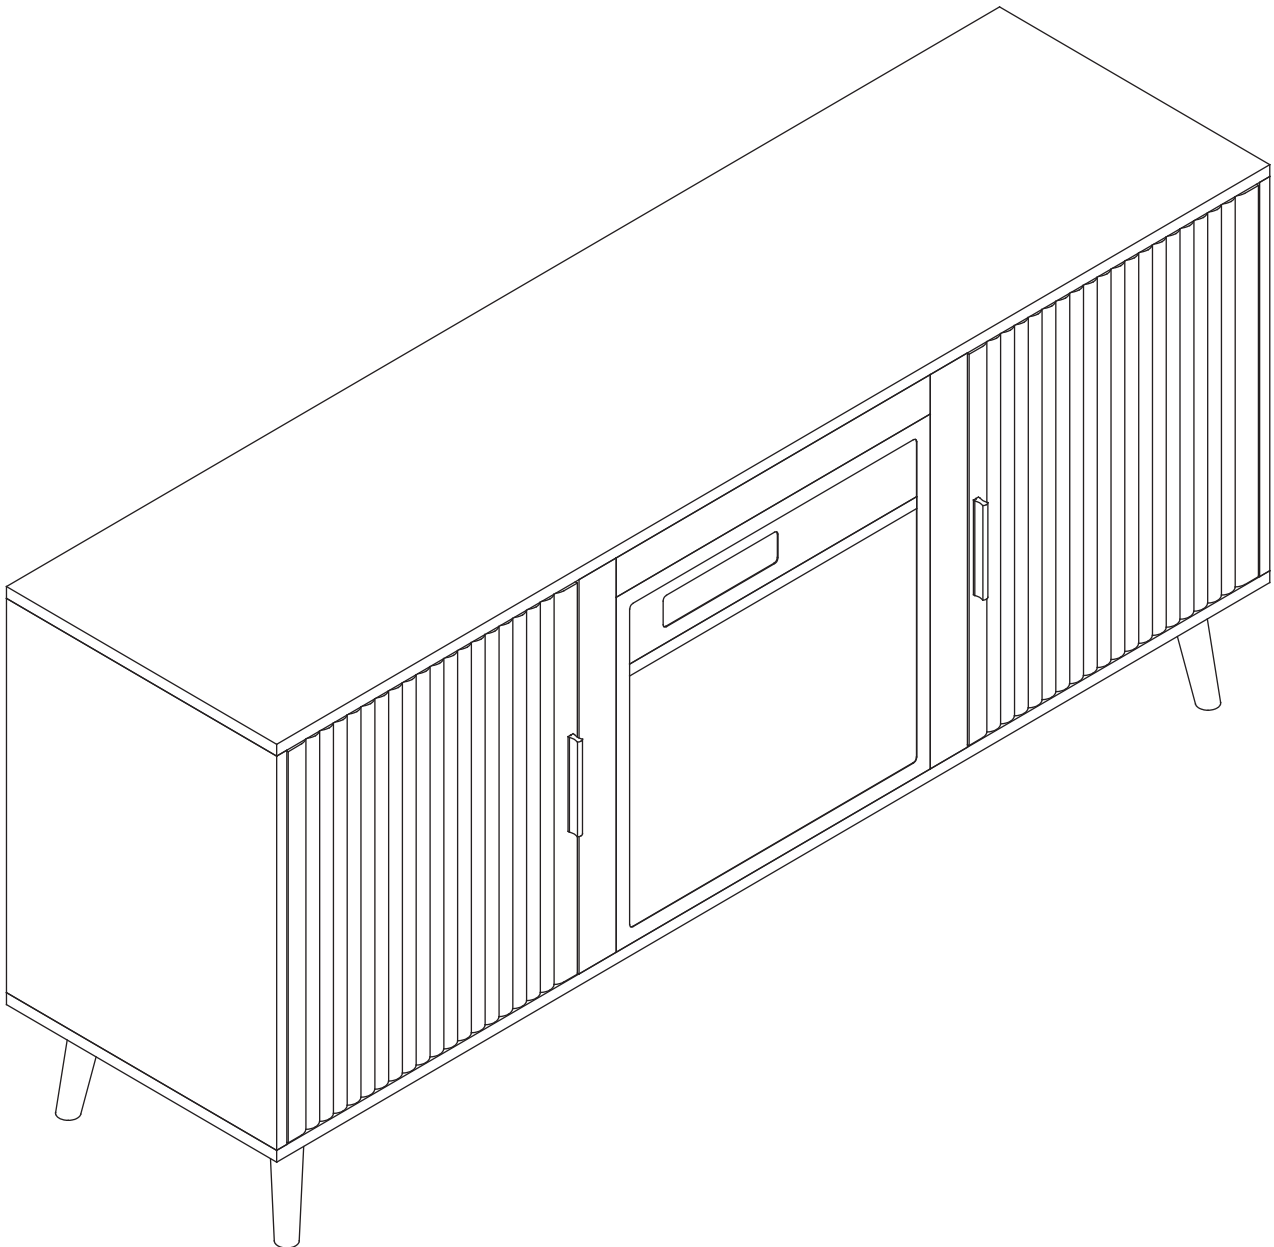


ASSEMBLY INSTRUCTIONS

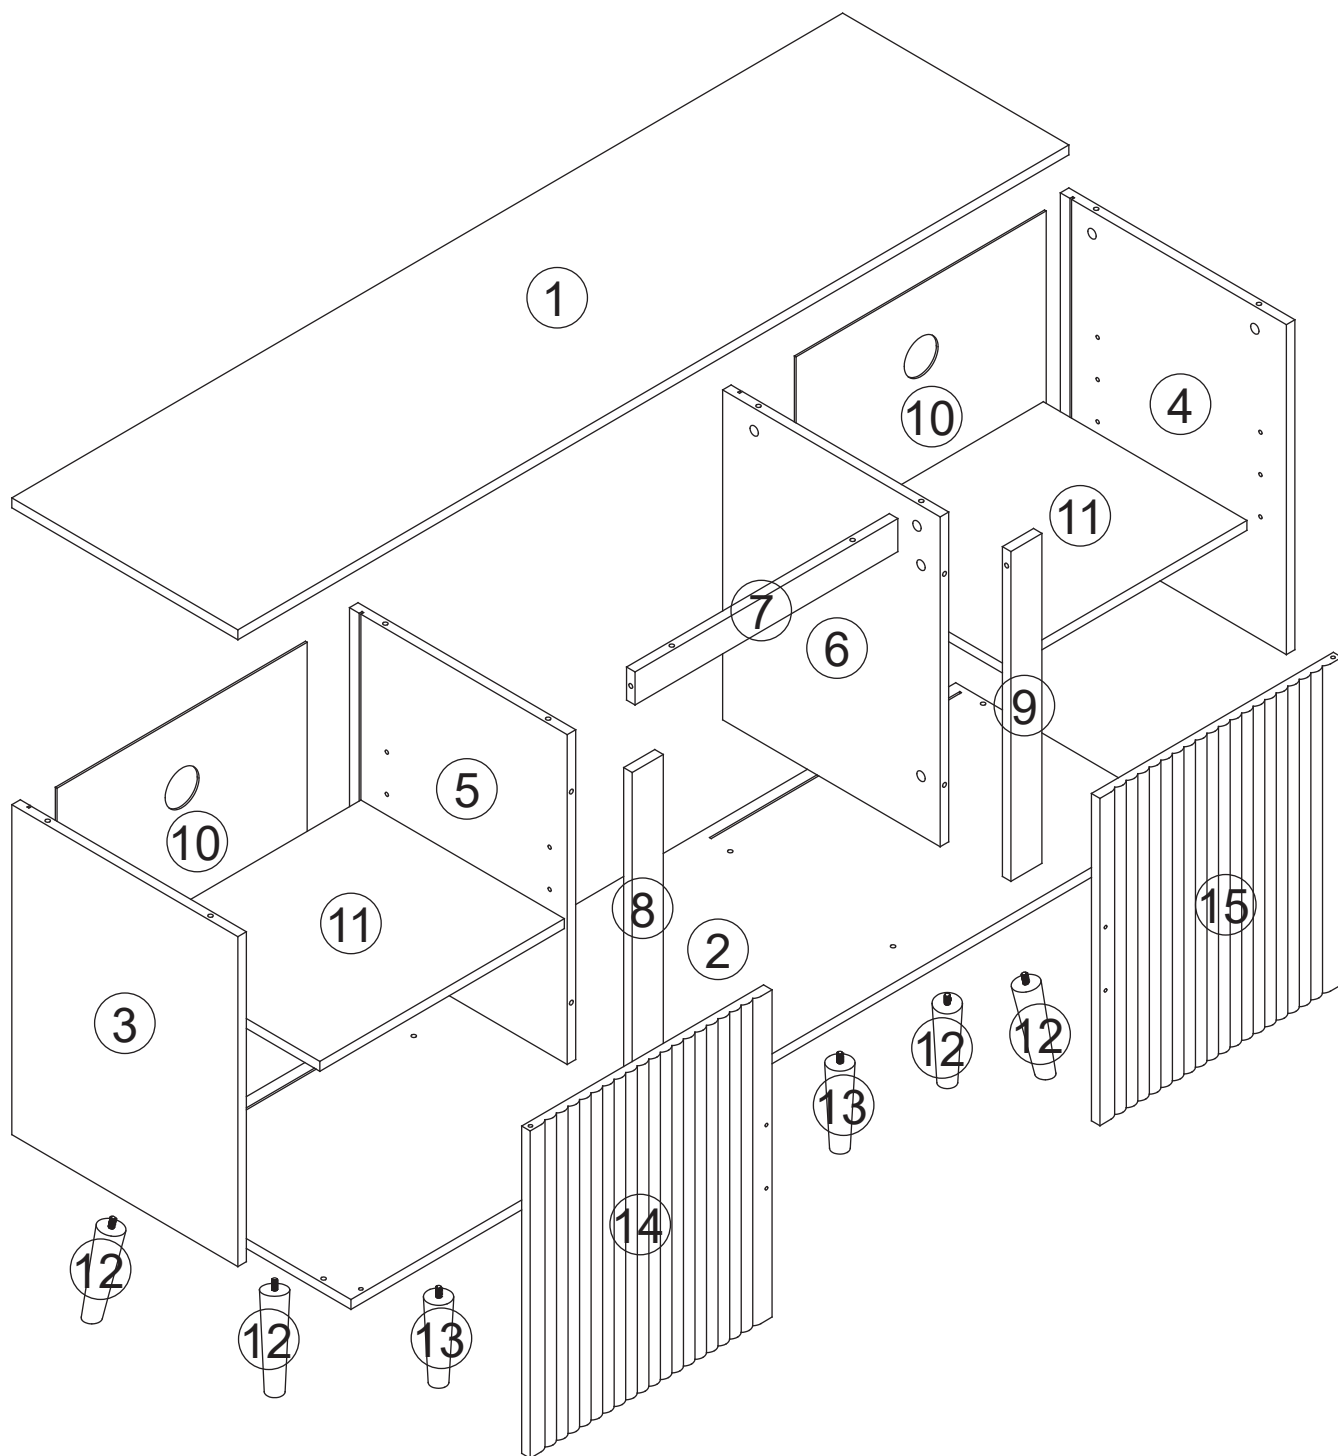

Attention: The Fireplace and TV stand come in TWO PACKAGES.
Please don't be confused if only one package was received.

   
Parts list




Ax14 	Bx14 	Cx14 	Dx8 	Ex8 	Fx38  M3.5x14
Gx4 	Hx2 	Ix2 	Jx4 	Kx2 	Lx4 
Mx2 	Nx2 	Ox4 	Px4  M3.5x12		

Installation steps

 STEP 1

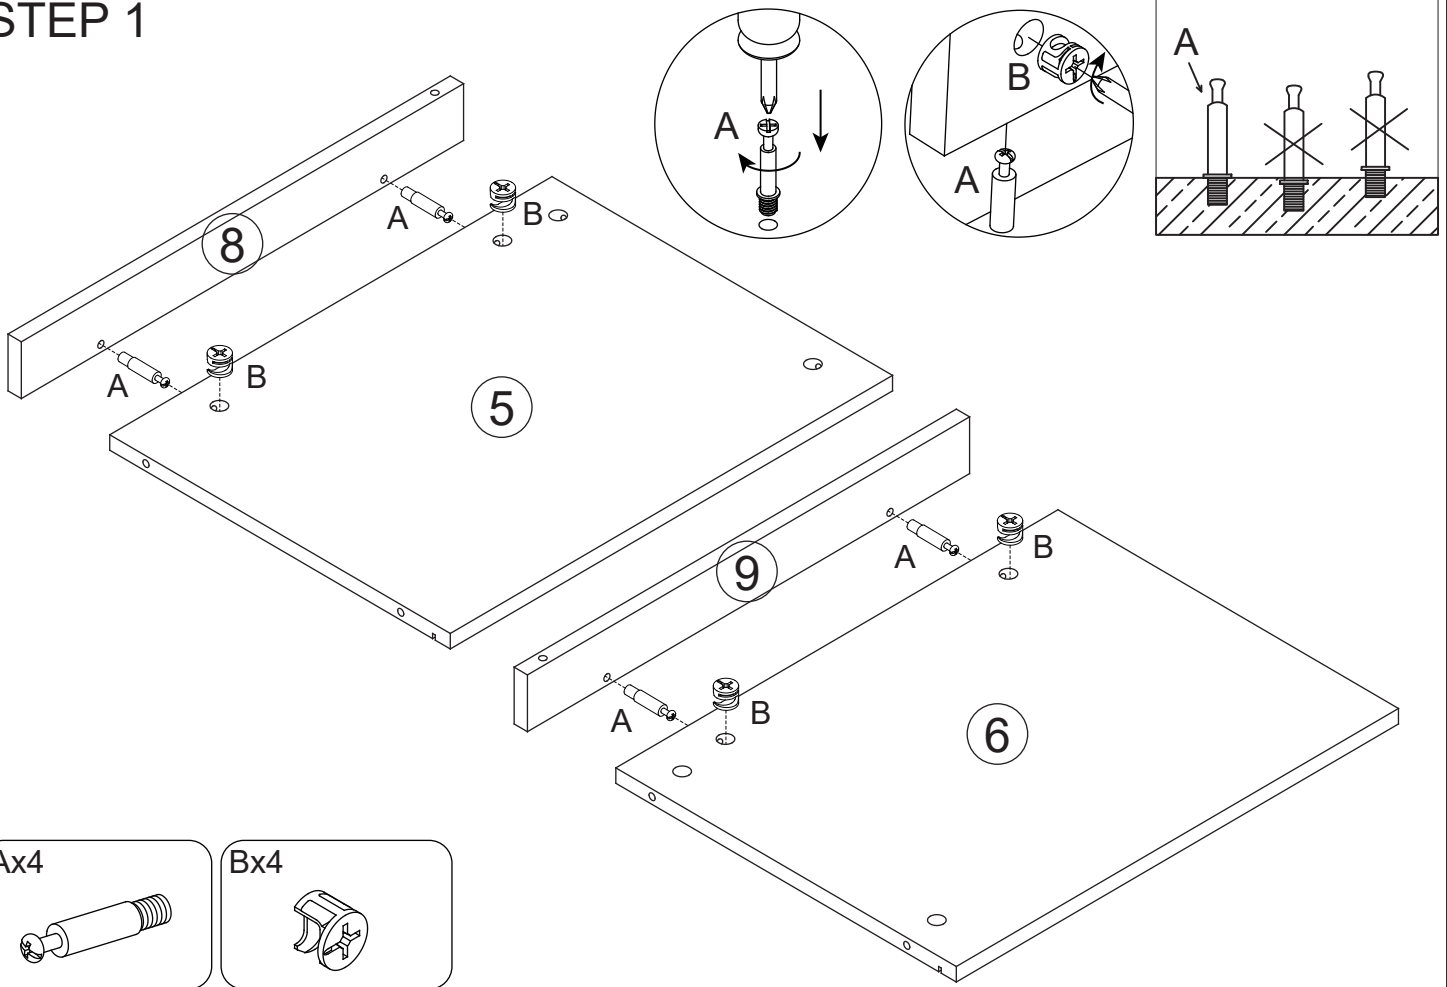


 STEP 2

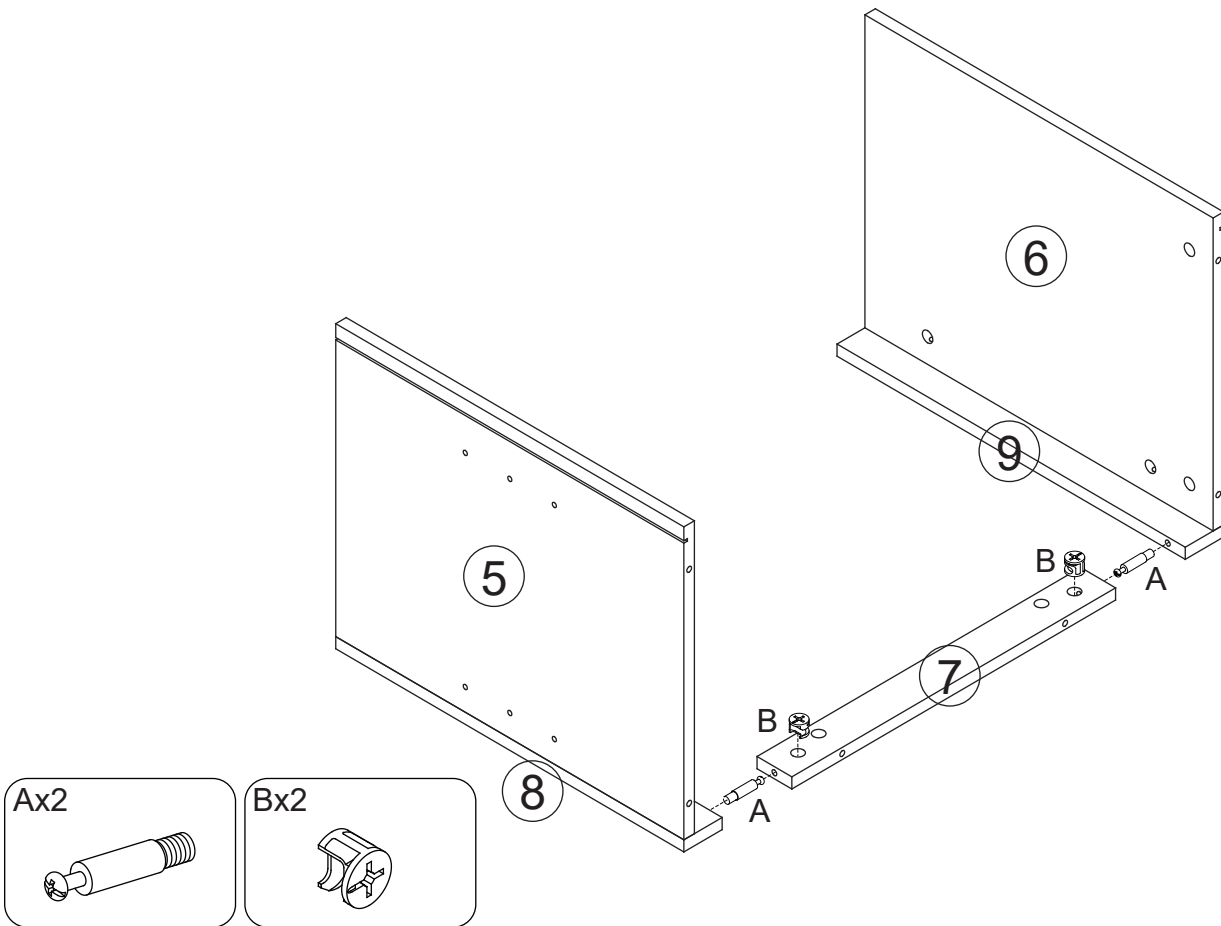


Installation steps

 
STEP 3

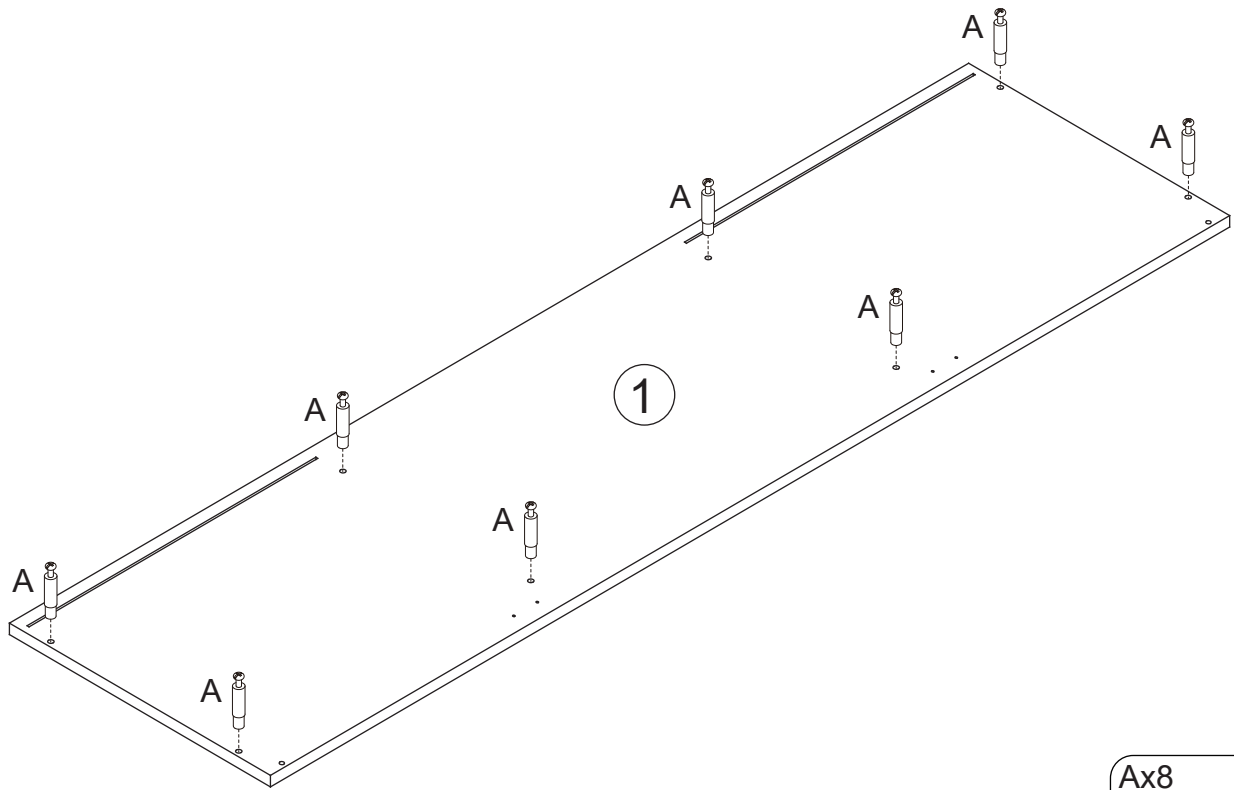


Ax8

 

 STEP 4

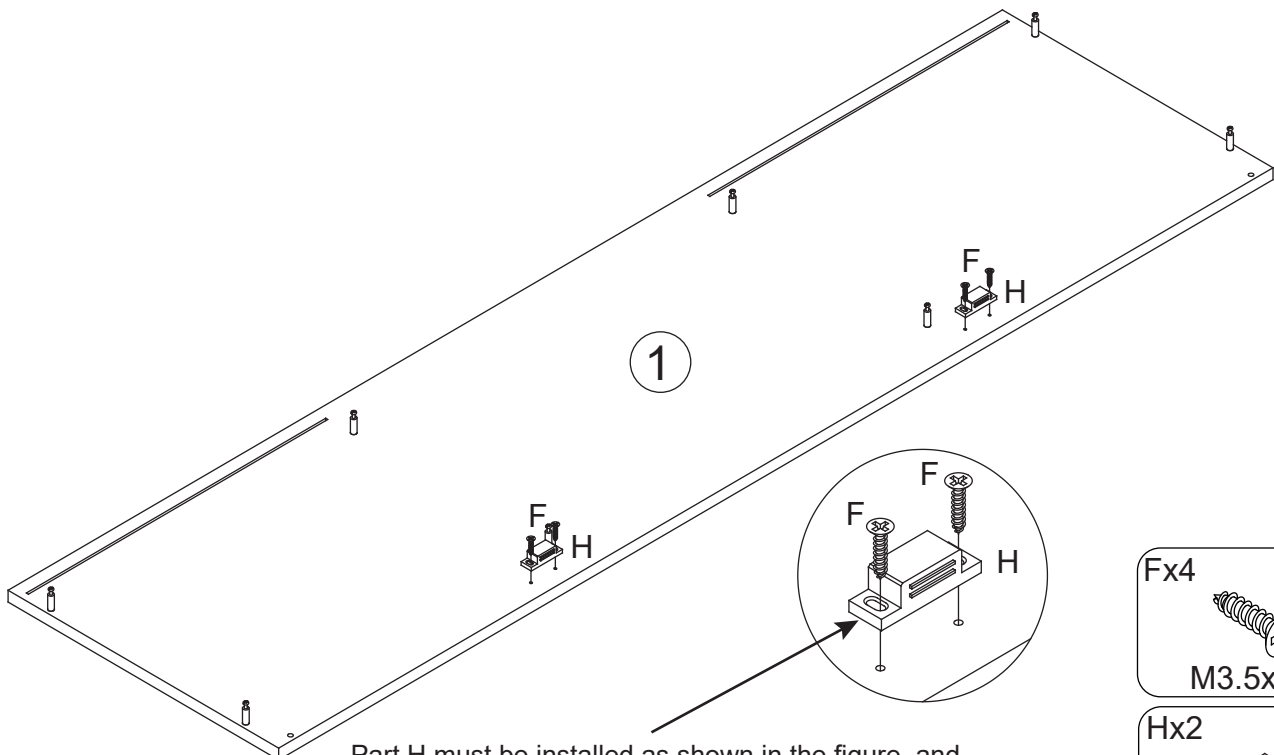


Fx4

 

M3.5x14

 Hx2





Part H must be installed as shown in the figure, and its position can be adjusted forward or backward through the oval holes.

Installation steps

STEP 5

  Ensure that the groove edges are all on the same side.

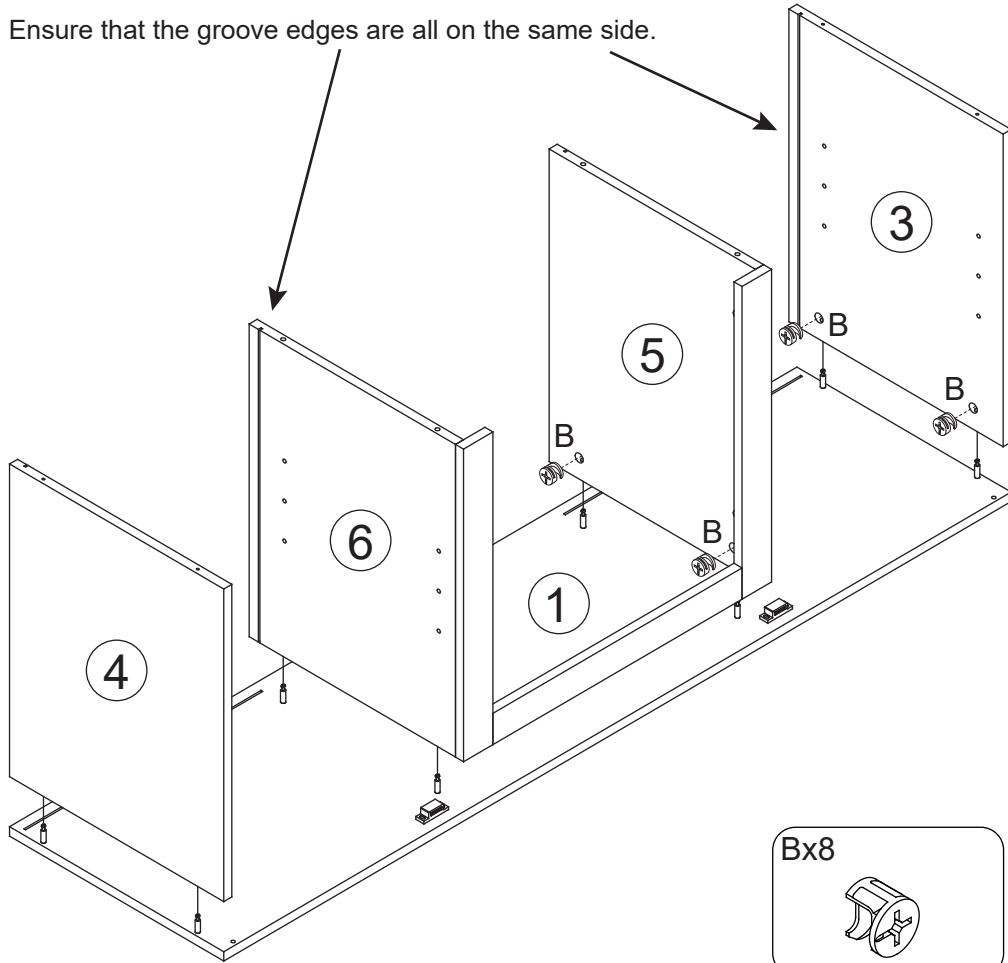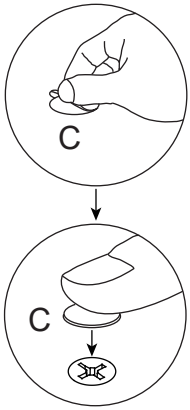

Bx8




Cx14



STEP 6


 
Please ensure that Plate 10 is fully installed into the groove.

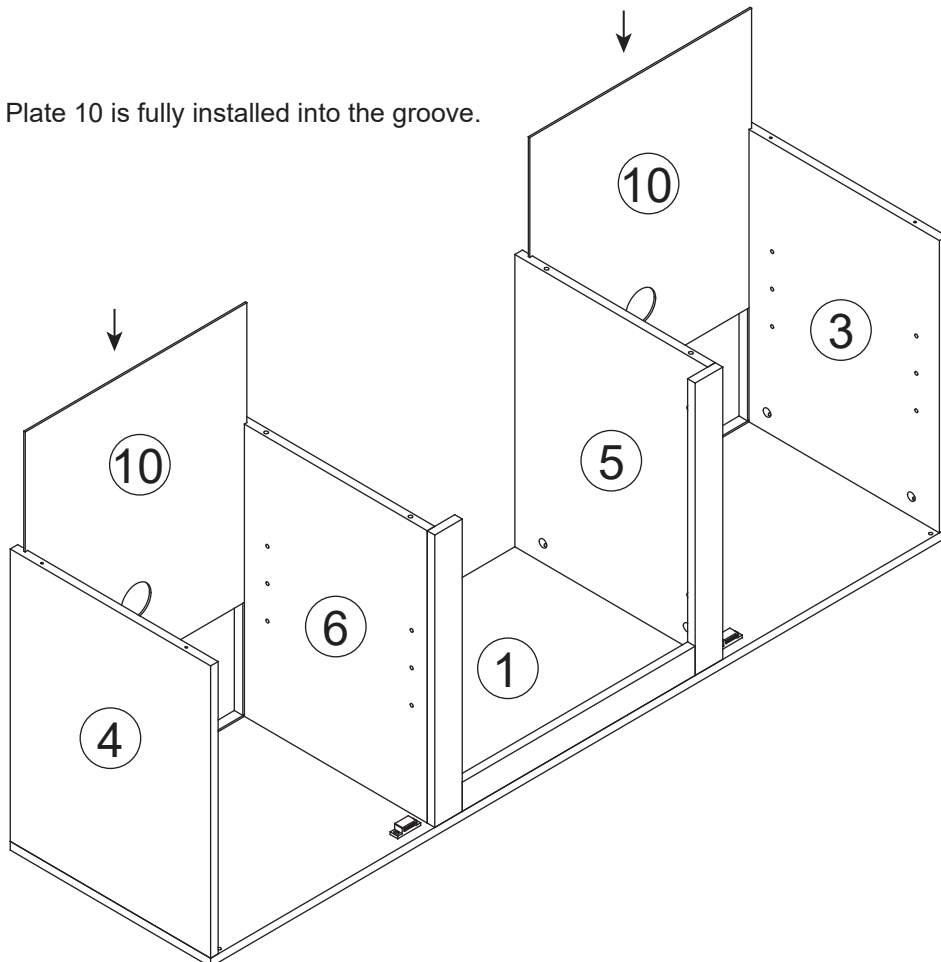


Installation steps

STEP 7


 
 
The purpose of the middle screw hole is to protect the baseboard from damage caused by excessive installation force when attaching cabinet legs.

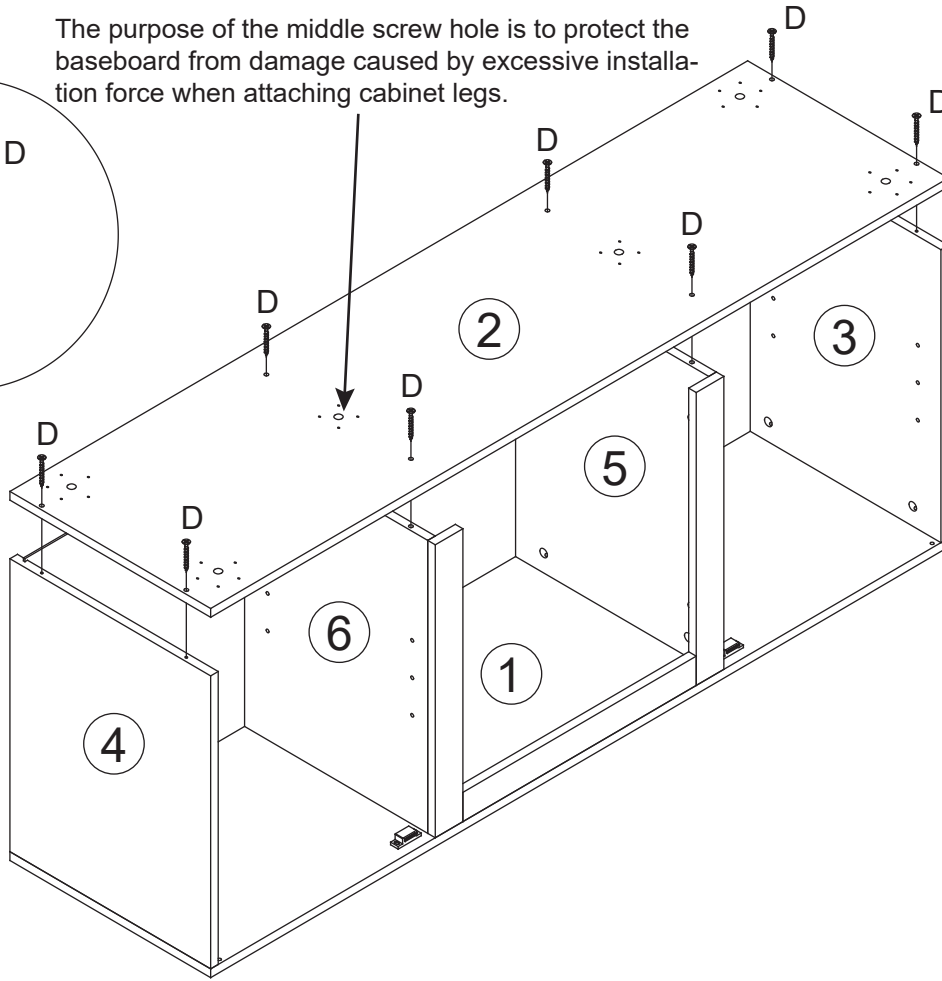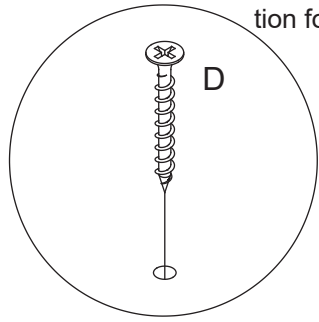

Dx8

 


   STEP 8

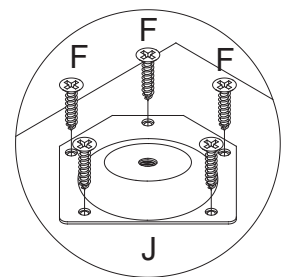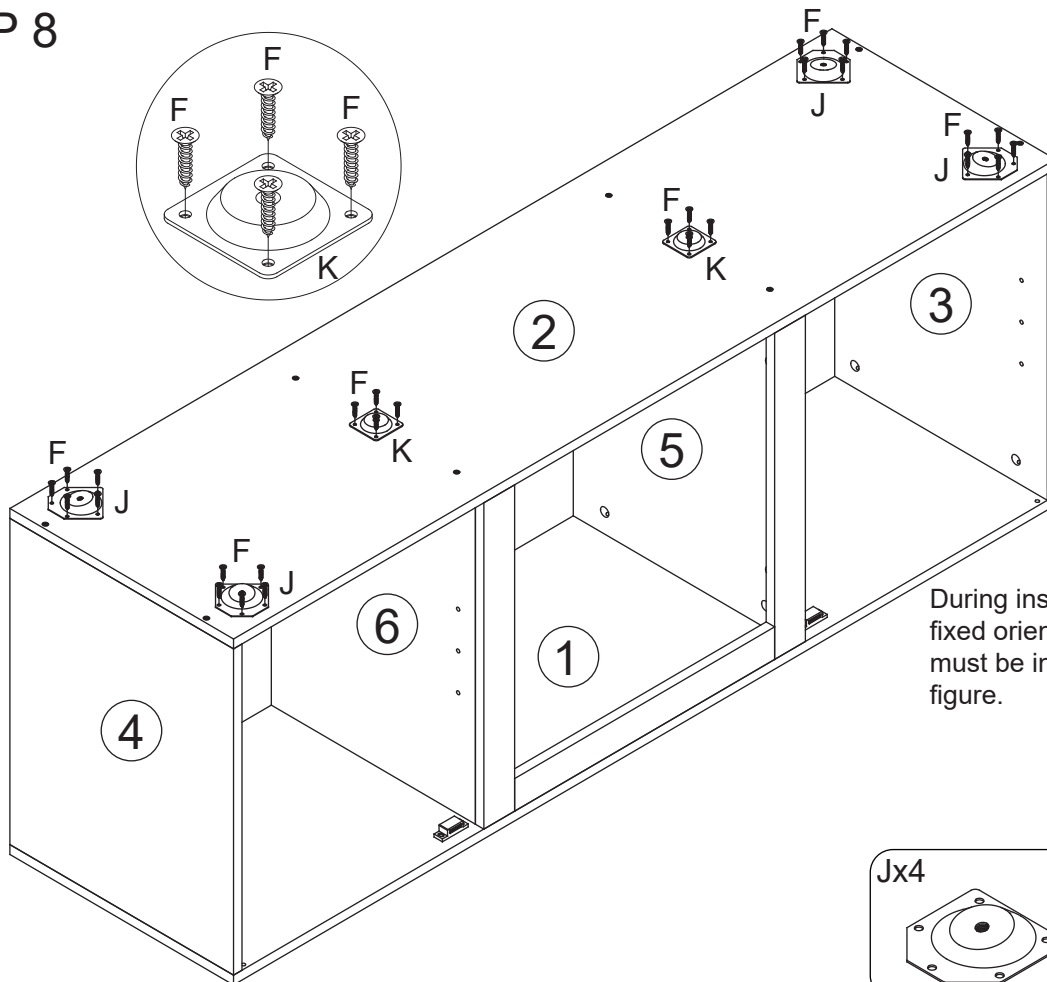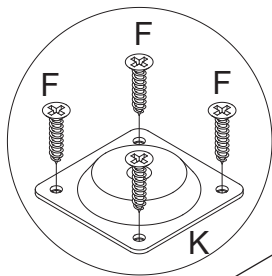


During installation, please note the fixed orientation of Part J, which must be installed as shown in the figure.

 Fx28



M3.5x14

 Jx4




Kx2




Installation steps

STEP 9

 Please note that the Part 13 (Tabel feet) are designed to accommodate height-adjustment screws. They are different with Part 12.

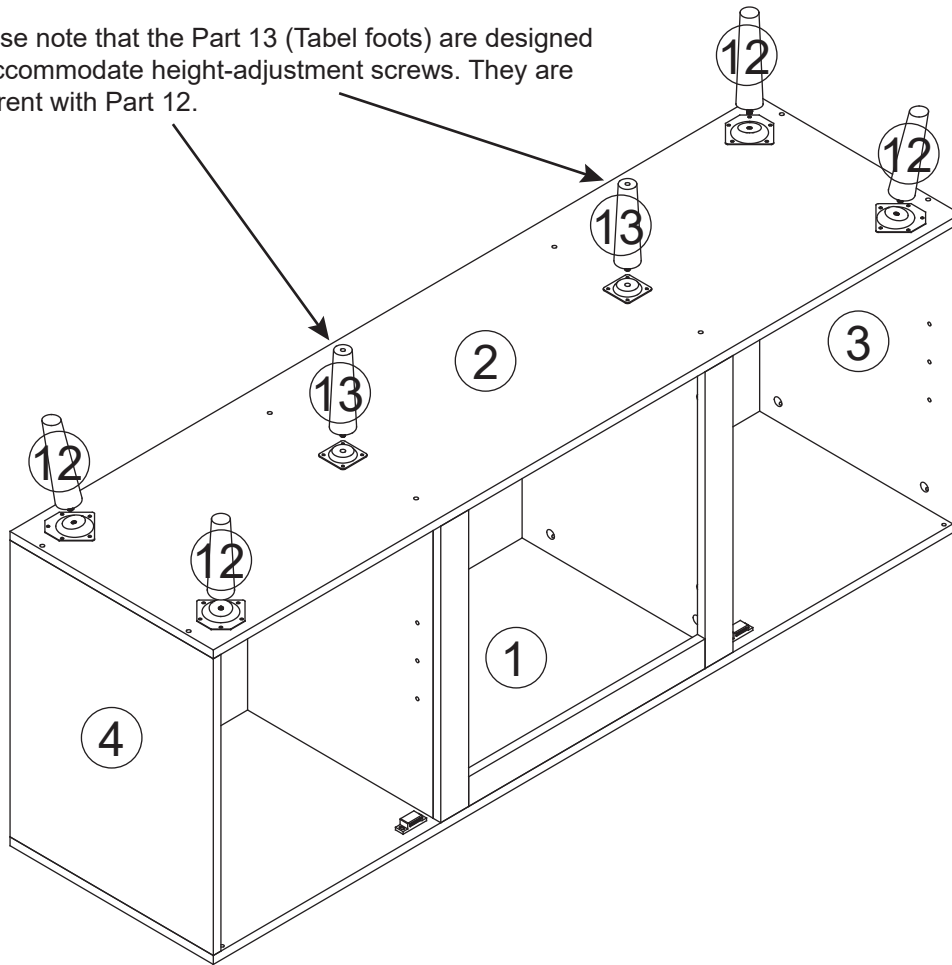


 STEP 10

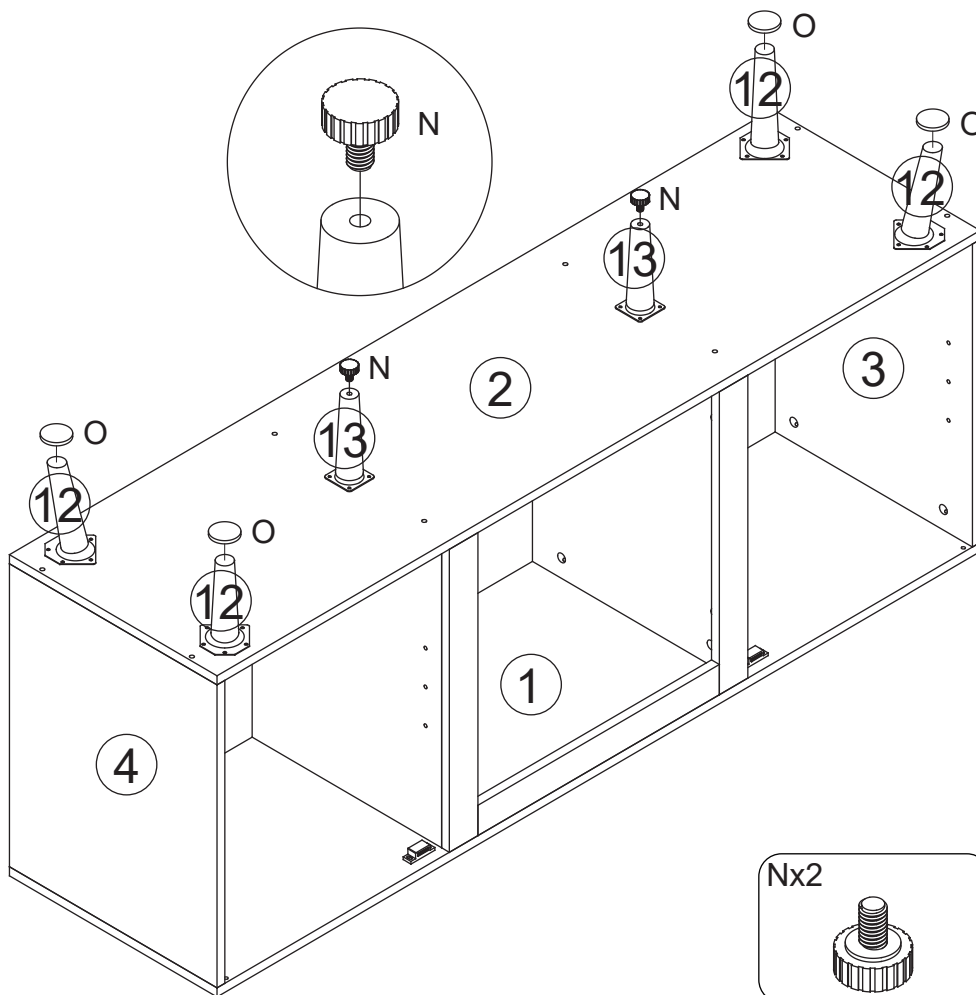

Installation steps

 
STEP 11

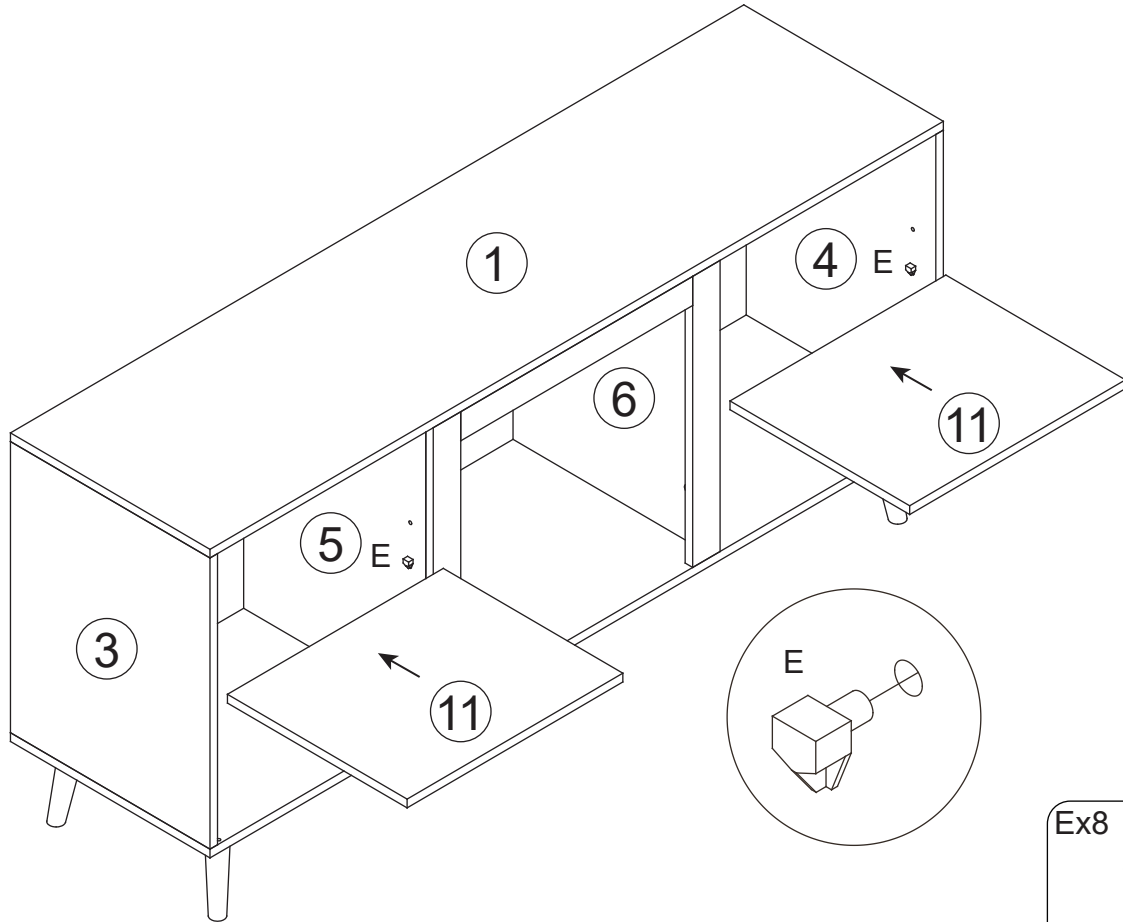


STEP 12



 STEP 13


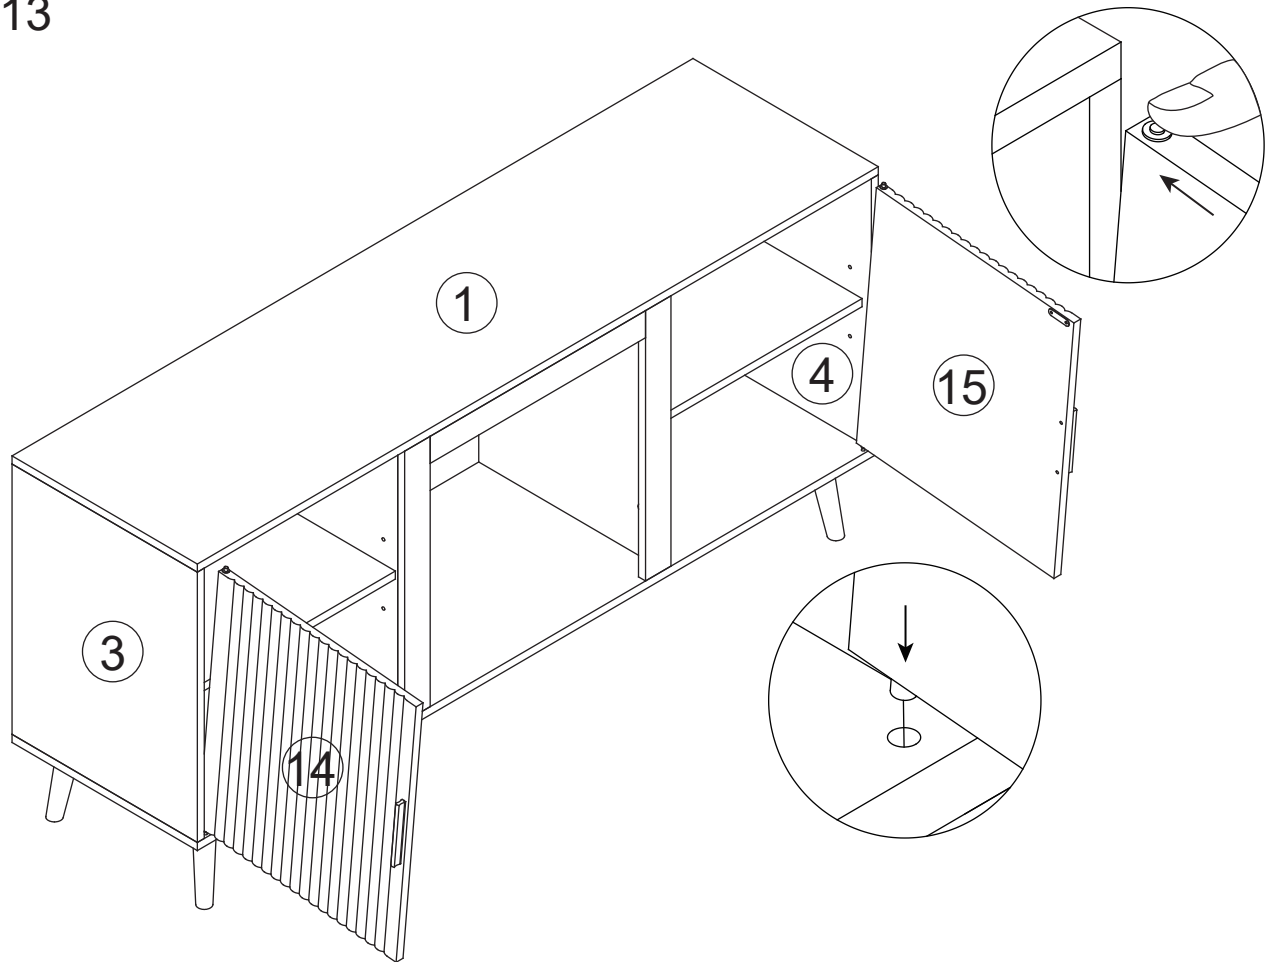


 The Fireplace and TV stand come in **TWO PACKAGES**.
Please don't be confused if only one package was received.

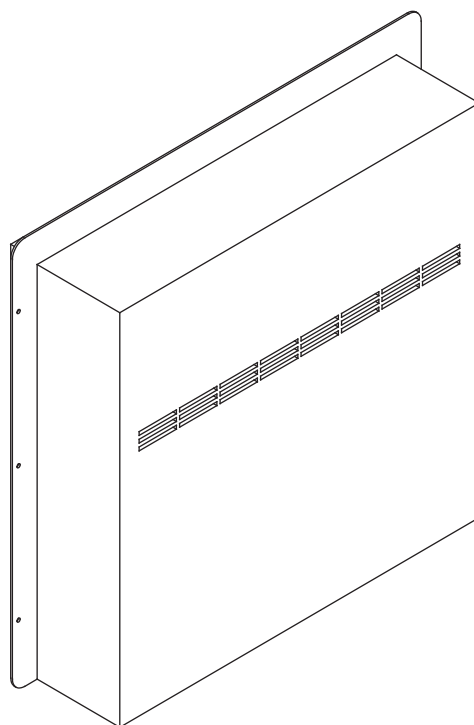


STEP 14

  Push the fireplace into TV stand from rear.
To enhance the impact resistance of the wooden panel, pre-drilled holes were not provided. Please determine the drilling positions yourself and install the fireplace accordingly. The panel material is easy to drill.

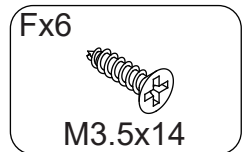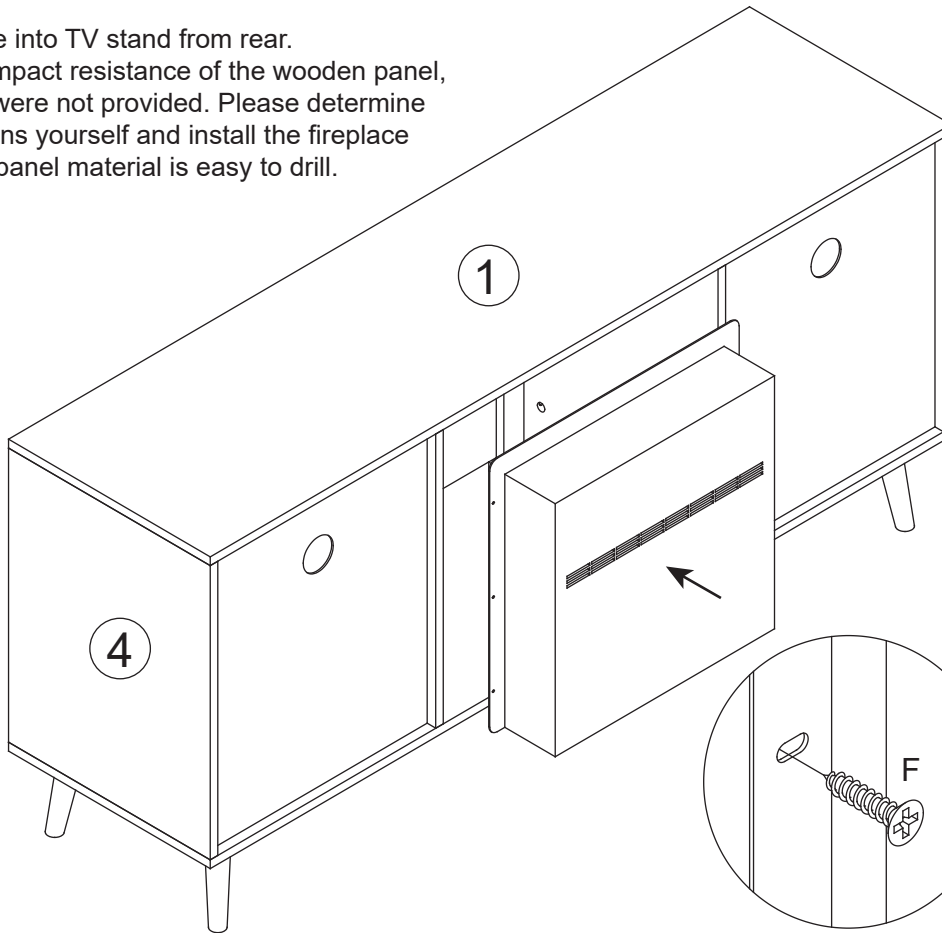

 STEP 15

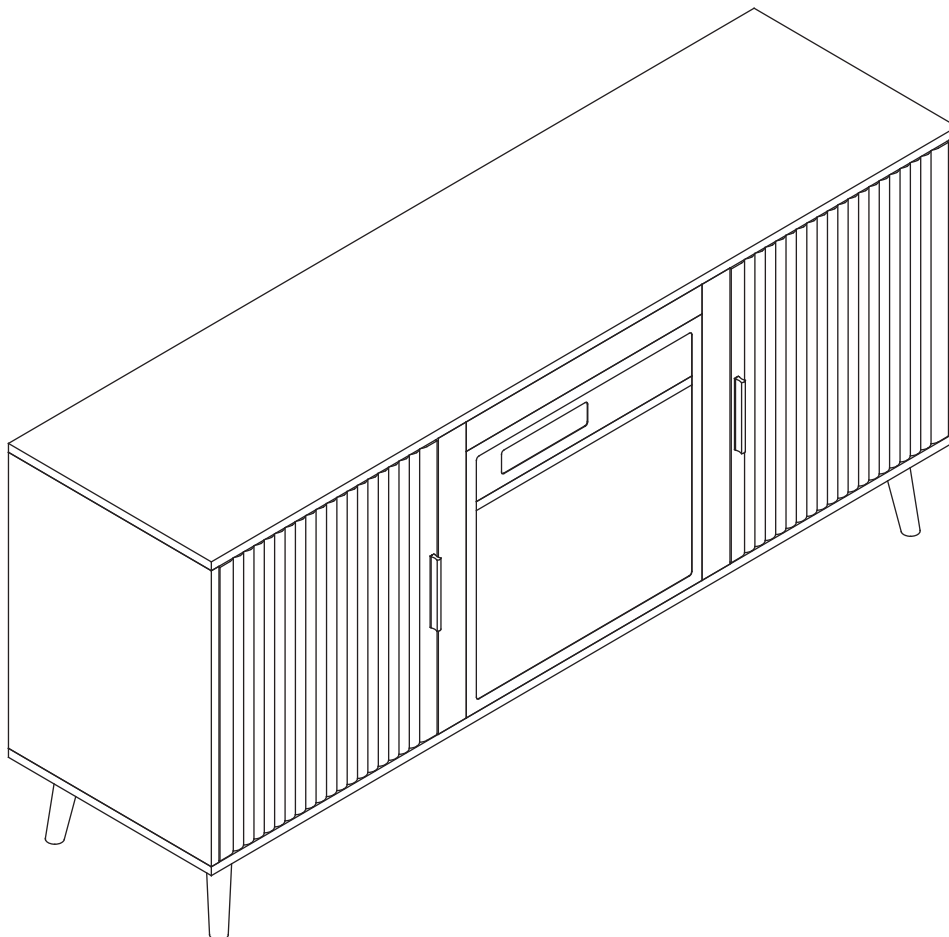

HELP CENTER

WE STAND BEHIND THE QUALITY OF OUR PRODUCT

1. If you have any other issues with your item(s), please feel free to contact us! We will always do our best to come up with a solution that you will be happy with.
2. Please get in touch with our customer service team before returning the item(s).
3. Please do not throw away the original box(es) if you have not finished assembling and confirmed no quality issues.

RETURN POLICY

Length of return period:

You can return the item(s) within 30 days of purchase.

In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in materials or workmanship. For example, material cracking or screw hole misalignment. We will send you a prepaid shipping label after you send us photos or videos of the defects.
2. Your item has been damaged in transit. For example, metal part is broken or product is damaged. We will send you a prepaid shipping label after you send us photos of the damage.
3. You receive the wrong box(es) due to a warehouse error, We will send you a prepaid shipping label after you send us photos of the item(s), shipping label(s) and words(SKU) on the outer box(es).

* However, we still hope to work with you for a better solution instead of a return. Please don't hesitate to contact our customer service team.

Customer will cover the return shipping fees if:

1. You don't like the item(s) after receiving the box(es).
2. You no longer need the item(s) but have received the box(es).
3. You buy the item(s) by mistake but have received the box(es).
4. Order/shipment cancellation failed, and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be:

1. In a brand new/unused condition. Please provide photos before and after packaging.
2. All accessories and parts must be firmly packed in all original packaging before returning. If your return does not meet these requirements, you may not receive a full refund.

When can I receive a refund?

After you return it using the prepaid shipping label we provided and inform us, the refund will be issued once the package(s) have been returned to our warehouse.

What can I do if the product is damaged after warranty?

We want you to be a happy customer. Please reach out to us via email or text, and we will work on a solution to ensure your satisfaction.