

 
Assembly Instructions

9095990 TV Stand - Black & Prairie Oak


Product Issues? Please Call Us Before Contacting Your Retailer At 1-800-549-3300.

Email customerservice@mshome.co, or visit www.mshome.co


We can help with Assembly Issues, Part Requests, Damages, & All Other Product Related Questions

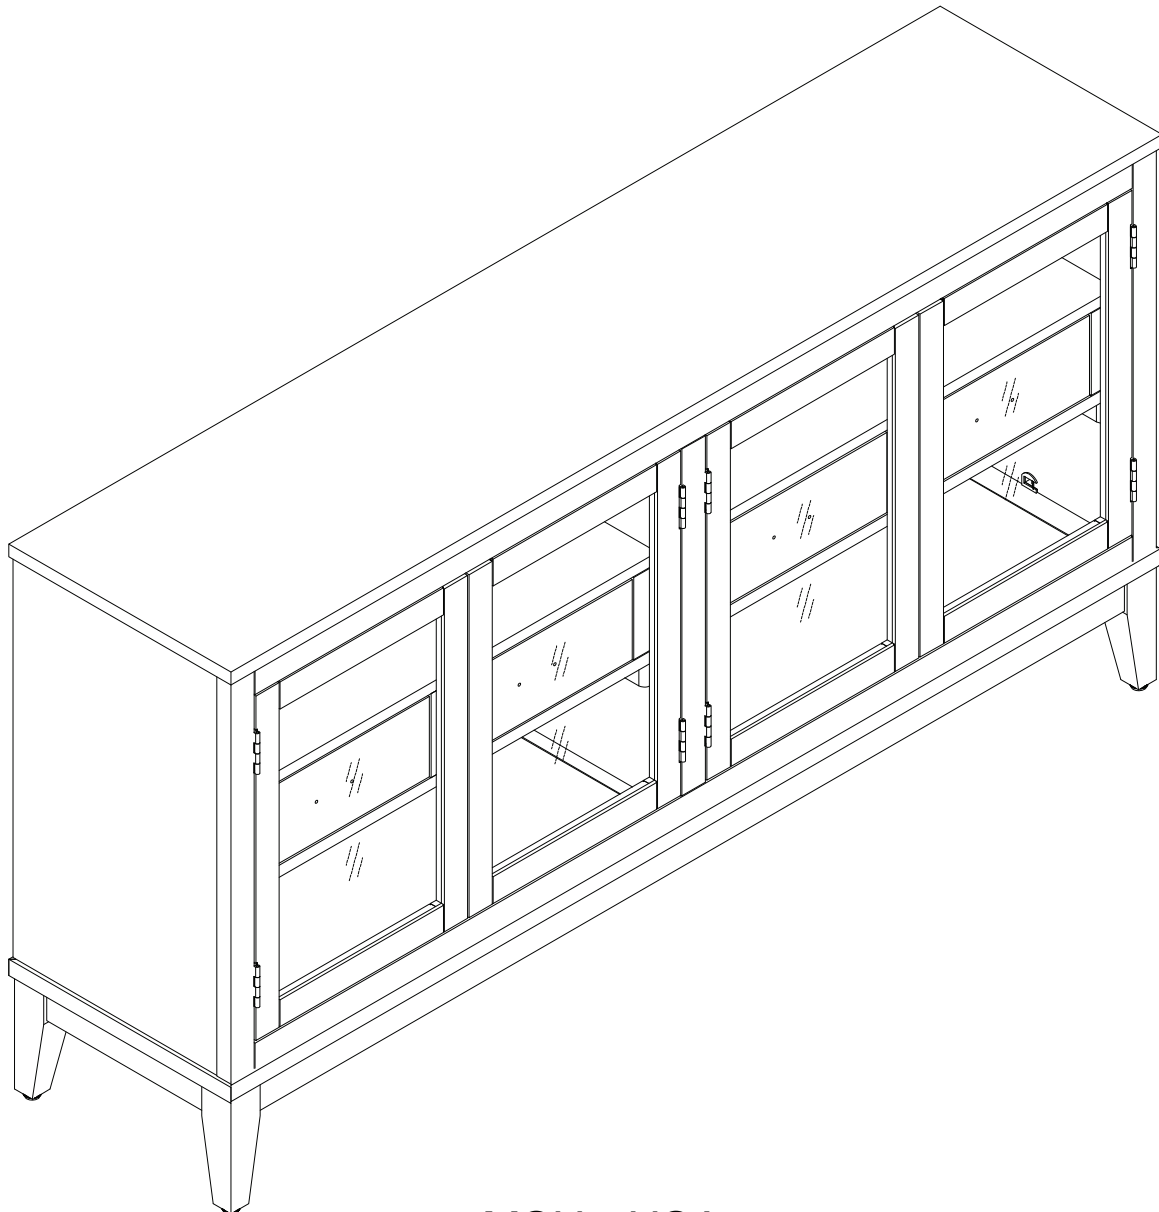



MSH - USA

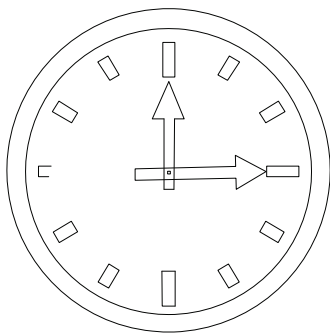 


15 min

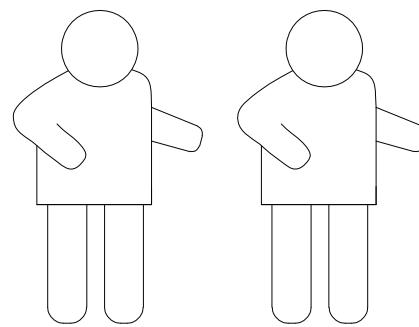 

Two People Required
for Assembly

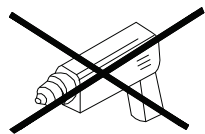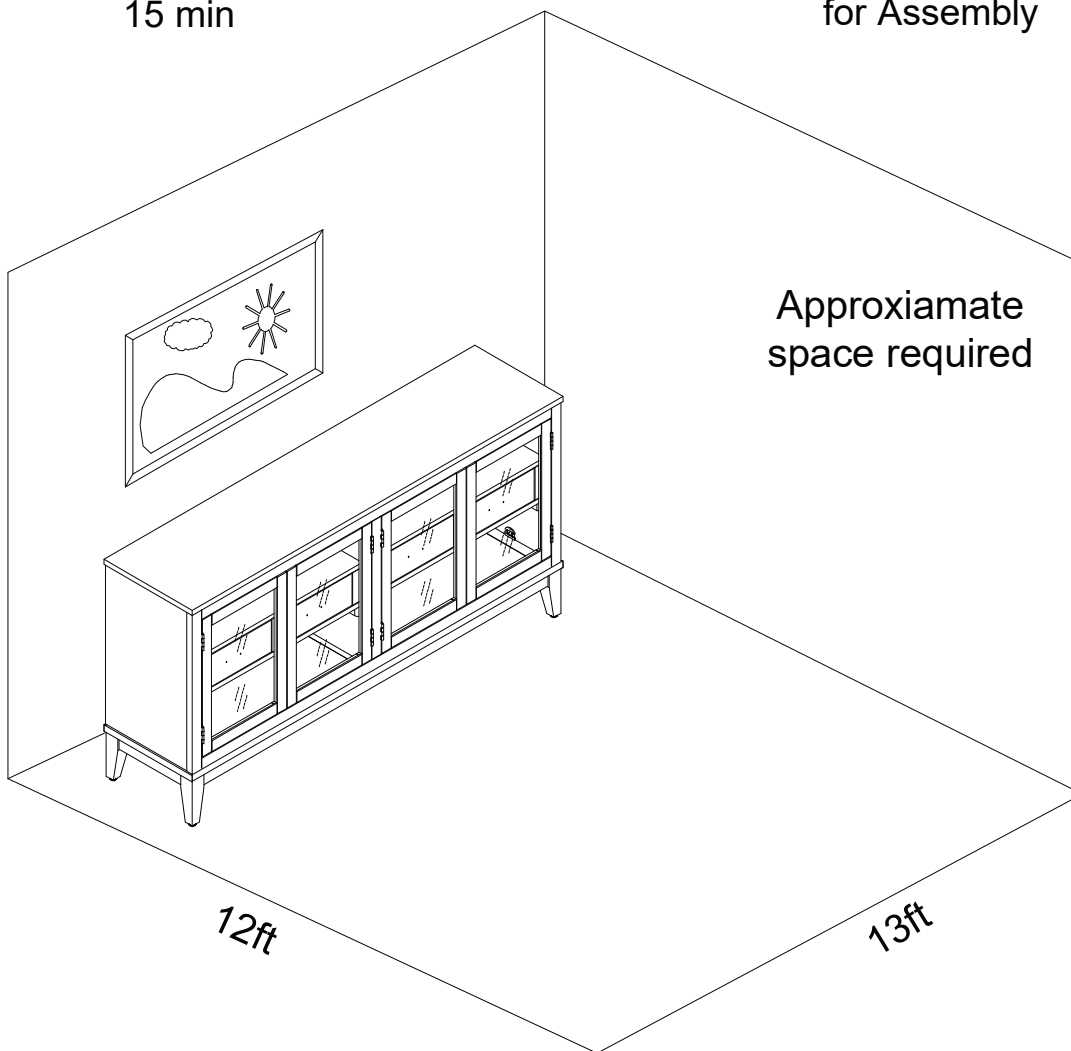  


Do Not Use Power Tools

 





Phillips Head
Not Provided


PARTS INCLUDED: 9095990

 - (C1) Top Panel x 1
- (C2) Left Side Panel x1
- (C3) Right Side Panel x 1
- (C4) Front Frame x1
- (C5) Partition Panel x 1
- (C6) Bottom Frame x 1
- (C7) Drawer Module x 2
- (C8) Back Panel x 1
- (C9) Leg Frame x 4
- (C10) Support Leg x 1

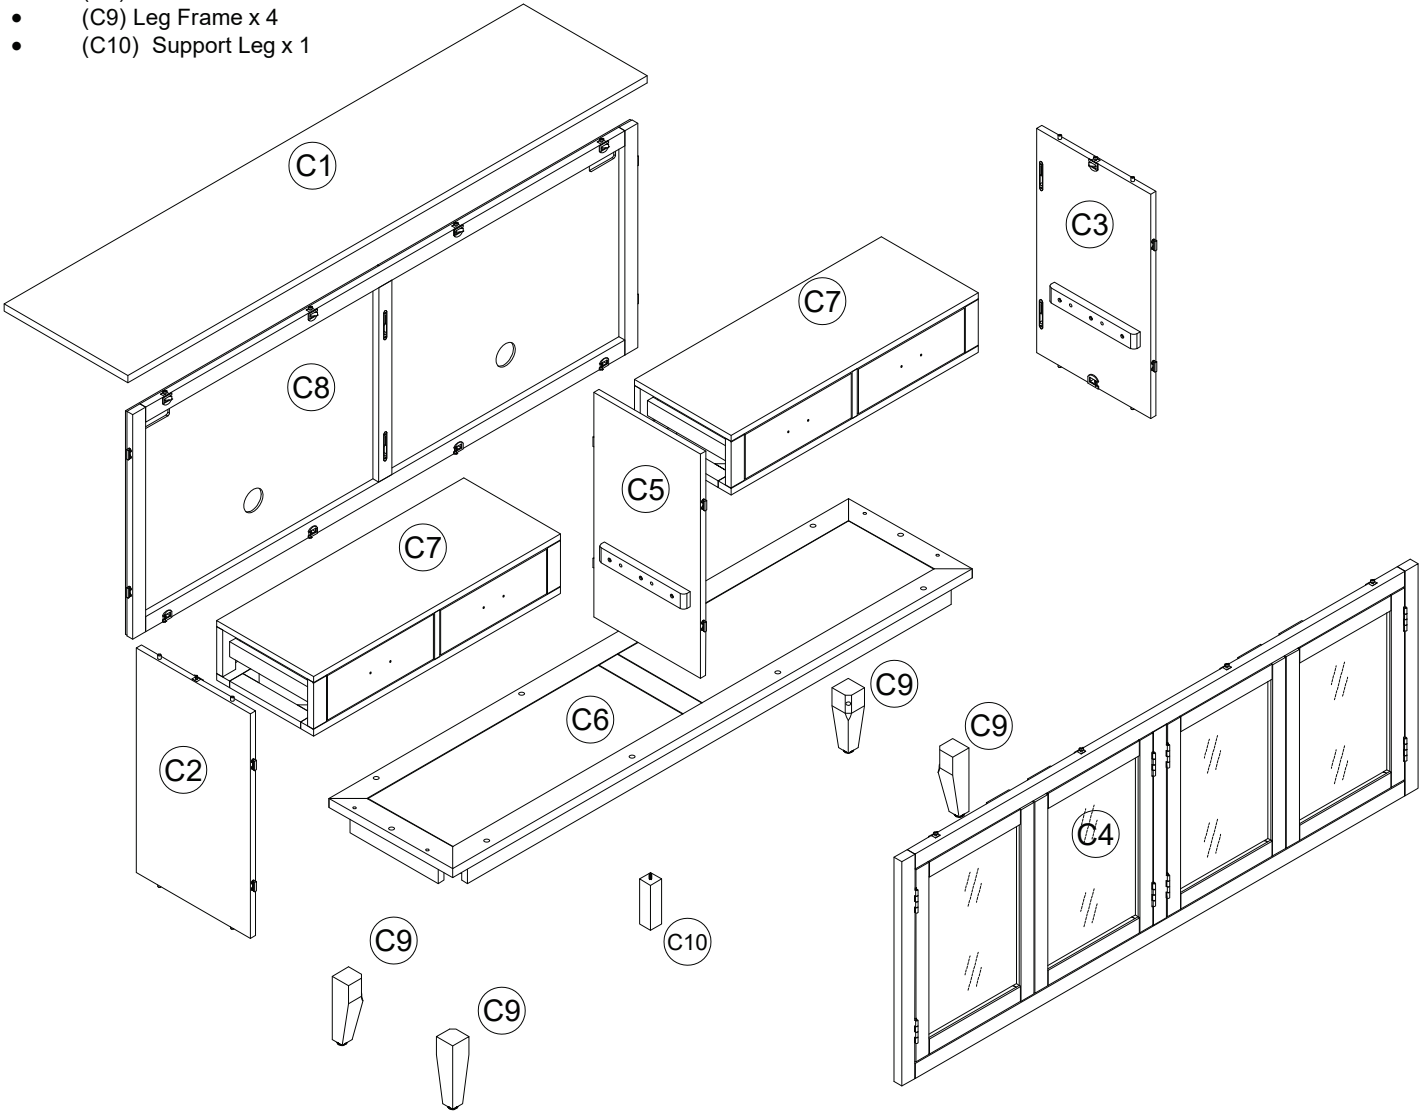


Hardware Pack:

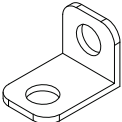    
A  4pcs	B  Ø6x15 (mm) 8pcs	C  Ø8x50 (mm) 4pcs	D  1pc	E  Ø4x15 (mm) 8pcs
F  4pcs	 1sets ANTI-TIP SET			

 1	C Ø8x50 (mm) 4pcs 	D 
---	--	--

 
- Please lay all components on smooth flat surface to prevent scratches.
- Use the EPE foam to protect the plastic hardware before assembly.

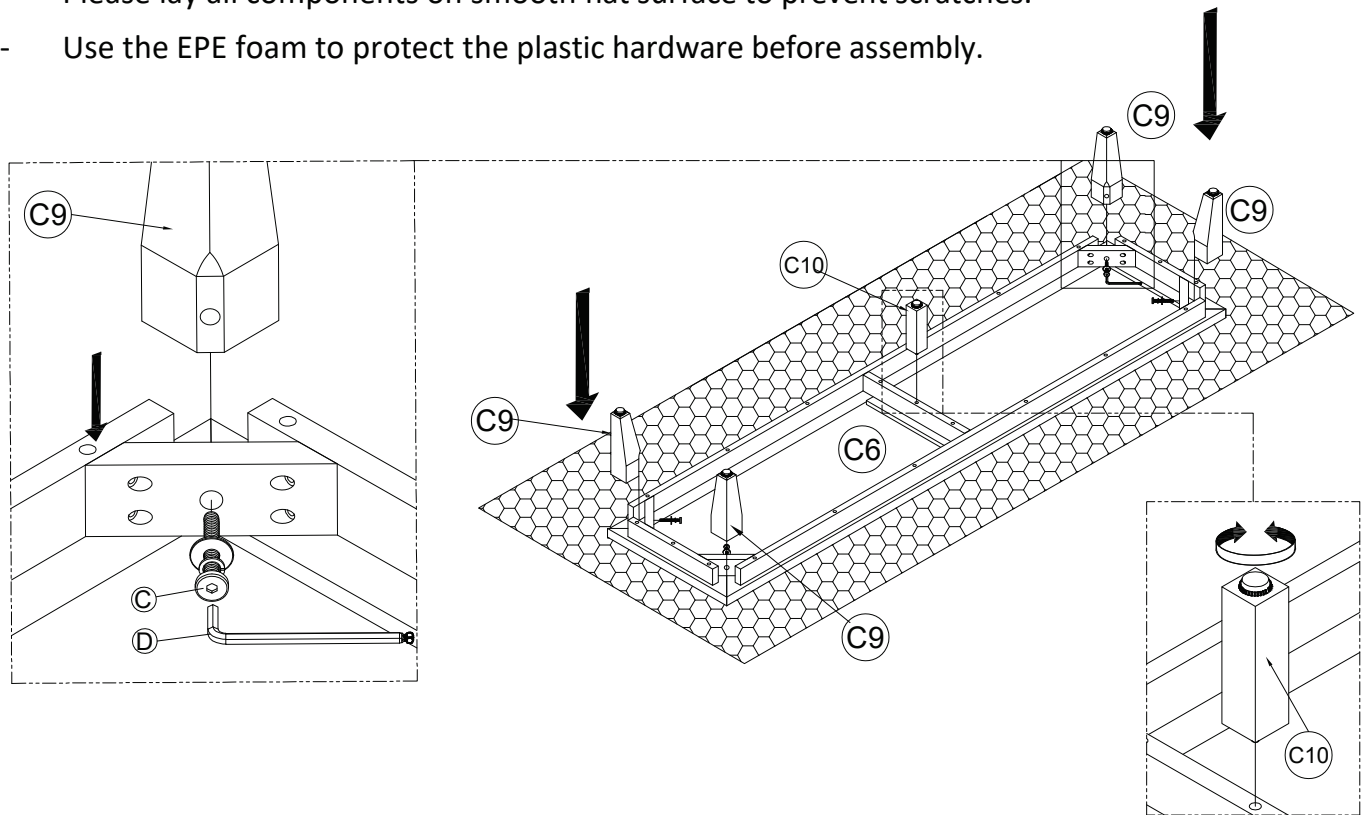


2

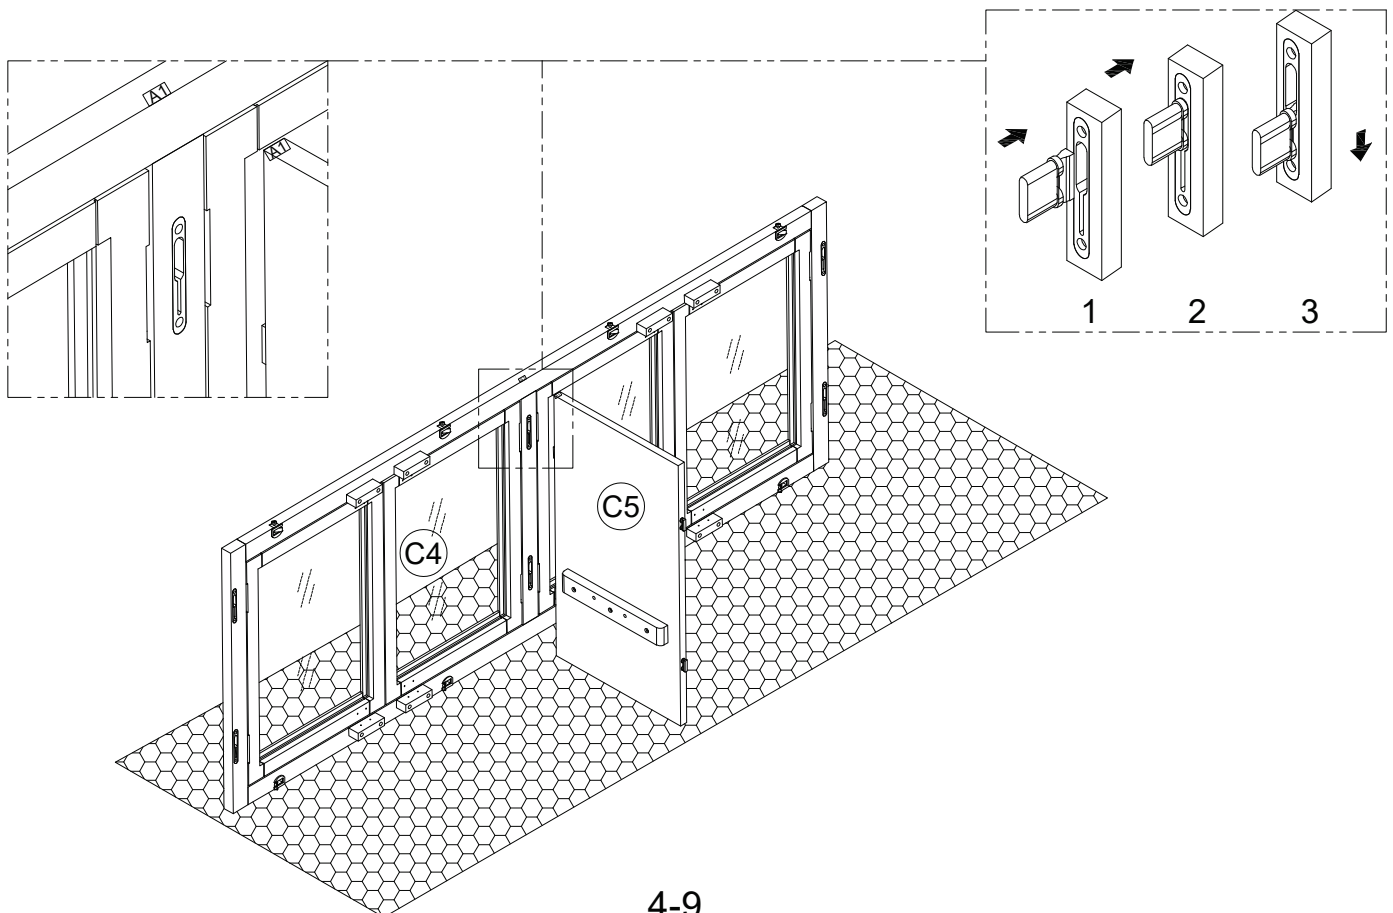 

3

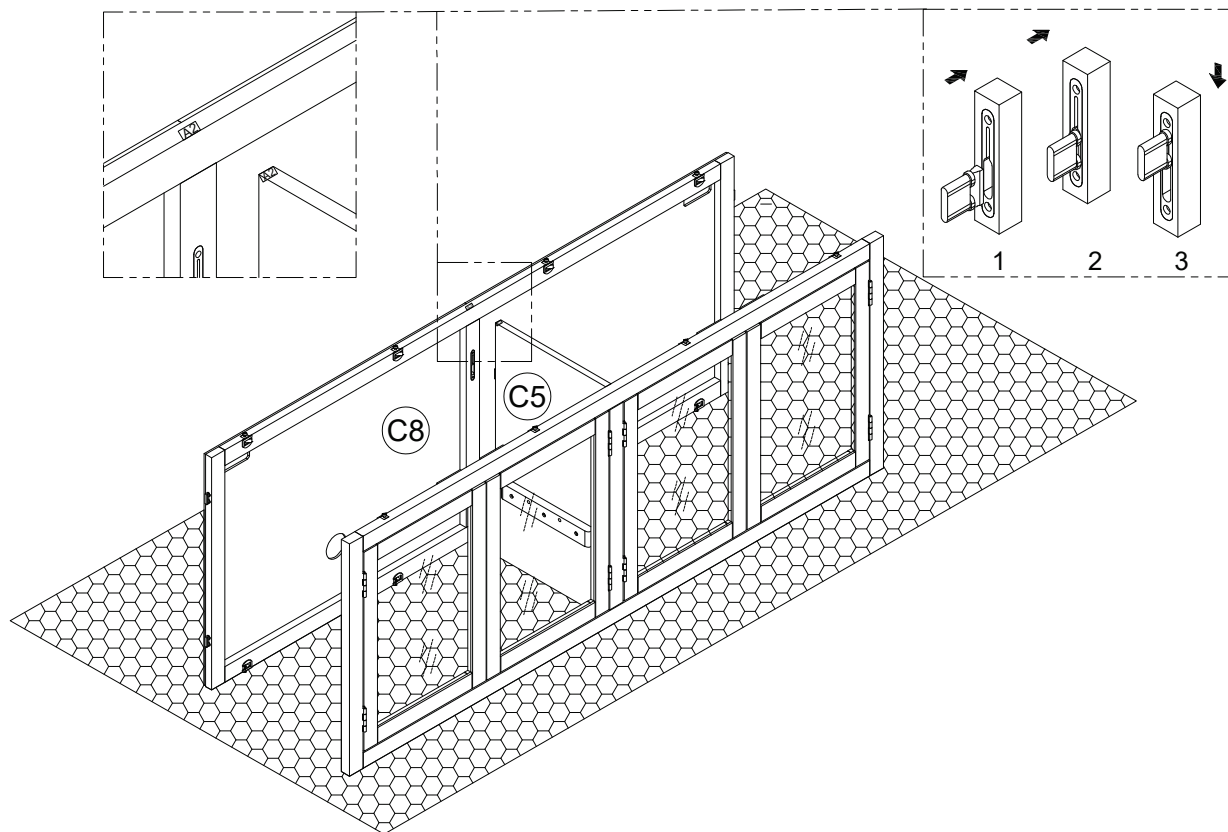 


4

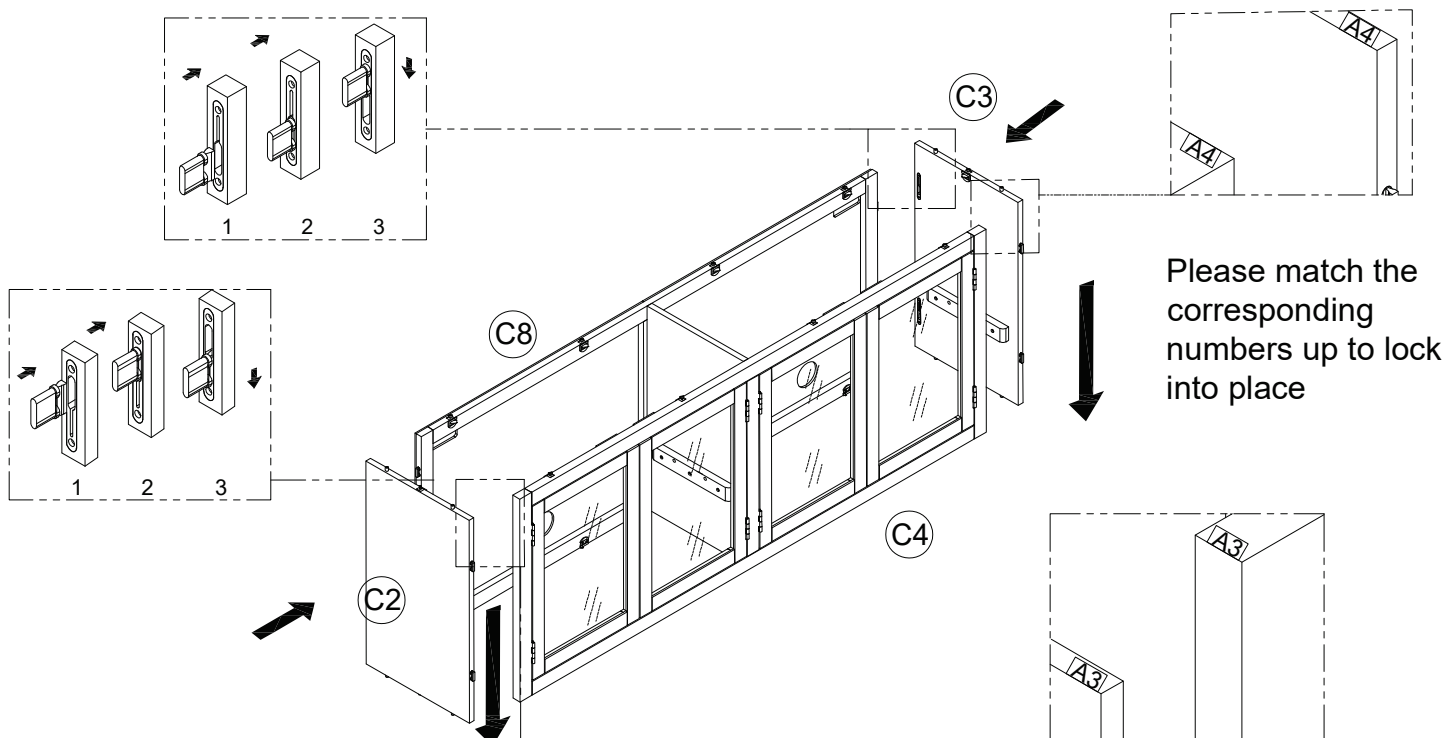 

- INSERT both sides of the "Back Panel C8" and "Front Frame C4" into the opening of assembly track. Each assembly track is located on the inside of both "Side Panels C2 & C3".
- Now the inserts are set in the correct position with "Back Panel C8" and "Front Frame C4" inside "Side Panels C2 & C3". The panels are now ready to be locked in place.
- Please PULL UP on "Back Panel C8" and "Front Frame C4", this will lock all panels together.




5

 Make sure all latches are in the open position before installing Bottom Frame (C6)

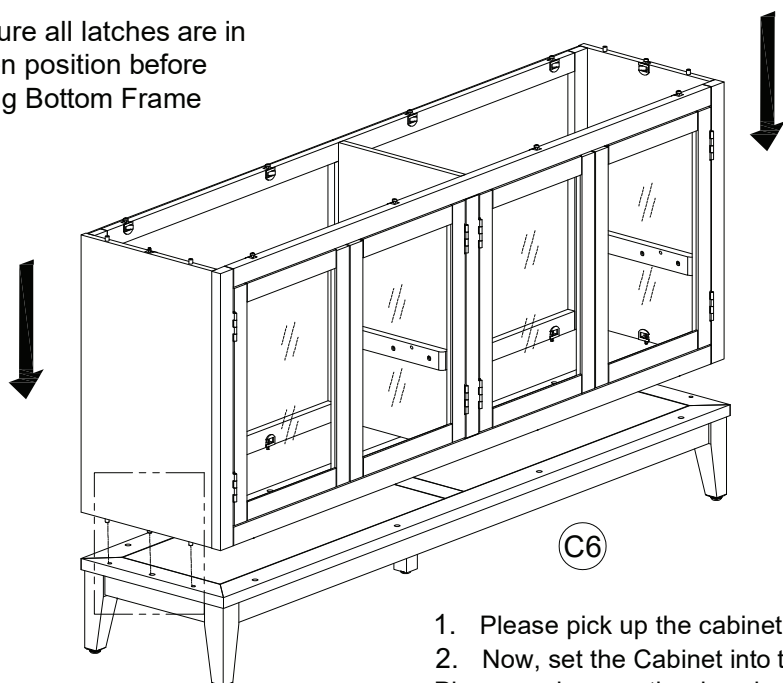


C6

   1. Please pick up the cabinet (with 2 people).
 2. Now, set the Cabinet into the "Bottom Frame C6". Please make sure the dowels and locking inserts are lined up accordingly to holes located in "Bottom Frame C6".
- *Please make sure all locking mechanisms are set in the open position.

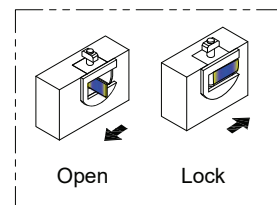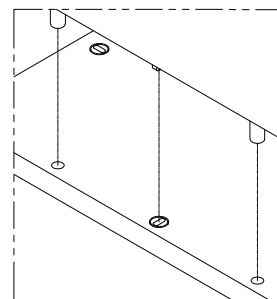


6

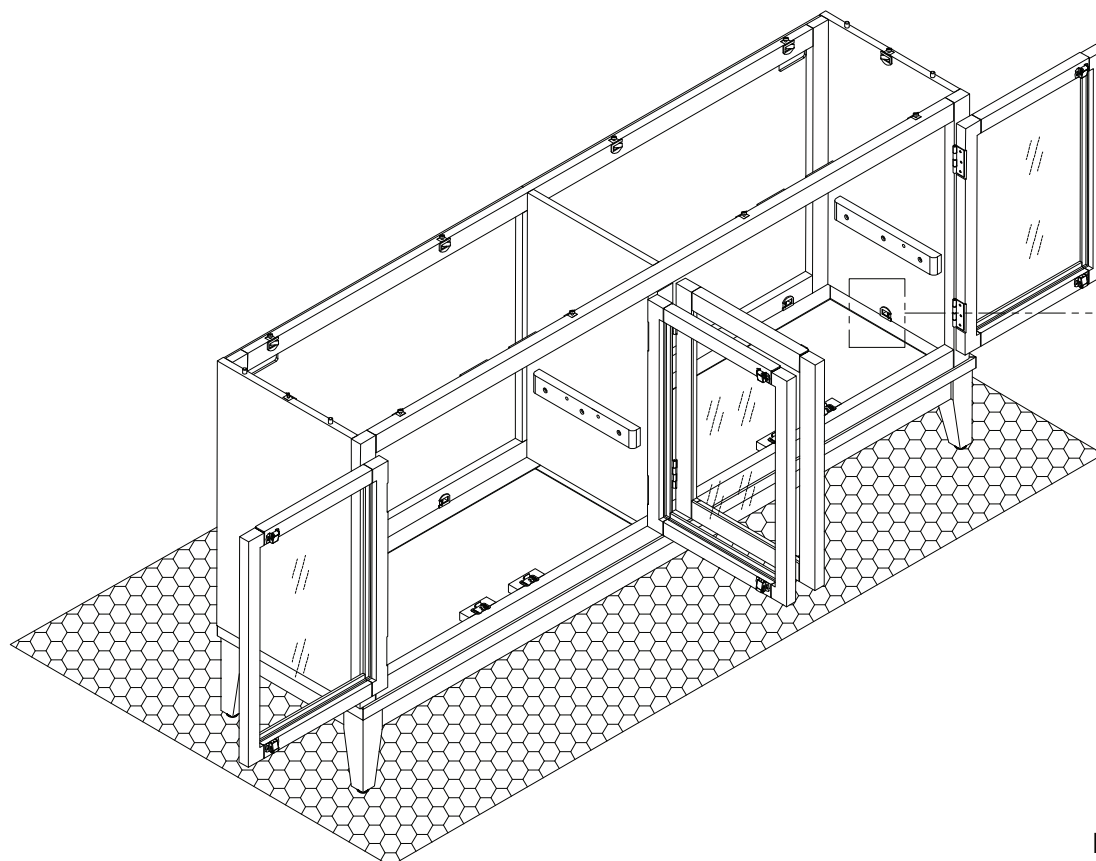 

Please lock each latch into the locking position.

 6-9

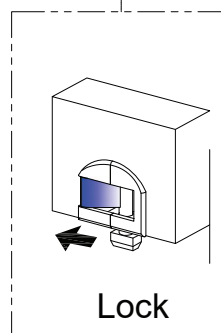

Make sure all latches are in the locked position

7

 
 
A 4pcs




B Ø6x15 (mm) 8pcs




D

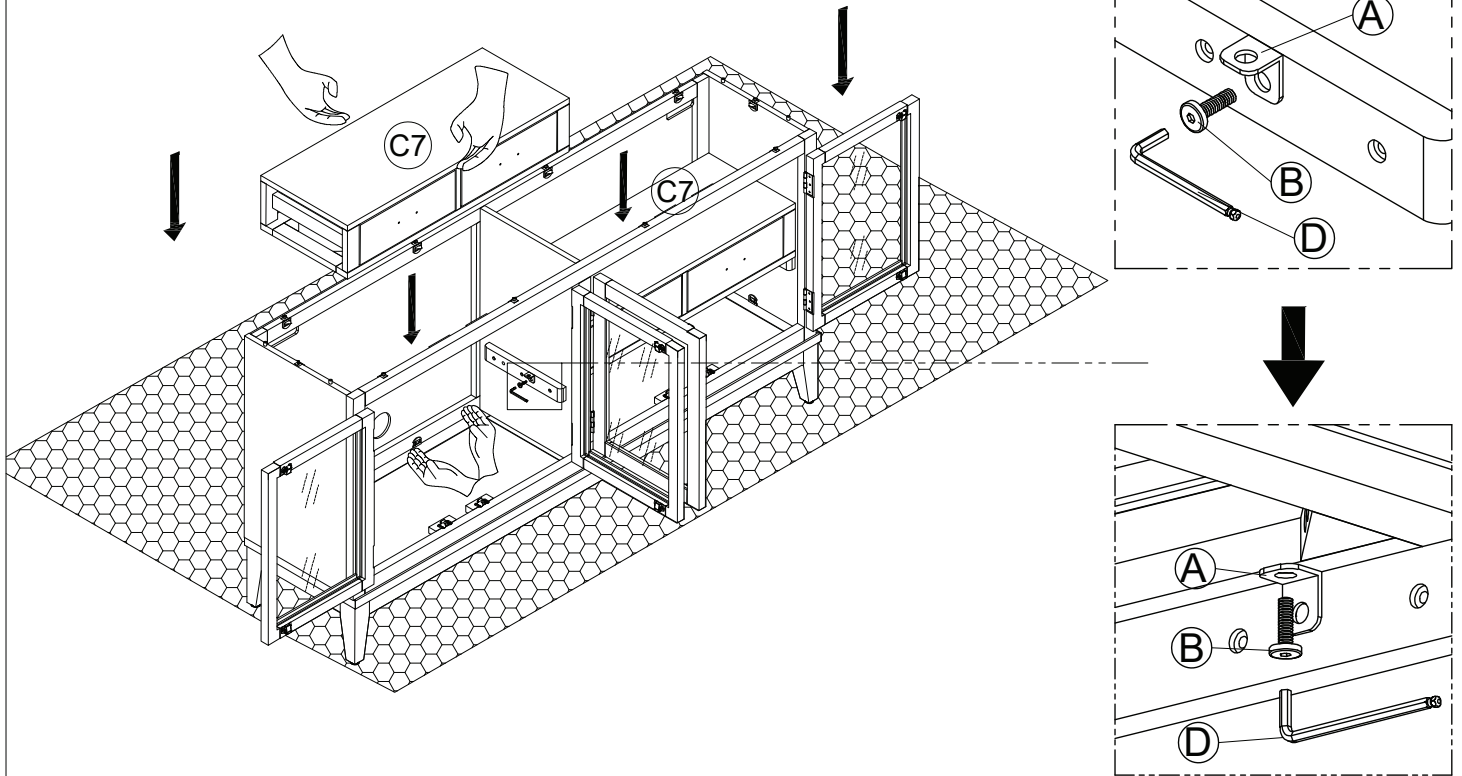

8

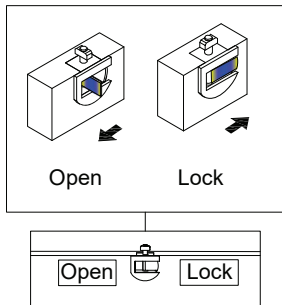 

 Make sure all latches are
in the open position before
installing Top Panel (C1)

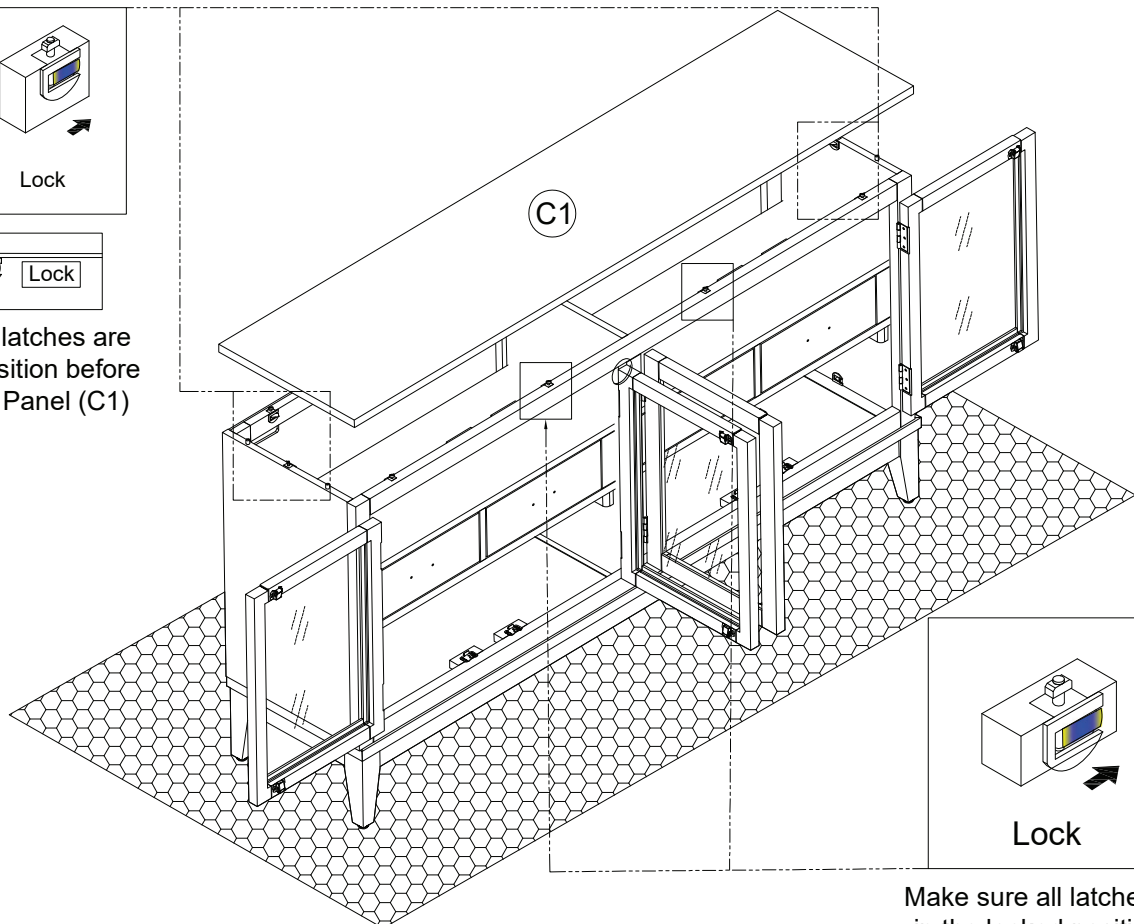


Make sure all latches are
in the locked position

9


E Ø4x15 (mm) 8pcs



 
F 4pcs

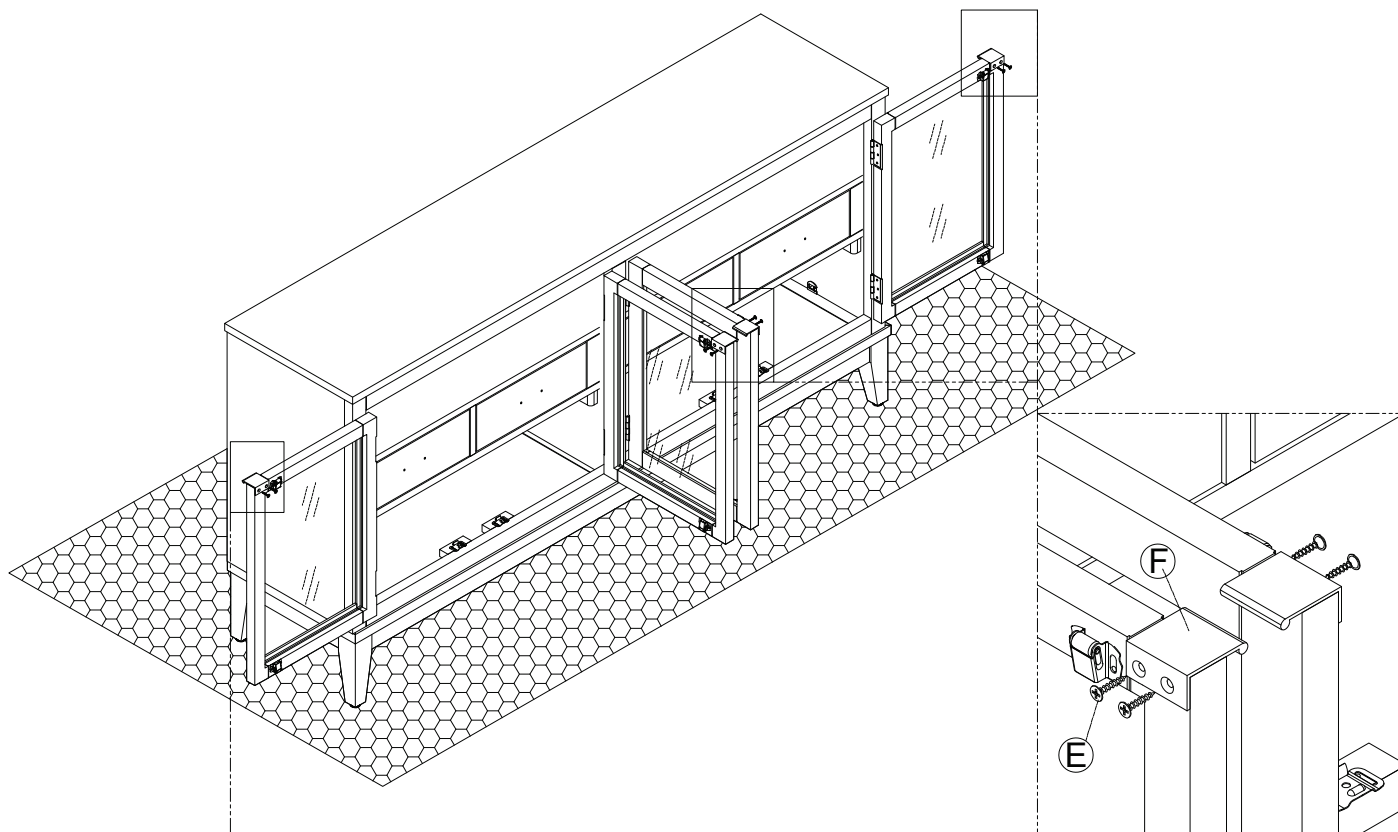

10

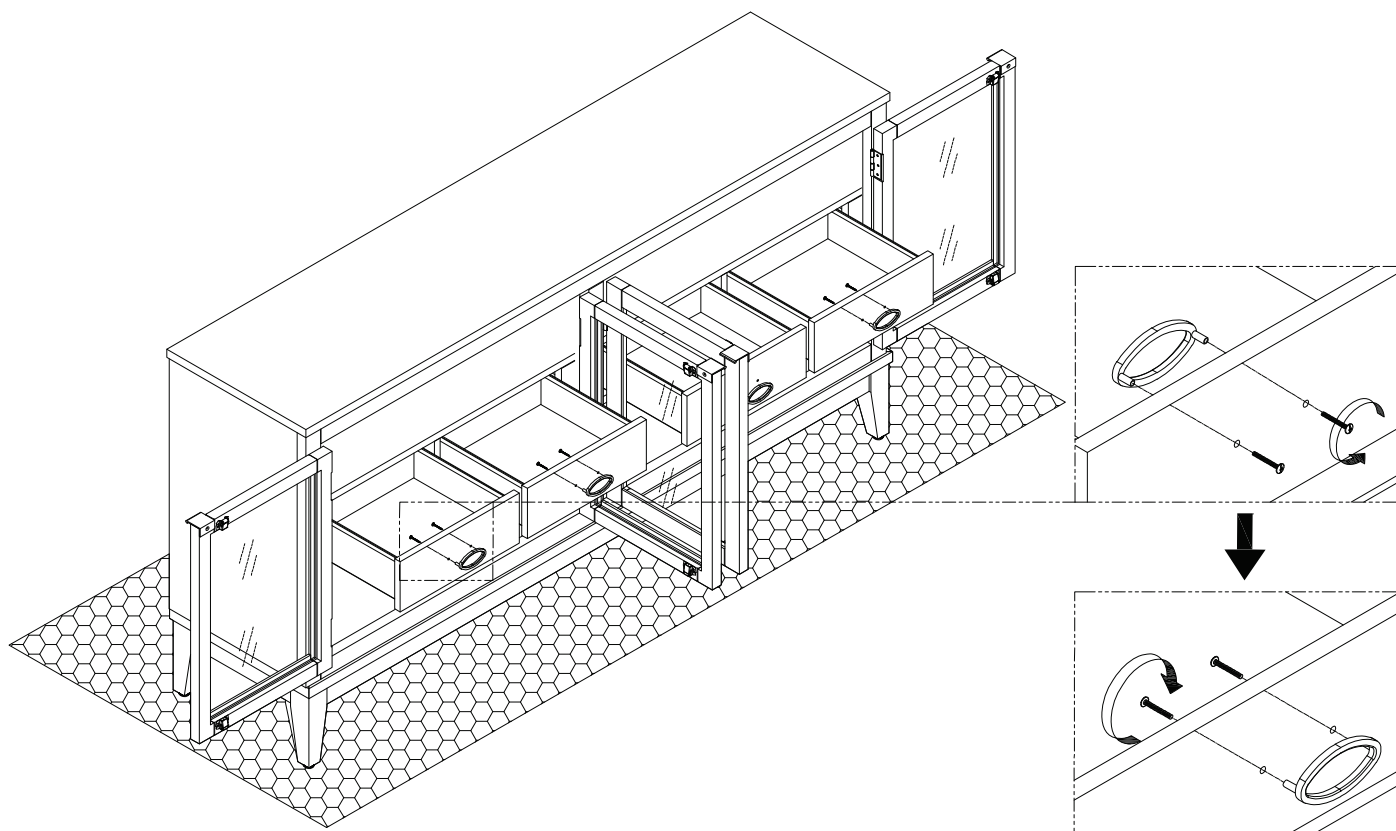 

8-9

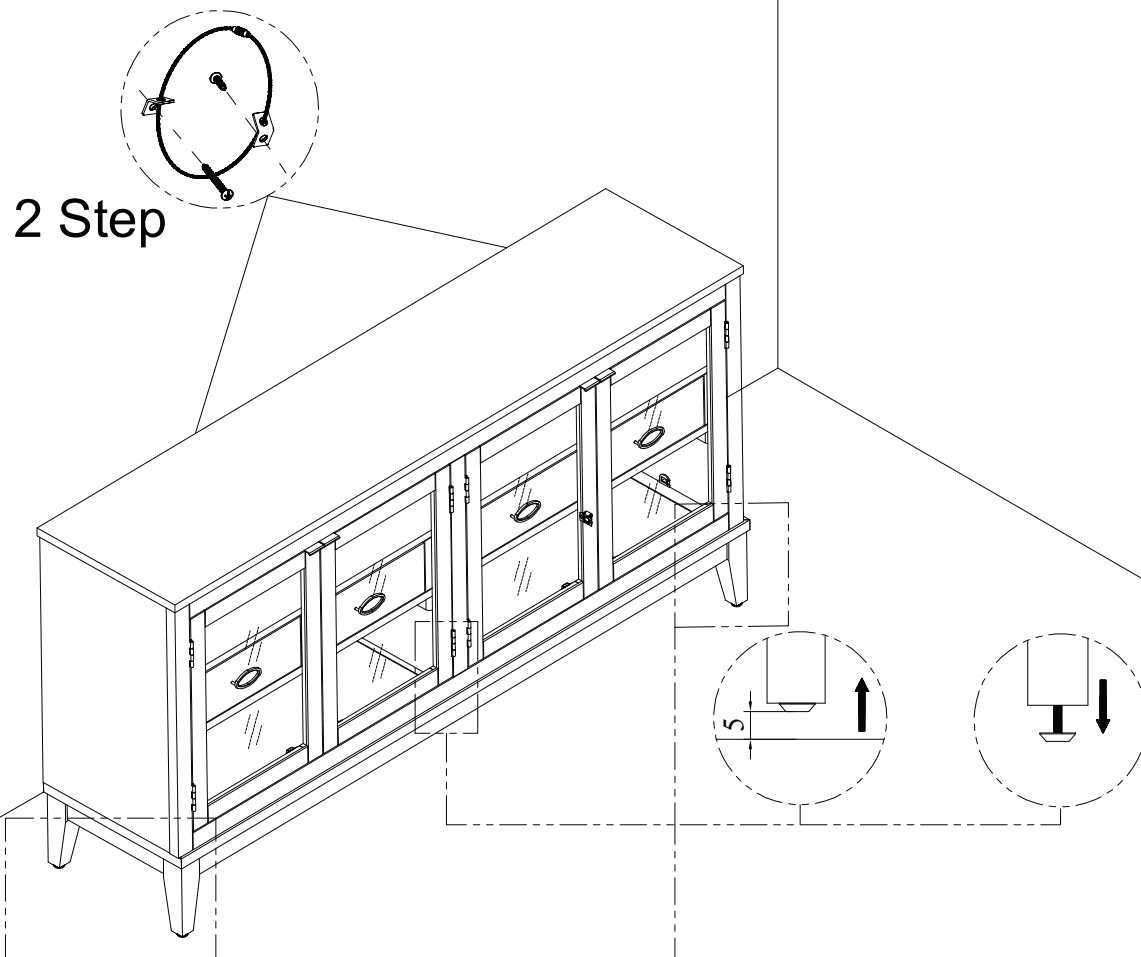 



Replacement Part Form

Have an issue? Need a replacement part?

Please E-mail us before contacting your retailer, we will be happy to fix your issue.

This process will be hassle free! We will replace your part for free!

Please follow these easy steps below.

You will need to E-mail *Martin Svensson Home* Customer Service: Customerservice@mshome.co
(Please note it is .CO not .com)

Please scan or take a picture of this form filled out.

1. **Customer Name:** _____

2. **SKU# with issue:** _____

3. **Replacement Part # needed** _____

*Please reference the Assembly Instructions to identify needed part #'s

4. **Photos of the Damaged Part** (please include in the e-mail)

5. **Brief description of the part issue:** _____

6. **Proof of Purchase** (please provide a copy of your purchase receipt)

7. **Ship to Address:** _____

8. **Other contact information:**

Email Address _____

Phone # _____

*If possible, could you please provide the UPS or FedEx tracking from original shipment _____

*If possible, could you please provide the P.O. # - information found on back/underneath product _____

*If you have any other question, we are happy to assist with assembly questions or all other parts related questions. Thank you for your purchase!