


PRODUCT INSTRUCTION

Warm Tip:

When using cutting tools, take care to avoid damaging the product. Keep all packaging materials away from children, as they pose a potential suffocation hazard.


How to Properly Unbox the Bean Bag

STEP 1

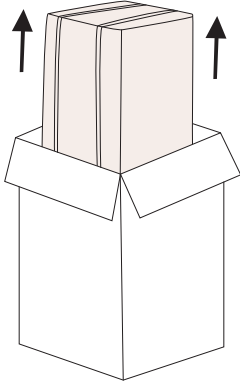


Take out the compressed bean bag and place it on a flat and clean ground.

STEP 2

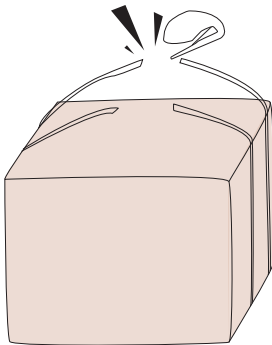

Cut the surface-layer binding strap with the provided cutting tool.

STEP 3

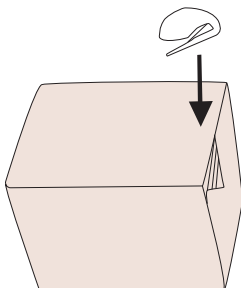


First, carefully open the outermost polyethylene bag with the provided cutting tool. Be careful not to puncture the inner vacuum packaging. Next, carefully open the innermost packaging. Make sure to take extra care not to cut the product inside.




If the inner vacuum packaging is punctured, the compressed bean bag will unroll quickly. When decompressing, always stand at the end of the compressed bean bag to avoid injury.

STEP 4

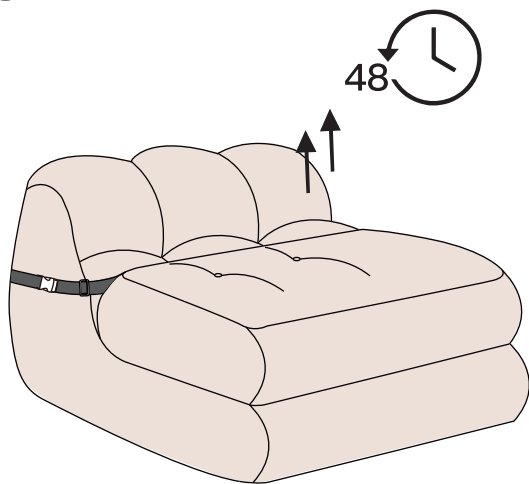


1. Unroll the bean bag.
2. Allow up to **48hrs** for the bean bag to fully expand.

STEP 5

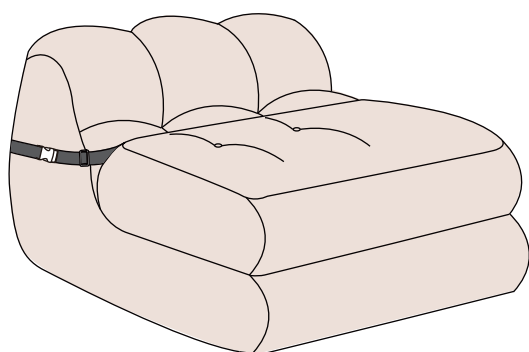

Different people have different perceptions of firmness and softness. Some people find it firm, while others find it soft. Please give the bean bag enough time to overcome the first – impression bias.

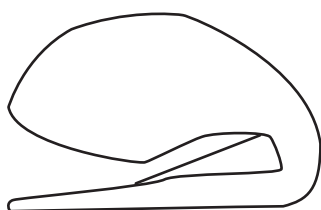


Handy opener tool is one option to get started.
Find it in the package box.




Caution: This cutter is sharp,
please keep it away from children.

How to Adjust Your Bean Bag

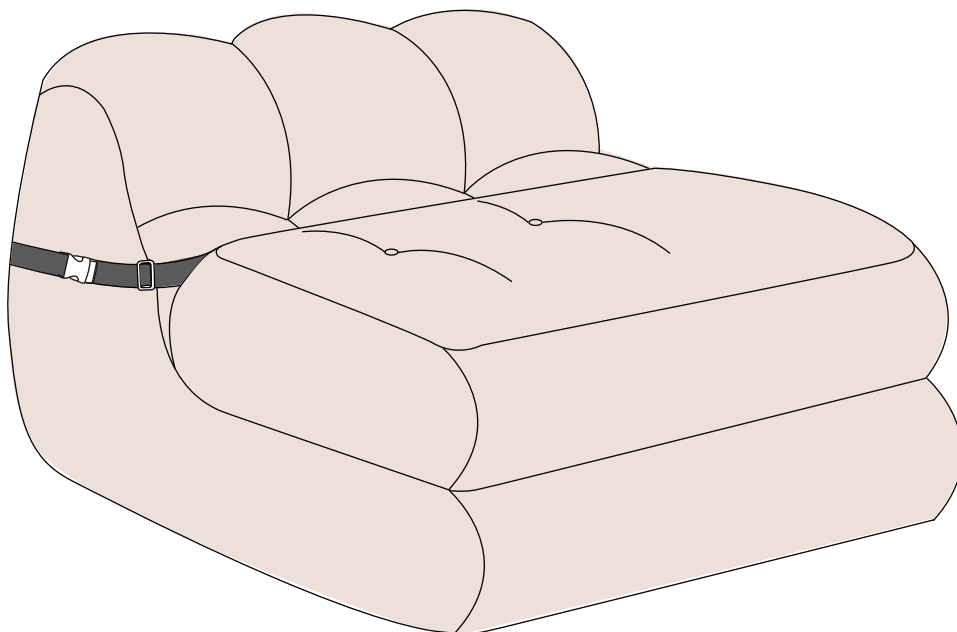


TYPE-A

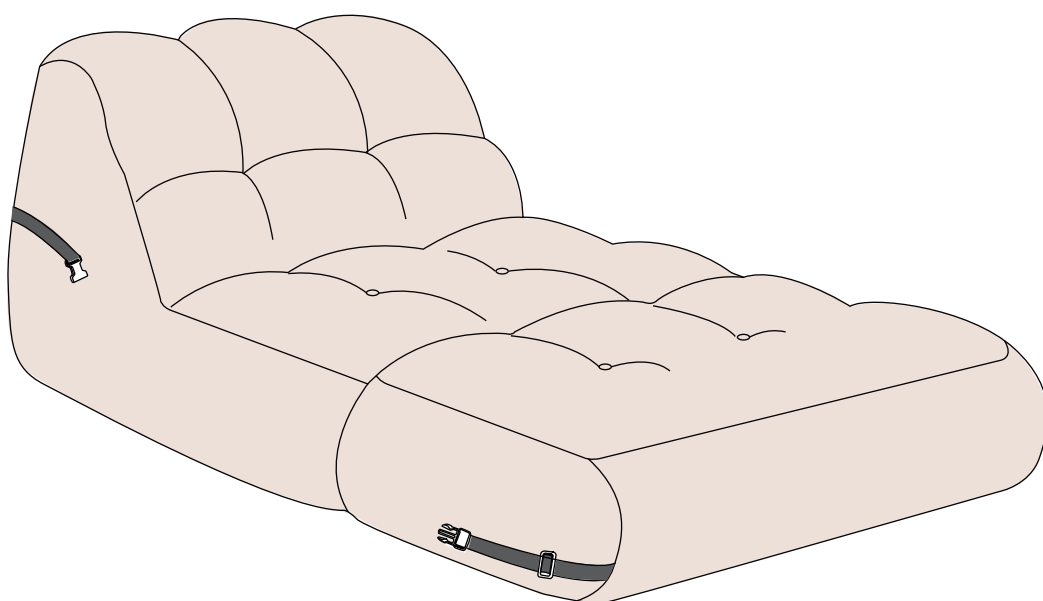


TYPE-B


TYPE-A

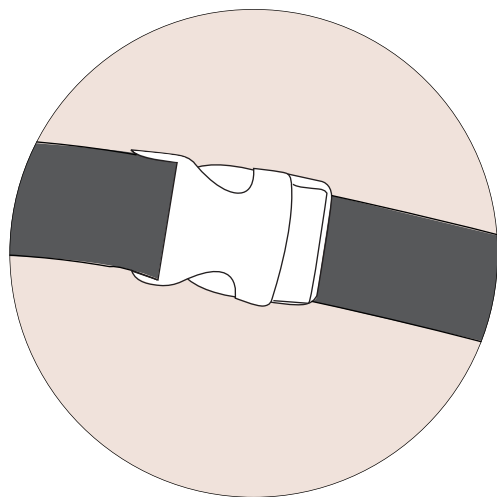

NOTICE:


If you need to keep TYPE-A, simply follow the unboxing steps to decompress it. However, be sure to check whether the buckle is in the locked state before use. If the buckle is not locked, it may cause the sofa to tip backward with the person.

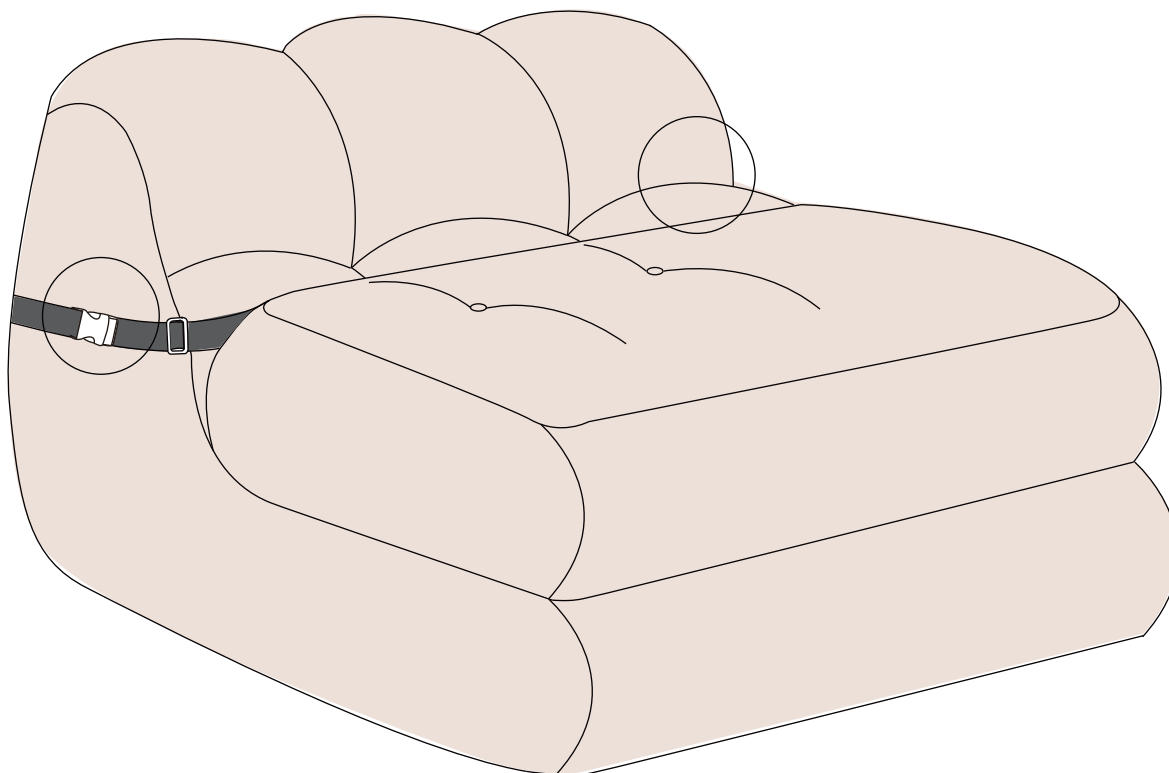

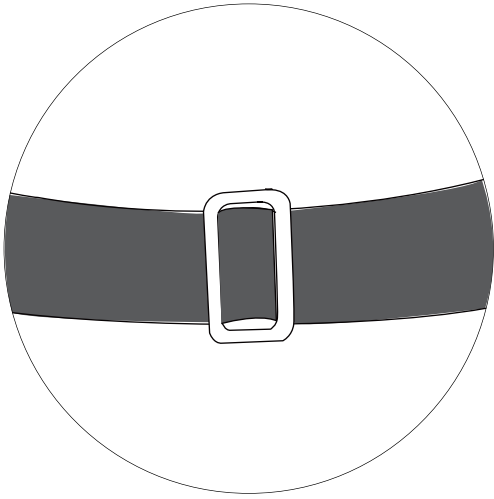


NOTICE:


The tilt angle of the backrest and seat cushion can be adjusted appropriately by adjusting the position of this component.

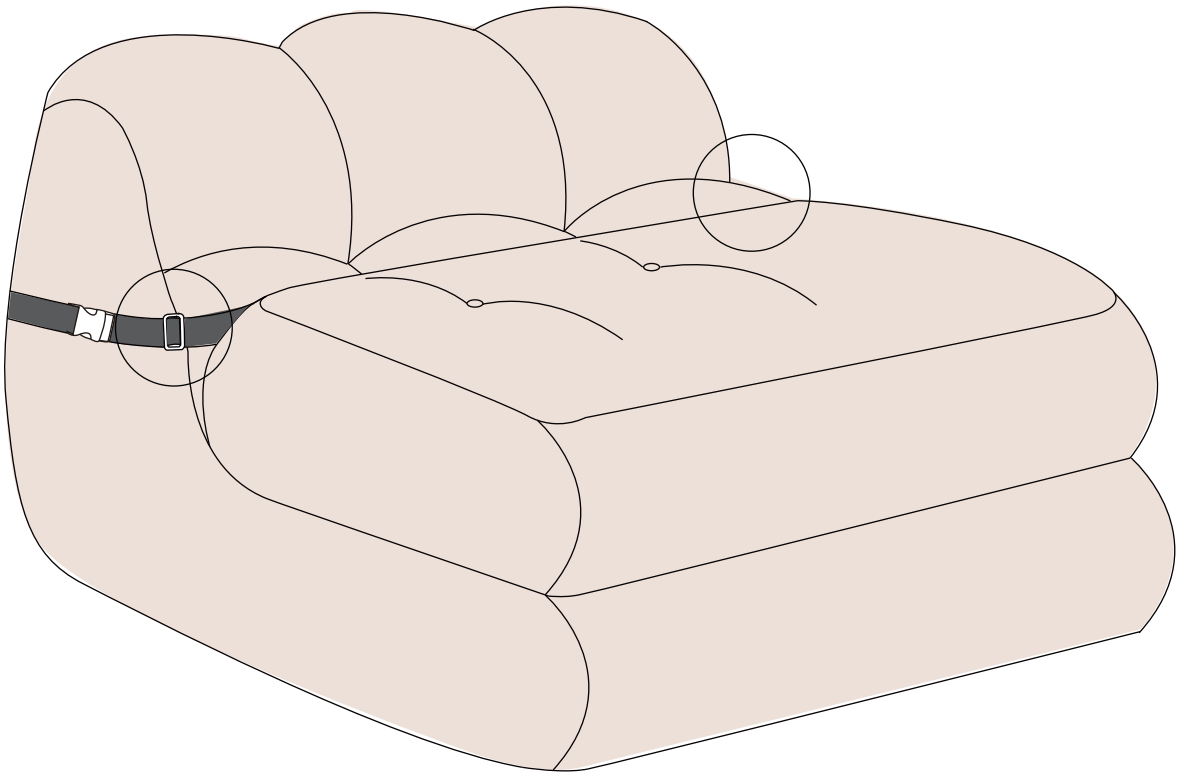


TYPE-B

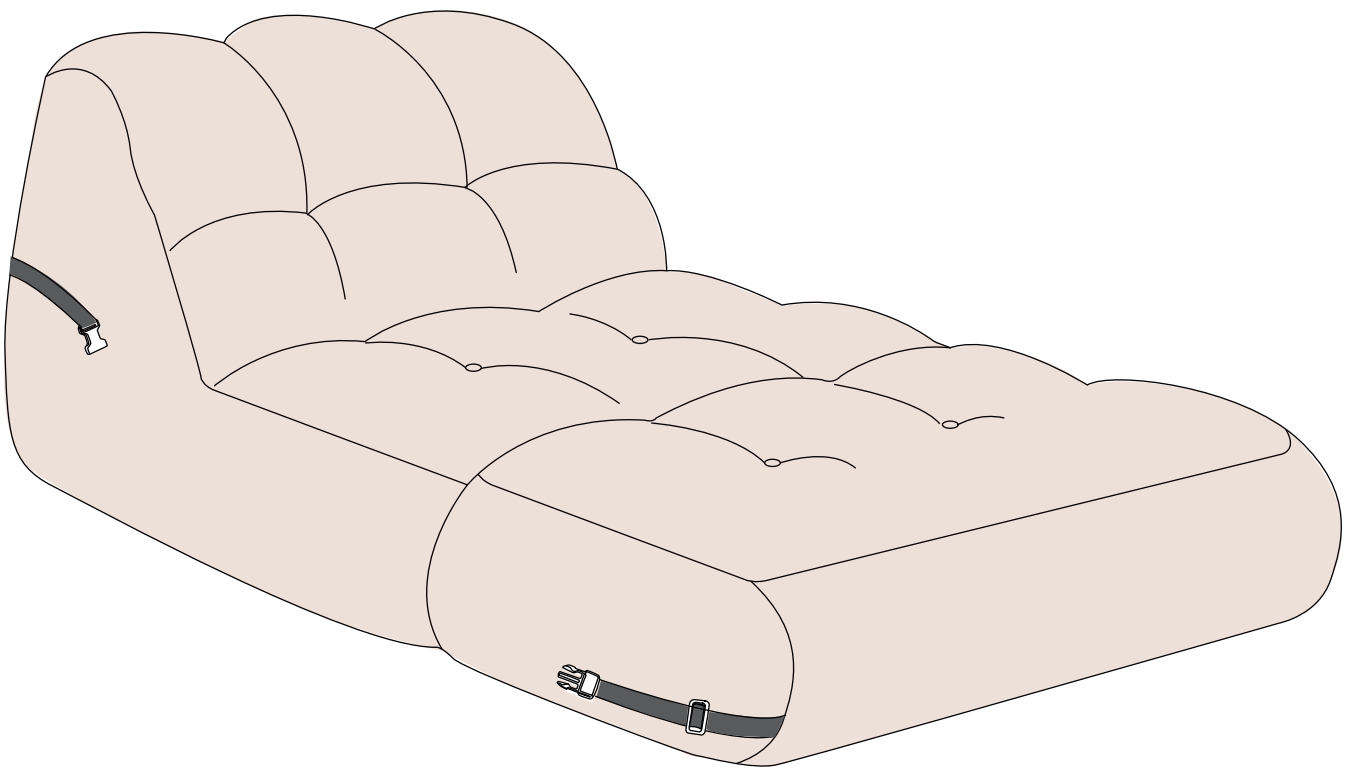

STEP1: Press to release the buckle.

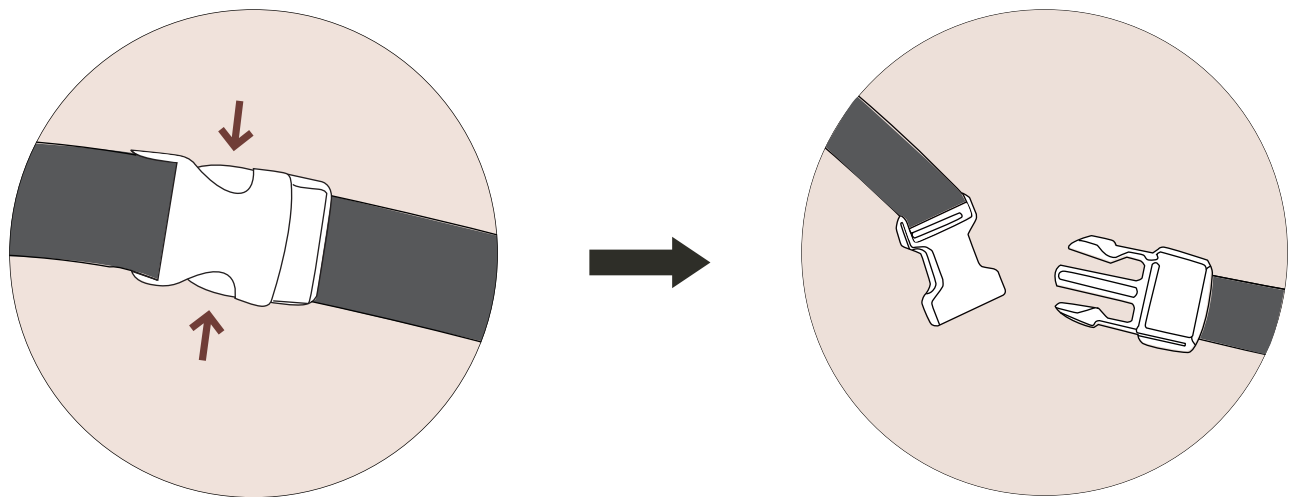

STEP2: Unfold the folded part of the bean bag.

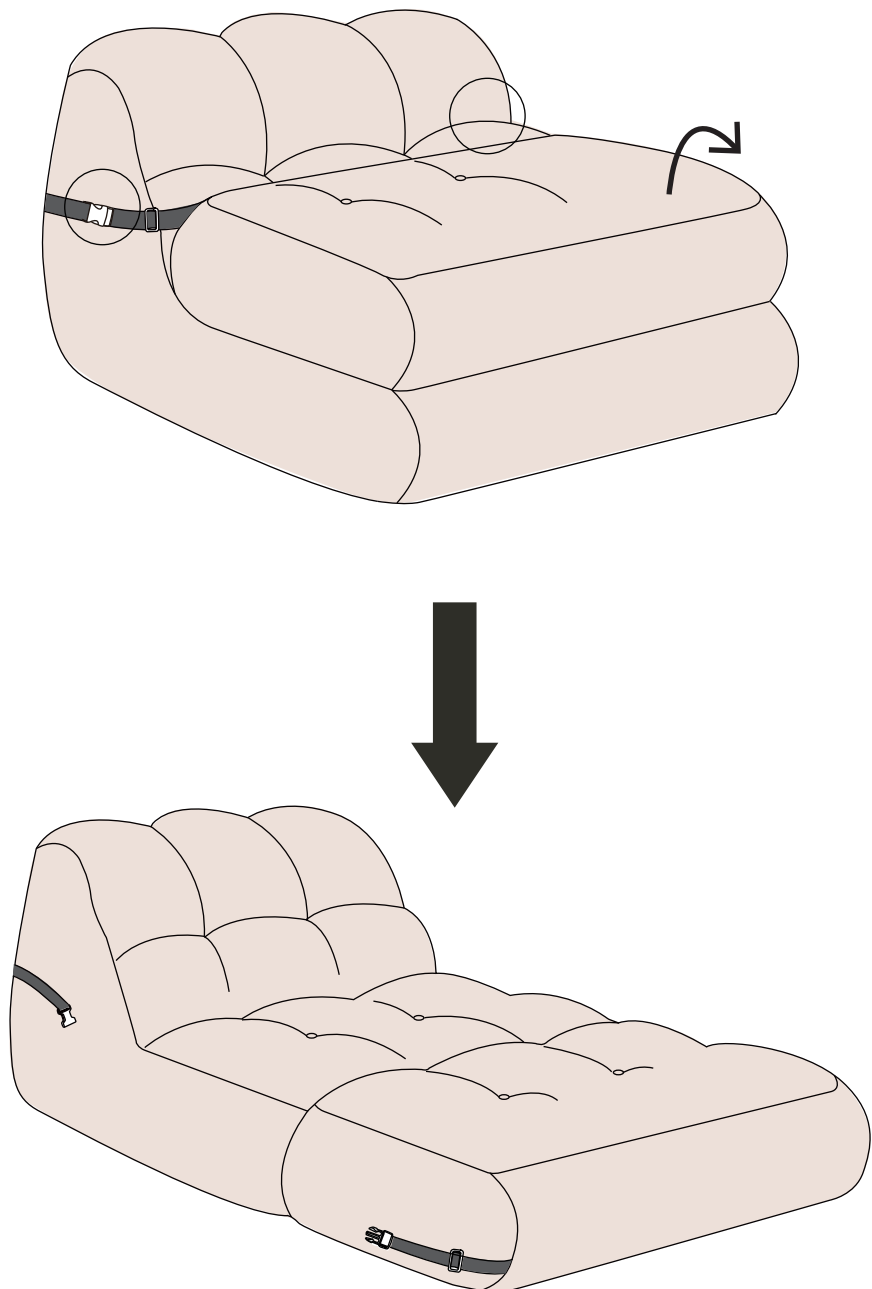

Disclaimer

To Valued Customers:

Thank you for purchasing furniture products from our store. To ensure your safety and the best user experience, please read and understand all the contents of this notice carefully before installation and use. Once you start installing or using this product, it is deemed that you have accepted all the following terms.

I. Regarding Installation

● **Professional Installation Recommendation:** For large, modular, or wall-mounted furniture, we strongly recommend that you hire qualified professionals for installation. Self-installation may involve risks.

● **Self-Installation Liability:** If you choose to install the product yourself, it means that you confirm you have the corresponding installation capability and voluntarily assume all risks and responsibilities arising from improper installation, including personal injury and property damage. Improper installation includes, but is not limited to, damage to product components due to ignoring installation instructions during the installation process, loose, missing, or wrong installation of connectors, and obvious instability such as tilting and shaking due to improper placement after installation.

● **Follow Official Instructions:** Installation must strictly follow the steps in the Installation Manual and diagrams provided with the product. Do not rely on any installation guidance from unofficial channels. Our company shall not be responsible for any problems caused by failure to follow official instructions.

● **Safe Installation Environment:** Please carry out the installation in a spacious, bright, and well-ventilated environment and use appropriate tools. During installation, please keep children and pets away from the work area to prevent accidental ingestion of small parts or accidental injuries.

II. Regarding Usage

● **Weight Capacity Limit:** Please strictly comply with the maximum weight capacity limit indicated on the product. Overloading may cause structural damage, deformation, or overturning of the furniture, leading to serious accidents. Our company shall not be responsible for any consequences arising therefrom.

●**Wall Mounting (Mandatory Requirement):** To prevent furniture overturning accidents, especially when there are children at home, you must use the anti-tip devices provided in the product package to permanently connect and fix the furniture to a solid wall. If the fixing devices are damaged or substandard, please contact us immediately through the purchasing platform to obtain replacement parts.

Special Warning: The fixing method must fully comply with the requirements in the manual. Failure to fix as required may cause the furniture to overturn, resulting in serious injury or death. Our company shall not be responsible for any furniture overturning and all consequences caused by failure to perform wall mounting or improper fixing.

●**Regular Inspection and Maintenance:** It is recommended that you regularly (especially in the early stage of installation and after moving) inspect and tighten all connectors (screws, bolts, etc.) to ensure the structural stability of the furniture (see the maintenance method in the manual for details). Problems caused by neglect of inspection and maintenance are not covered by the warranty.

●**Proper Use and Placement:**

Place the furniture on a flat and solid floor.

Do not use the furniture for purposes other than its designed use (for example, standing on drawers or shelves, using a chair as a ladder, etc.).

Do not place heavy objects such as televisions or items that attract children on the upper part of the furniture.

Avoid placing the furniture in humid, sun-exposed, or extreme temperature environments to avoid affecting the product's service life or structural stability.

III. Liability Limitation

Our company provides warranty services for product quality in compliance with platform policies and relevant regulations. However, our company shall not be legally responsible for any direct or indirect personal injury, property damage, and other incidental losses caused by the following reasons:

Failure to comply with the requirements of this notice, the official Installation Manual, or product labels;

Misuse, abuse, negligence, or unauthorized repair or modification without our company's authorization;


Improper installation (whether carried out by the user or a third party not designated by our company);

Force majeure events.

Safety first, prevention is better than cure. We wish you a pleasant use!



Children should use this product only with adult supervision.

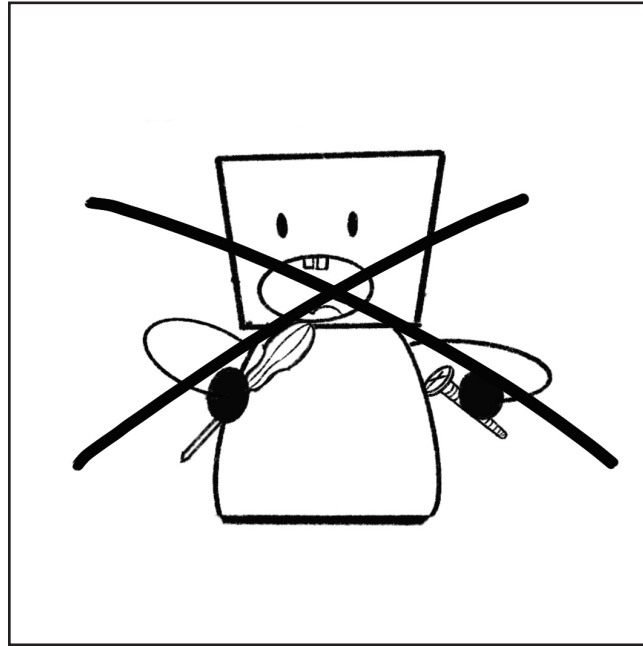

**DO NOT PLAY WITH OR
SWALLOW SMALL PARTS**

Weight Capacity:

–**Do not** place items exceeding the maximum weight capacity of the product. (For the product's weight capacity, please refer to the product link.)

Usage Scenarios and Maintenance Methods

- **Do not** place the product in a humid environment.
- Avoid direct exposure to high temperatures and keep it away from heat sources.
- Clean and maintain the product regularly.
- Place it on a flat surface. When moving is required, ensure that at least two people lift it together.

Textile products

Instructions for Use

(1) **Avoid direct sunlight:** Prolonged exposure to sunlight can cause fading and material aging. It is recommended to use curtains or sunshades for protection. **Do not** place the product in excessively humid areas to prevent mildew.

(2) **Use sharp objects with caution:** Keep sharp objects away from the textile to avoid scratches or snags.

(3) **Regular cleaning:** Vacuum or wash regularly according to the material and frequency of use to keep it clean. Avoid excessive washing to prevent accelerated aging of the textile.



Notes

- **Avoid heavy pressure:** Do not place heavy objects on local areas for a long time to prevent deformation or damage to the product.
- **Keep away from chemicals:** Avoid contact with chemicals such as bleaches, strong acids, and strong alkalis to prevent corrosion or fading.
- When children use the textile product, they should do so under adult supervision to prevent children from accidentally covering their heads with the textile for a long time, which may cause suffocation.
- **Do not** use high-temperature drying after washing; use low-temperature drying or air-dry naturally.
- **Do not** clean with hard brushes or steel wool. After cleaning, avoid pulling or twisting it forcefully to prevent deformation.



Maintenance Methods

(1) **Local cleaning:** In case of stains, immediately pat and gently rub with a clean damp cloth, wiping from the edge to the center to prevent the stain from spreading.

(2) **Deep cleaning:** Perform deep cleaning once every six months or a year. You can use professional cleaning services or special cleaners.

(3) **Use protective covers:** Consider using protective covers for easy cleaning and replacement, which helps extend the product's service life.

(4) **Keep away from heat sources:** Maintain a distance of at least 1 meter from heat sources such as radiators, heaters, and fireplaces, as high temperatures can damage the fibers of the textile.

(5) **Air-dry** in a cool place; avoid direct sunlight to prevent hardening.

(6) **Ensure** the product is completely dry before storage, and moisture absorbers can be placed (with it).

(7) **Do not** store under compression for a long time, as this may damage the elasticity of the fibers.

After-Sale Support

Dear Customer,

Thank you for choosing to purchase our products! We attach great importance to your shopping experience and hope to ensure that you are satisfied with this purchase.

Should you have any questions, please contact us through the original purchase platform. We will reply your messages as soon as possible, please kindly wait for the response from our team.

Thank you again for your understanding and support! If you have any other questions, please feel free to contact us at any time.

Best Regards,
After sales service team