


# Installation & Assembly

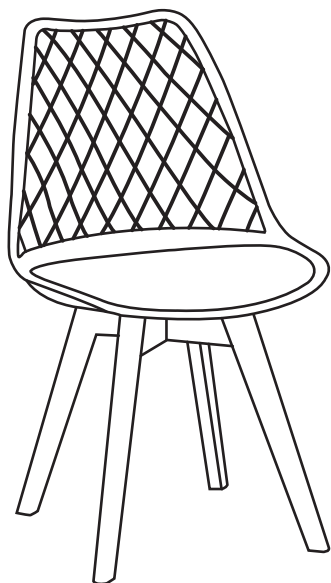


Ax1		Gx4	
Bx1		Hx5	
Cx1		Ix1	
Dx1		Jx4	
Ex2		Kx5	
Fx1			

## SPARE (Ersatzteile)

Ex1		Hx1		Kx1	
Gx1		Jx1			


### STEP 1

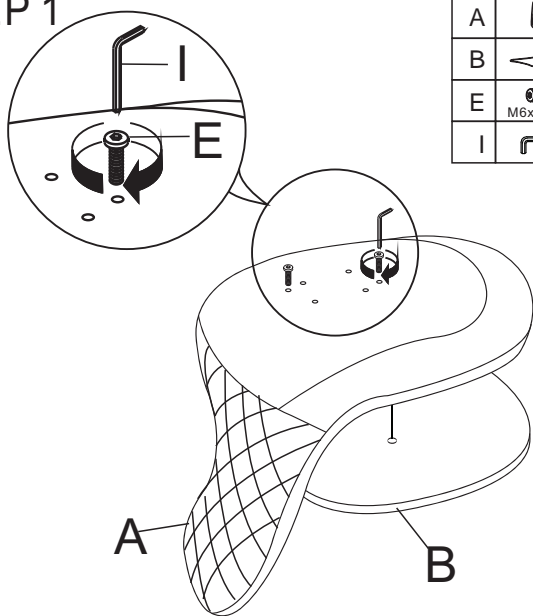

A		1
B		1
E		2
I		1




### STEP 3

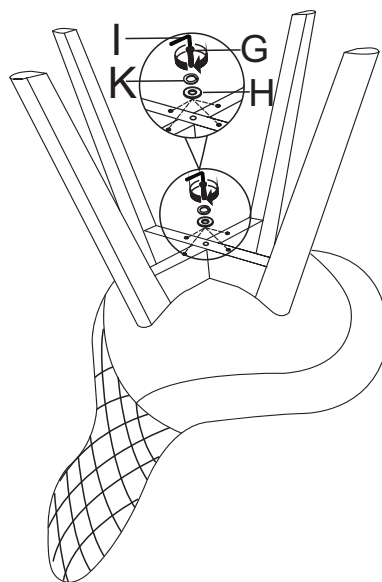

G		4
H		4
I		1
K		4




### STEP 2

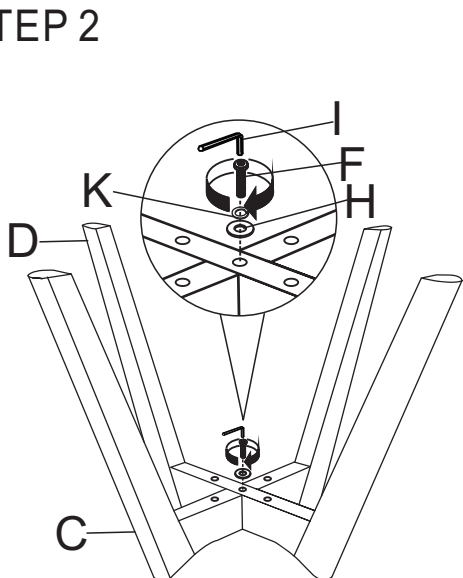

C		1
D		1
F		1
H		1
I		1
K		1



### STEP 4

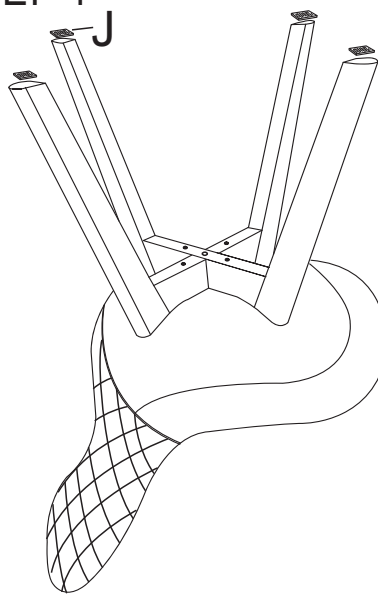

J		4
---	--	---

