 


Instruction Manual

Kitchen Cart

SHX1407

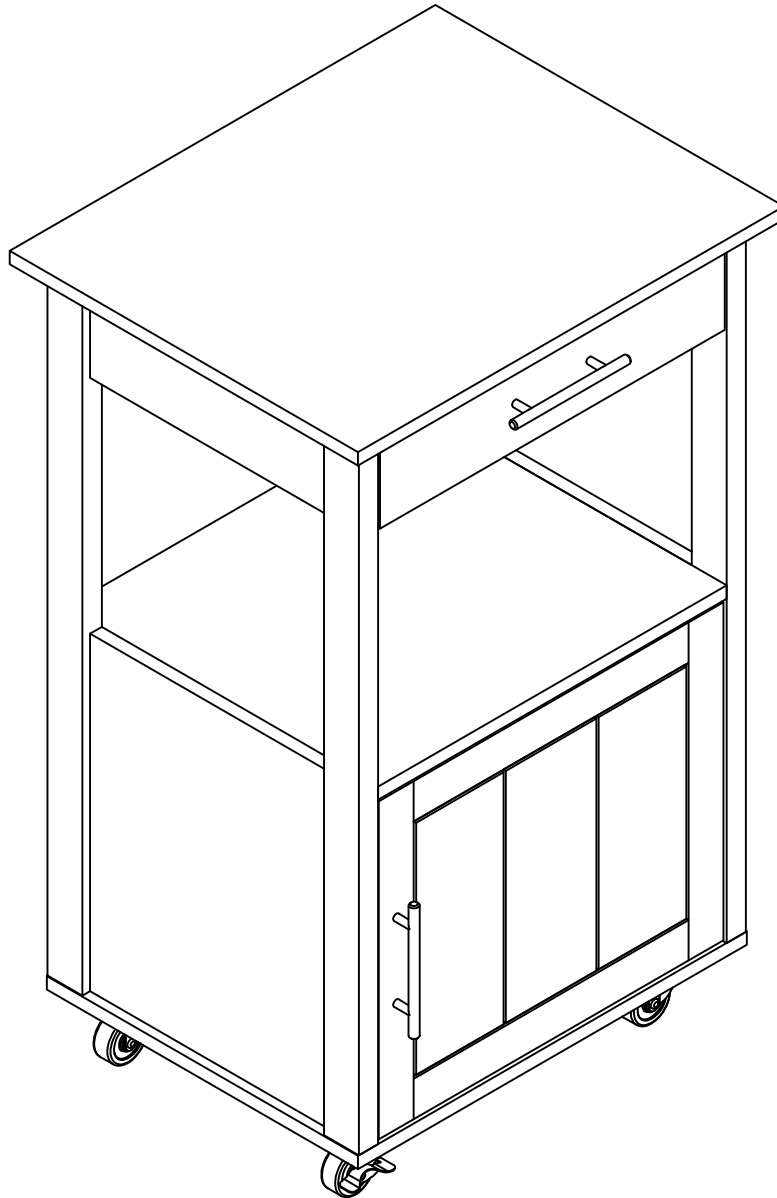

Thank you for shopping with us!

If any part is missing, broken upon receipt or you need any help from us.

For the FASTEST SOLUTION, please FIRSTLY CONTACT US at our
after-sales email:

CSsince1987@hotmail. com!

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.












3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.


PART LIST

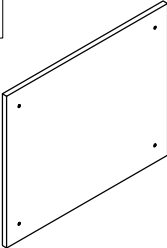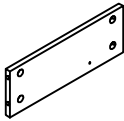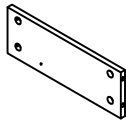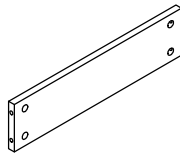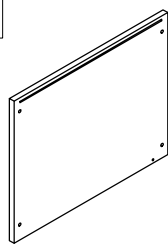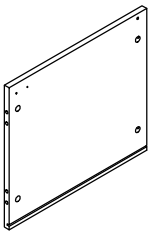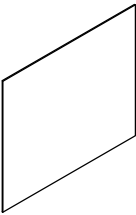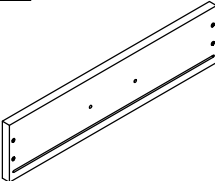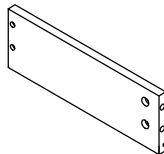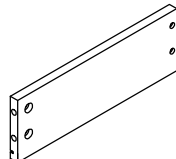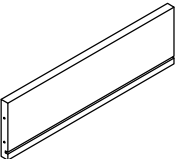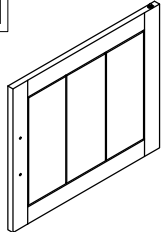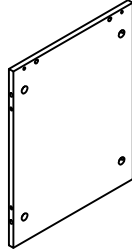A 	B 	C 	D 	E 
Top Panel 1 PC	Upper Side Panel-L 1 PC	Upper Side Panel-R 1 PC	Upper Back Panel 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	J 
Fixed Shelf Panel 1 PC	Lower Back Panel 1 PC	Drawer Front Panel 1 PC	Drawer Left Panel 1 PC	Drawer Right Panel 1 PC
K 	L 	M 	N 	O 
Drawer Back Panel 1 PC	Drawer Bottom Panel 1 PC	Door 1 PC	Lower Side Panel 2 PCS	Left Front Vertical Panel 1 PC
P 	Q 	R 		
Right Front Vertical Panel 1 PC	Left Rear Vertical Panel 1 PC	Right Rear Vertical Panel 1 PC		

           
HARDWARE LIST
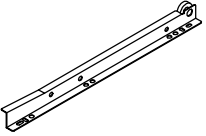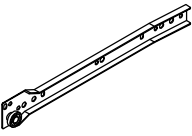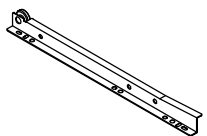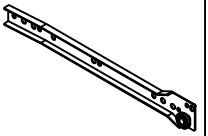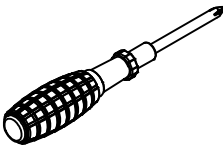
#1		#2		#3		#4		#5	
	Ø5*40mm		Ø6*30mm		Ø3.5*30mm		Ø6*35mm		Ø15*9mm
	Screw		Wood Dowel		Screw		Cam-bolt		Cam-lock
	4 PCS (Extra 1)		12PCS (Extra 2)		4PCS (Extra 1)		32PCS (Extra 3)		32PCS(Extra 3)
#6		#7		#8		#9		#10	
	2"		2"		Ø4.5*12mm				Ø3.5*14mm
	Caster With Lock		Caster		Screw		Back Bracket		Screw
	2 PCS		2 PCS		16 PCS (Extra 2)		4 PCS		6 PCS (Extra 2)
#11		#12		#13		#14		#15	
	150*32*Ø12mm		M4*18mm		45*17*12mm		30*22*1mm		Ø3*12mm
	Handle		Round Head Bolt		Single Door Magnet		Door Small Plate		Screw
	2 PCS		4 PCS (Extra 1)		1 PC		1 PC		11 PCS (Extra 2)
#16		#17		#18		#19			
	12"		12"		12"		12"		
	Left Drawer Slide Set (A)		Left Drawer Slide Set (B)		Right Drawer Slide Set (A)		Right Drawer Slide Set (B)		Center Axis (Extra)
	1 PC		1 PC		1 PC		1 PC		2 PCS
									
									Phillips Screwdriver
									1 PC

 Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT

 


CAM-LOCK

 
Tools Required




INSERTING AND TIGHTENING CAM-BOLT

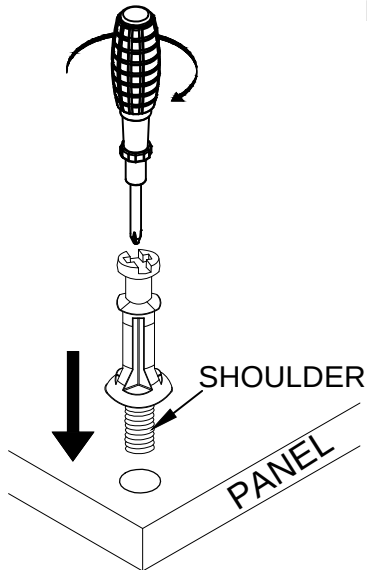 

 Place Cam-bolt on pre-drilled hole and screw in vertically

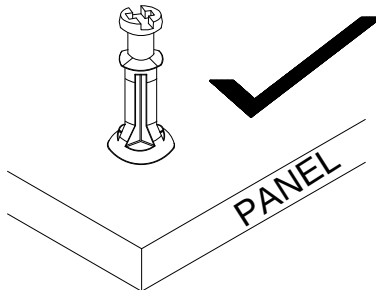

 
Shoulder is flushed (on the same level) with the panel.

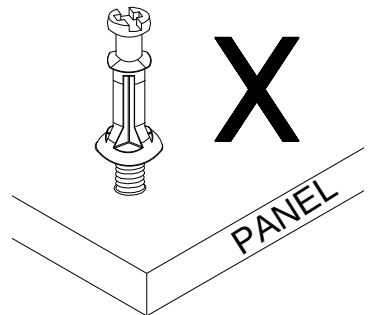


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 
INSERTING CAM-LOCK

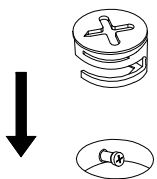

 Insert Cam-lock with arrow align to Cam-bolt head

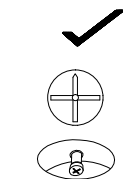


CORRECT

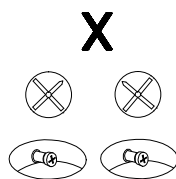 

WRONG




Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

 TIGHTENING CAM-LOCK



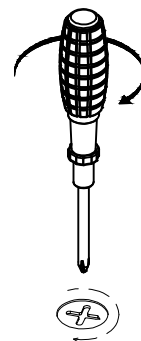


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

 
 
 
Step 1.

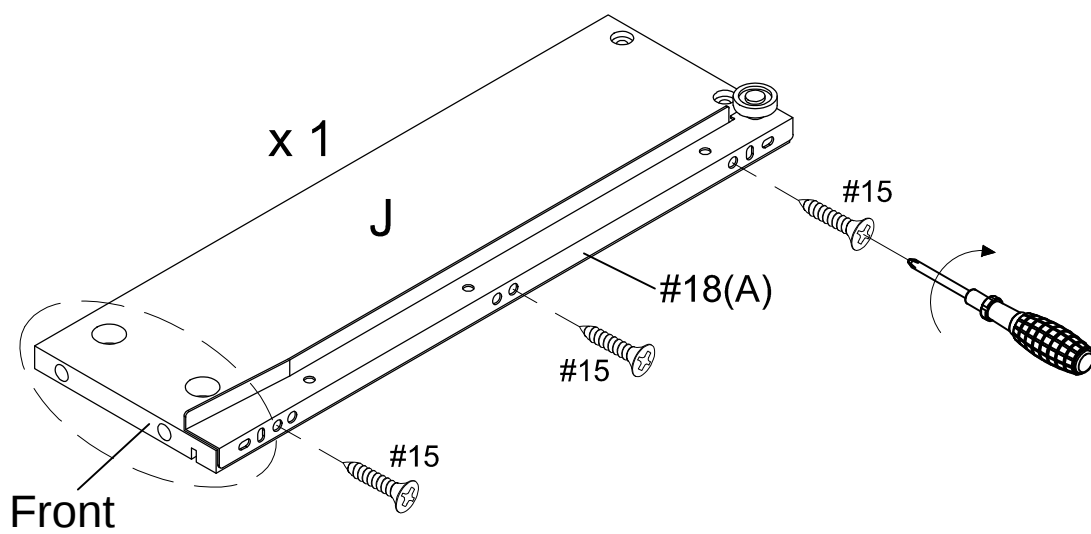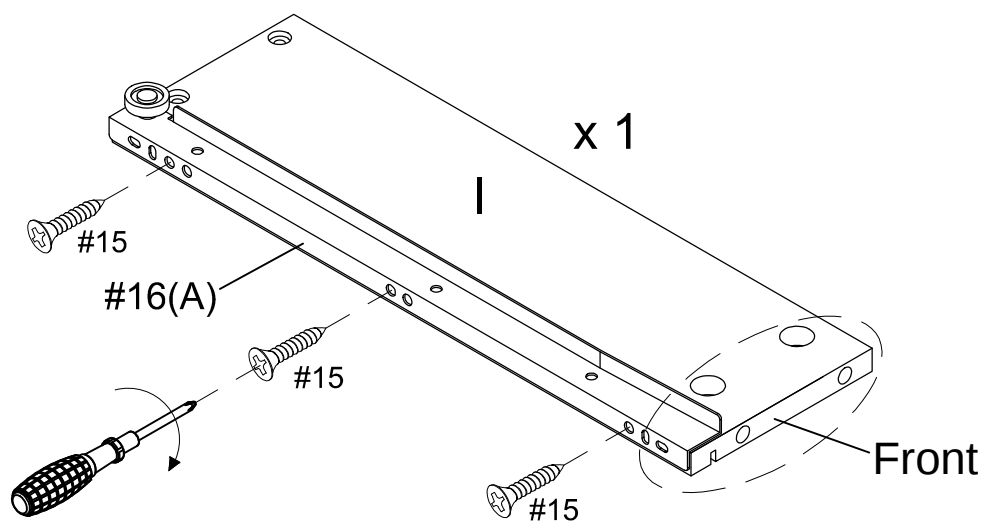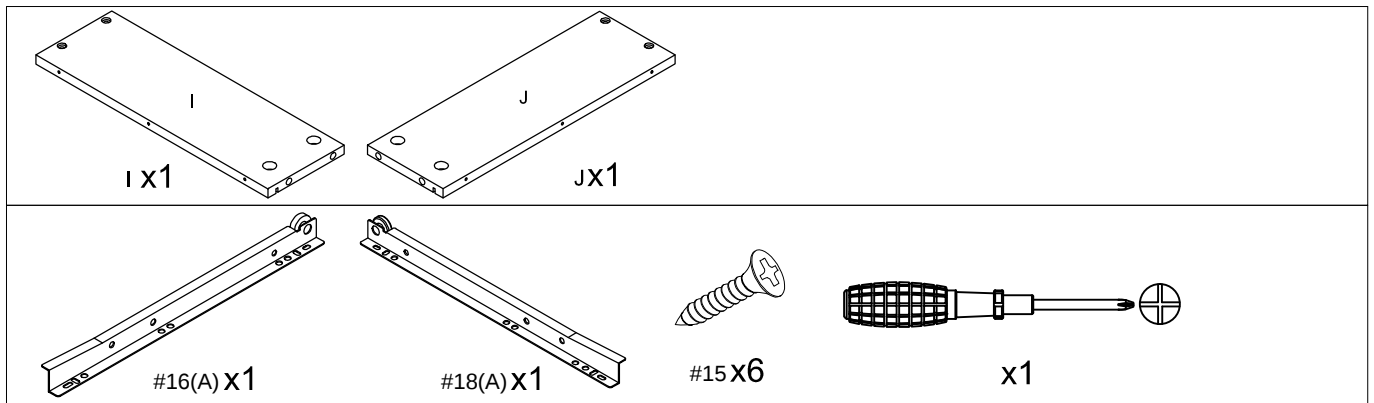

 
 
 
Step 2.

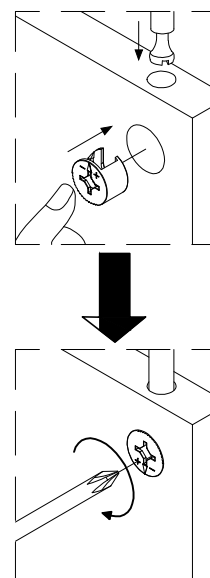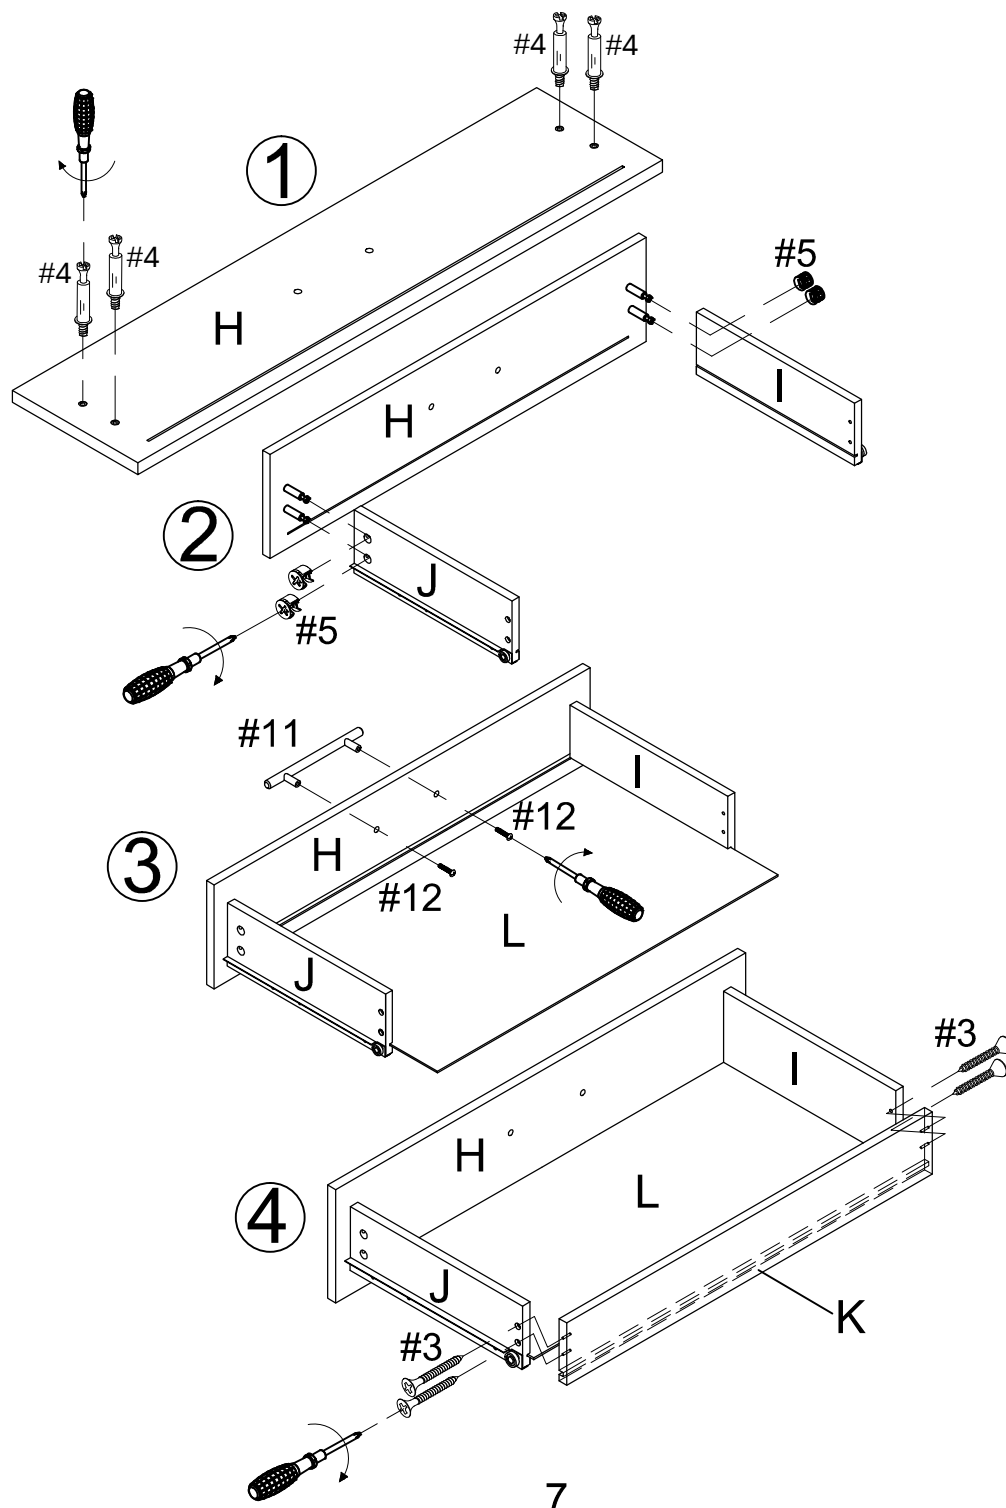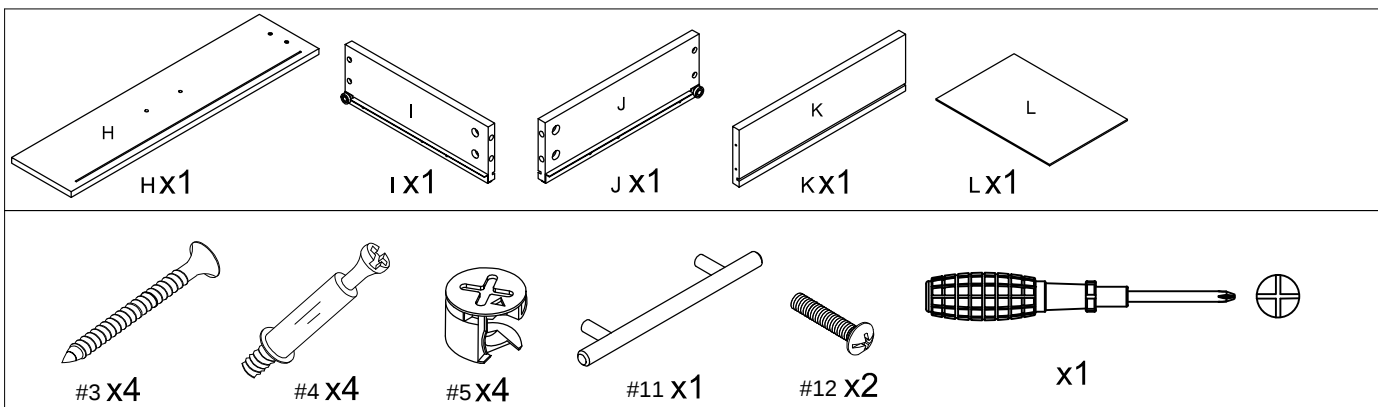

 
 
 
Step 3.

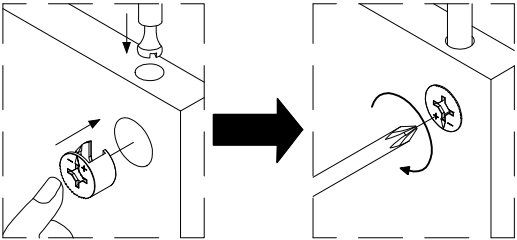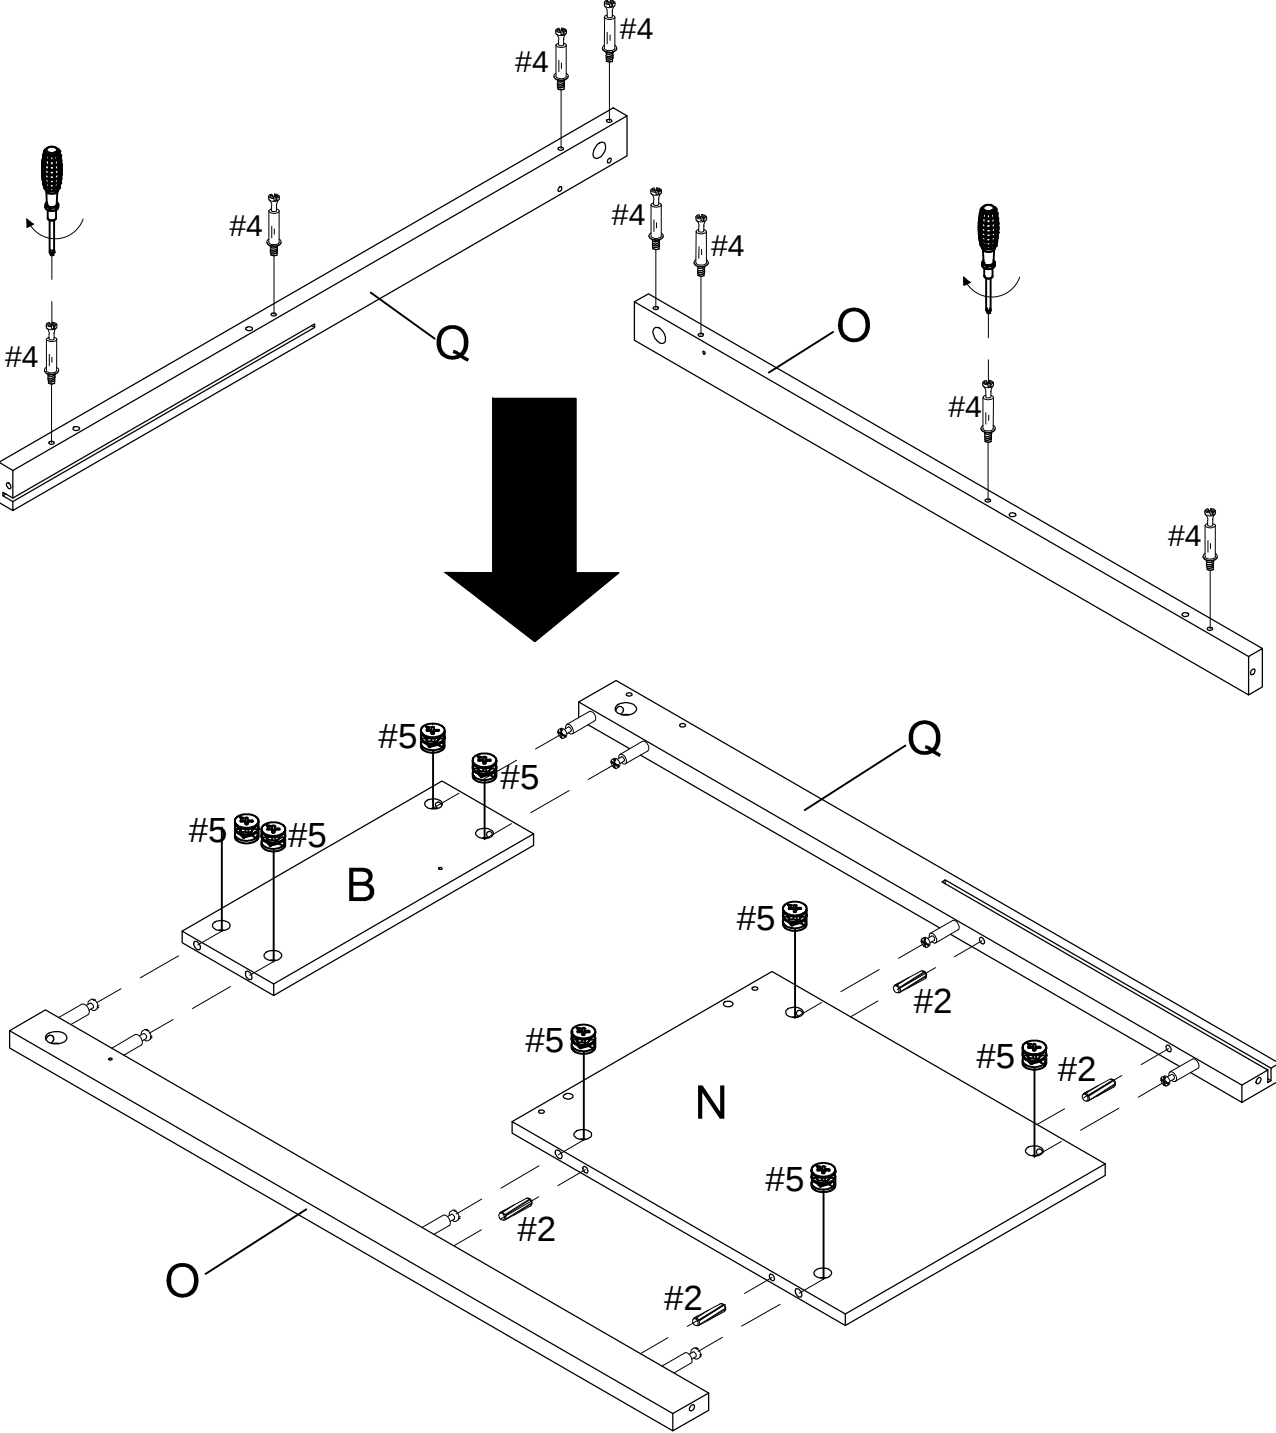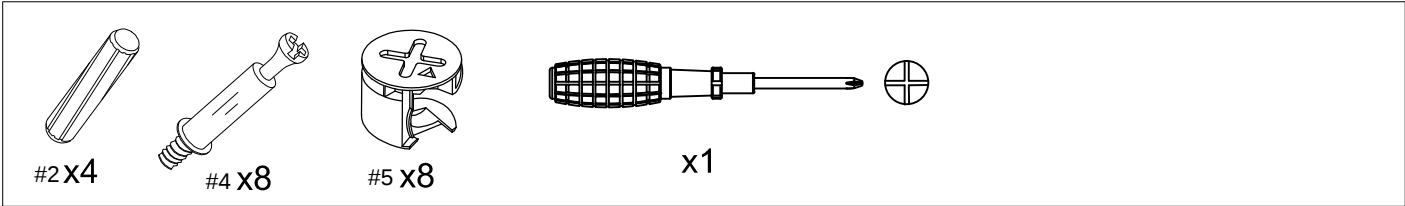

 
 
 
Step 4.

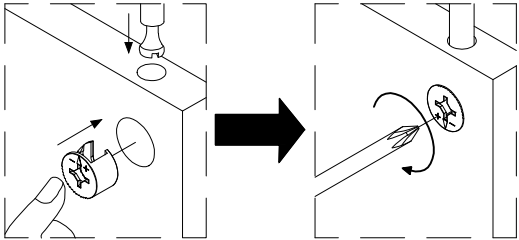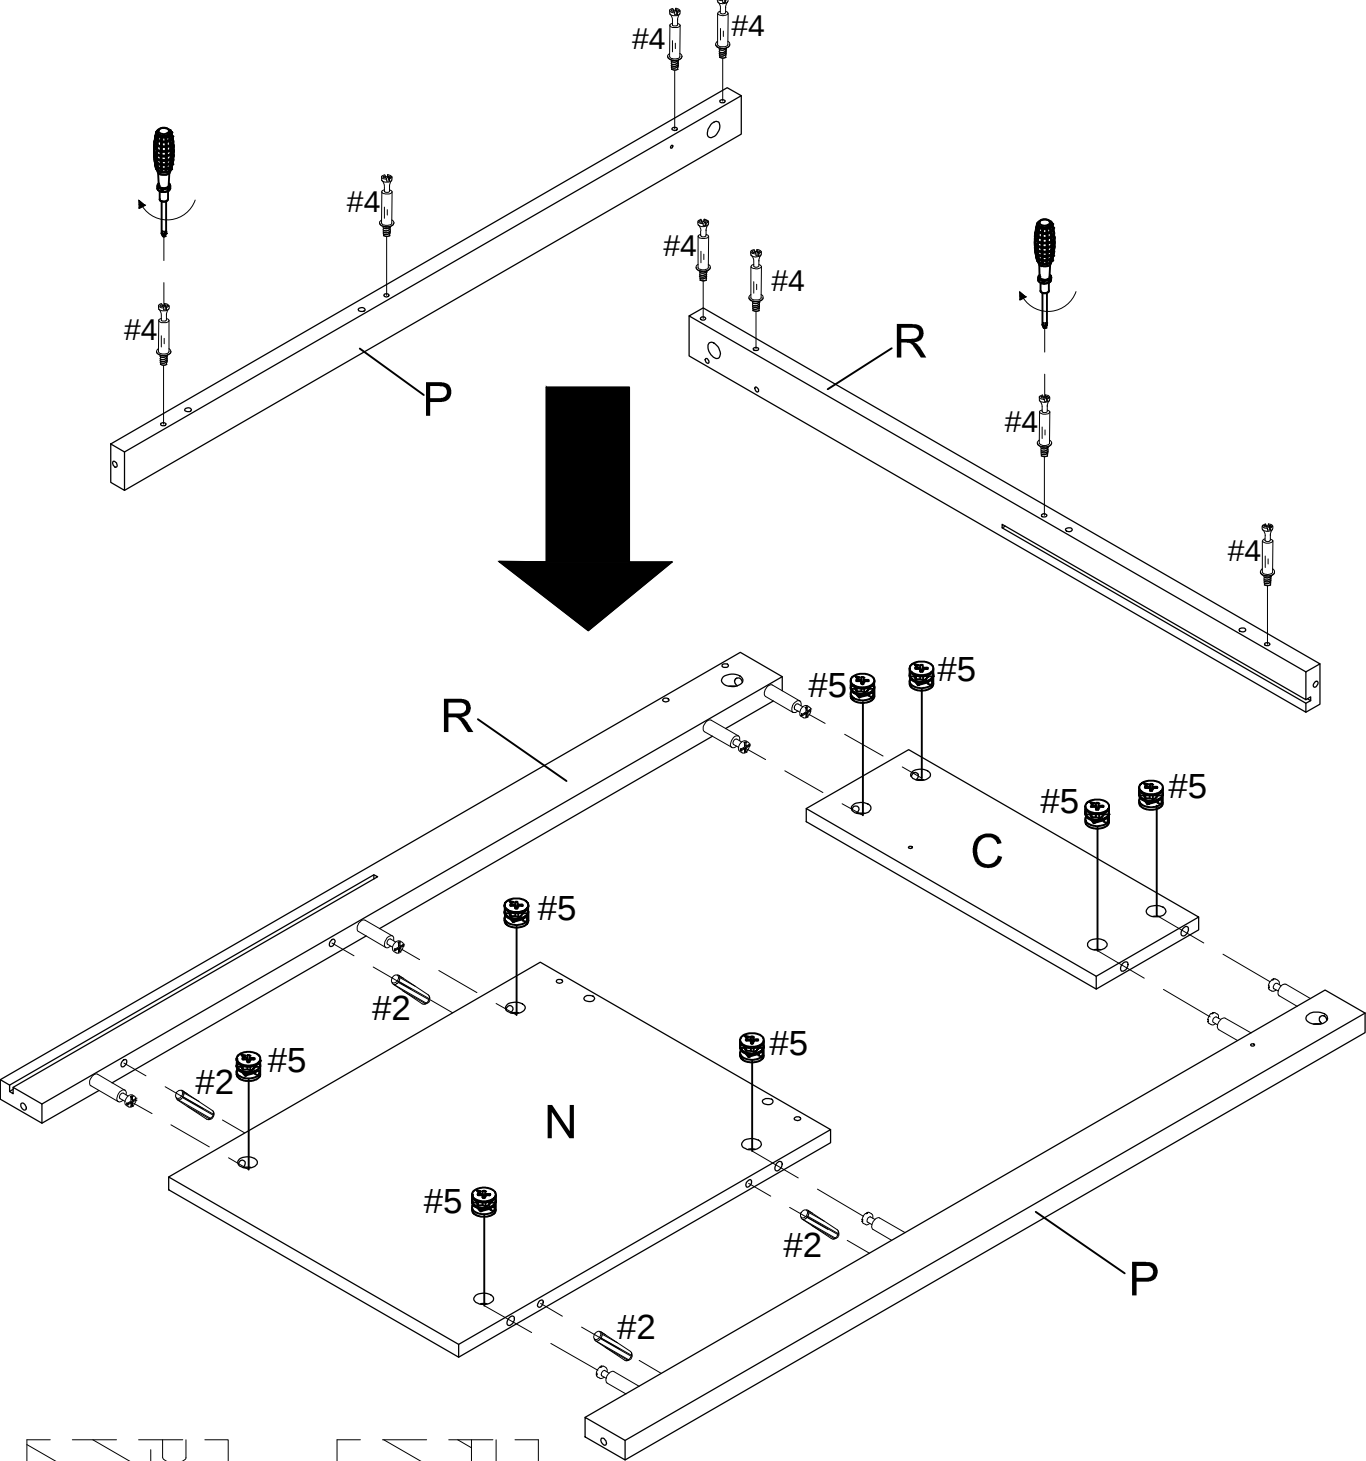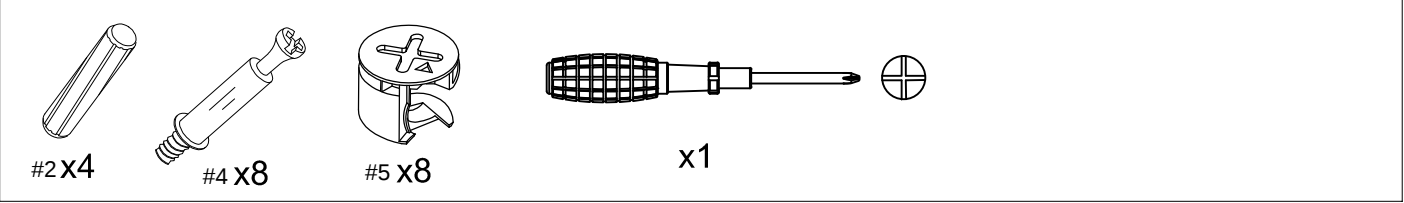

   
Step 5.

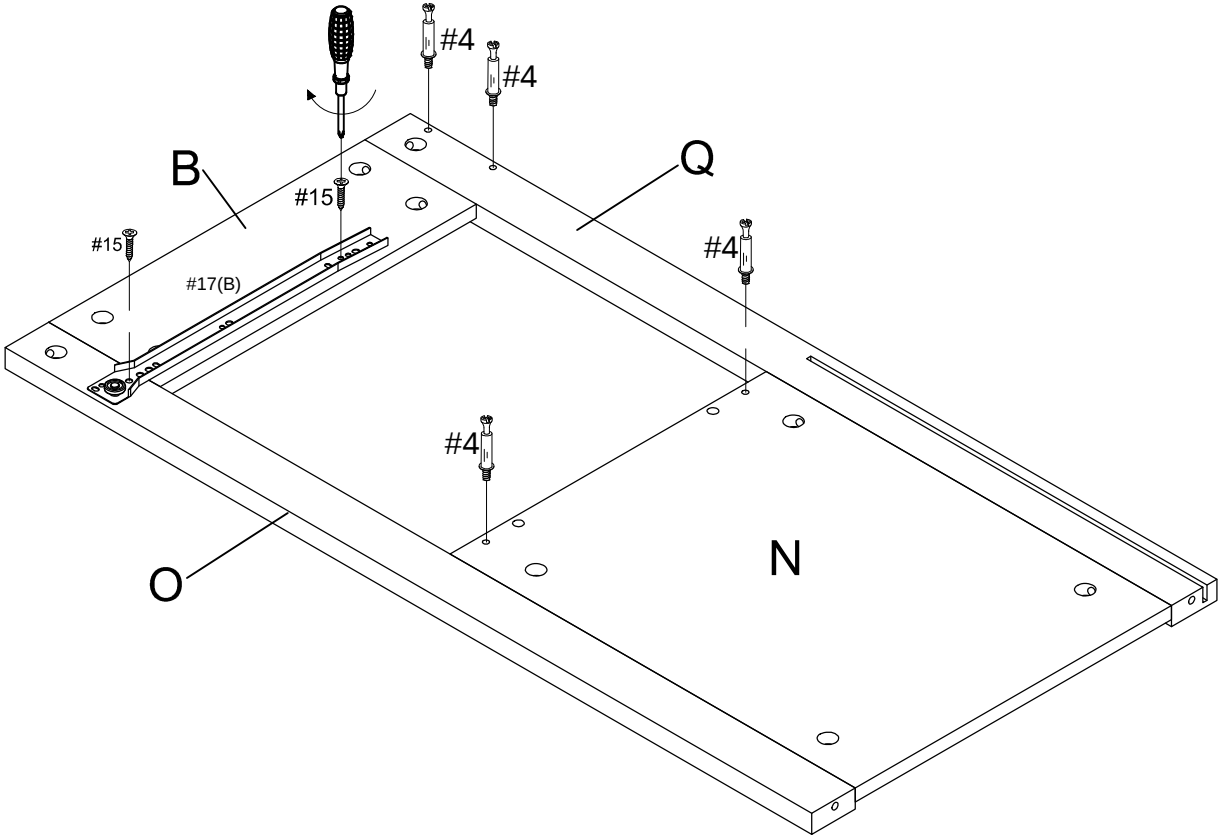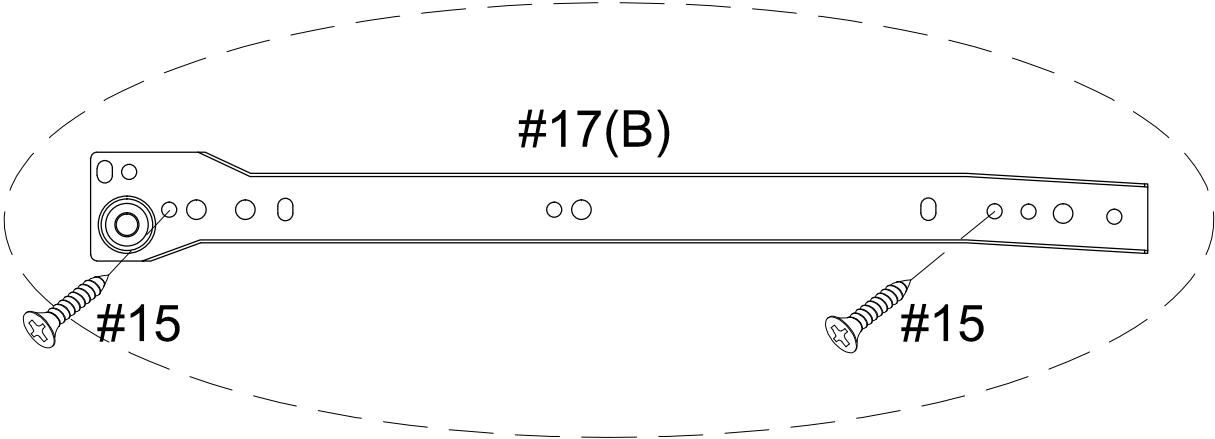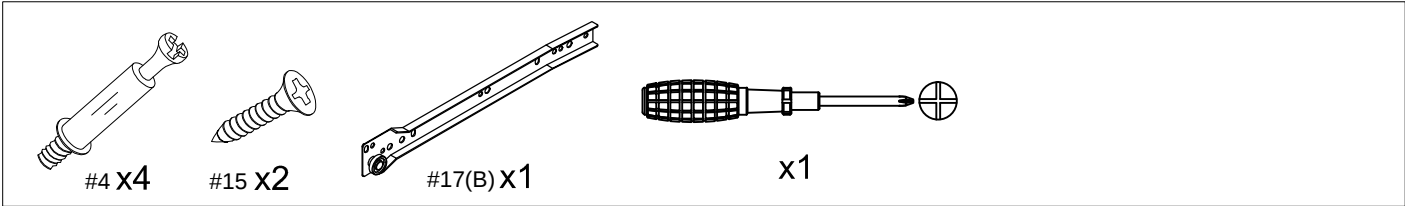

   
Step 6.

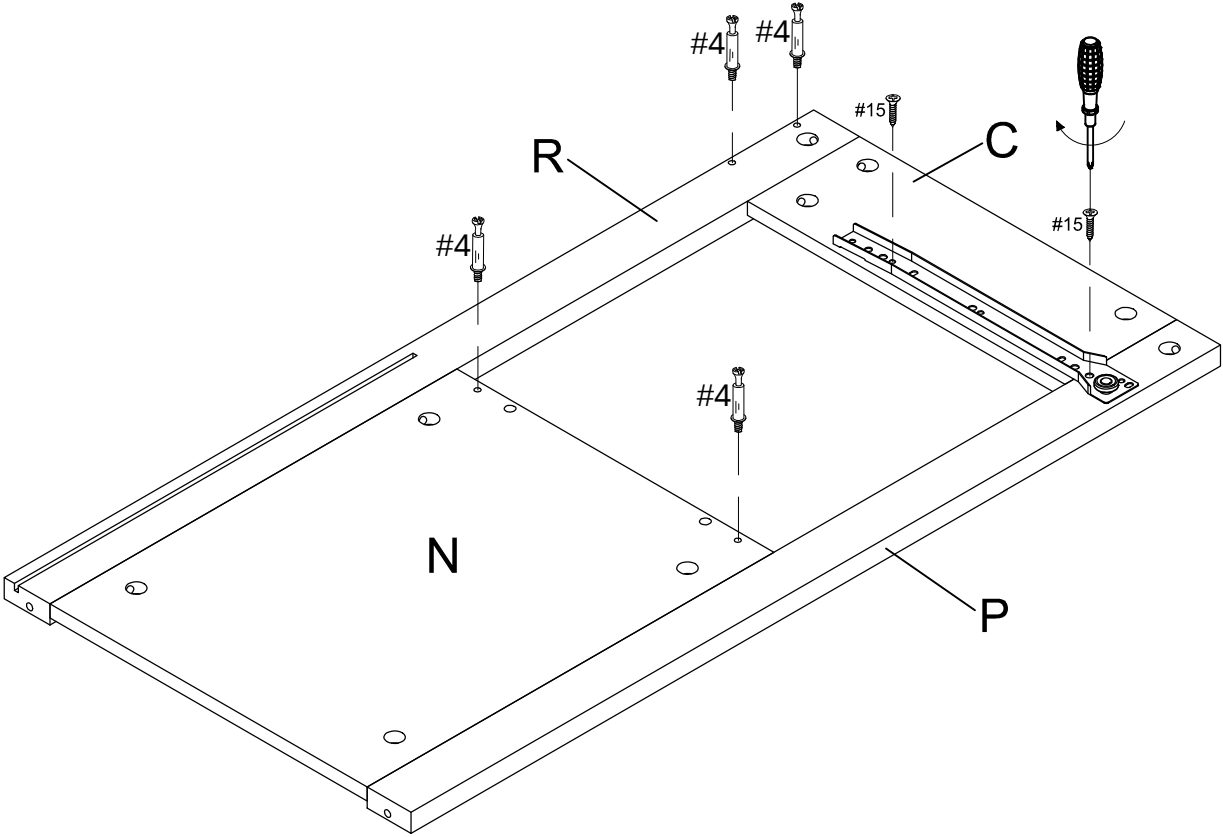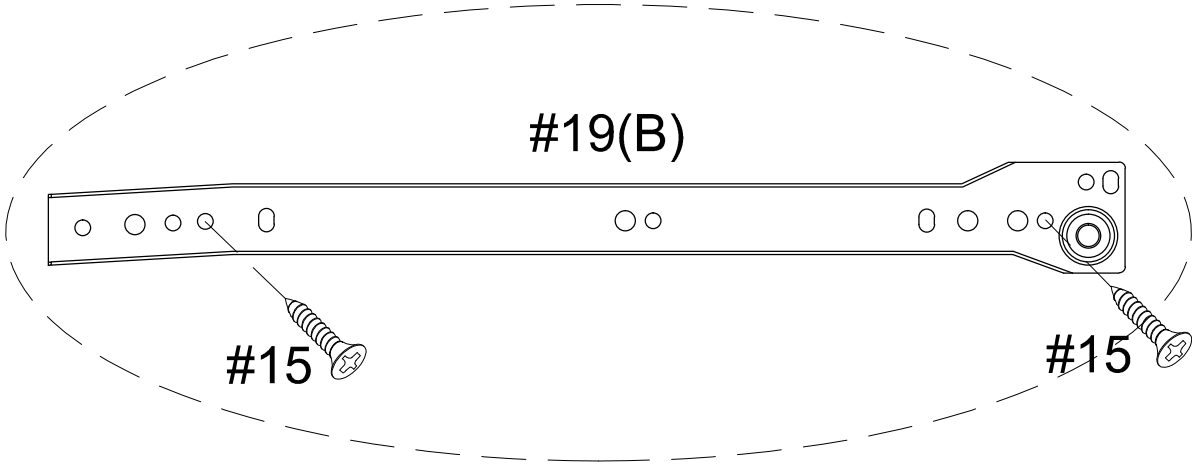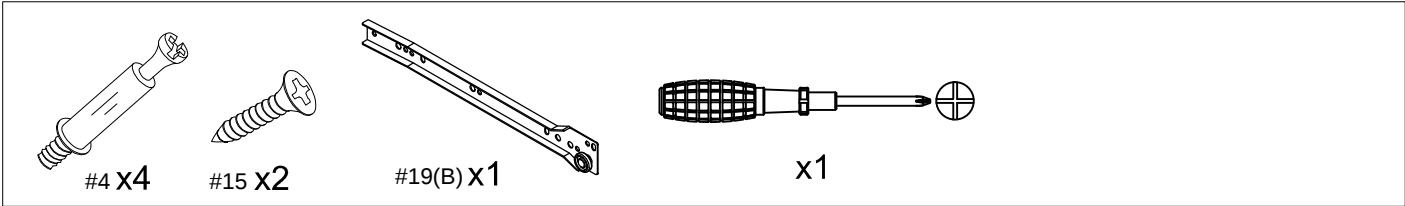


 
Step 7.

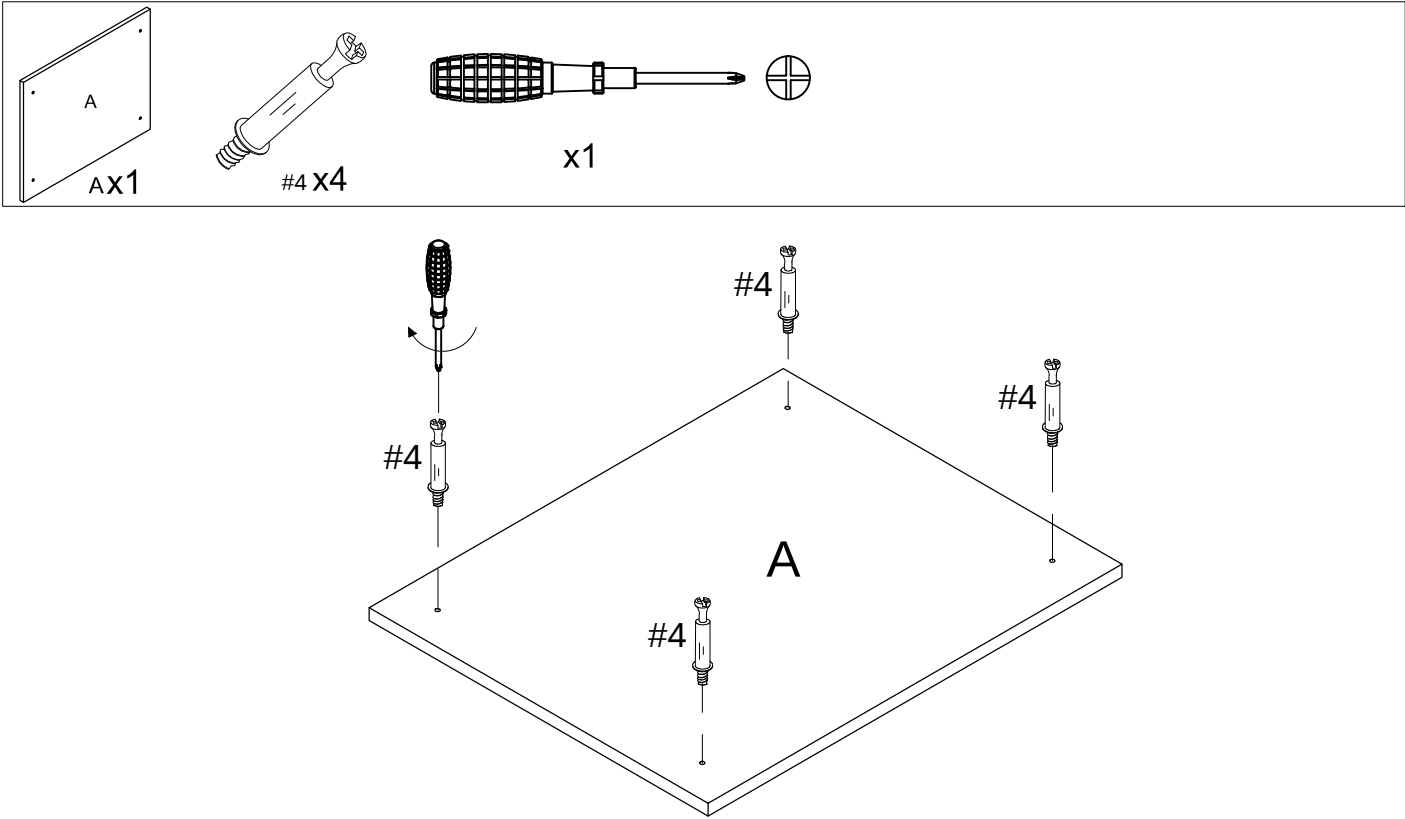

 
Step 8.

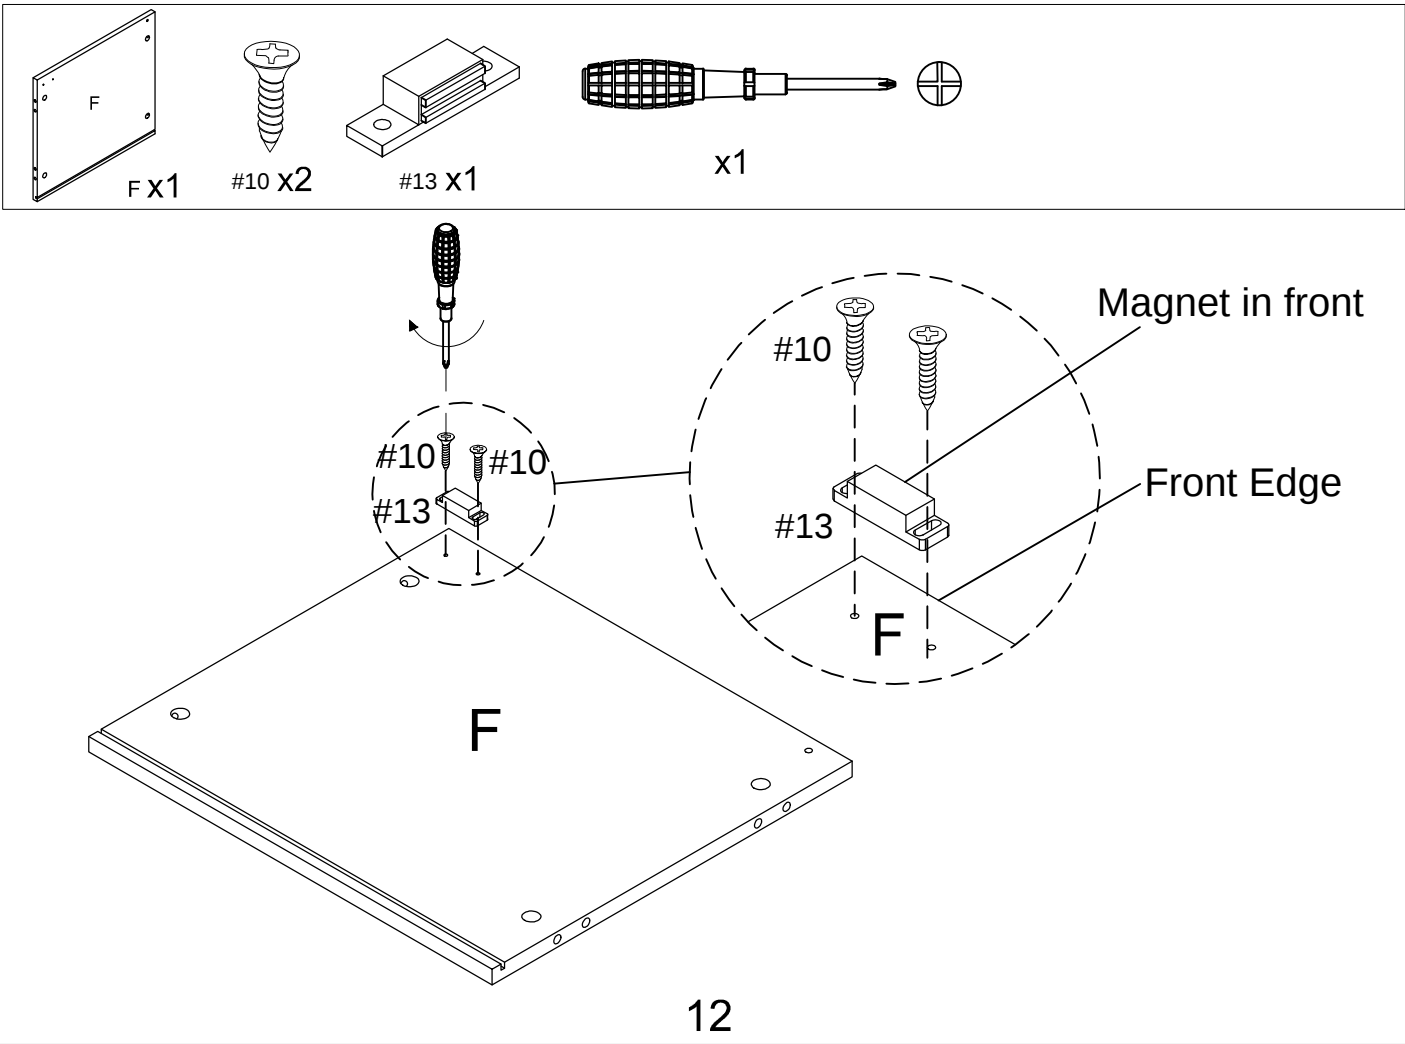

  
Step 9.

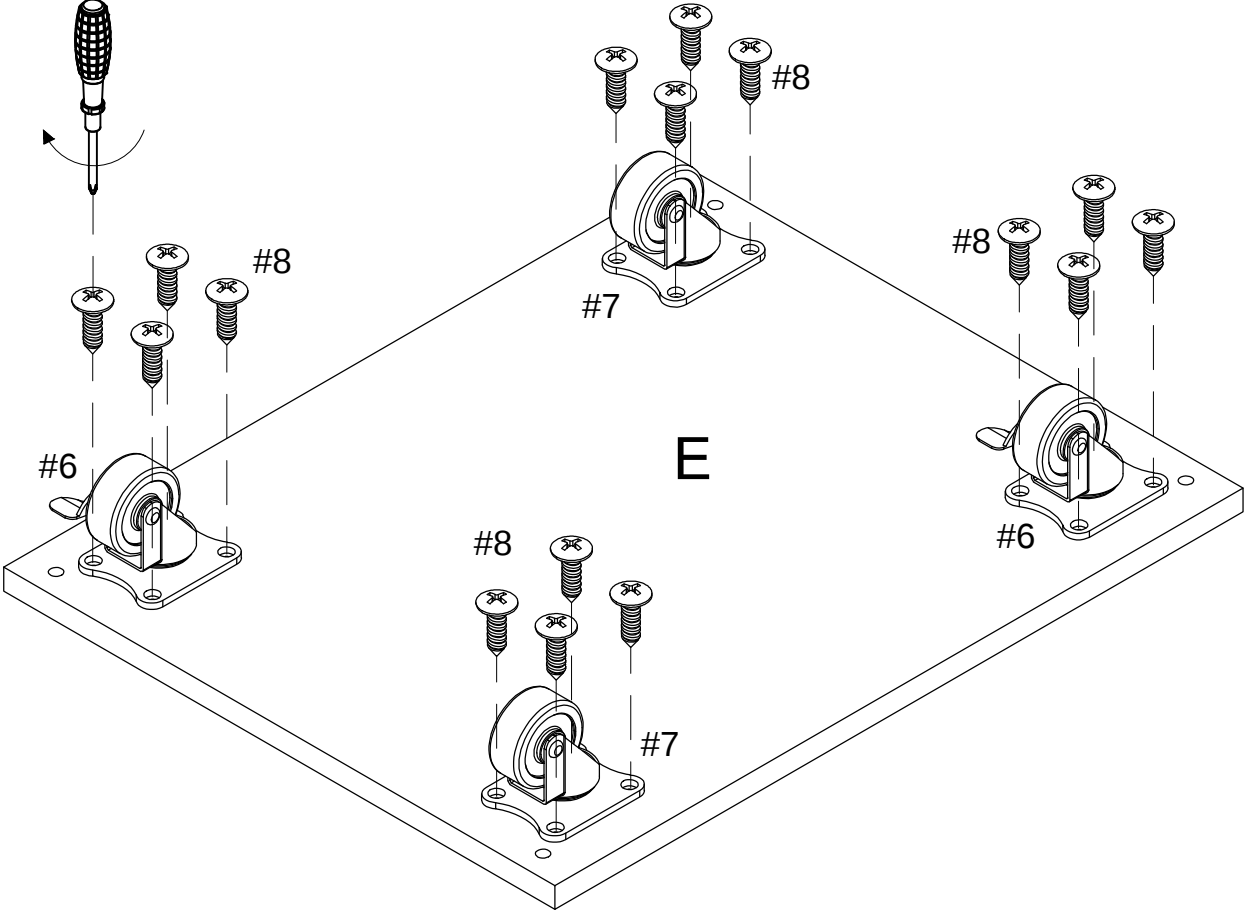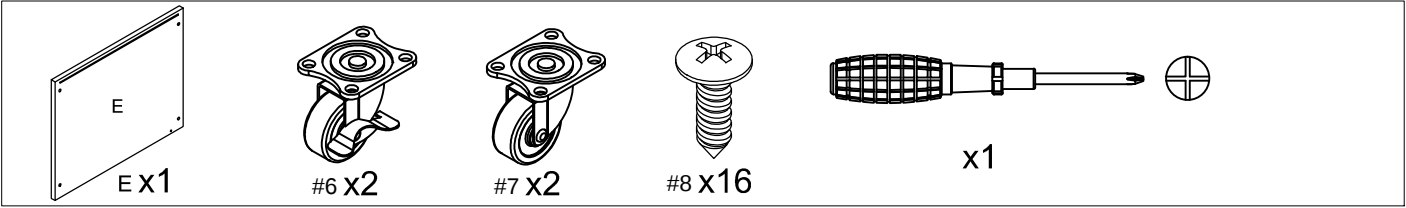


 
Step 10.

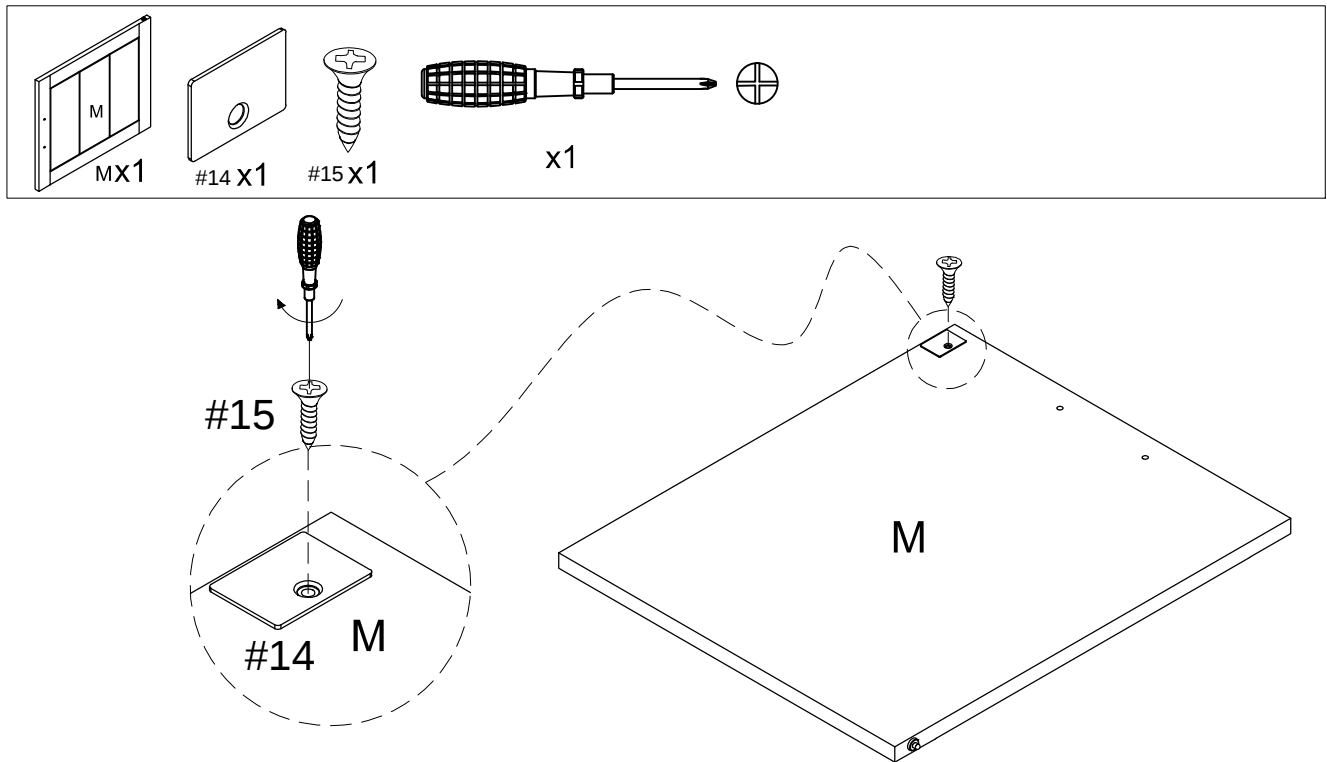


 
Step 11.

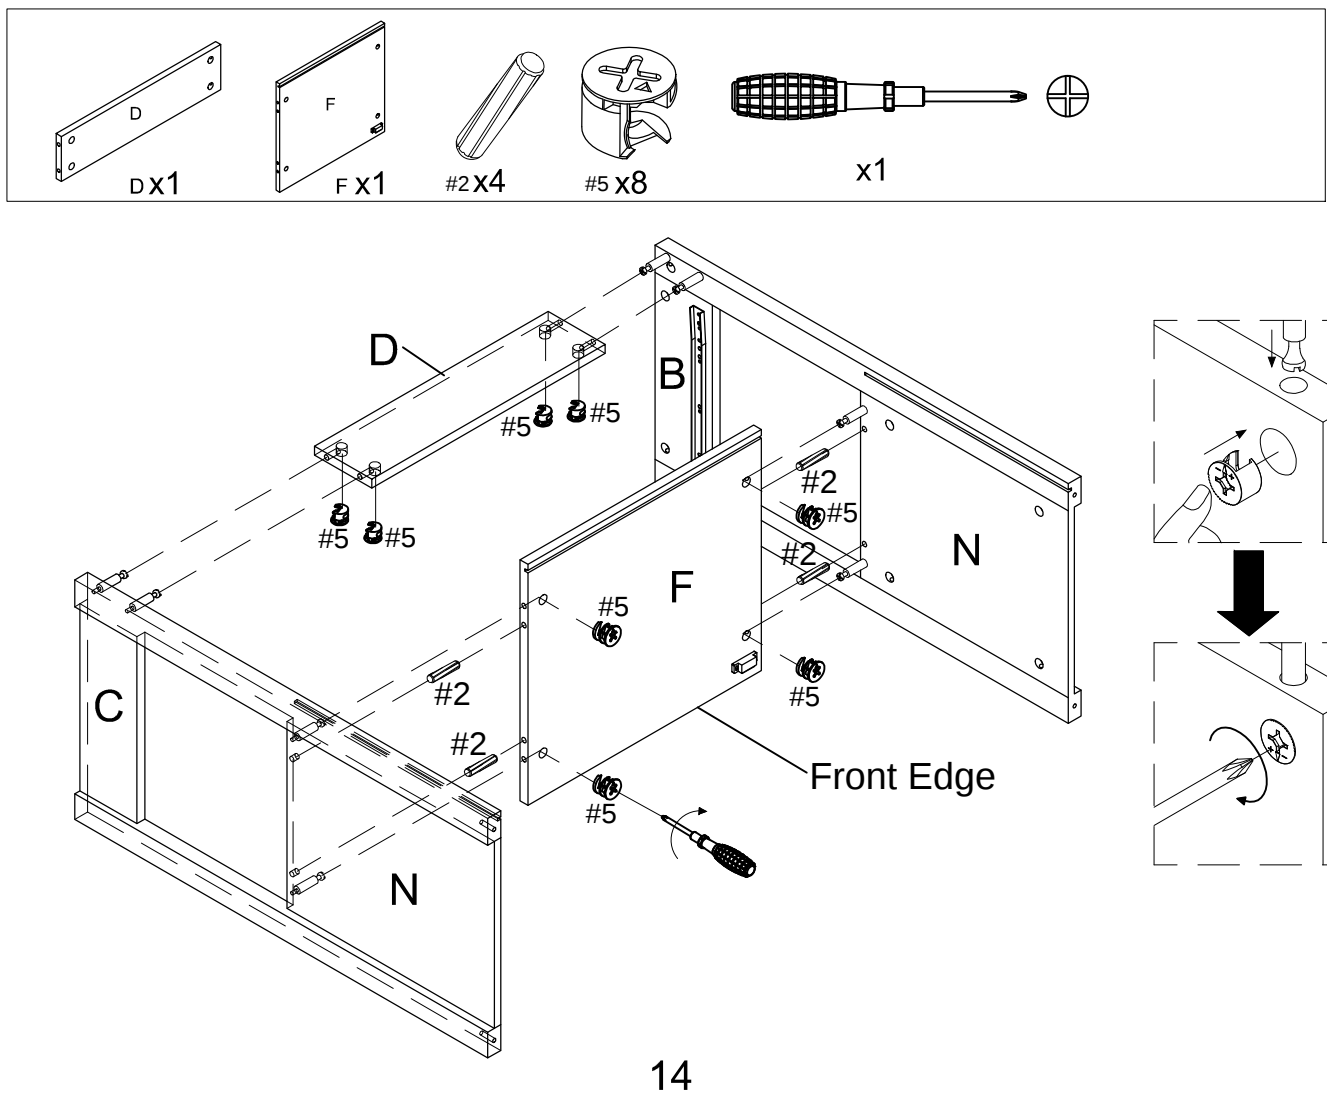


 
 
Step 12.

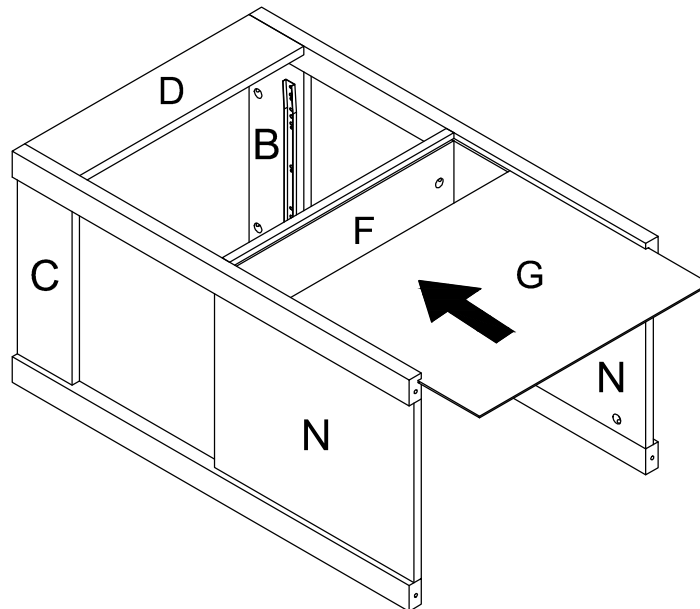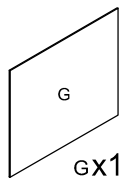

  
Step 13.

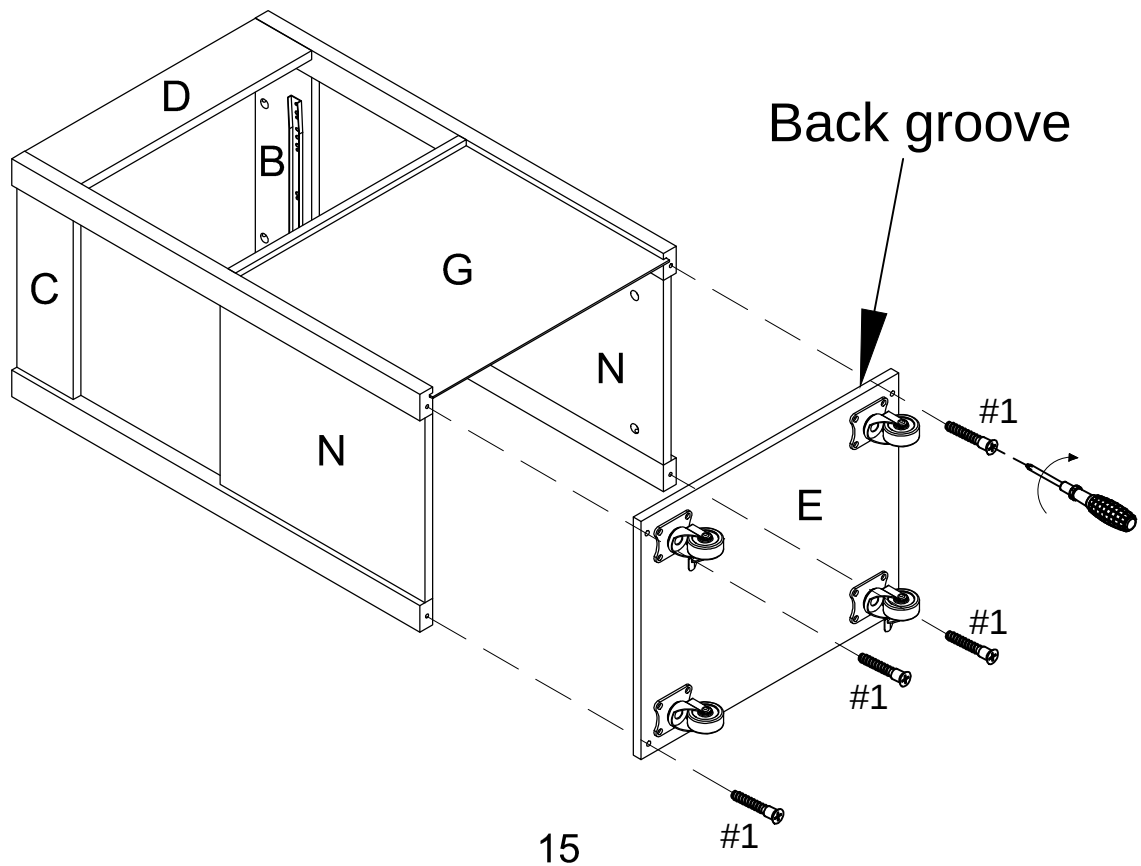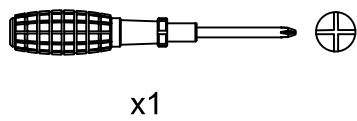

  
 
Step 14.

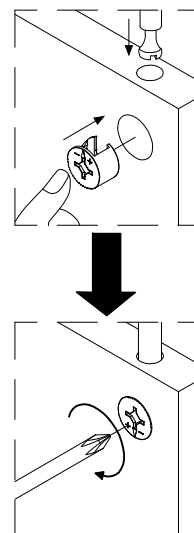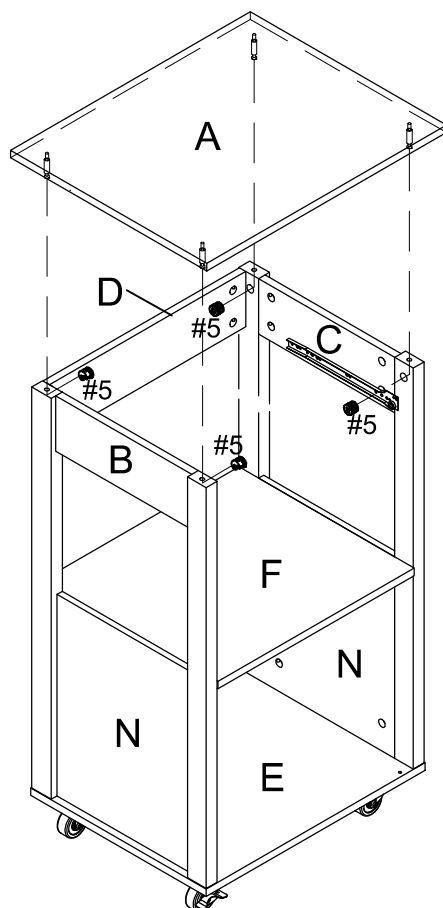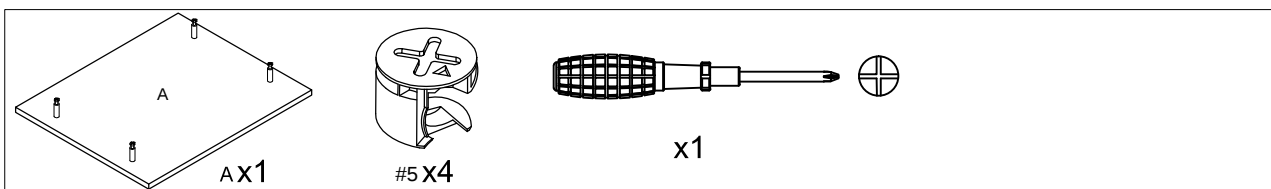

 Step 15.

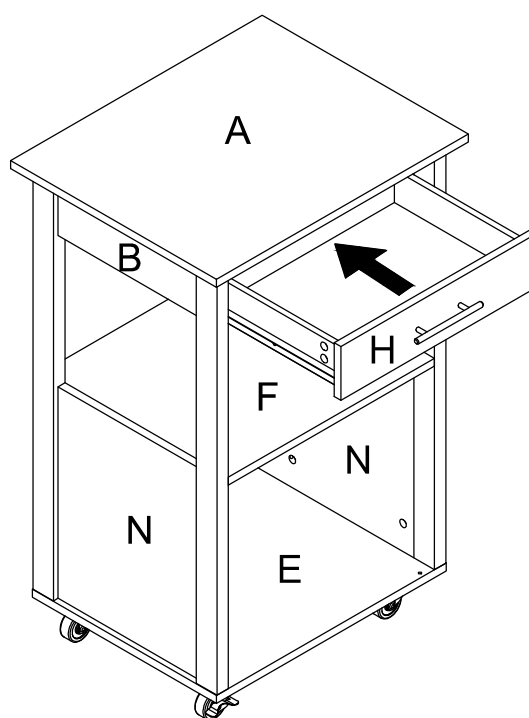

  Step 16.

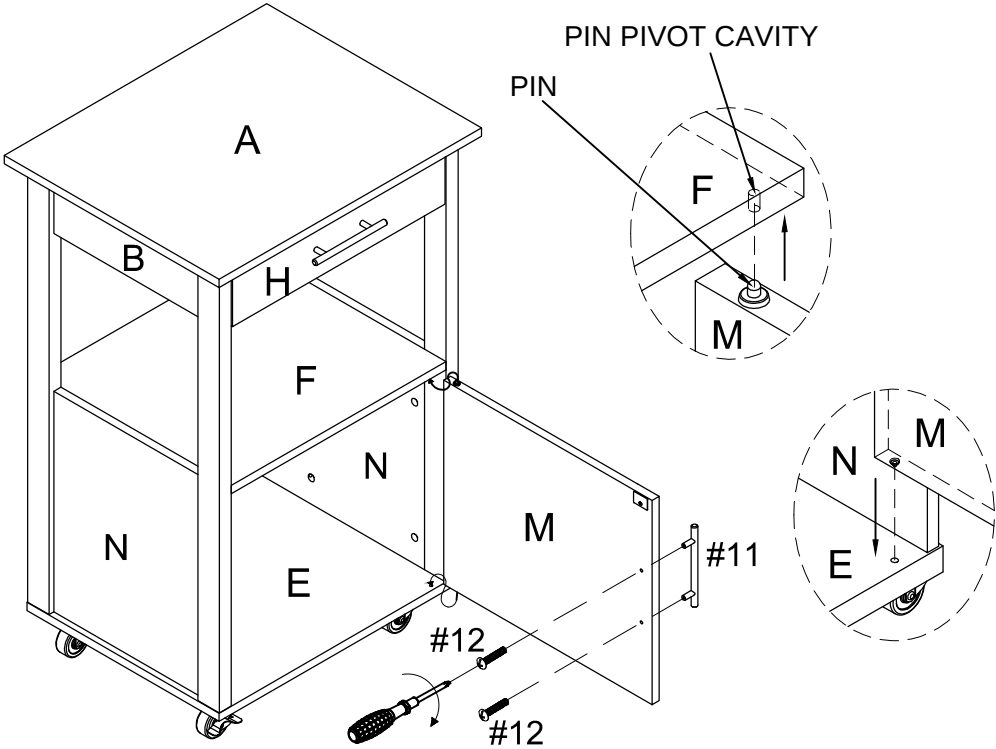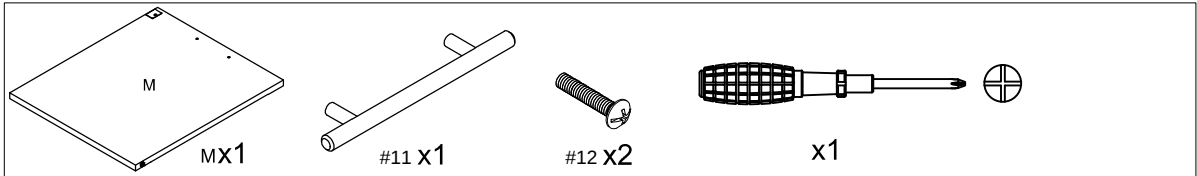

Step 17.

