


ASSEMBLY INSTRUCTIONS

Dining Chair

ASSEMBLY REQUIREMENTS

20 Minutes
Assembly Time
Per Chair
(Approximate)

1-Person
Assembly

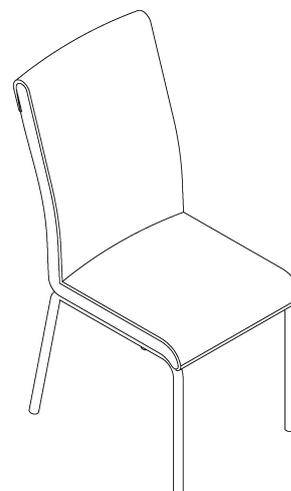

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.

Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are complete before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.

ASSEMBLY INSTRUCTIONS

Dining Chair


Hardware List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
A	Allen-Head Bolt	 6*30 mm	4PCS	C	Allen Wrench		1PC
B	Flat Washer	 6*16 mm	4PCS				

Parts List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Chair Back& Seat		1 PC	2	Leg		1 PC

Parts & Assembly Overview

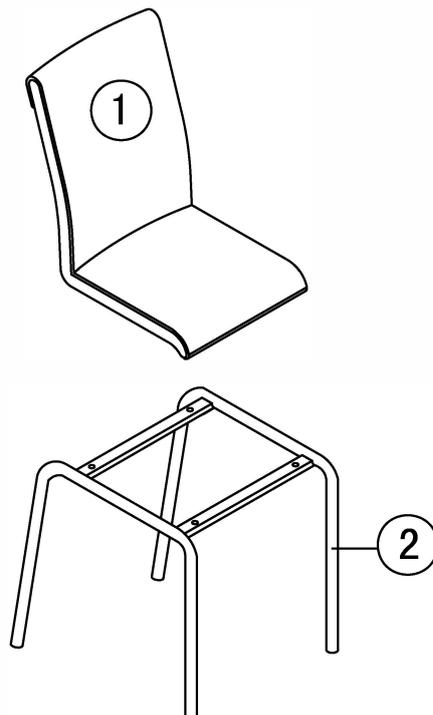


STEP 1




DO NOT USE POWER TOOLS

A		4 pcs
C		4 pcs
D		1 pc

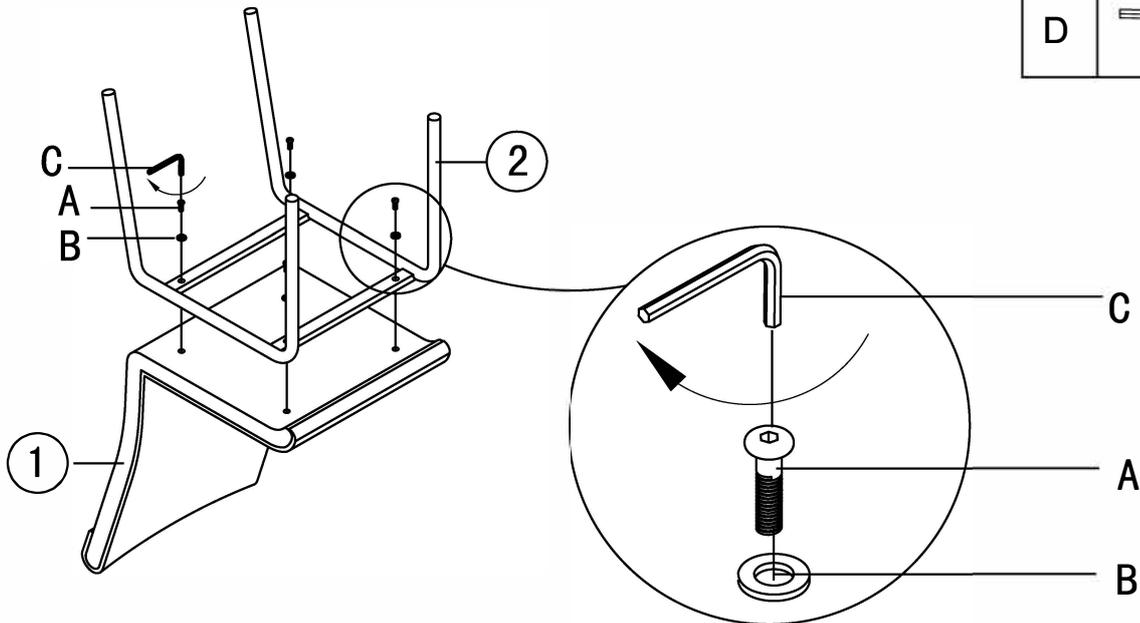

Place Chair Back (1) as shown on elevated surface (e.g. table top). Position the bolt holes on chair Leg (2) to align to the bolt holes on (1). Attach (1) to (2) by using Allen-Head Bolt (A) and Flat Washer (B). Use Allen Wrench (C) to drive (A). Do not tighten (A) completely until all 4 bolts are in place.

STEP 2

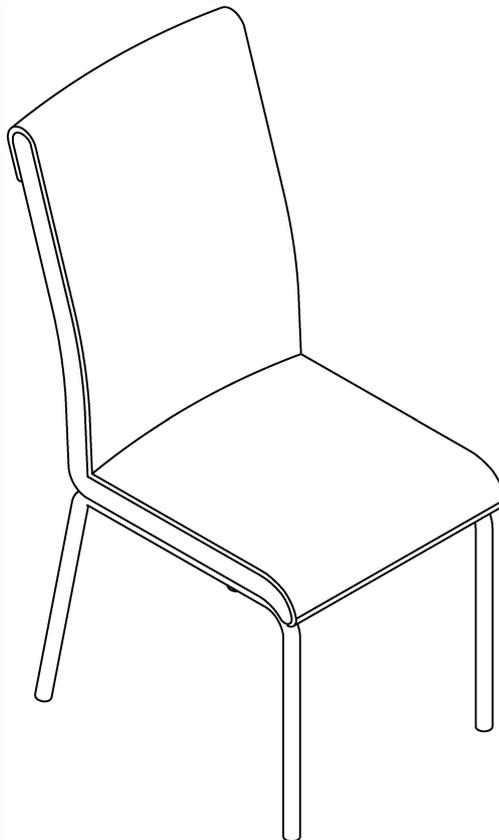

Set the chair right-side up.

The assembly of the table is complete.