 




VINGLI FIREPLACE TV STAND

ASSEMBLY INSTRUCTION

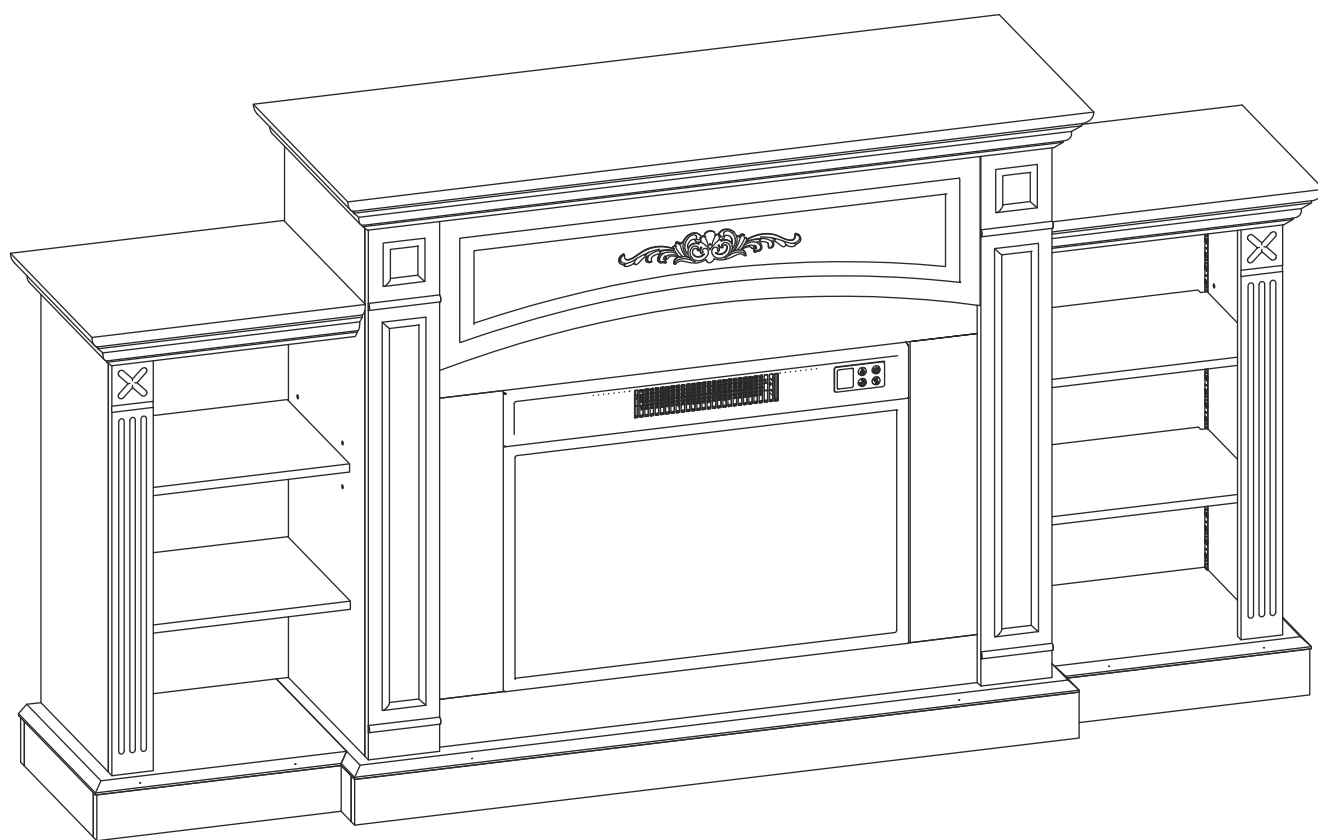

Thank you for purchasing from VINGLI!

Please contact us via email if parts are missing or damaged, we will gladly ship your replacement parts free of charge

⚠ IMPORTANT

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

RETURN & WARRANTY

Thank you for choosing our product!

We would like to take this opportunity to thank you for choosing VINGLI.

We hope that you are completely satisfied with your purchase, and enjoy it for years to come.

Your satisfaction is our highest pursuit.

Return policy

VINGLI believes you will absolutely love your furniture, but if for some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service organization can answer most concerns and can assist you with any questions you may have about your new product.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

Warranty

VINGLI warrants this product to be free from defects in material and workmanship agrees to remedy any such defect. This warranty covers one year from the date of original purchase. This is solely limited to be repair or replacement of defective parts and no assembly labor is included.

This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way.

Components repaired or replaced warranted through the remainder of the original warranty period only. The defective components will be repaired or replaced without charge, subject to the terms and conditions described above.

For help with assembly, identifying parts, product information or to order parts, please contact us freely.

BEFORE STARTING

Before Using Product



- ☐ Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.



- ☐ Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.

 
- ☐ Prepare a flat and Philips screwdriver (not included)
A Power Screwdriver is recommended.



- ☐ Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.



- ☐ For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.

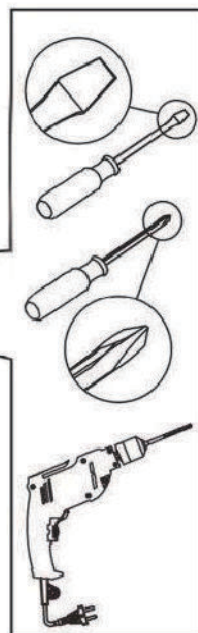

Estimated People for Assembly

 
≥ 2

WARNING:

- Do not allow children to climb on unit
- Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over, it must be permanently fixed to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer
- Avoid sharp objects or corrosive chemicals to prevent damage to the product
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards

IDENTIFY PARTS


One unit

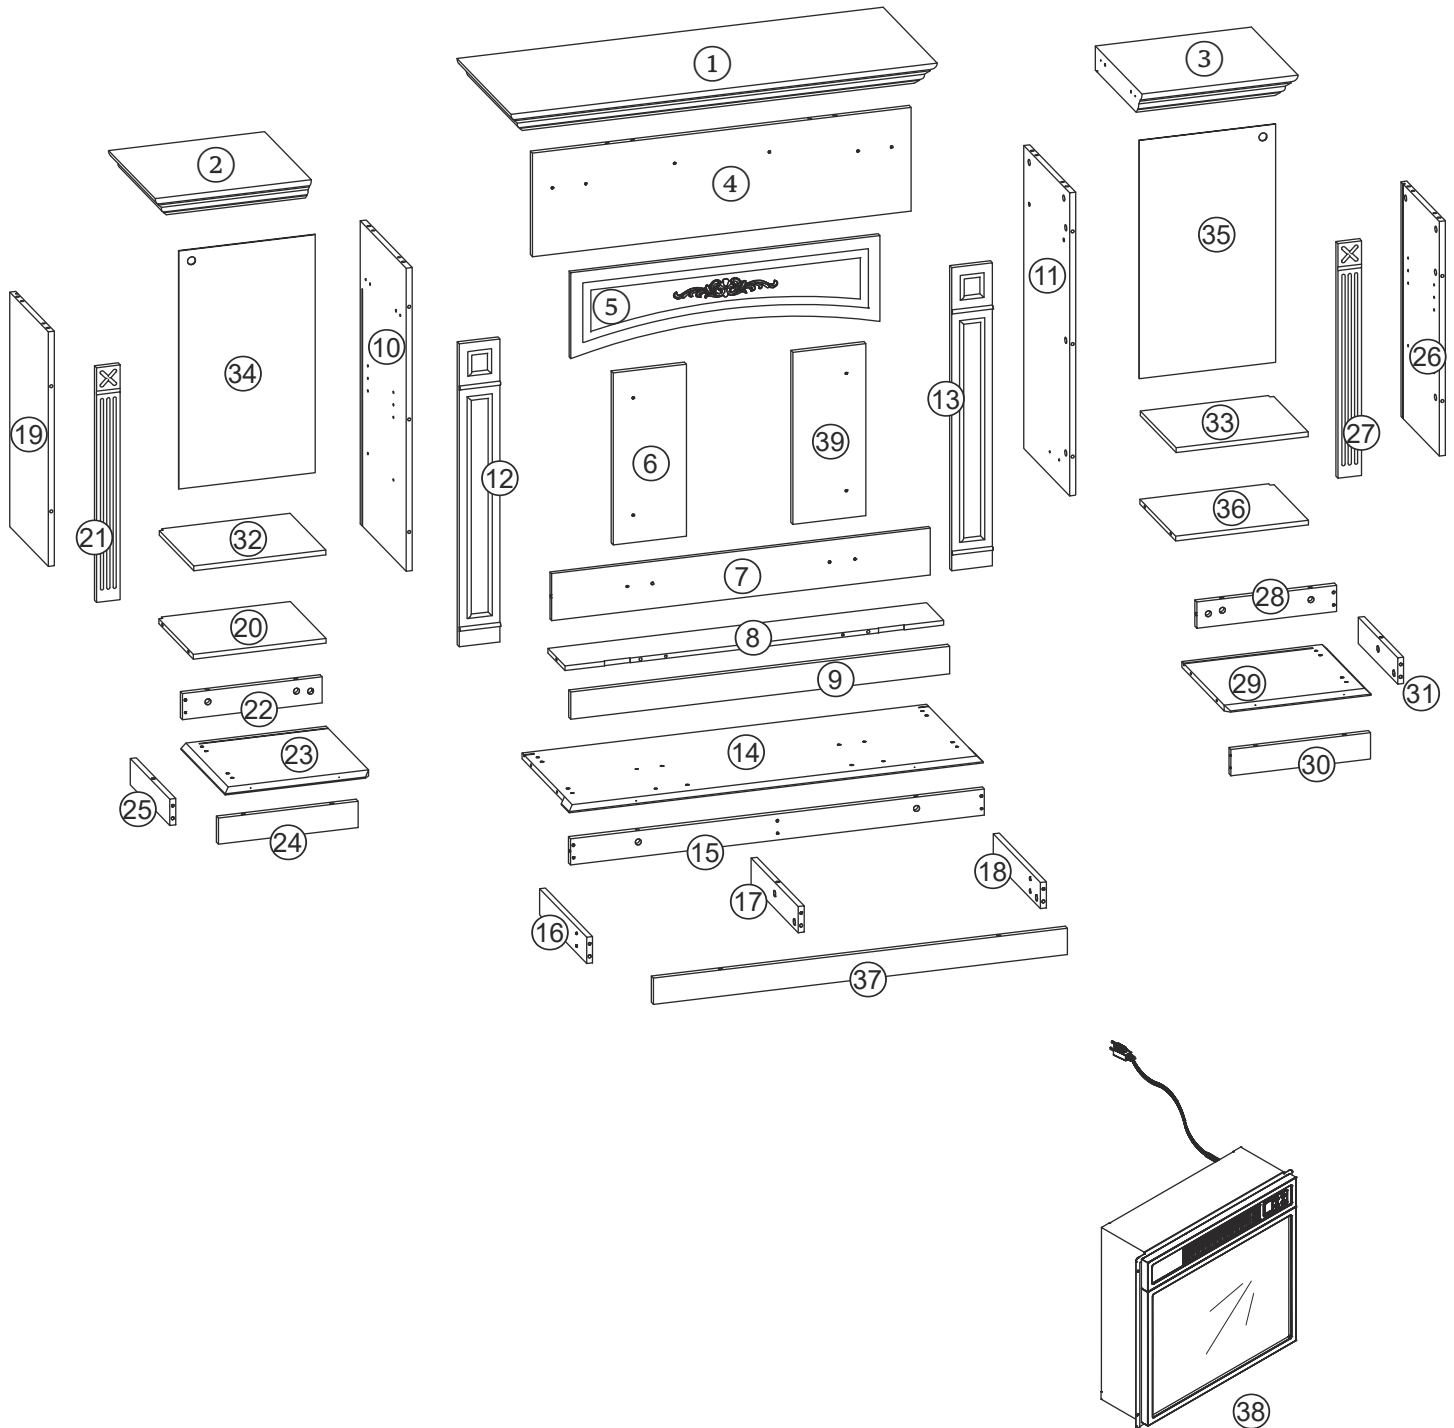

COMPONENTS

Please check the board number and the hole on the board

 
1

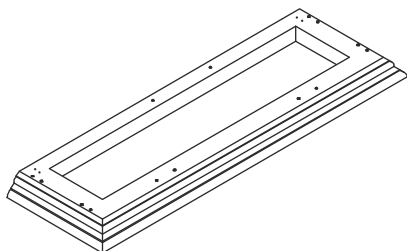

1079x400x61mm

Middle Top Panel x1

 
2

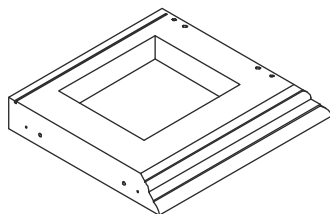

395x345x61mm

Left Top Panel x1

 
3

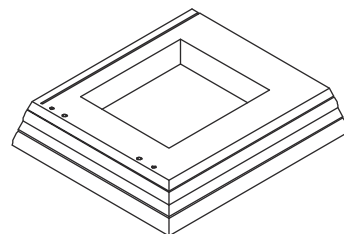

395x345x61mm

Right Top Panel x1

 
4

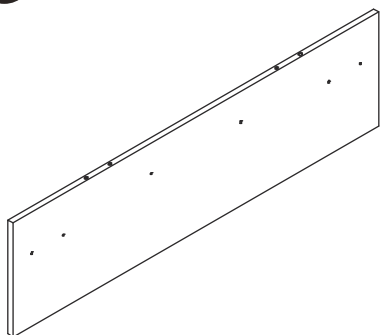

960x265x15mm

Middle Top
Connecting Panel x1

 
5

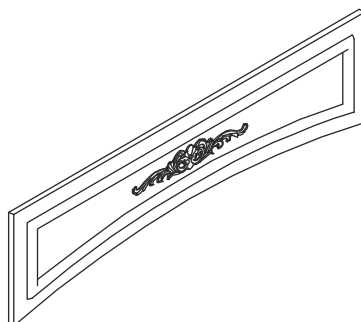

782x220x12mm

Middle Top
Decorative Panel x1

 
6

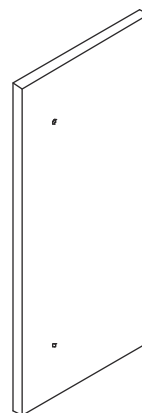

438x185x15mm

Middle Left Panel x1

 
7

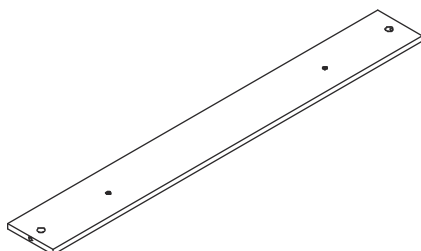

960x120x12mm

Middle Lower Rear Panel x1

 
8

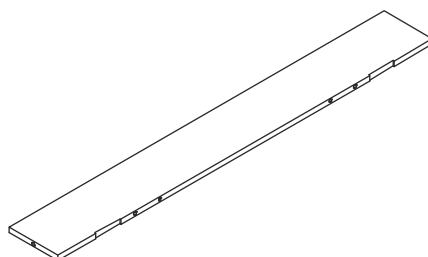

960x127x12mm

Middle Lower Panel x1

 9

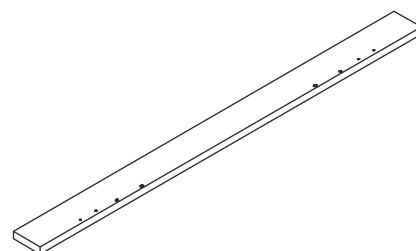


960x70x15mm

Middle Lower
Connecting Wood Strip x1

COMPONENTS

Please check the board number and the hole on the board

 
10

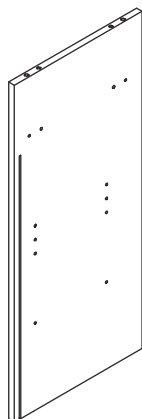

775x340x15mm

Left Middle Panel x1

 11

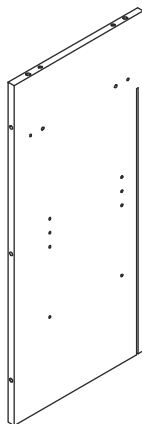

775x340x15mm

Right Middle Panel x1

12



775x103x15mm

Middle Left
Decorative Panel x1

 
13



775x103x15mm

Middle Right
Decorative Panel x1


14

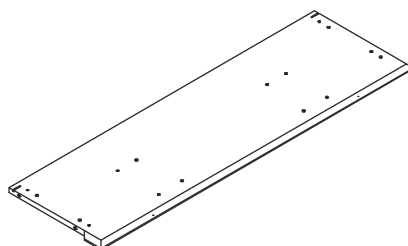

1046x384x15mm

Middle Bottom Panel x1

 
15

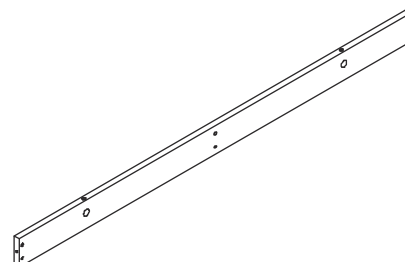

1046x66.5x15mm

Middle Bottom Rear
Brace Panel x1

 
16

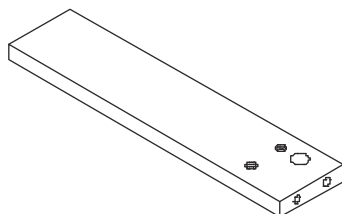

348x66.5x15mm

Middle Bottom Left
Brace Panel x1

 
17

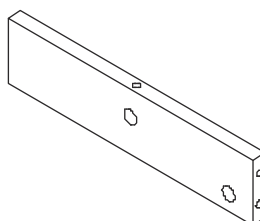

348x66.5x15mm

Middle Bottom
Brace Panel x1

 18

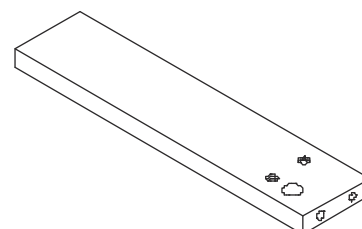


348x66.5x15mm

Middle Bottom Right
Brace Panel x1

COMPONENTS

Please check the board number and the hole on the board

 
19

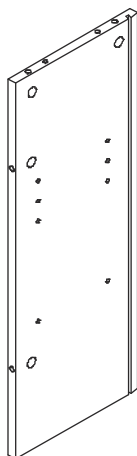

600x285x15mm

Left Side Panel x1

 20

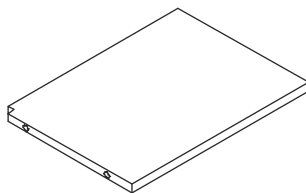

336x265x12mm

Left Lower Panel x1

 
21



600x60x15mm

Left Decorative Panel x1


22

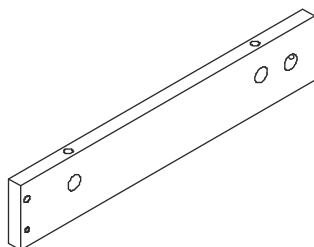

353x66.5x15mm

Left Bottom Rear
Brace Panel x1

 
23

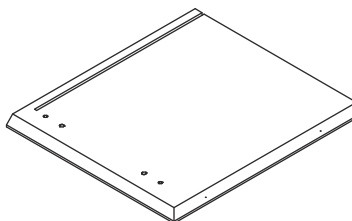

367x326x15mm

Left Bottom Panel x1

 
24

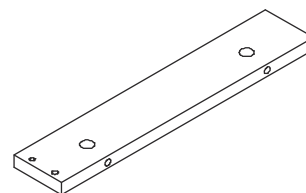

355x66.5x15mm

Left Bottom Front
Brace Panel x1

 25

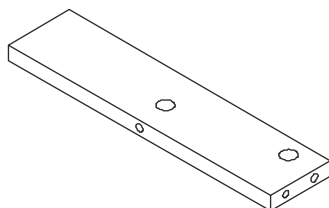

292x66.5x15mm

Left Bottom
Side Brace Panel x1

26



600x285x15mm

Right Side Panel x1

27



 
600x60x15mm

Right Decorative Panel II x1

COMPONENTS

Please check the board number and the hole on the board


28

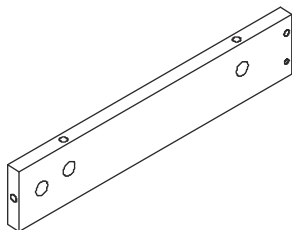

353x66.5x15mm

Right Bottom Rear
Brace Panel x1

 
29

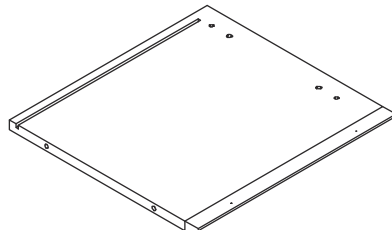

367x326x15mm

Right Bottom Panel x1

 
30

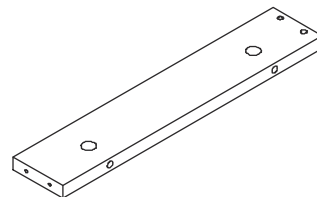

355x66.5x15mm

Right Bottom Front
Brace Panel x1

 
31

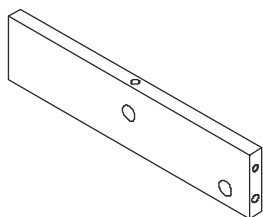

293x66.5x15mm

Right Bottom
Side Brace Panel x1

 
32

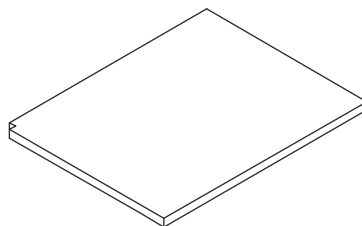

333.5x263.5x12mm

Left Adjustable Shelf x1

 33

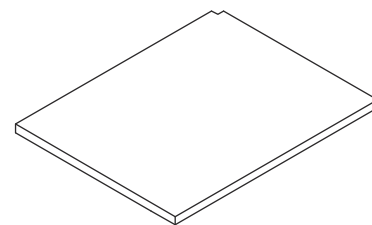

333.5x263.5x12mm

Right Adjustable Shelf x1

 
34



609x345x3mm

Left Back Panel x1


35

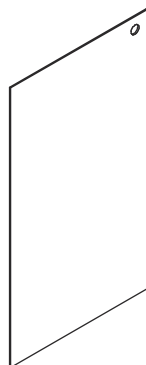

609x345x3mm

Right Back Panel x1

 36

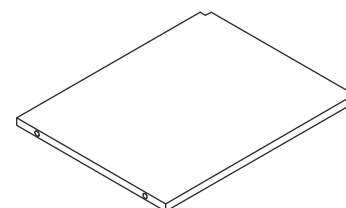


336x265x12mm

Right Lower Panel x1

COMPONENTS

Please check the board number and the hole on the board

 
37

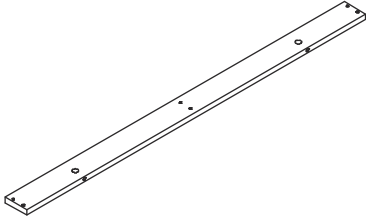

1045x66.5x15mm


Middle Bottom Front
Brace Panel x1

 38

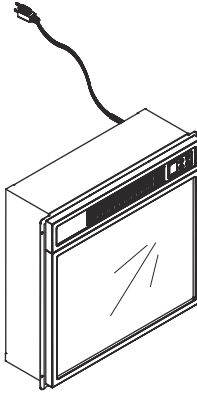

Fireplace x1

 39

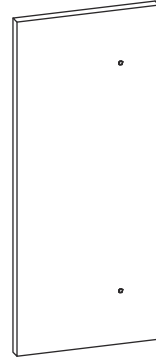

438x185x15mm

Middle Right Panel x1

COMPONENTS

A



+5(spare)

Φ6x35mm

Cam Bolt x56

B



+5(spare)

Φ15x10mm

Cam Lock x56

C



+4(spare)

Φ6x30mm

Wood Dowel x44

D

 


+2(spare)

Φ4x35mm

Screw x27

E




+1(spare)

Φ3X12mm


Screw x16

 F



Bracket x4

 
G

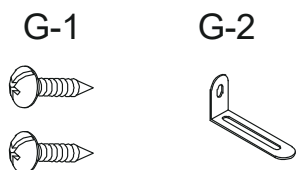

Φ4x12mm

Screw & L-shaped Bracket x2

 H

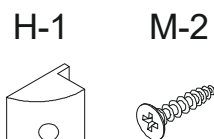

+1(spare)

Φ3x14mm

Back Panel Wedge
& Screw x8

 
I



Φ4x45mm

Plastic Anchor &
Washer & Screw x2


J

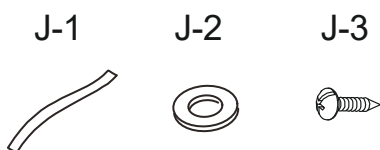

Φ4x12mm


Anti-tipping Strap
& Washer & Screw x2

 K



Shelf Support x8

 
L

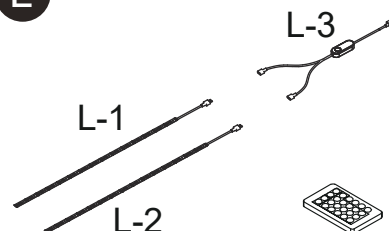

LED Strip Light &
Remote Control x1

COMPONENTS

 M




+1(spare)

Φ4x20mm

Screw x10

 N




Φ4x12mm

Screw x4



Please scan this QR code to access the video instructions on how to install the three-in-one connector & wooden dowel

 "A & B" Hardware installation example

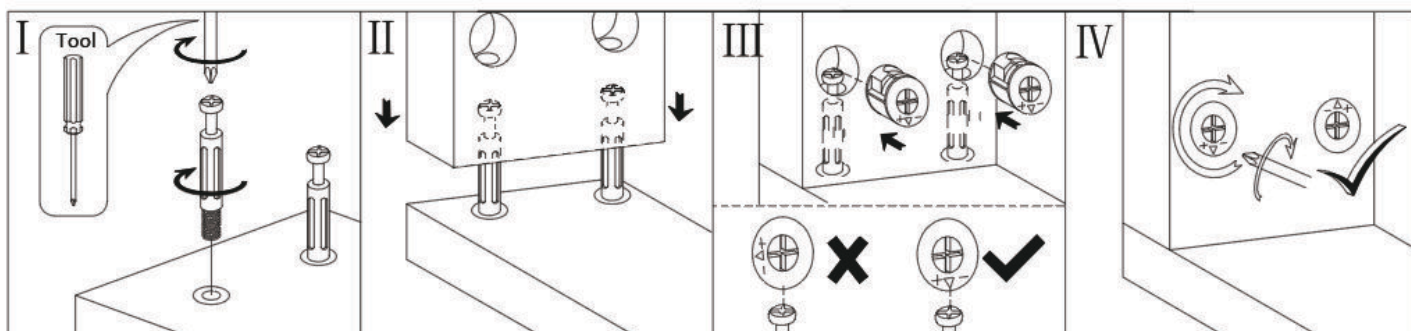

ASSEMBLY STEPS


G x 2	G-1	Φ4X12mm	J x 2	J-1	Φ4X12mm
		G-2 			J-2  J-3 

STEP 1

There are two types of anti-tipping devices available for selection.


1: Use screw (G-1) to fix the L-shaped bracket (G-2) to panel (1).

 2: Use screw (J-3) to pass through washer (J-2) and fix the anti - tipping strap (J-1) to panel (1).

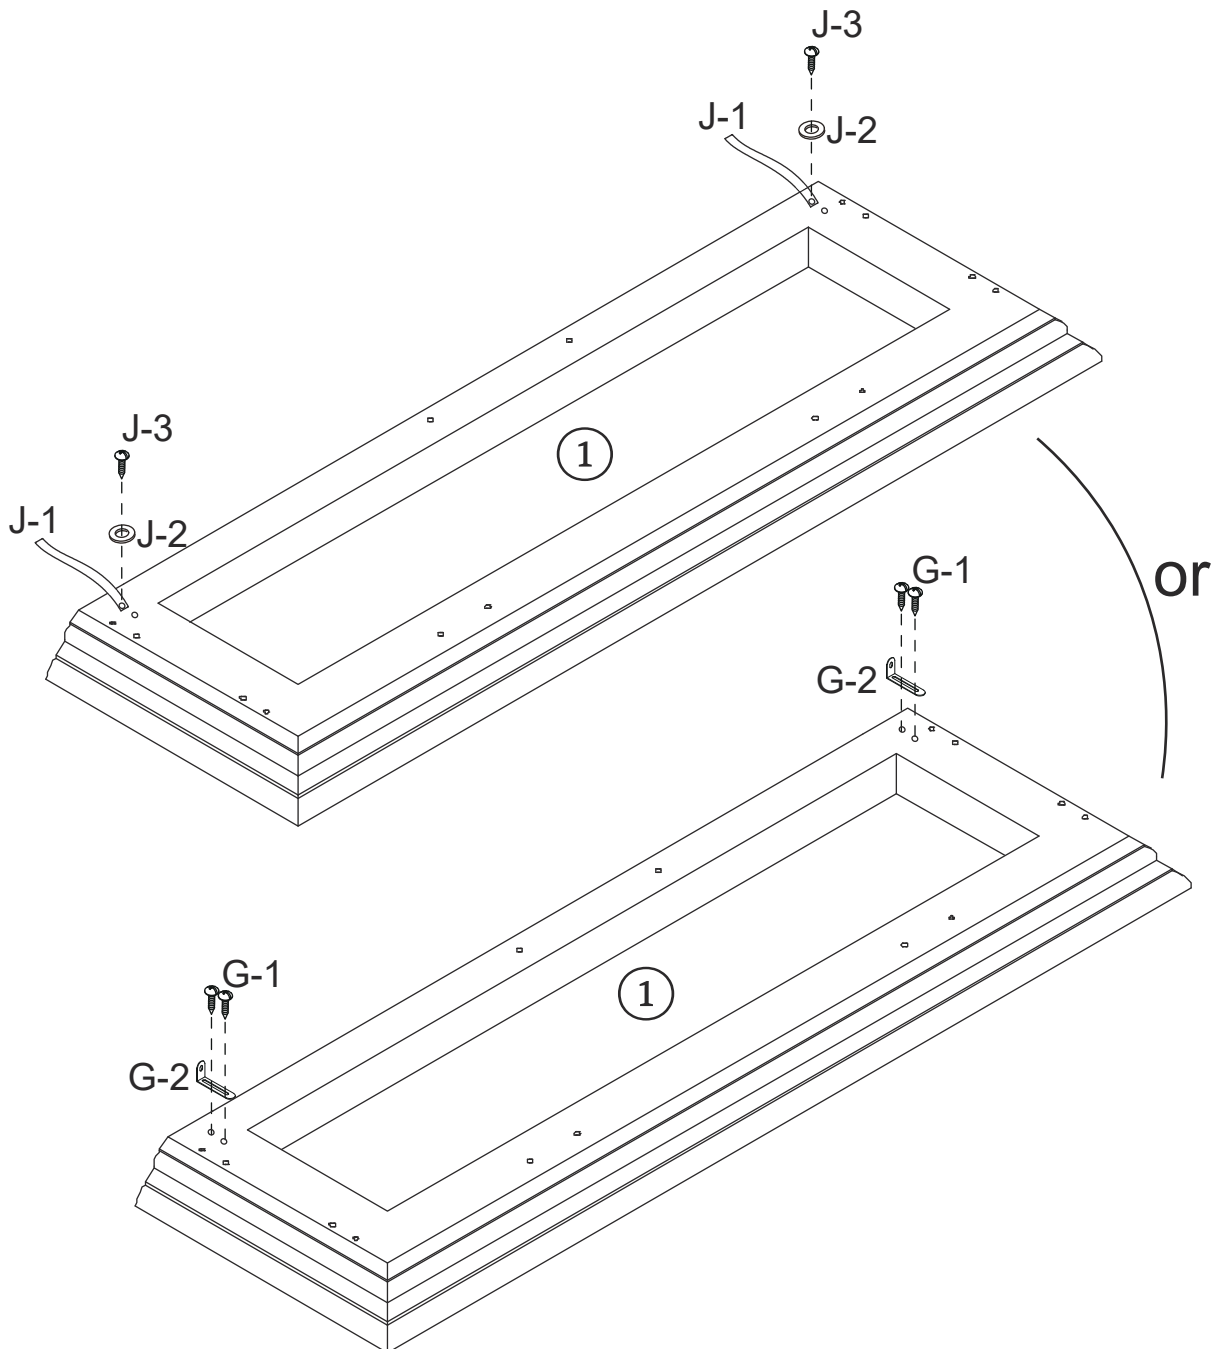


ASSEMBLY STEPS

 A x 14



STEP 2

 Fix cam bolt (A) to panels (1), (12), (13) and wood strip (9).

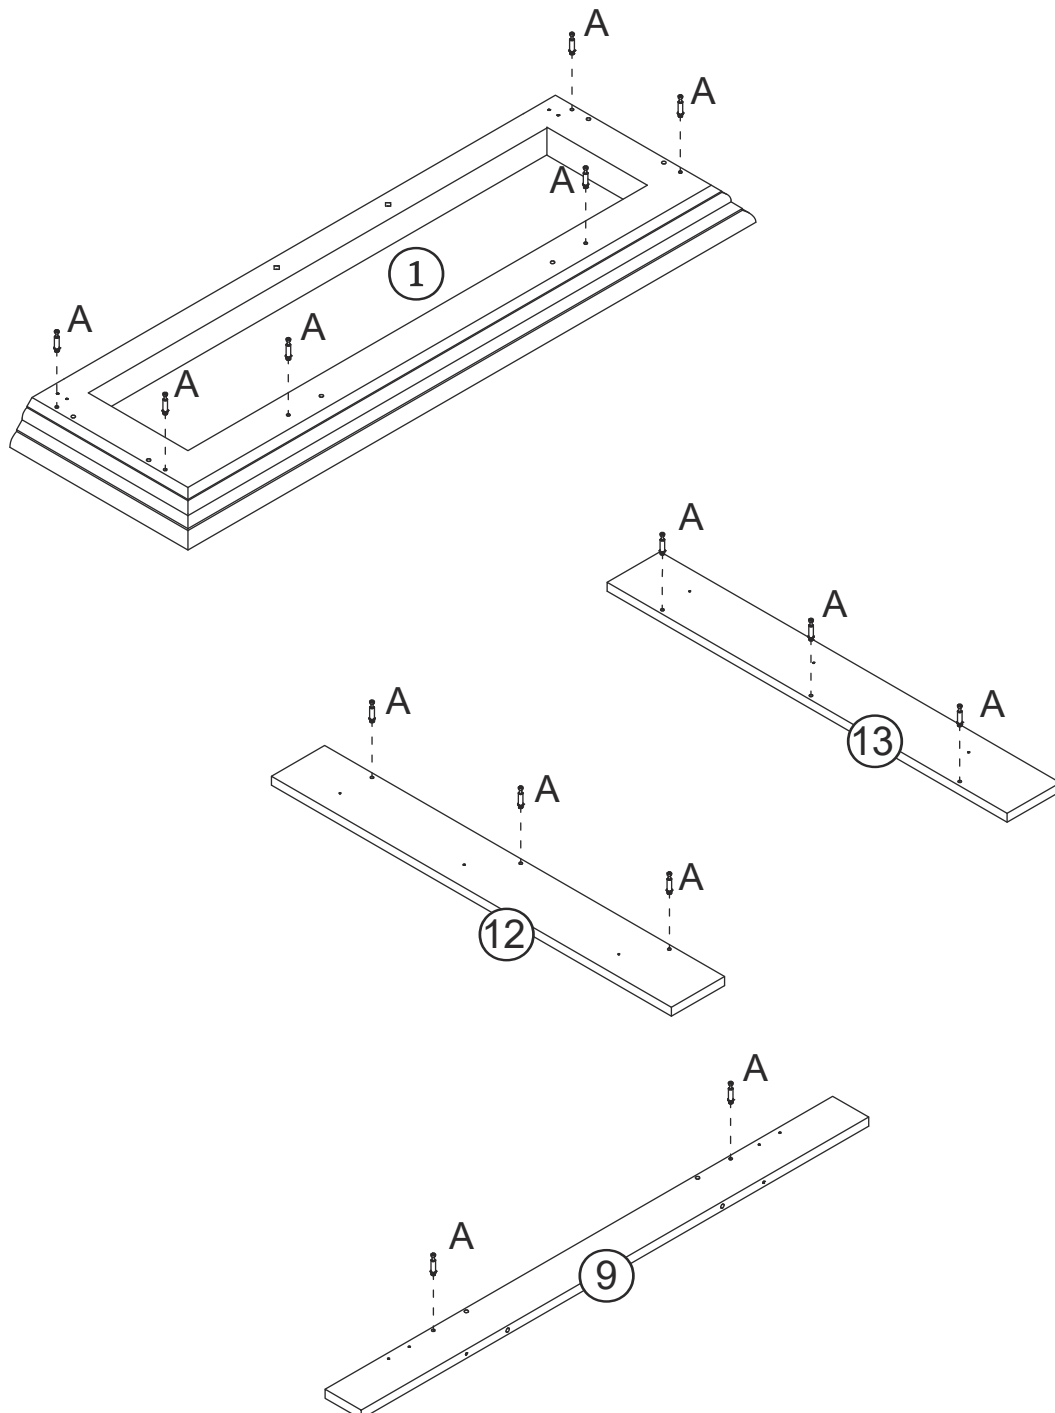

ASSEMBLY STEPS

 
A x 8

Φ6x35mm



STEP 3

1. Fix cam bolt (A) to panels (10) and (11).
2. Flip panels (10) and (11) by 180 degrees, then fix cam bolt (A) to panels (10) and (11).

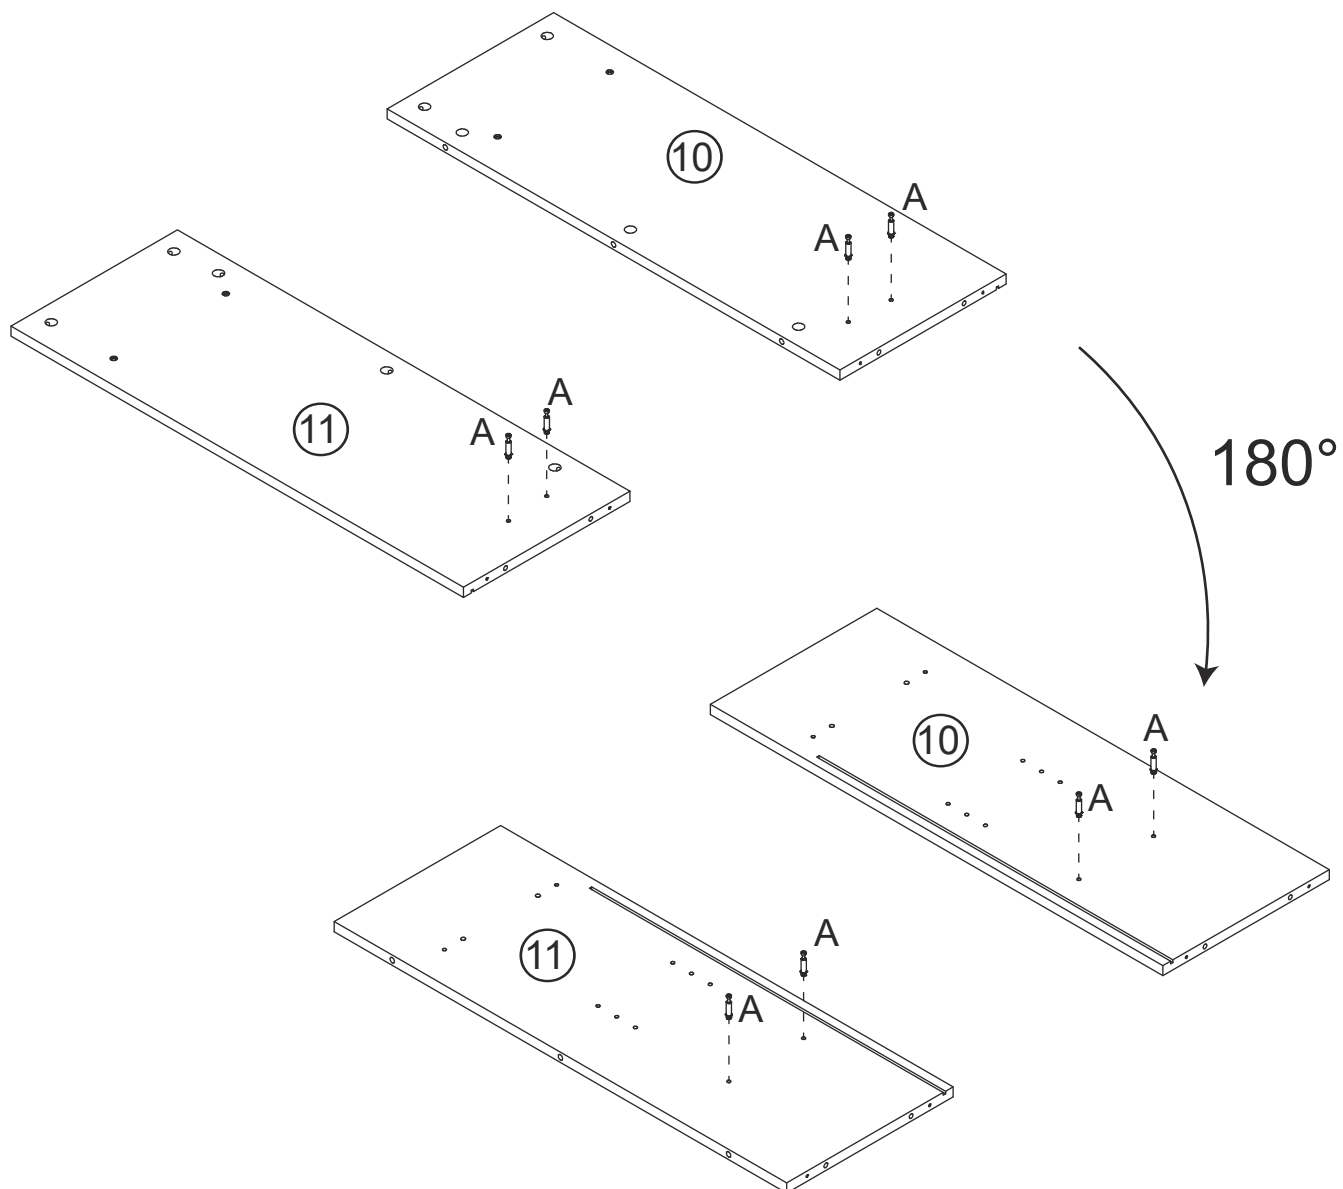


ASSEMBLY STEPS

M x 4



STEP 4

 Use screw (M) to connect panels (4) and (5).

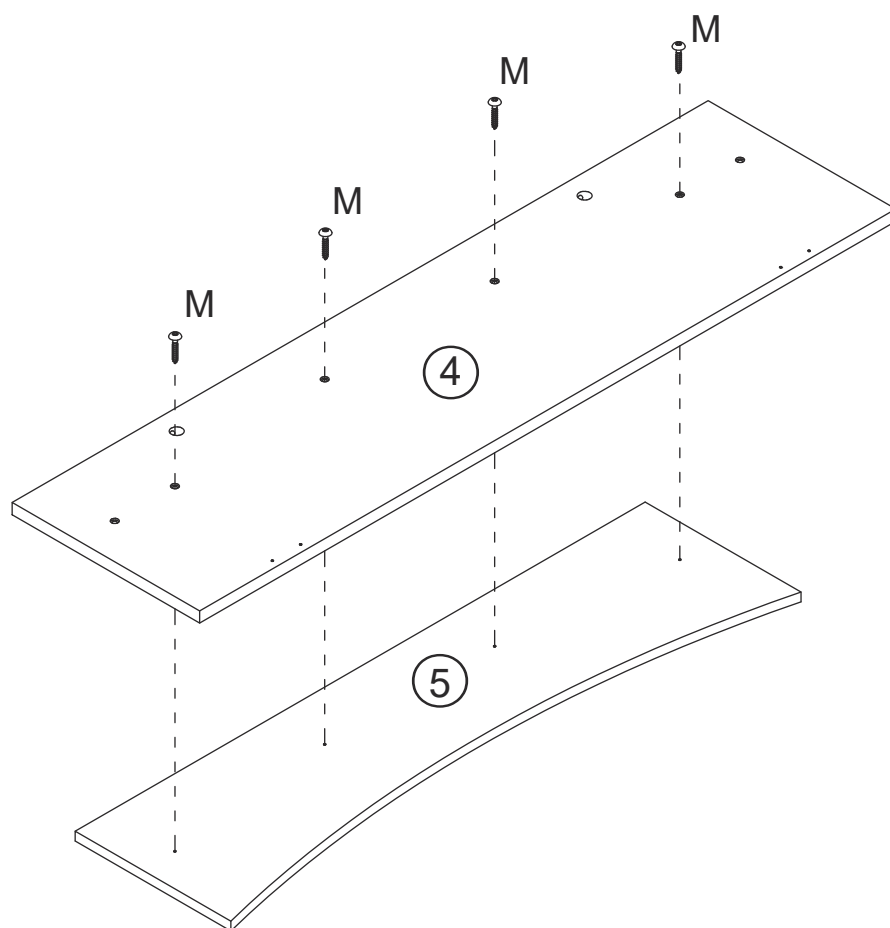


ASSEMBLY STEPS


E x 16



 F x 4




M x 6

 

STEP 5

 1. Use screw (E) to connect and fasten panels (4), (6), (39) and wood strip (9) via bracket (F).
2. Use screw (M) to connect panels (4), (6), (12), (13) and (39).

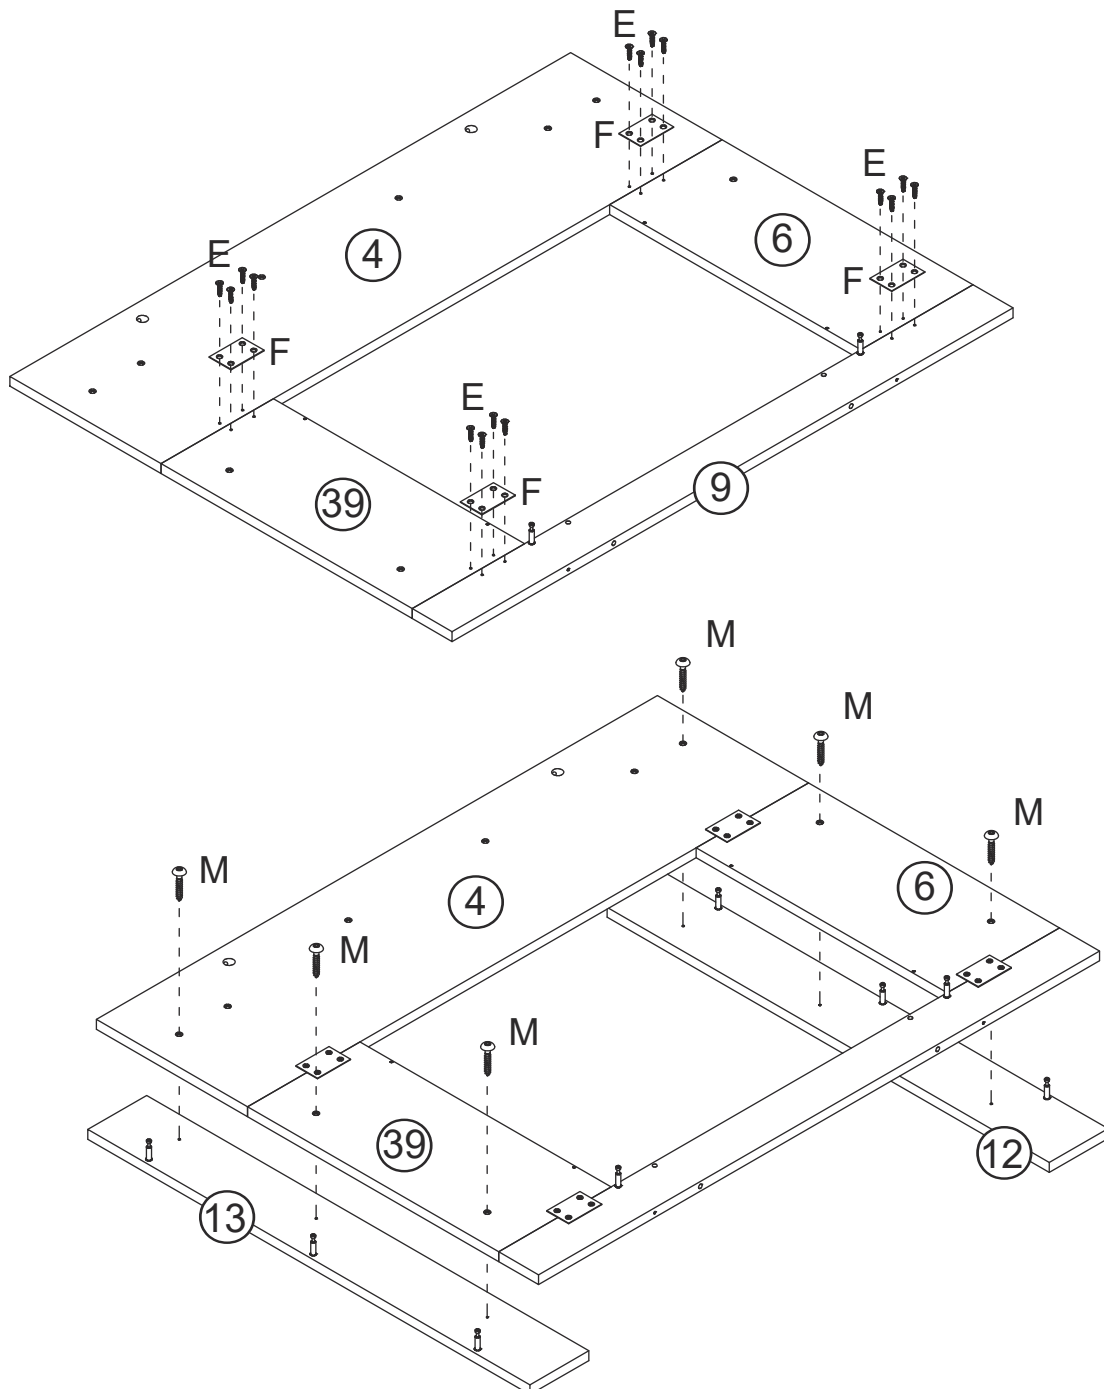

ASSEMBLY STEPS

B x 4



Φ15X10mm

C x 2



Φ6X30mm

 
D x 2



Φ4X35mm

STEP 6

1. Use wood dowel (C) to connect panels (7) and (8), then tighten with screw (D).
2. Connect panels (7), (8), (10) and (11), then tighten with cam lock (B).

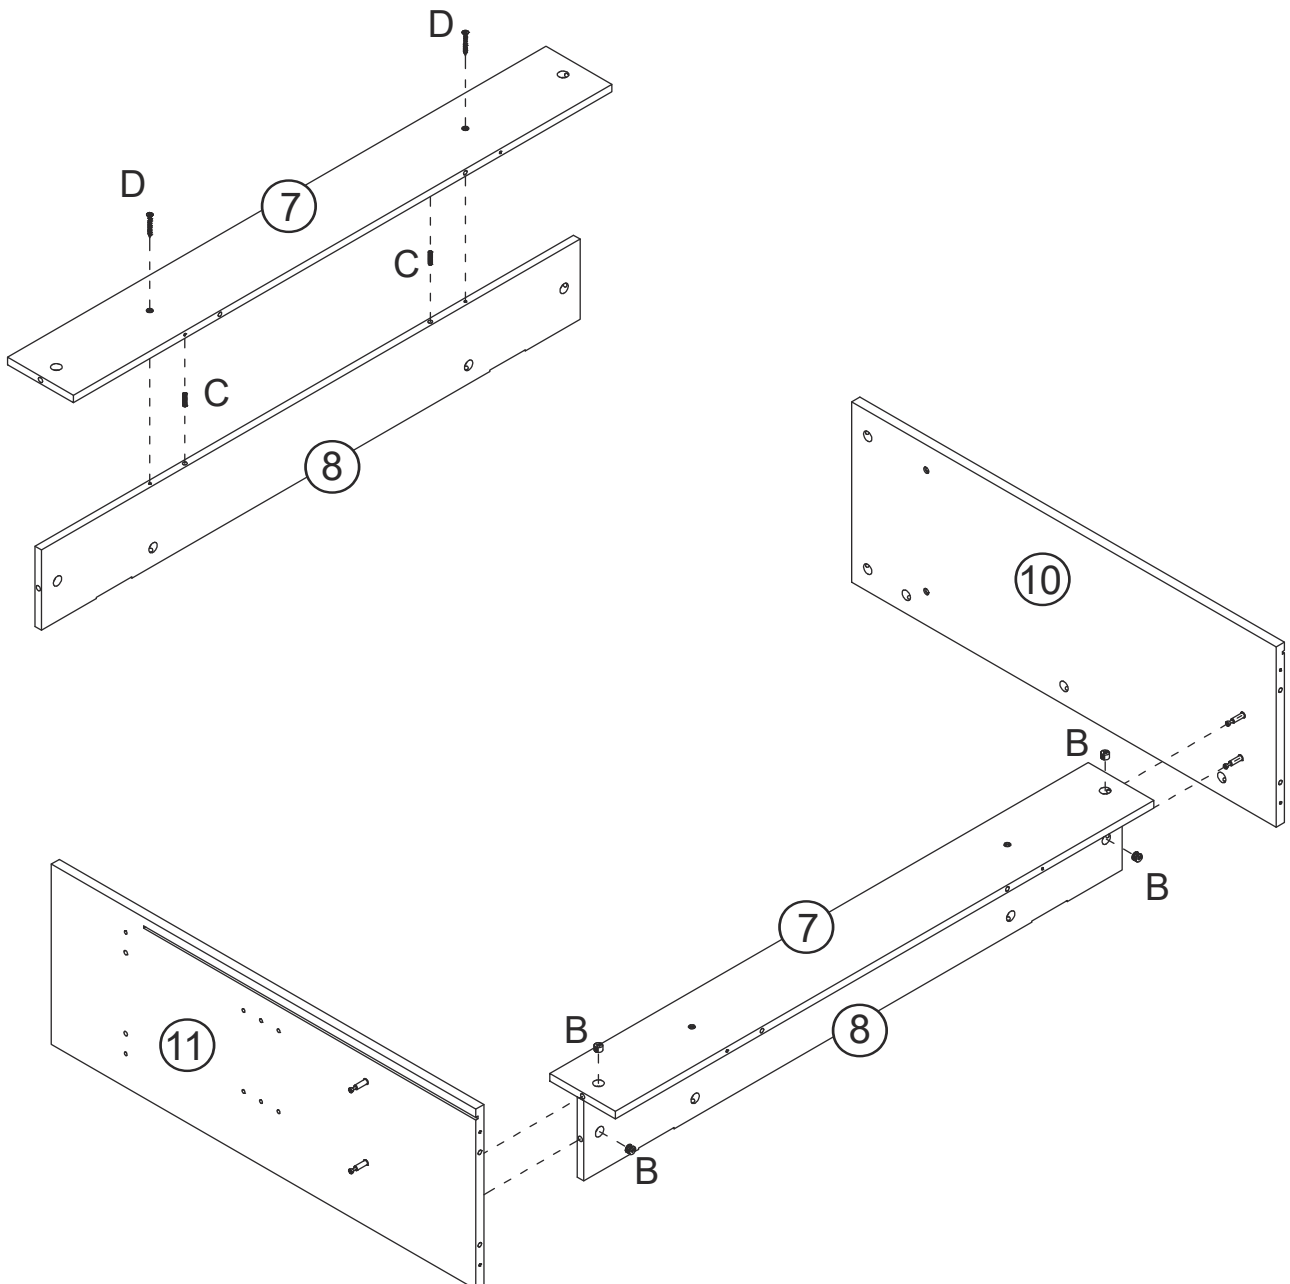

ASSEMBLY STEPS

B x 8



Φ15X10mm

 
C x 2




Φ6X30mm

STEP 7

Use wood dowel (C) to connect the assembled frame (STEP 5) and (STEP 6), then tighten with cam lock (B).

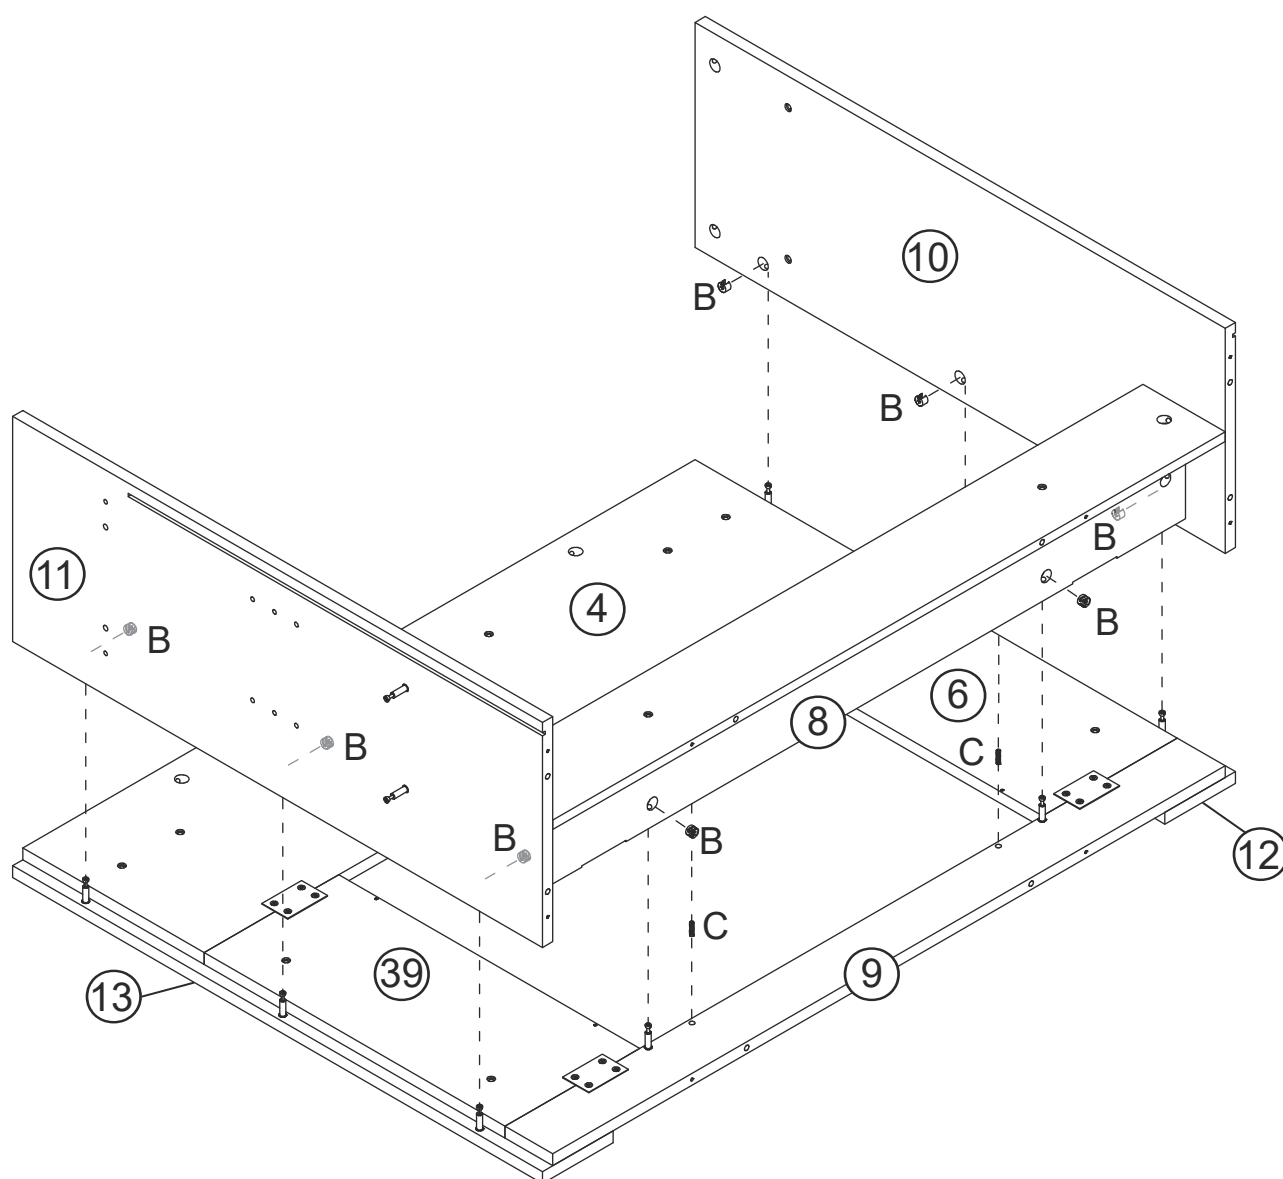


ASSEMBLY STEPS

 A x 10	$\Phi 6 \times 35 \text{ mm}$ 	B x 3 	$\Phi 15 \times 10 \text{ mm}$ 	C x 6 	$\Phi 6 \times 30 \text{ mm}$ 	D x 3 	$\Phi 4 \times 35 \text{ mm}$ 
--------	--	--	---	---	---	--	--

STEP 8

 1. Fix cam bolt (A) to panels (14), (15) and (37).
2. Use wood dowel (C) to connect panels (15), (16), (17), (18) and (37), then tighten with cam lock (B) and screw (D).

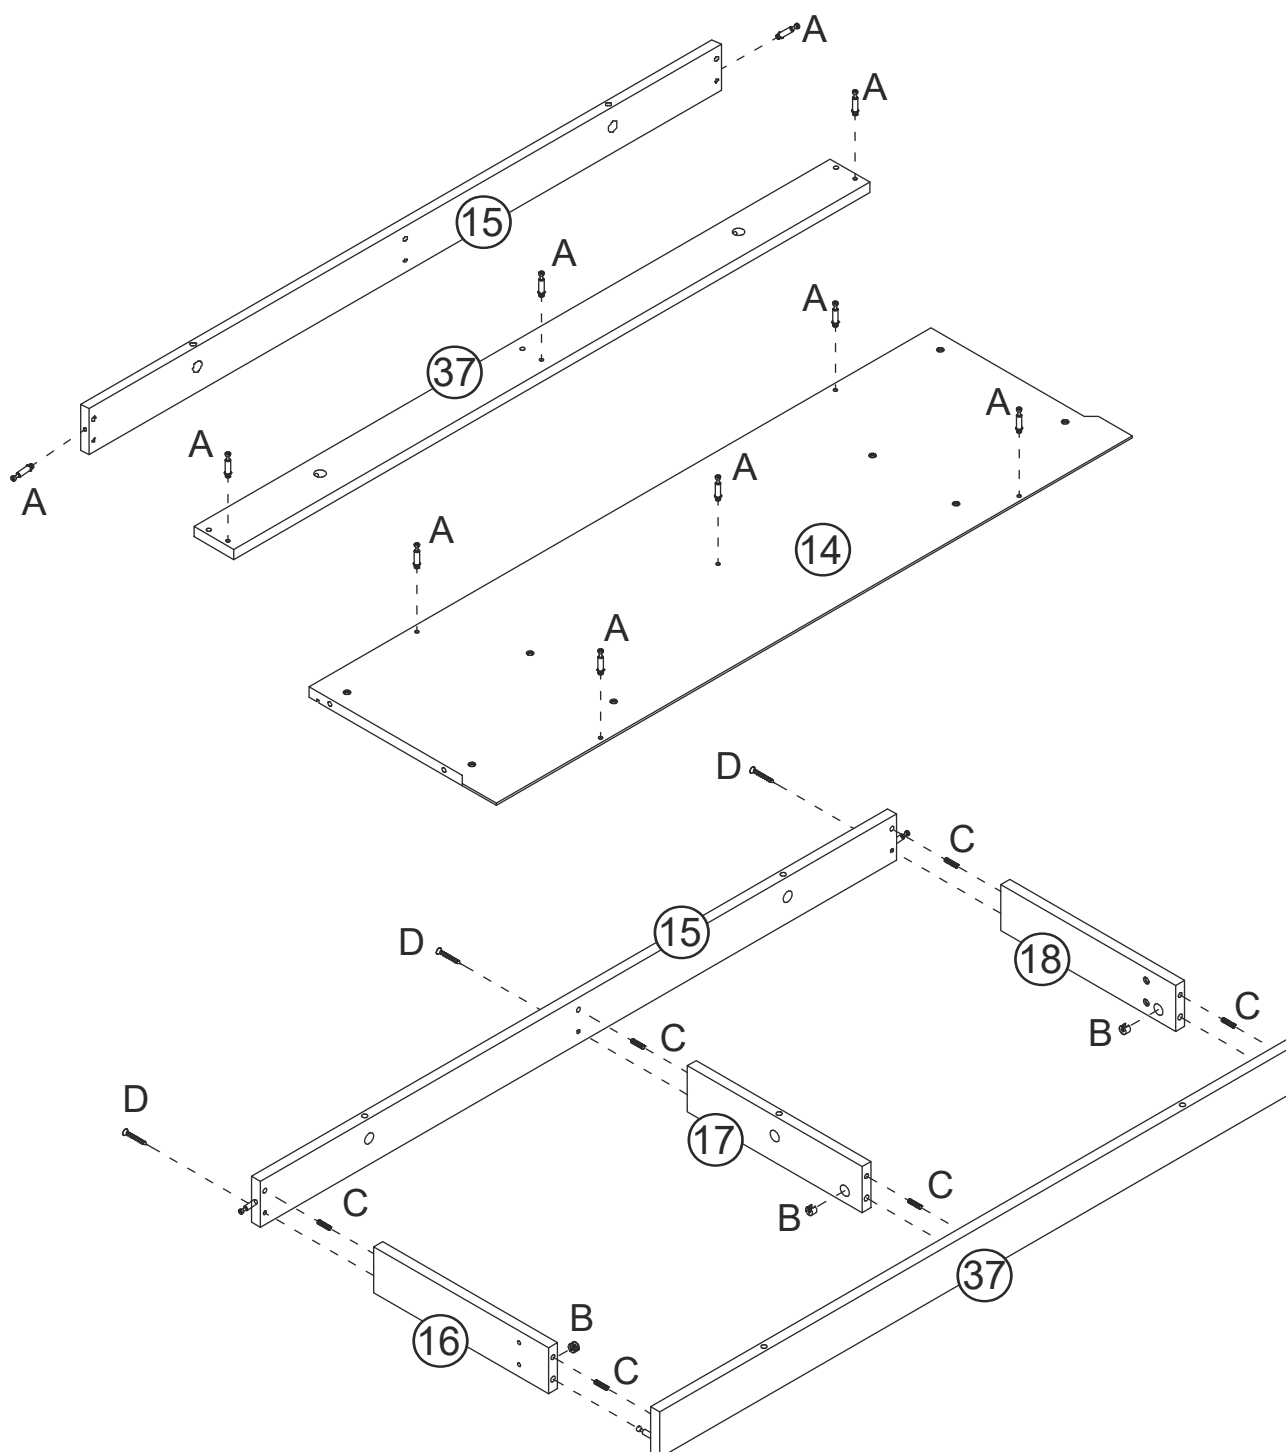

ASSEMBLY STEPS

 
B x 5



Φ15X10mm

STEP 9

Connect panel (14) and the assembled frame (STEP 8), then tighten with cam lock (B).

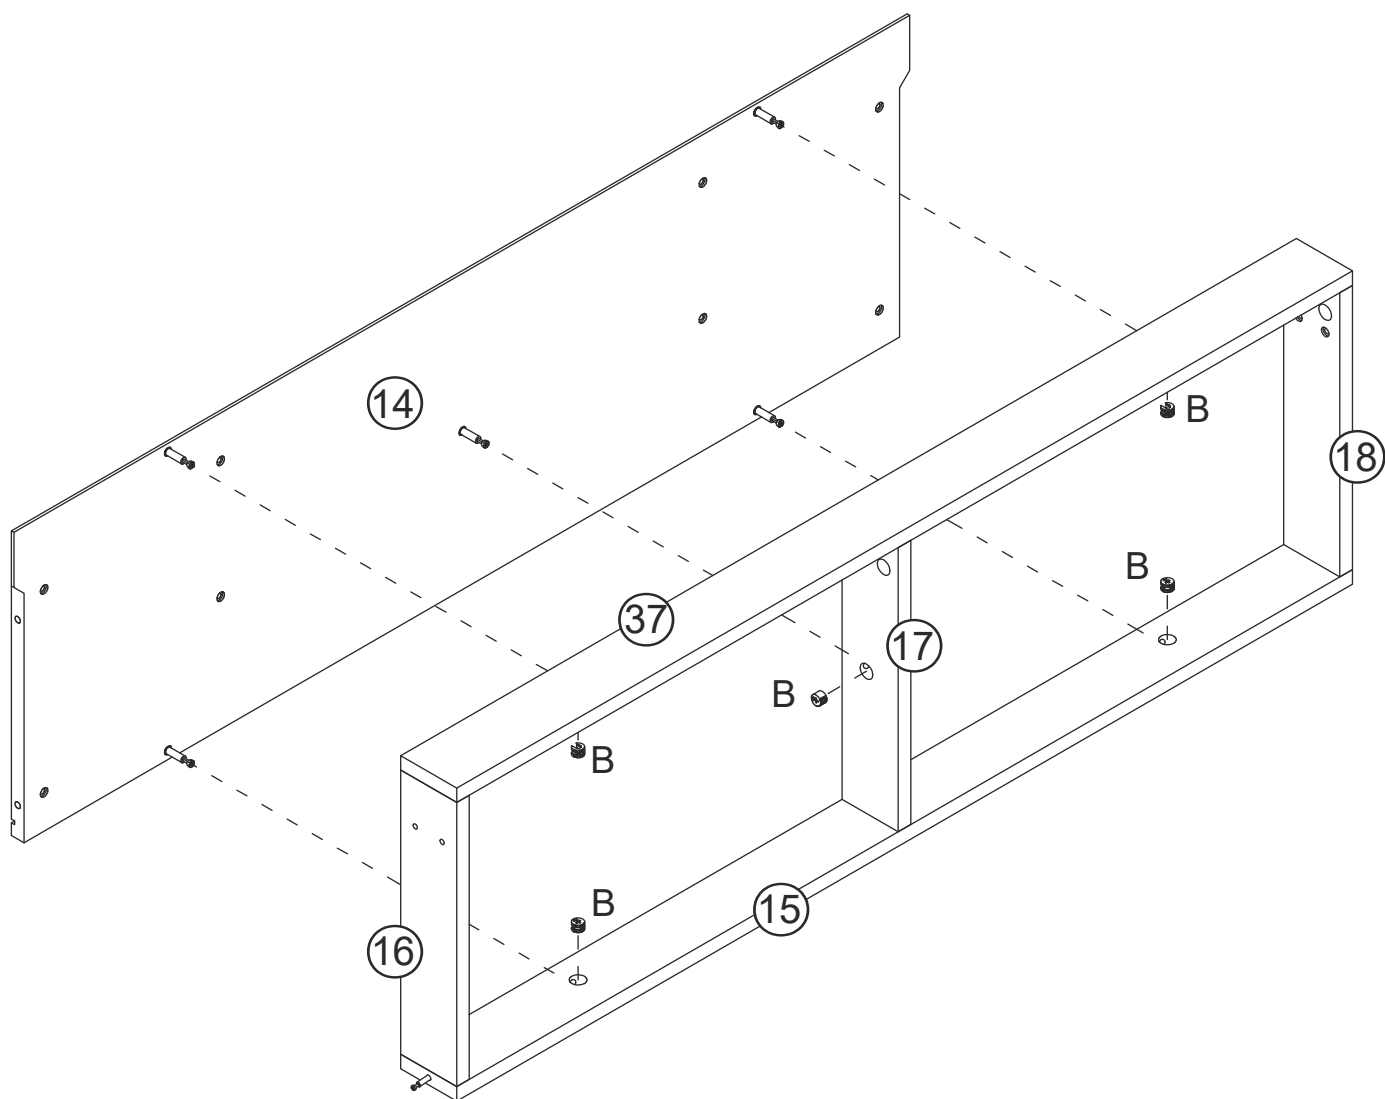

ASSEMBLY STEPS

 
C x 8

Φ6X30mm




D x 8

Φ4X35mm



STEP 10

 Use wood dowel (C) to connect the assembled frame (STEP 7) and (STEP 9), then tighten with screw (D).

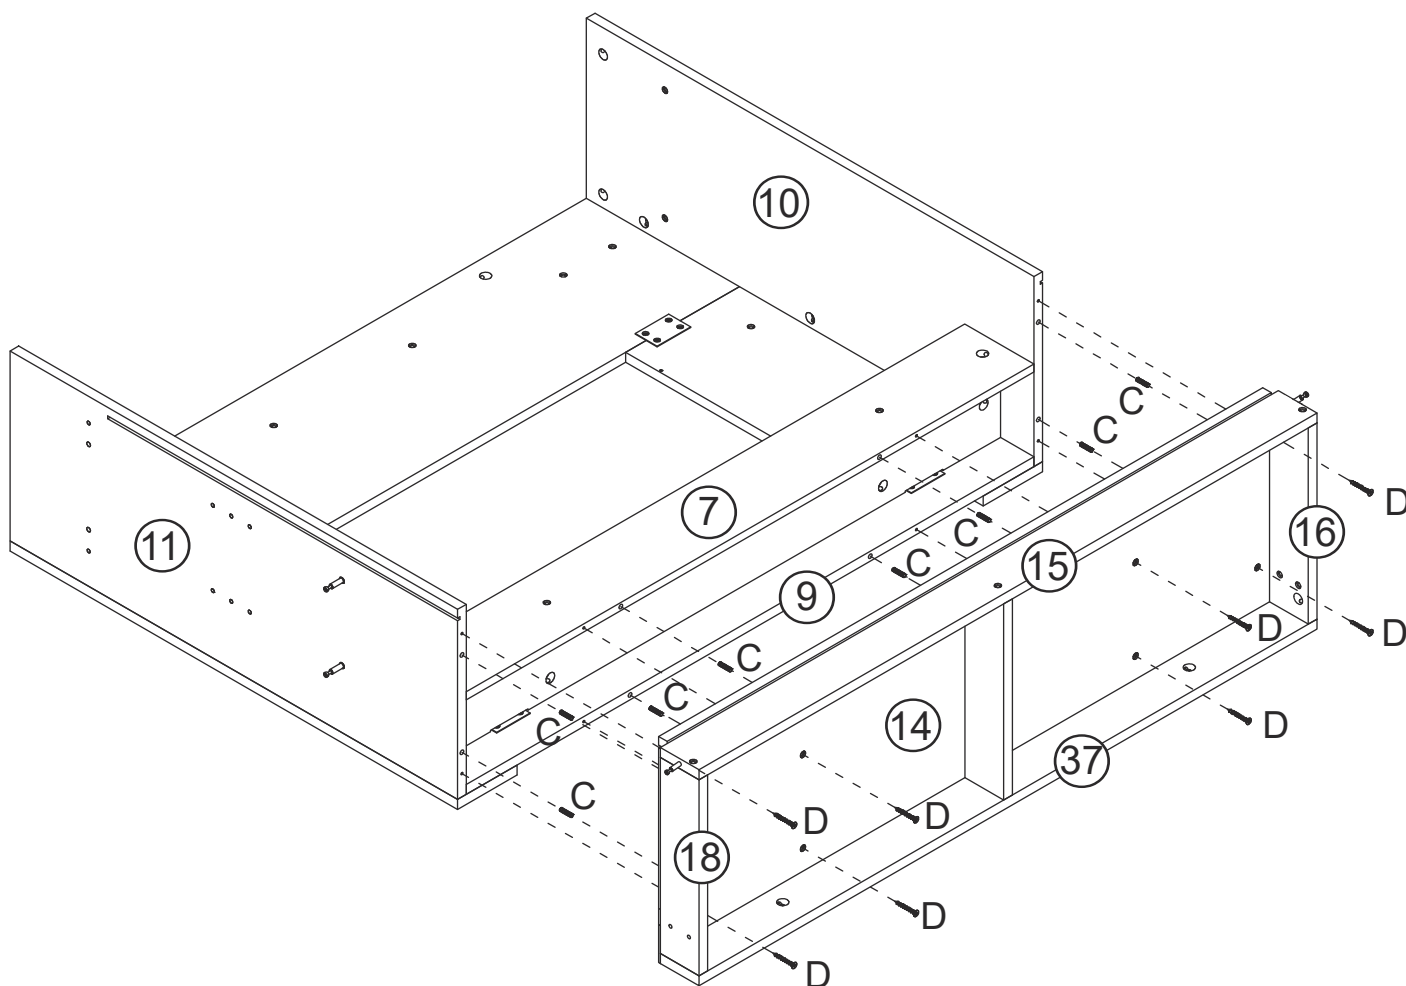

ASSEMBLY STEPS

B x 6



Φ15X10mm

 
C x 6



Φ6X30mm

STEP 11

Use wood dowel (C) to connect panels (1), (4), (10) and (11), then tighten with cam lock (B).

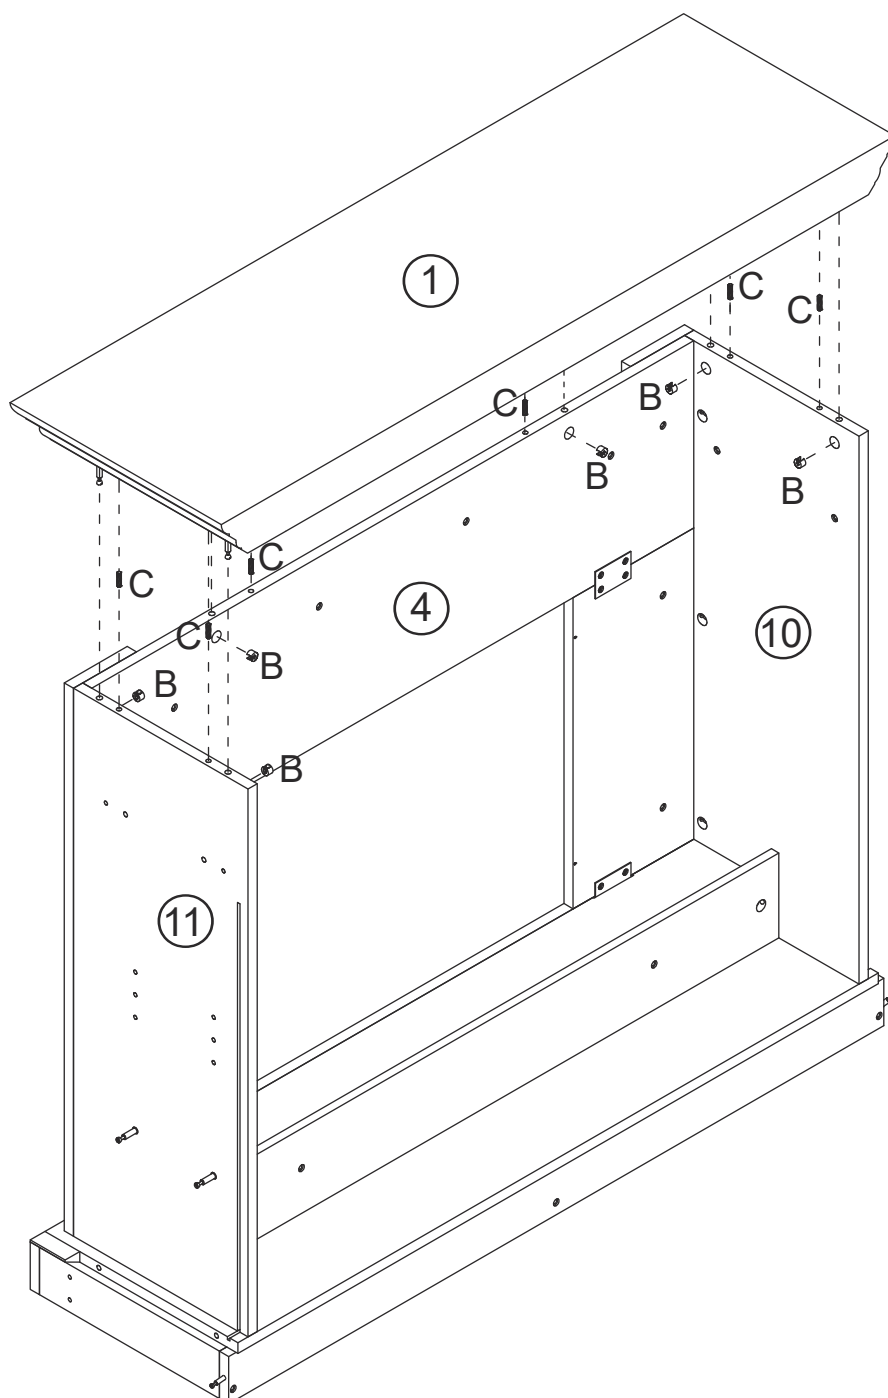

ASSEMBLY STEPS

 
 
A x 4

Φ6x35mm



STEP 12

Fix cam bolt (A) to panels (2) and (21).

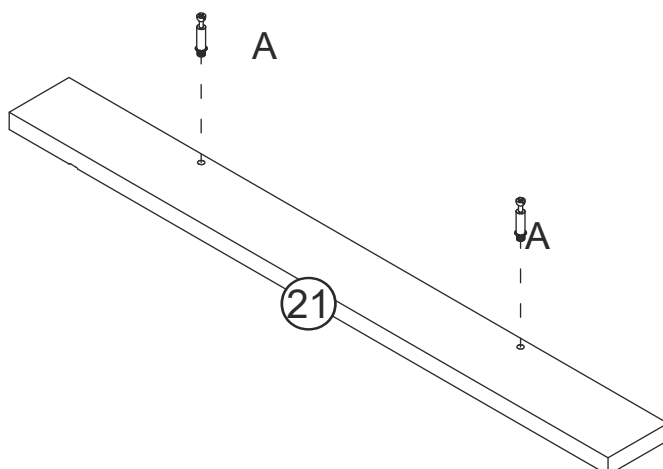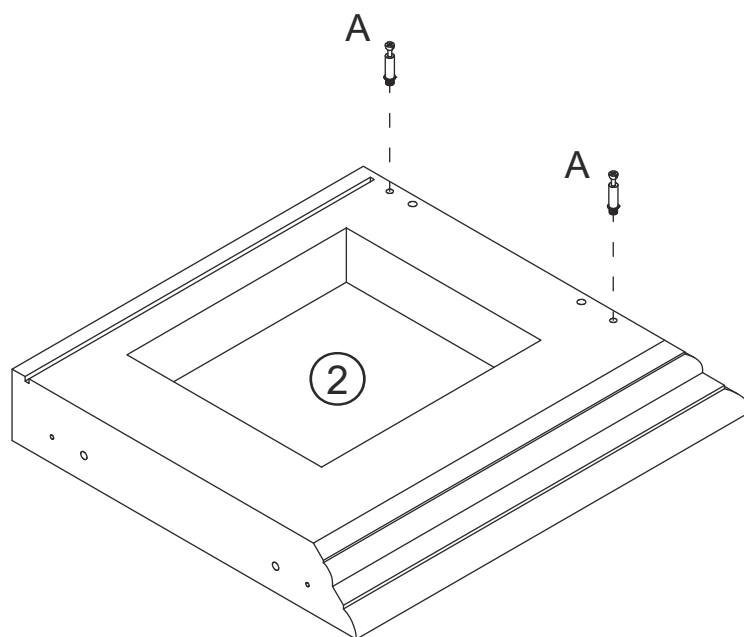


ASSEMBLY STEPS

A x 2	 $\Phi 6 \times 35 \text{mm}$	B x 4	 $\Phi 15 \times 10 \text{mm}$
-------	--	-------	---

STEP 13

 1. Fix cam bolt (A) to panel (19).
2. Connect panels (19), (20) and (21), then tighten with cam lock (B).


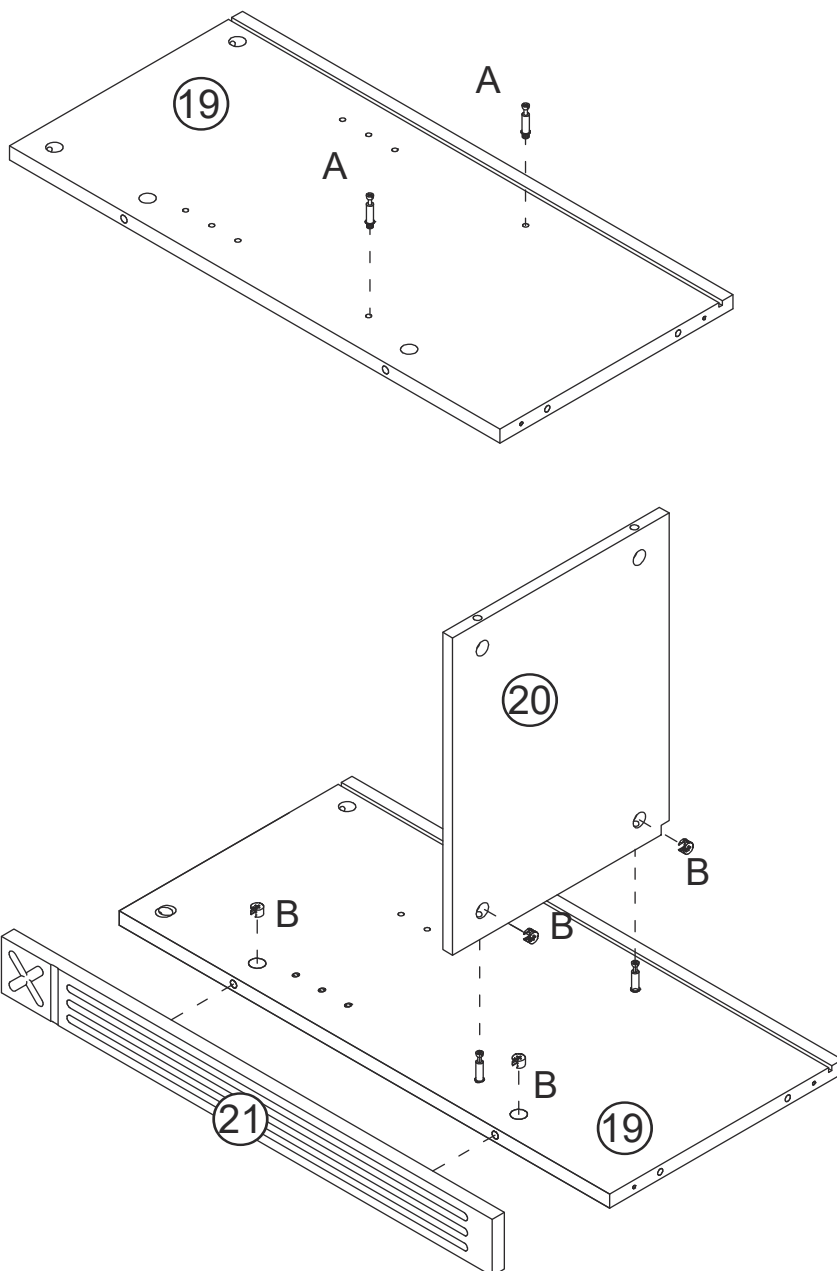


ASSEMBLY STEPS

A x 6	 $\Phi 6 \times 35 \text{mm}$	B x 1	 $\Phi 15 \times 10 \text{mm}$	C x 2	 $\Phi 6 \times 30 \text{mm}$	D x 1	 $\Phi 4 \times 35 \text{mm}$
-------	--	-------	---	-------	---	-------	--

STEP 14

  1. Fix cam bolt (A) to panels (23) and (24).
2. Use wood dowel (C) to connect panels (22), (24) and (25), then tighten with cam lock (B) and screw (D).

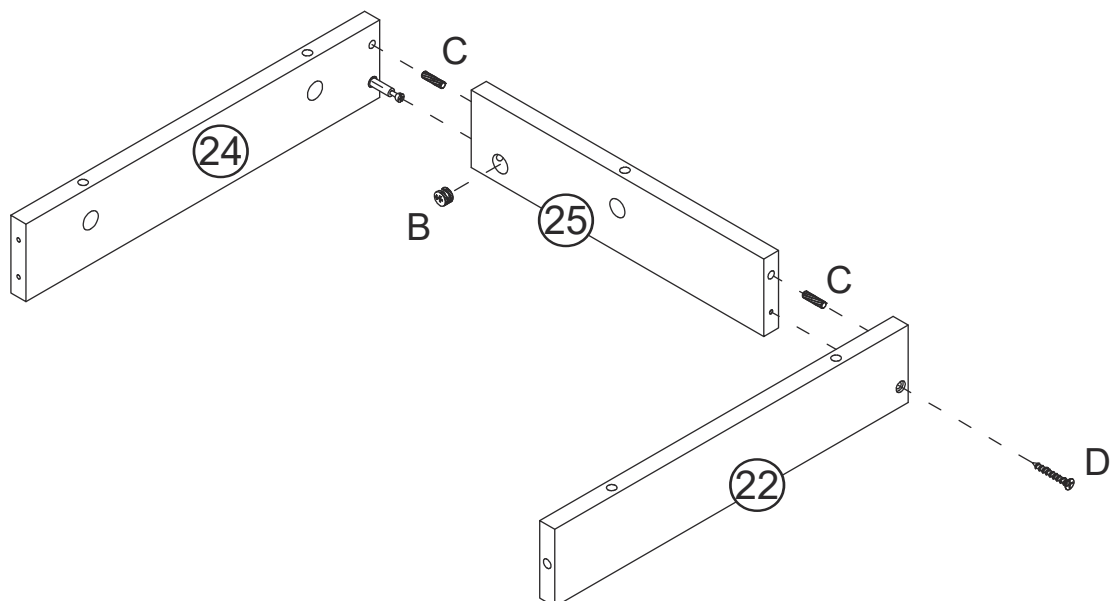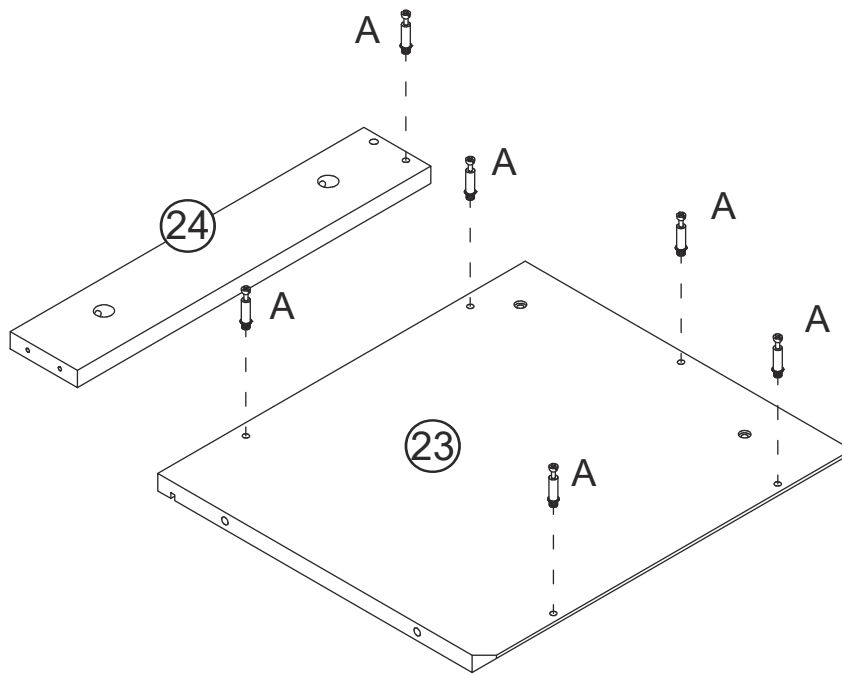

ASSEMBLY STEPS

 
B x 5



Φ15X10mm

STEP 15

Connect panels (22), (23), (24) and (25), then tighten with cam lock (B).

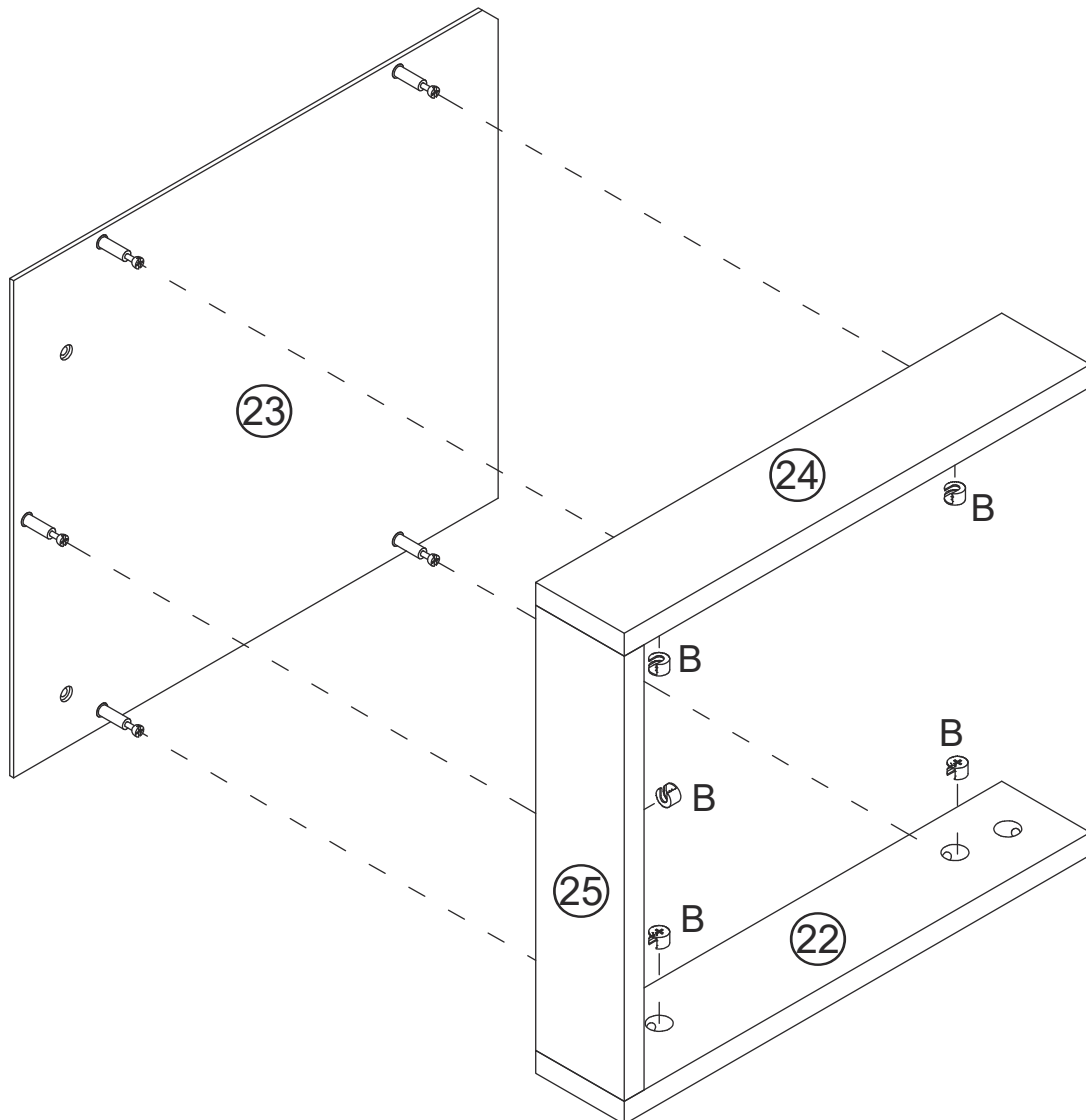


ASSEMBLY STEPS

C x 2	$\Phi 6 \times 30 \text{mm}$ 	D x 2	$\Phi 4 \times 35 \text{mm}$ 
-------	---	-------	---

STEP 16

 
Use wood dowel (C) to connect panels (19) and (23), then tighten with screw (D).

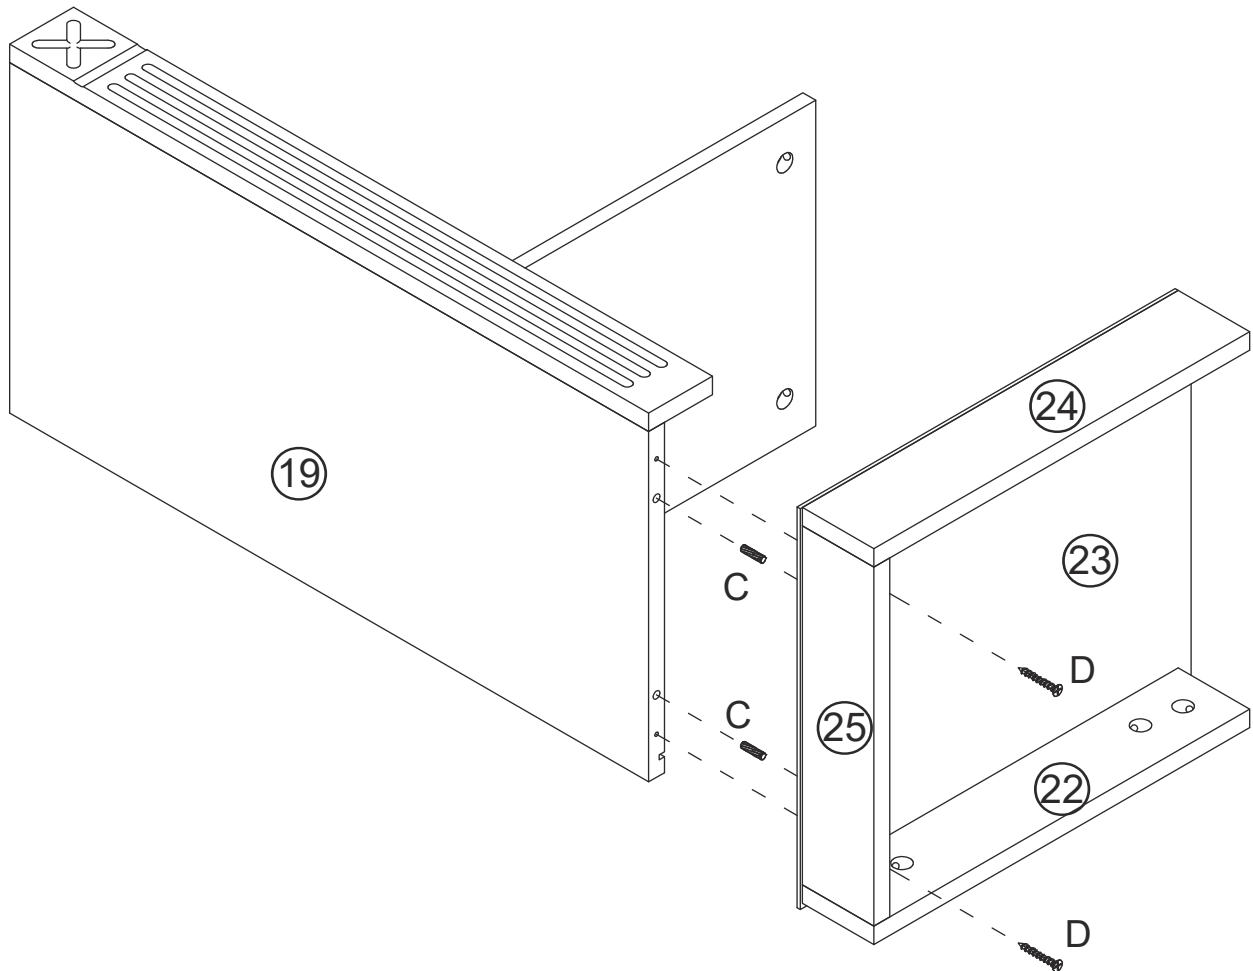

ASSEMBLY STEPS

STEP 17

 Insert panel (34) along the groove into the assembled frame (STEP 16).

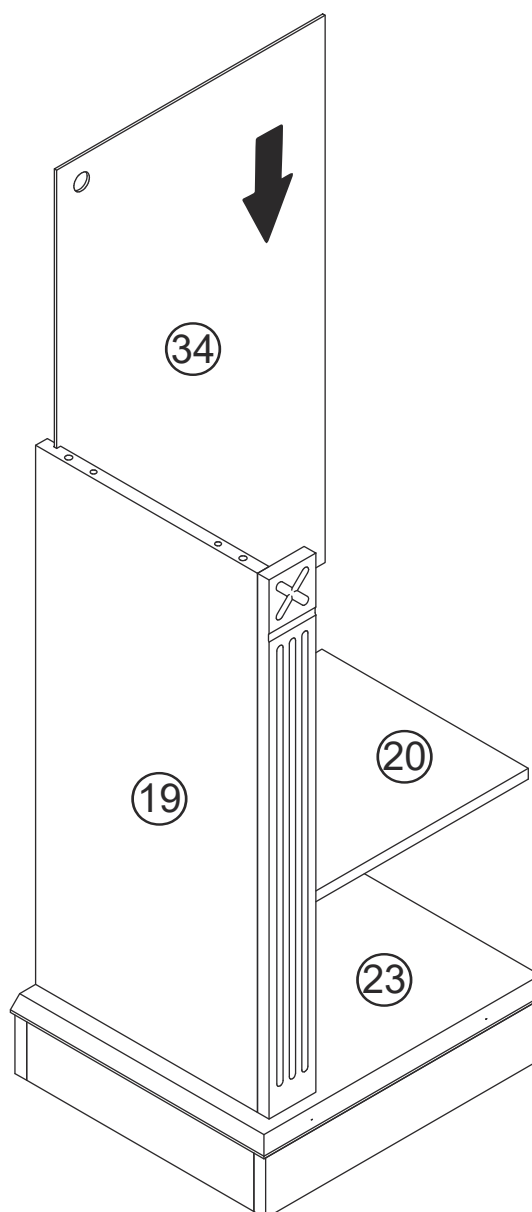

ASSEMBLY STEPS

B x 2



Φ15X10mm

 
C x 2

Φ6X30mm



STEP 18

Use wood dowel (C) to connect panels (2) and (19), then tighten with cam lock (B).

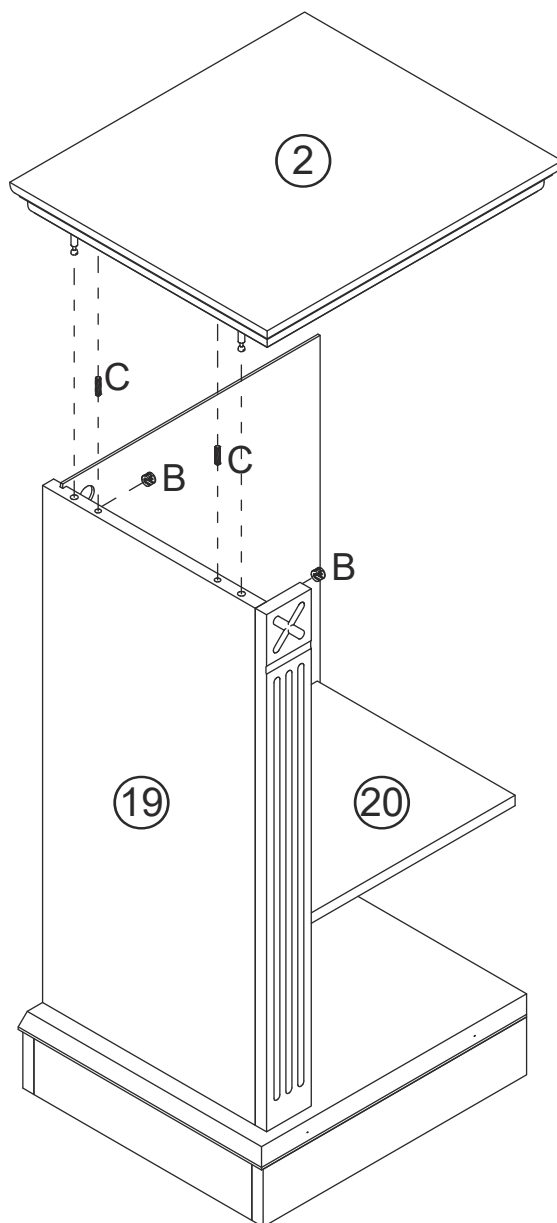

ASSEMBLY STEPS

 
 
A x 4

Φ6x35mm




STEP 19

Fix cam bolt (A) to panels (3) and (27).

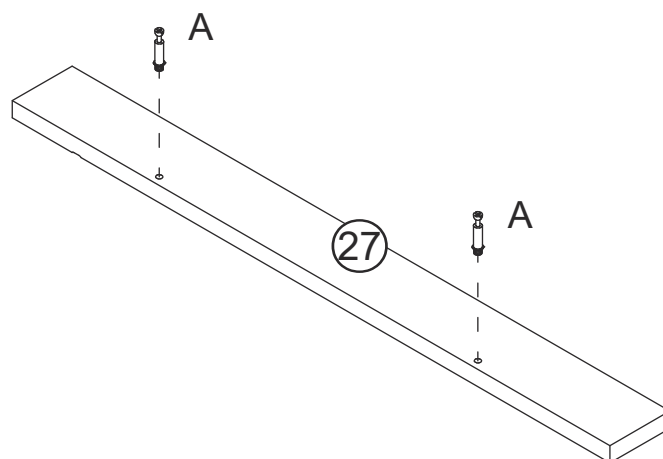
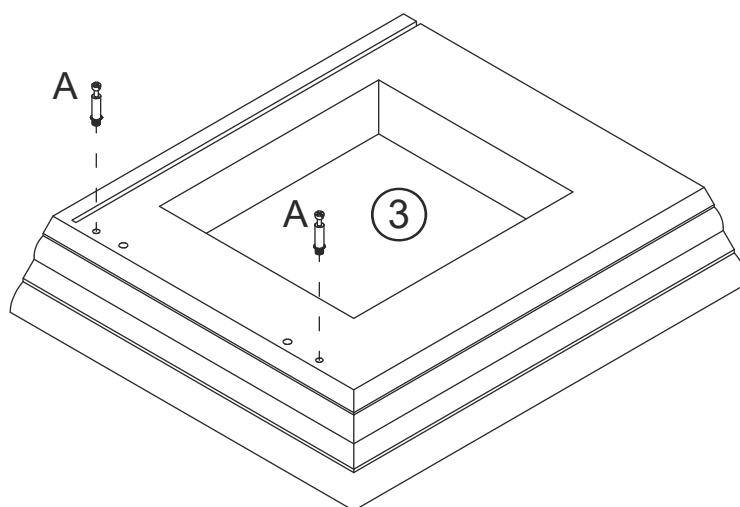


ASSEMBLY STEPS

 A x 2	 $\Phi 6 \times 35 \text{mm}$	B x 4	 $\Phi 15 \times 10 \text{mm}$
-------	--	-------	---

STEP 20

  1. Fix cam bolt (A) to panel (26).
2. Connect panels (26), (27) and (36), then tighten with cam lock (B).

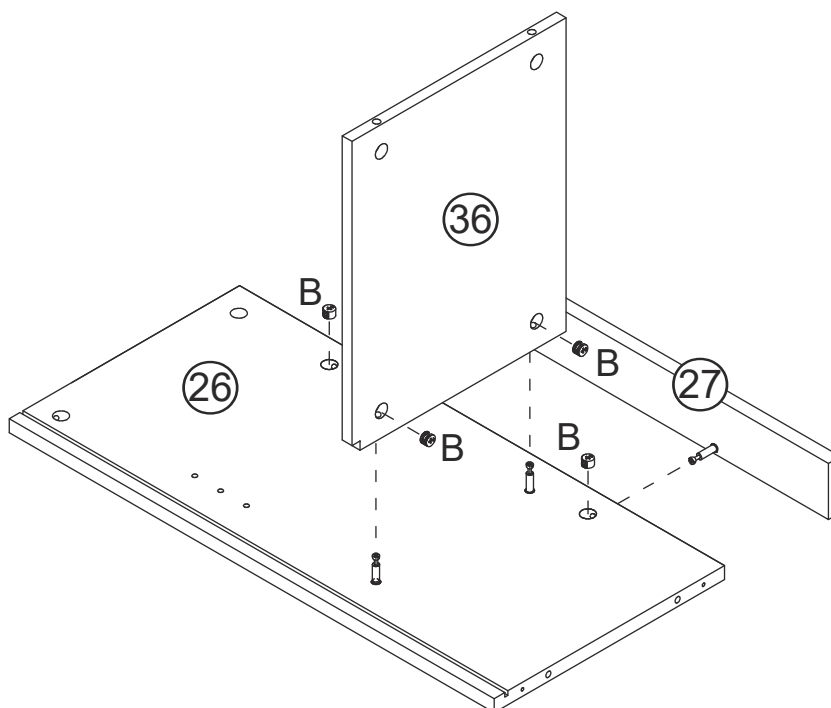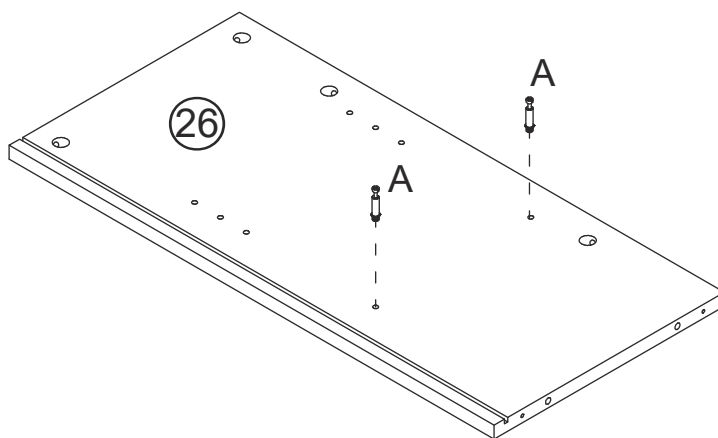


ASSEMBLY STEPS

A x 6	 $\Phi 6 \times 35 \text{mm}$	B x 1	 $\Phi 15 \times 10 \text{mm}$	C x 2	 $\Phi 6 \times 30 \text{mm}$	D x 1	 $\Phi 4 \times 35 \text{mm}$
-------	--	-------	---	-------	---	-------	--

STEP 21

 1. Fix cam bolt (A) to panels (29) and (30).
2. Use wood dowel (C) to connect panels (28), (30) and (31), then tighten with cam lock (B) and screw (D).

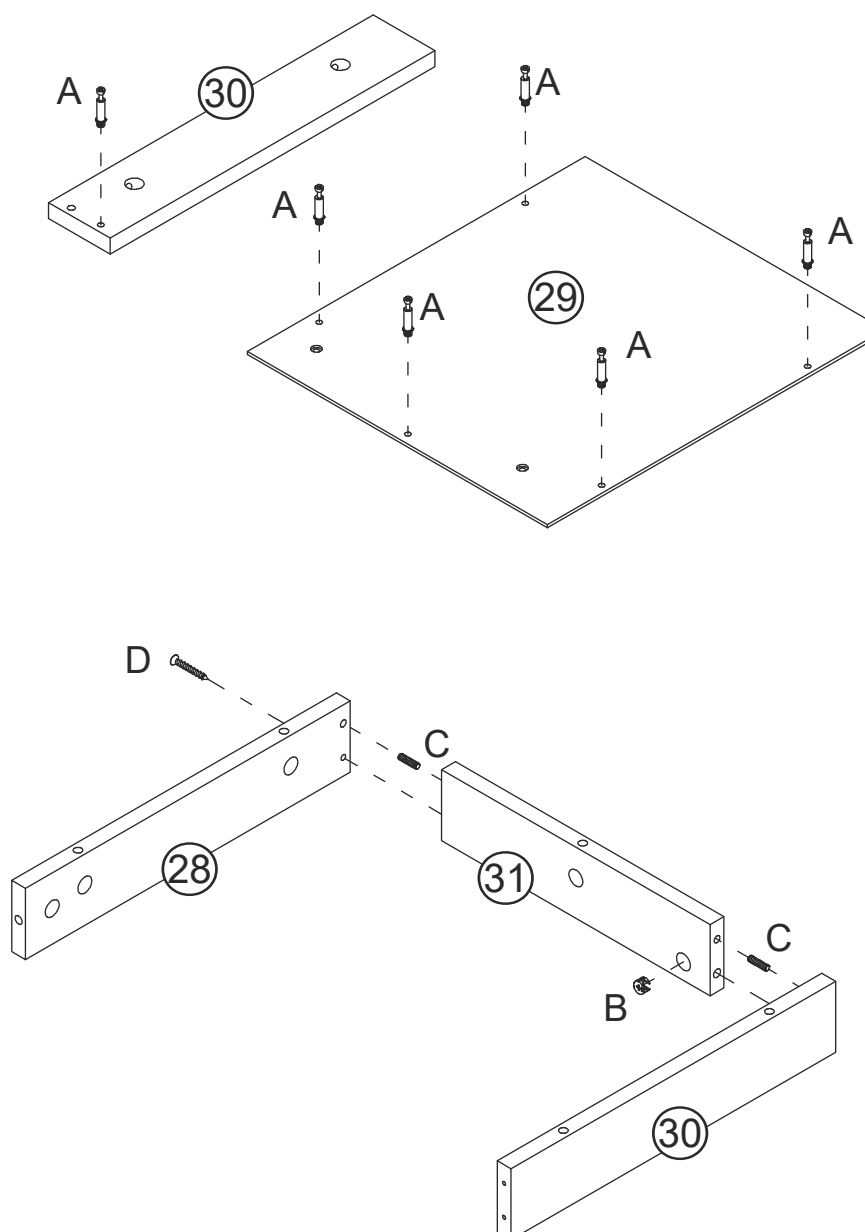

ASSEMBLY STEPS

 
B x 5



Φ15X10mm

STEP 22

Connect panels (28), (29), (30) and (31), then tighten with cam lock (B).

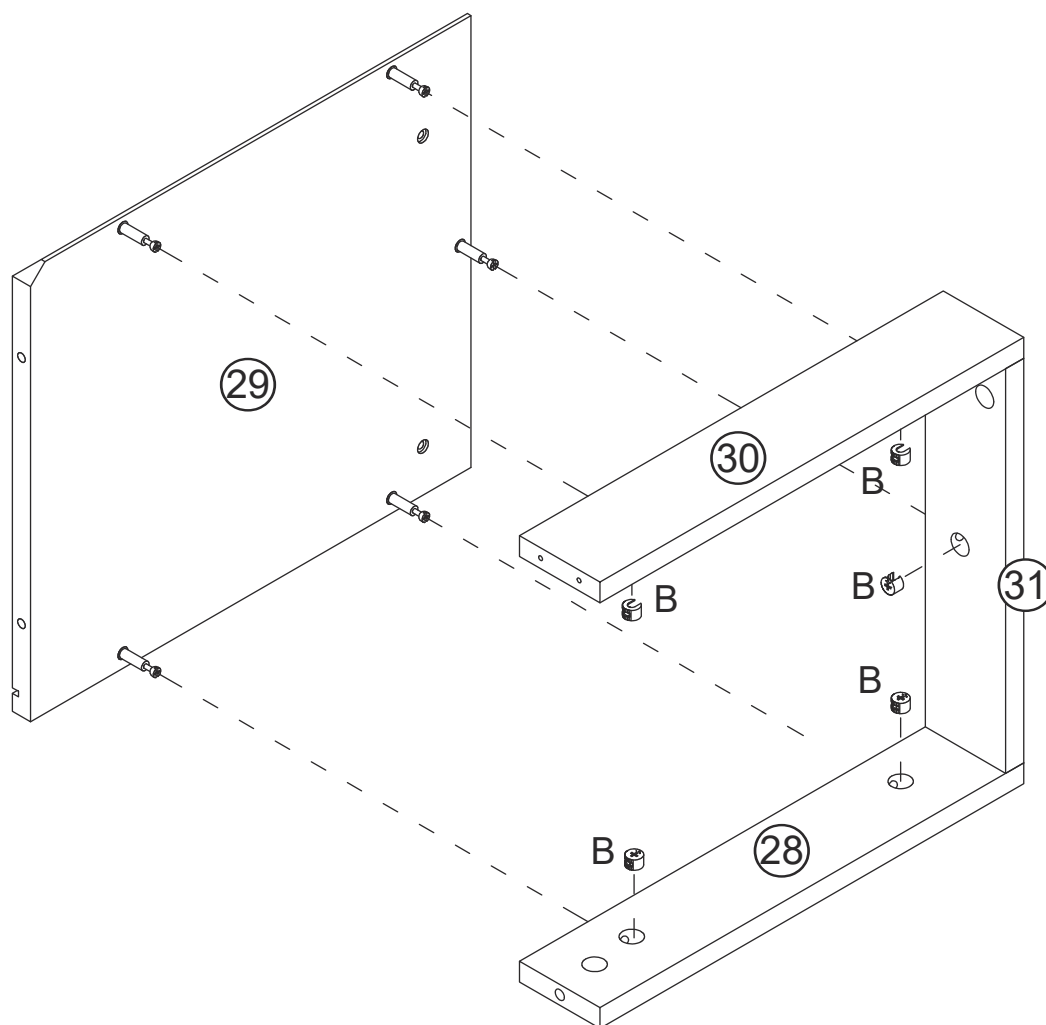


ASSEMBLY STEPS

C x 2	$\Phi 6 \times 30 \text{mm}$ 	D x 2	$\Phi 4 \times 35 \text{mm}$ 
-------	---	-------	---

STEP 23

 
Use wood dowel (C) to connect panels (26) and (29), then tighten with screw (D).

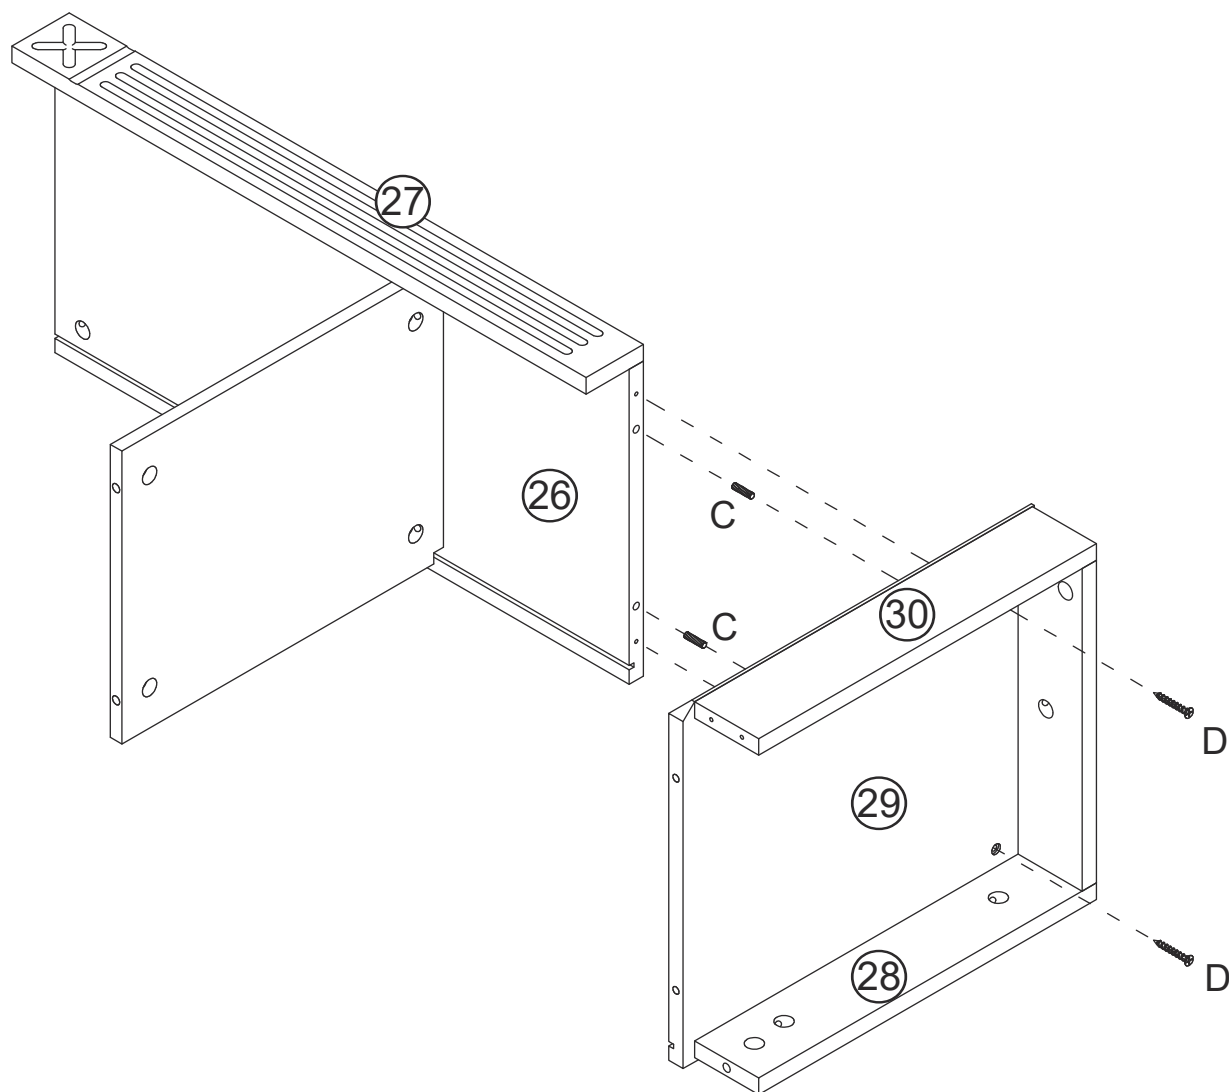

ASSEMBLY STEPS

STEP 24

 Insert panel (35) along the groove into the assembled frame (STEP 23).

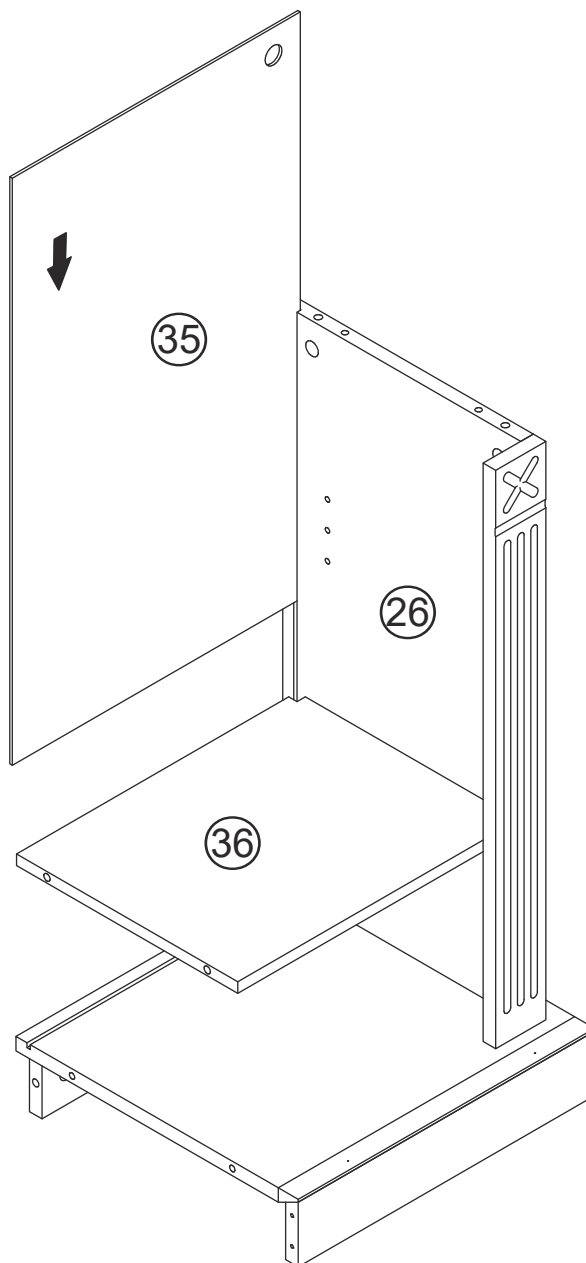

ASSEMBLY STEPS

B x 2



Φ15X10mm

 
C x 2



Φ6X30mm

STEP 25

Use wood dowel (C) to connect panels (3) and (26), then tighten with cam lock (B).

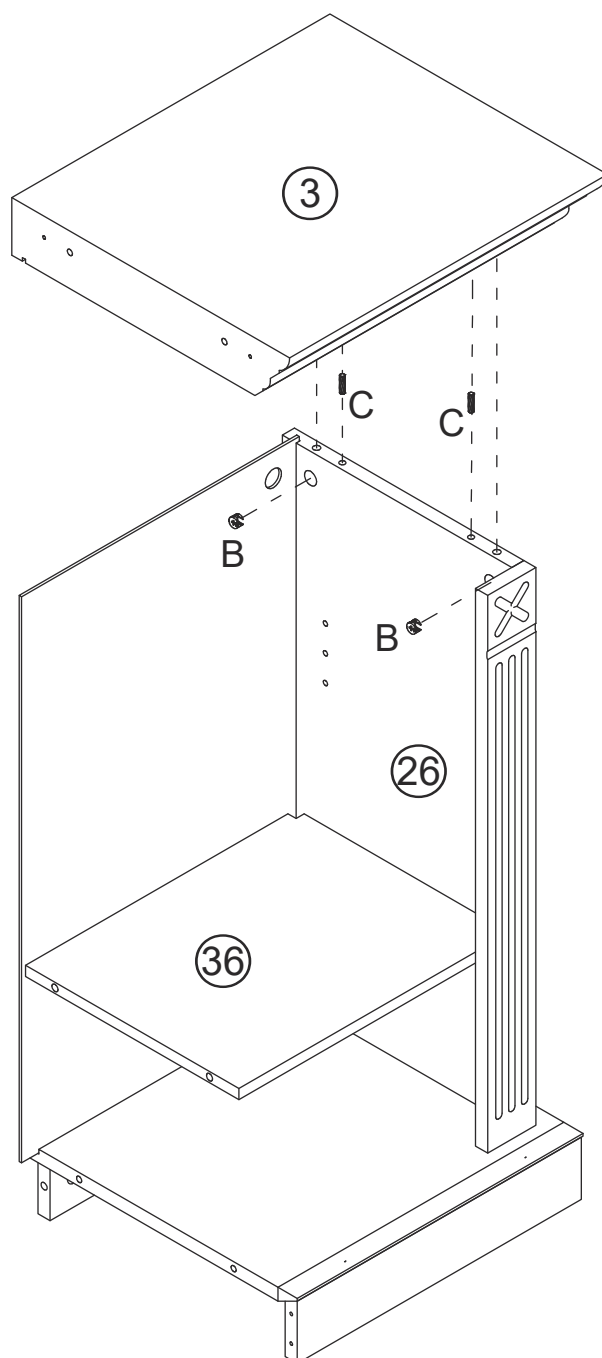


ASSEMBLY STEPS

B x 4	 $\Phi 15 \times 10 \text{mm}$	C x 8	 $\Phi 6 \times 30 \text{mm}$	D x 4	 $\Phi 4 \times 35 \text{mm}$
-------	---	-------	--	-------	---

STEP 26

 Use wood dowel (C) to connect the assembled frame (STEP 11), (STEP 18) and (STEP 25), then tighten with screw (D) and cam lock (B).

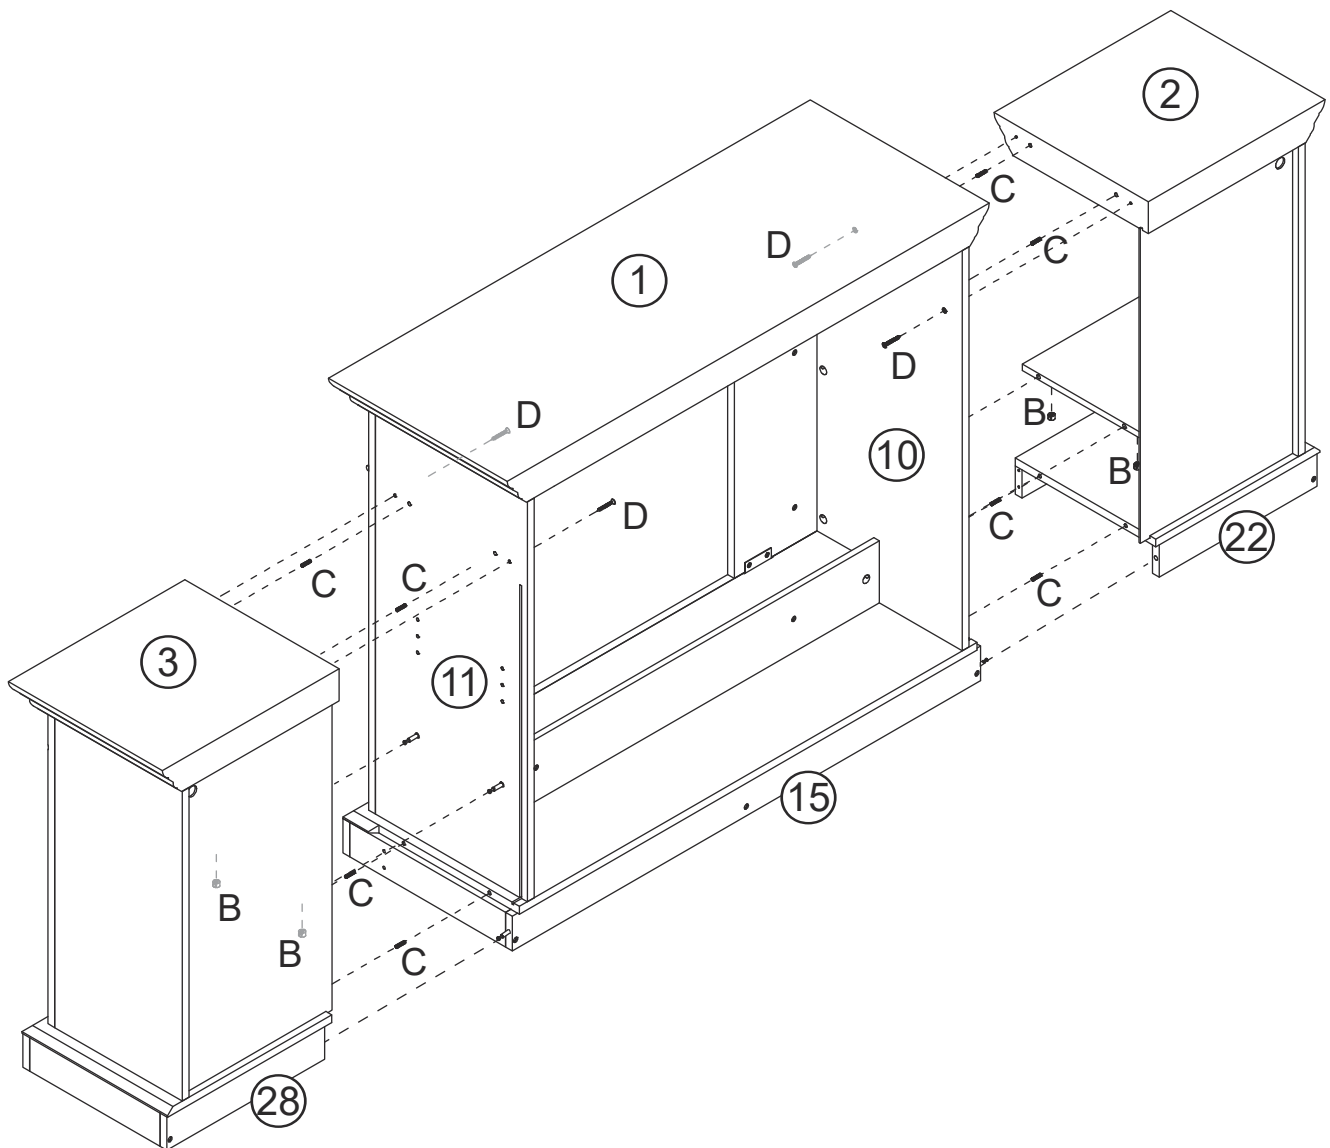

ASSEMBLY STEPS

B x 2



Φ15X10mm

 
D x 4



Φ4X35mm


STEP 27

After the previous step, use screw (D) and cam lock (B) to tighten and secure panels (16), (22), (24) and (18), (28), (30).

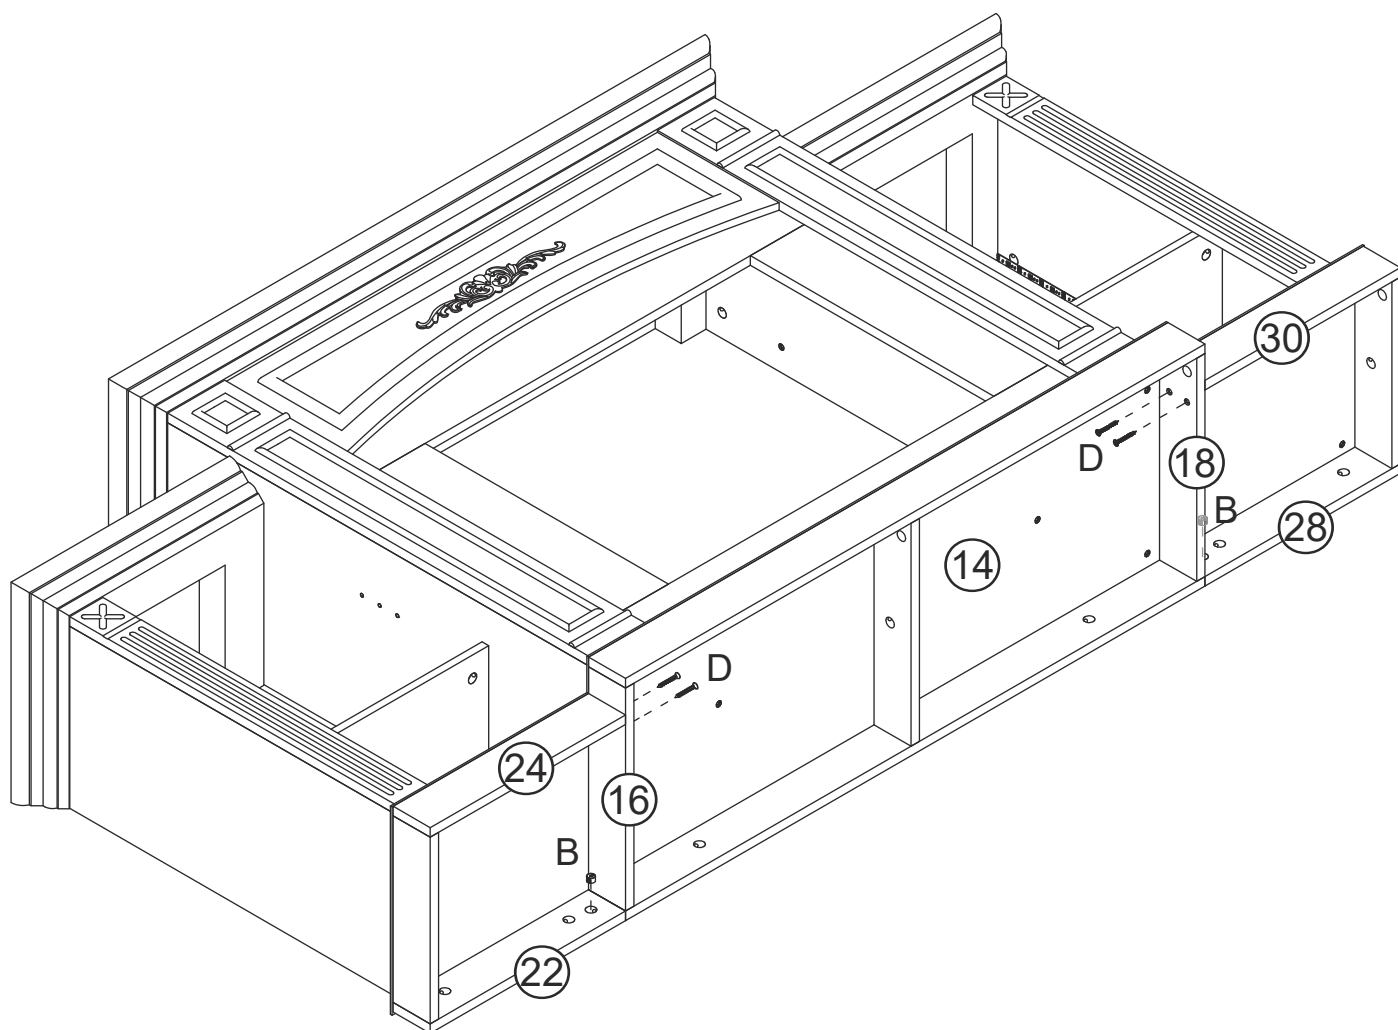


ASSEMBLY STEPS

 L x 1



STEP 28

 Peel the adhesive backing from the LED strip light (L) and through the holes of panels (34) and (35), then stick to panels (19) and (26) respectively.

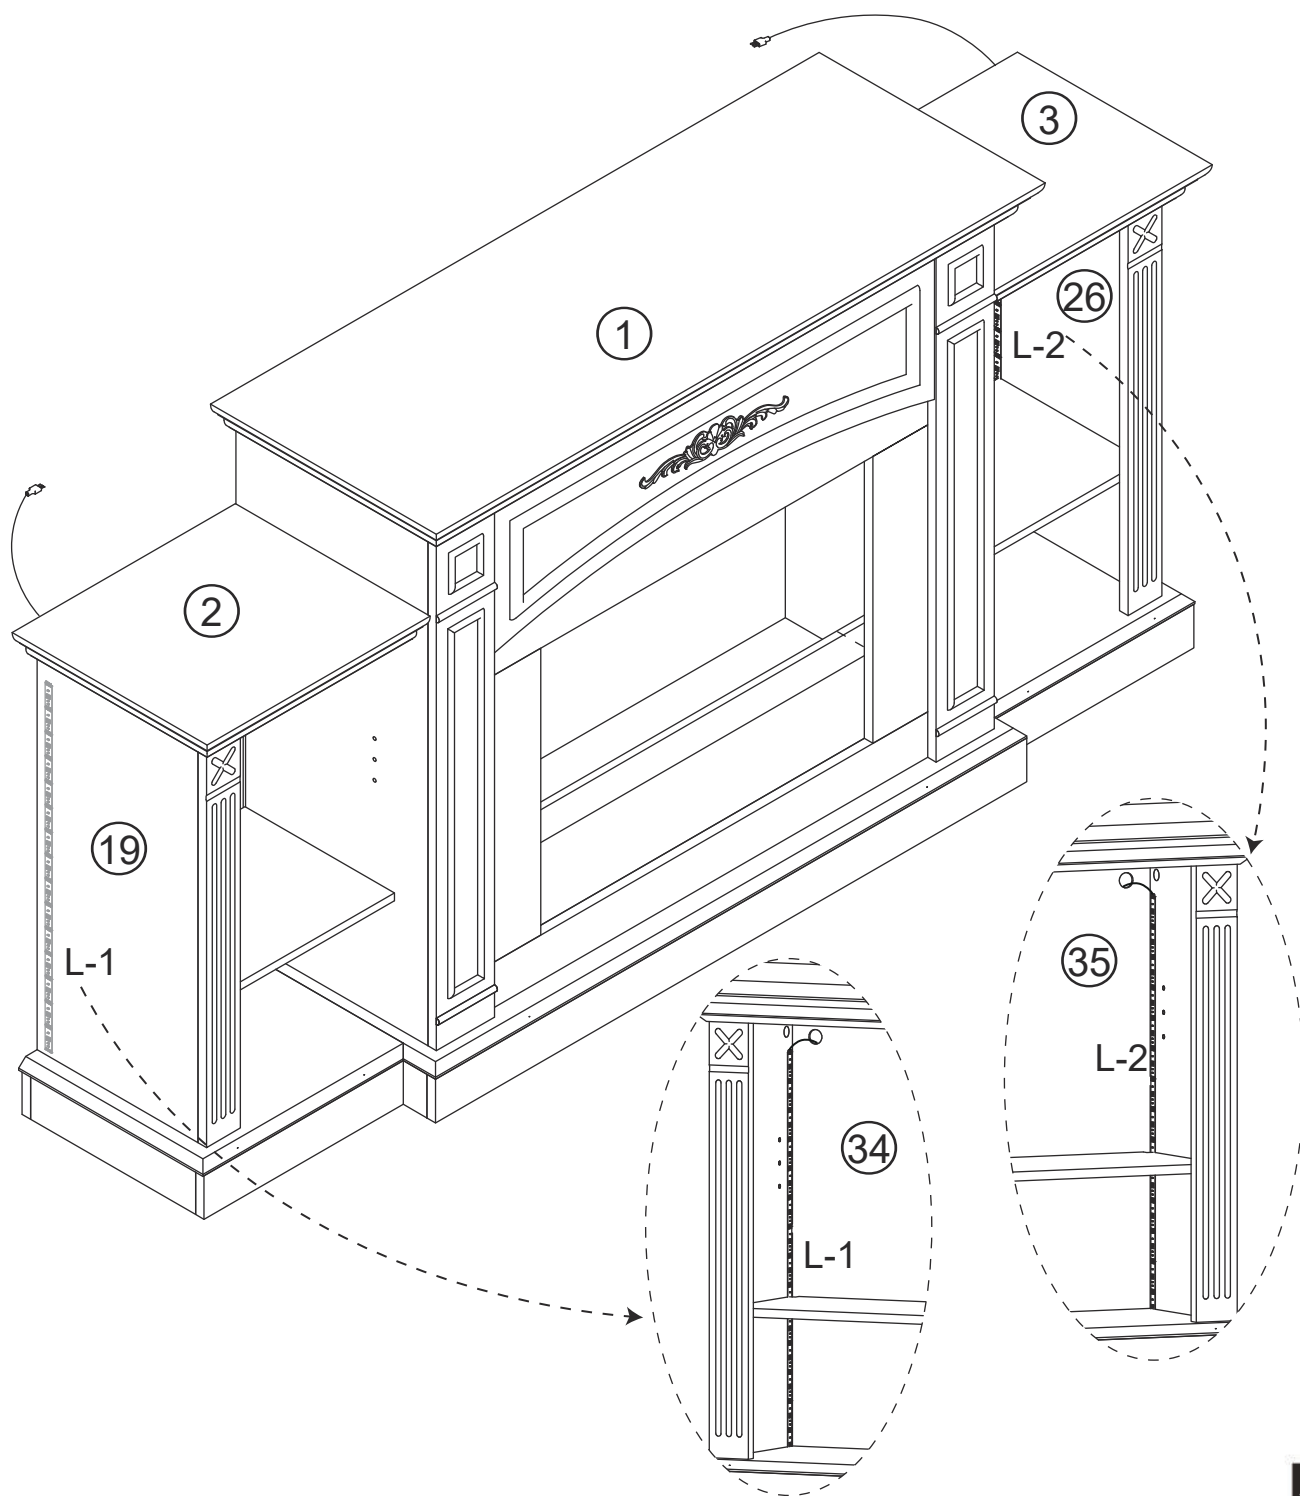


ASSEMBLY STEPS

K x 8



STEP 29

 1. Fix the shelf support (K) to panels (10), (11), (19) and (26).
2. Place the adjustable shelves (32) and (33) in the cabinet.

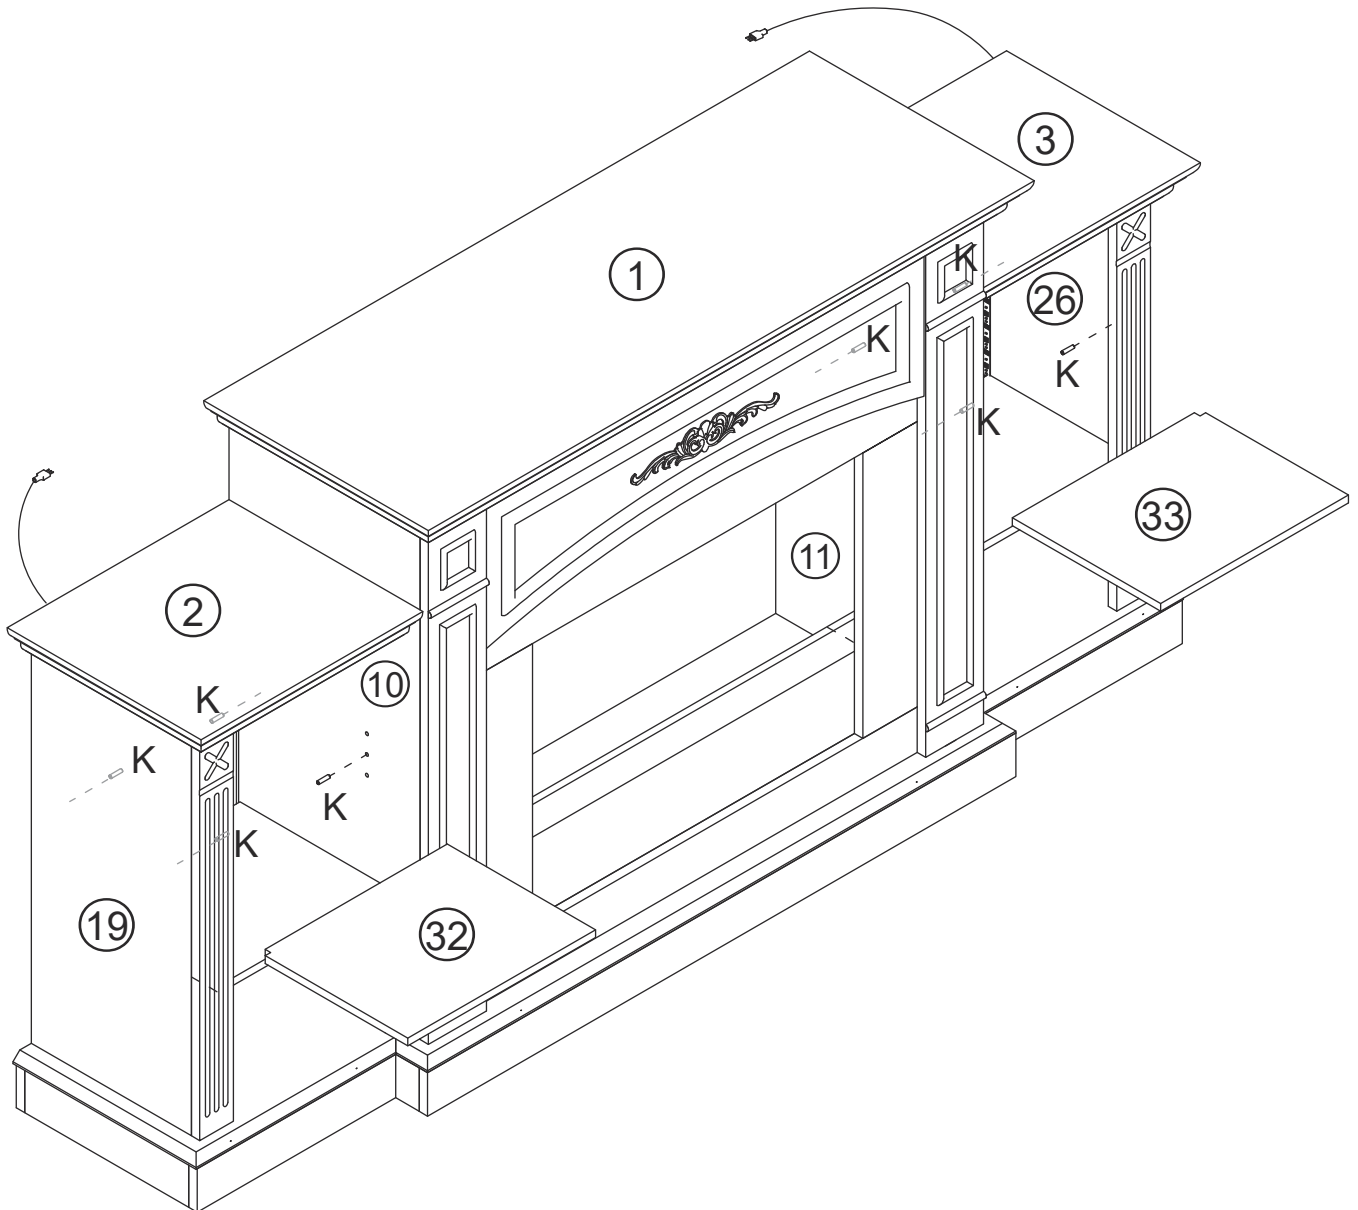

ASSEMBLY STEPS

 
N x 4

Φ4X12mm



STEP 30

Fix fireplace (38) into panels (6) and (39) with screw (N).

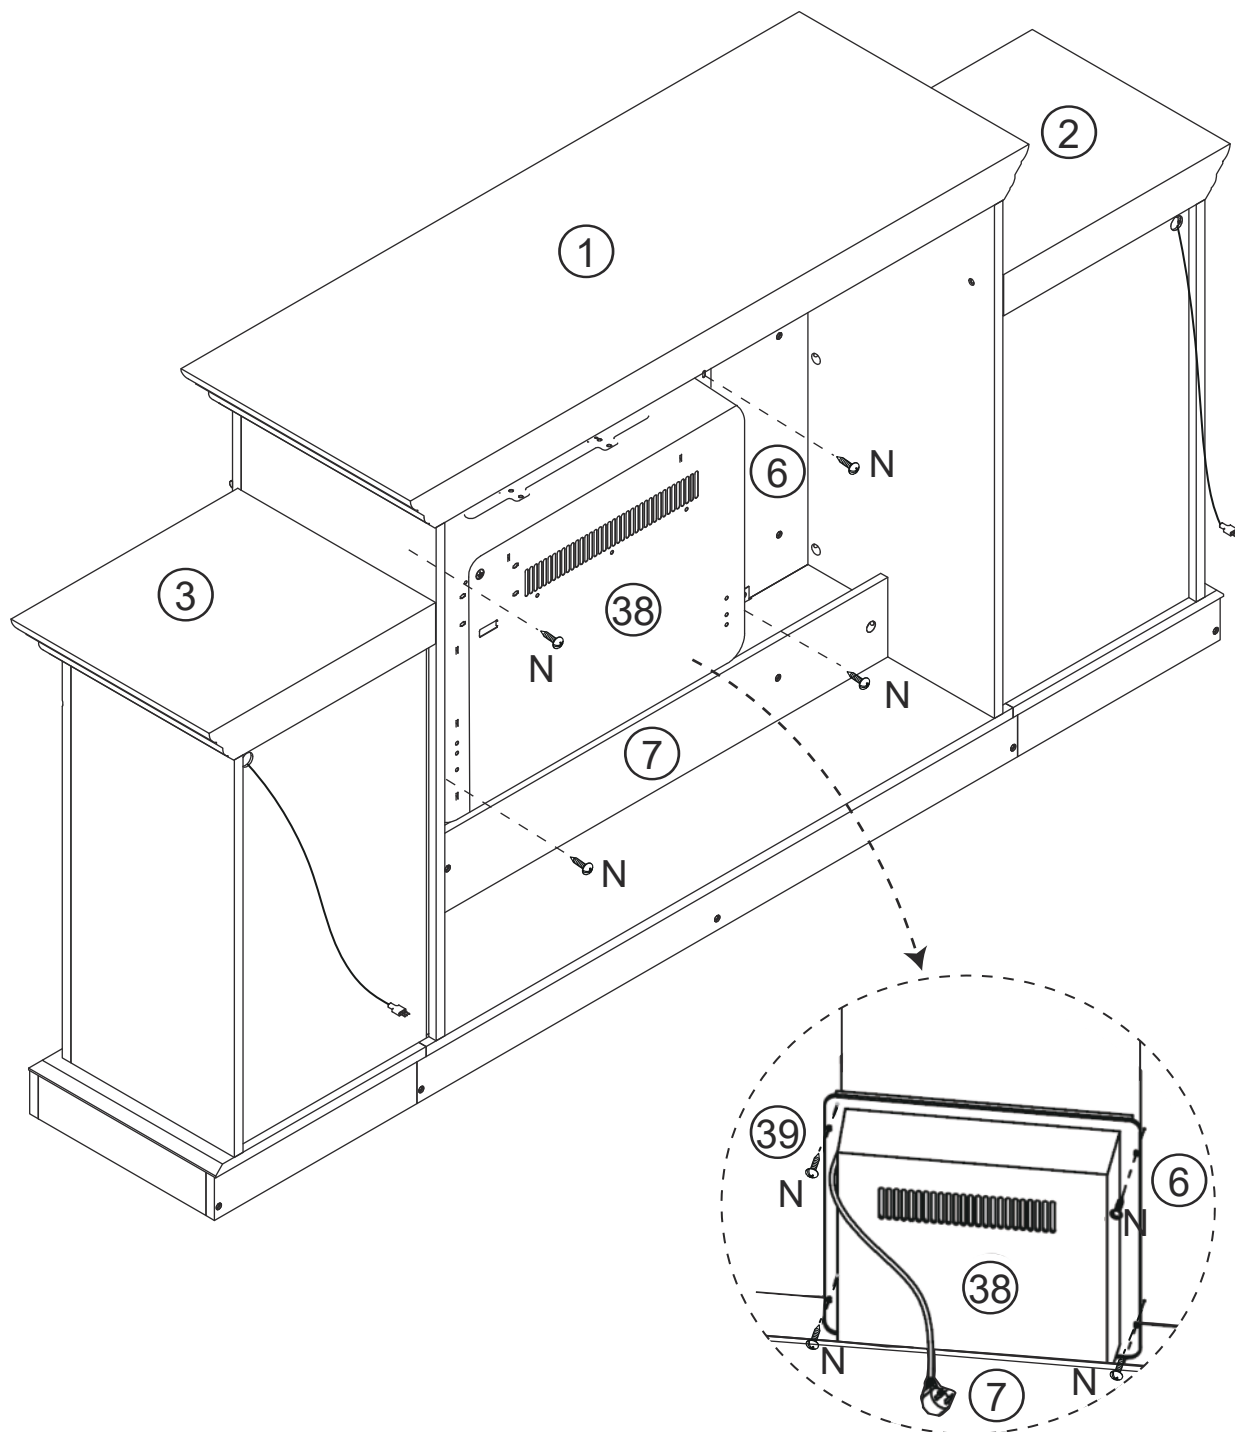

ASSEMBLY STEPS

H x 8

H-1



Φ3x14mm

 
H-2



L x 1

L-1


L-2



L-3

STEP 31

 1. Insert the back panel wedge (H-1) into the gap of cabinet back panel and tighten them with screw (H-2).
2. Connect installed LED strip lights (L-1) and (L-2) to the connection plug of the LED strip light (L-3).

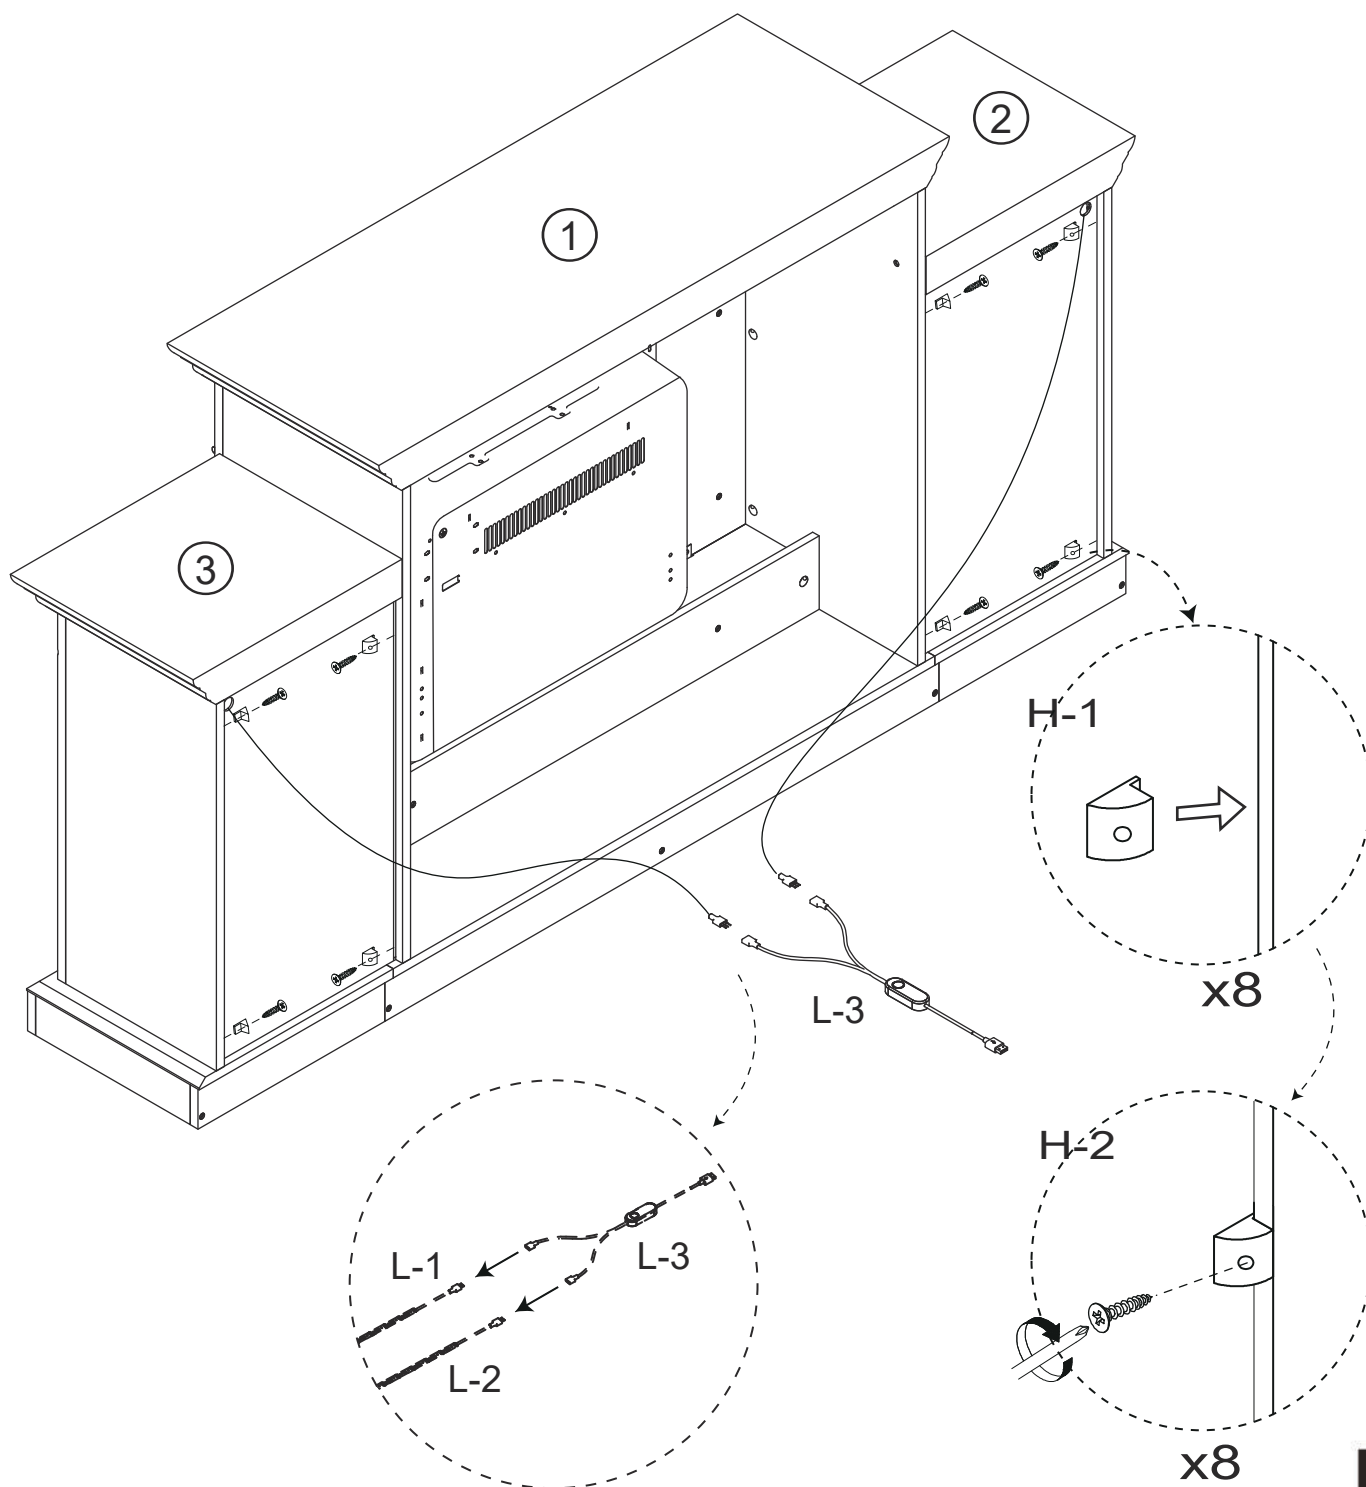

ASSEMBLY STEPS

1 x 2

I-1

Φ4x45mm

I-3



 
 
STEP 32

(Wall-locking method of the L-shaped bracket)

First drill two holes in the wall, embed the plastic anchor (I-1) and then use screw (I-3) to pass through the L-shaped bracket (G-2) to fix the cabinet on the wall.



Please scan this QR code to access the video instructions on how to install the wall-mounting hardware

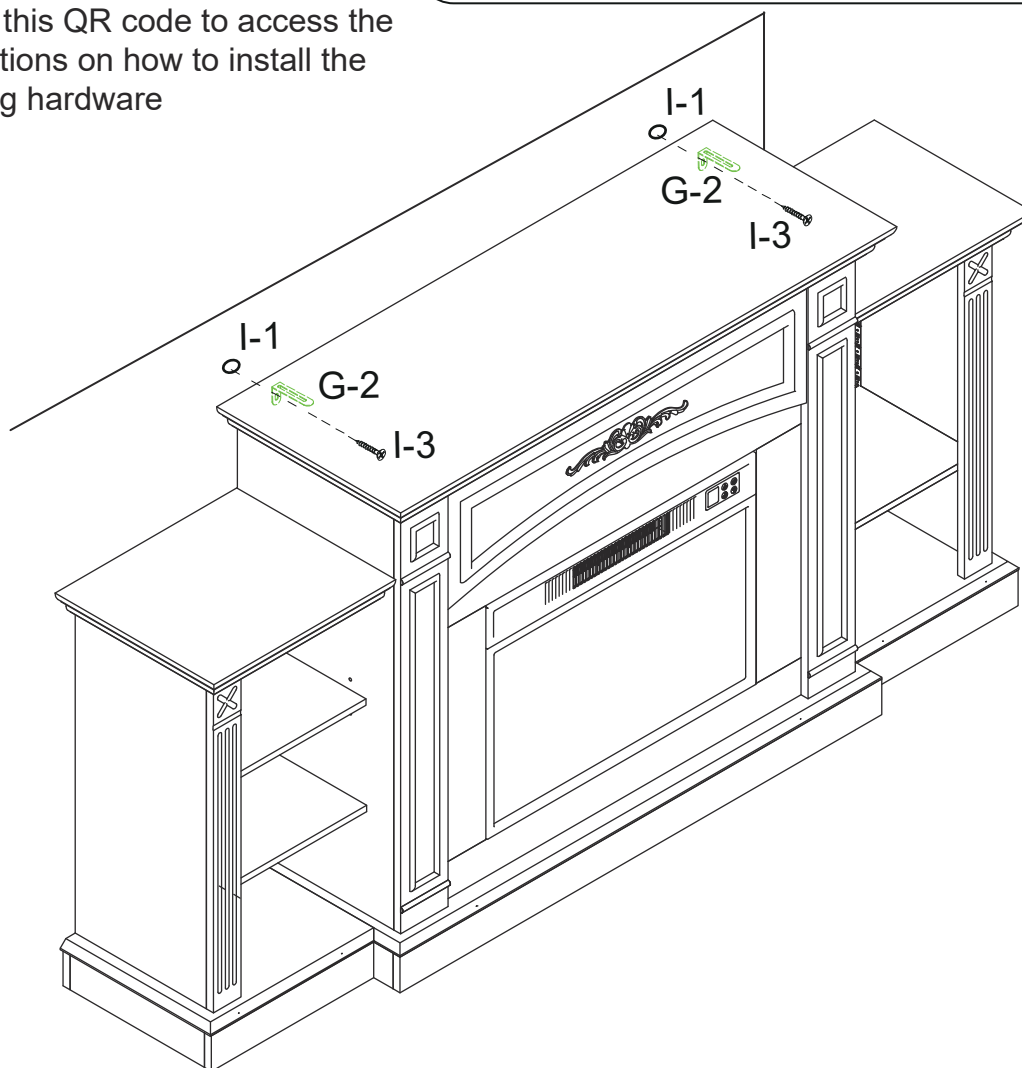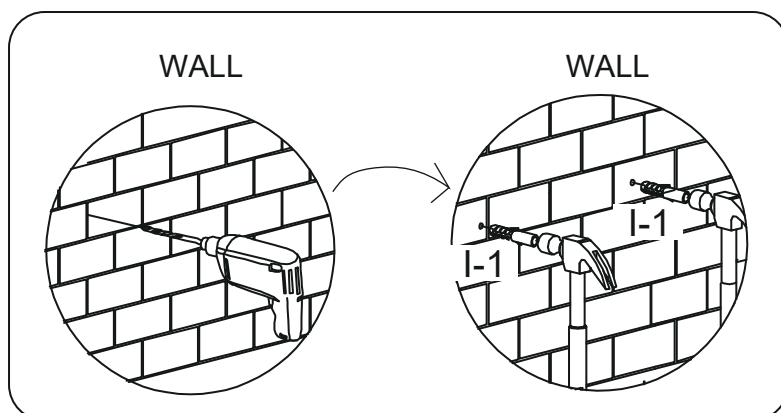

ASSEMBLY STEPS

1 x 2

I-1

I-2

I-3

Φ4x45mm



STEP 33

 
 
(Wall-locking method of the anti-tipping strap)

Drill two holes in the wall, embed the plastic anchor (I-1) and then use screw (I-3) to pass through the washer (I-2) to fix the anti-tipping strap (J-1) on the wall.



SCAN ME

Please scan this QR code to access the video instructions on how to install the wall-mounting hardware

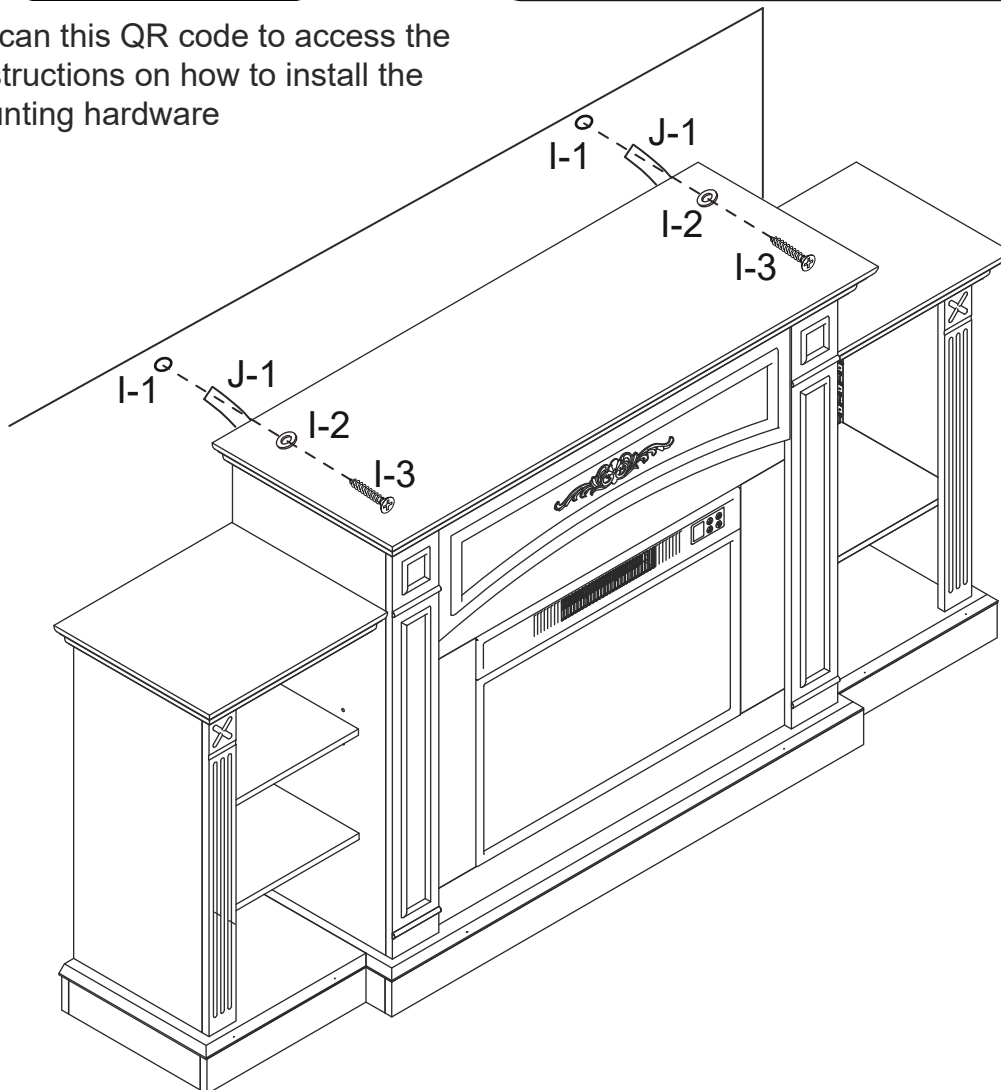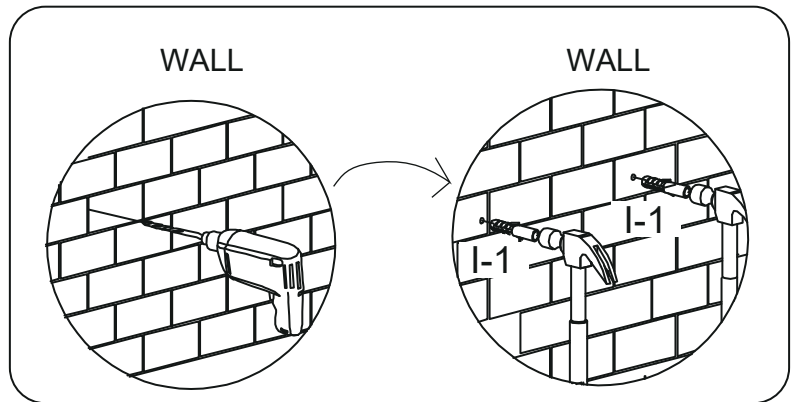

1. What should I do when I received a defected item?

Please feel free to contact VINGLI customer service via the link where you purchased this item with your order ID, pictures of the defective areas to us. We are eager to help you to make it right.

2. Is it easy to put the screws to the panels?

Yes. As long as you follow the instruction and use the correct screws and put it in correct holes, it is easy to screw it into pre-drilled holes.

Supplementary Instructions for Safe Use

English

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

French

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper, ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

German

WARNUNG



Kinder sind an einem Möbelkippen gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!

Supplementary Instructions for Safe Use

WARNING

- **INGESTION HAZARD** :This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **Keep** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



WARNING

- **INGESTION HAZARD** :This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **Keep** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



WARNING

This product can expose you to chemicals including Formaldehyde (gas), which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.