 
 


ASSEMBLY INSTRUCTIONS

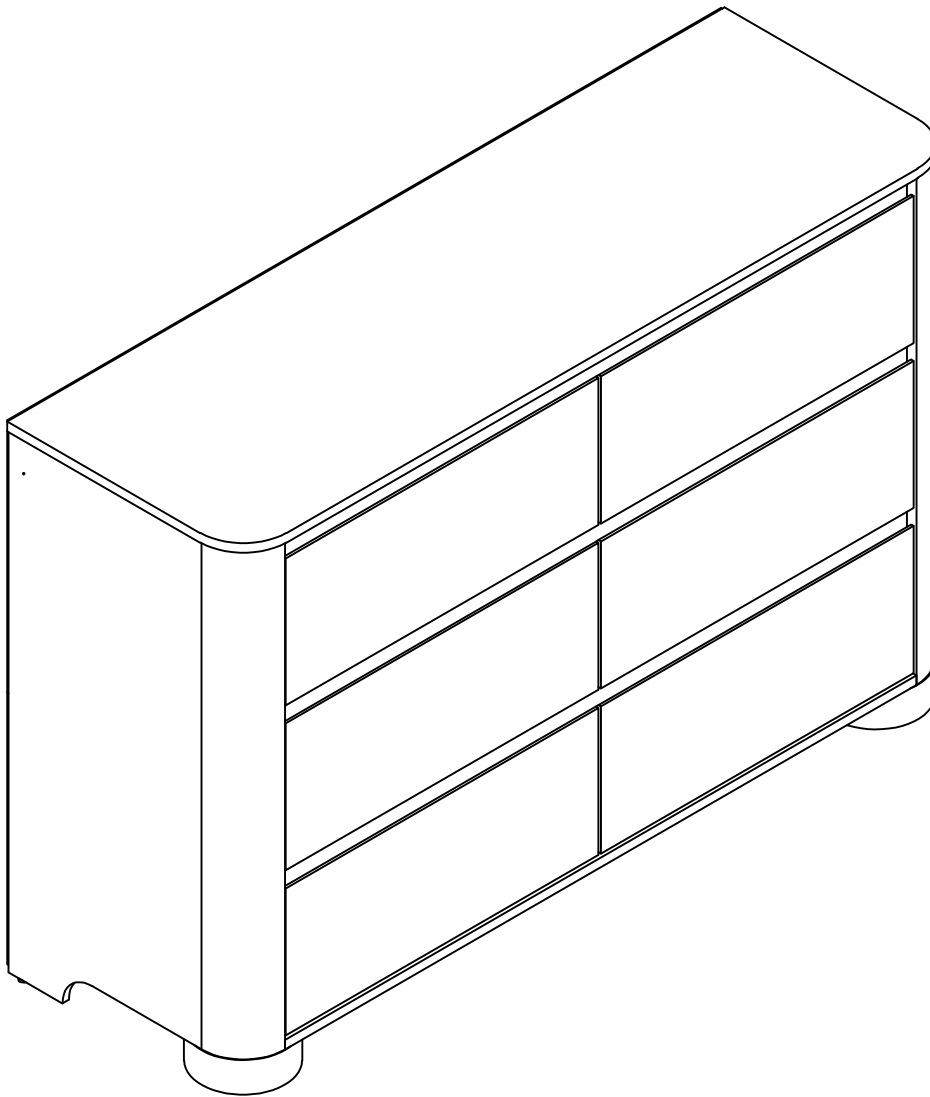








PACKAGE INCLUDE

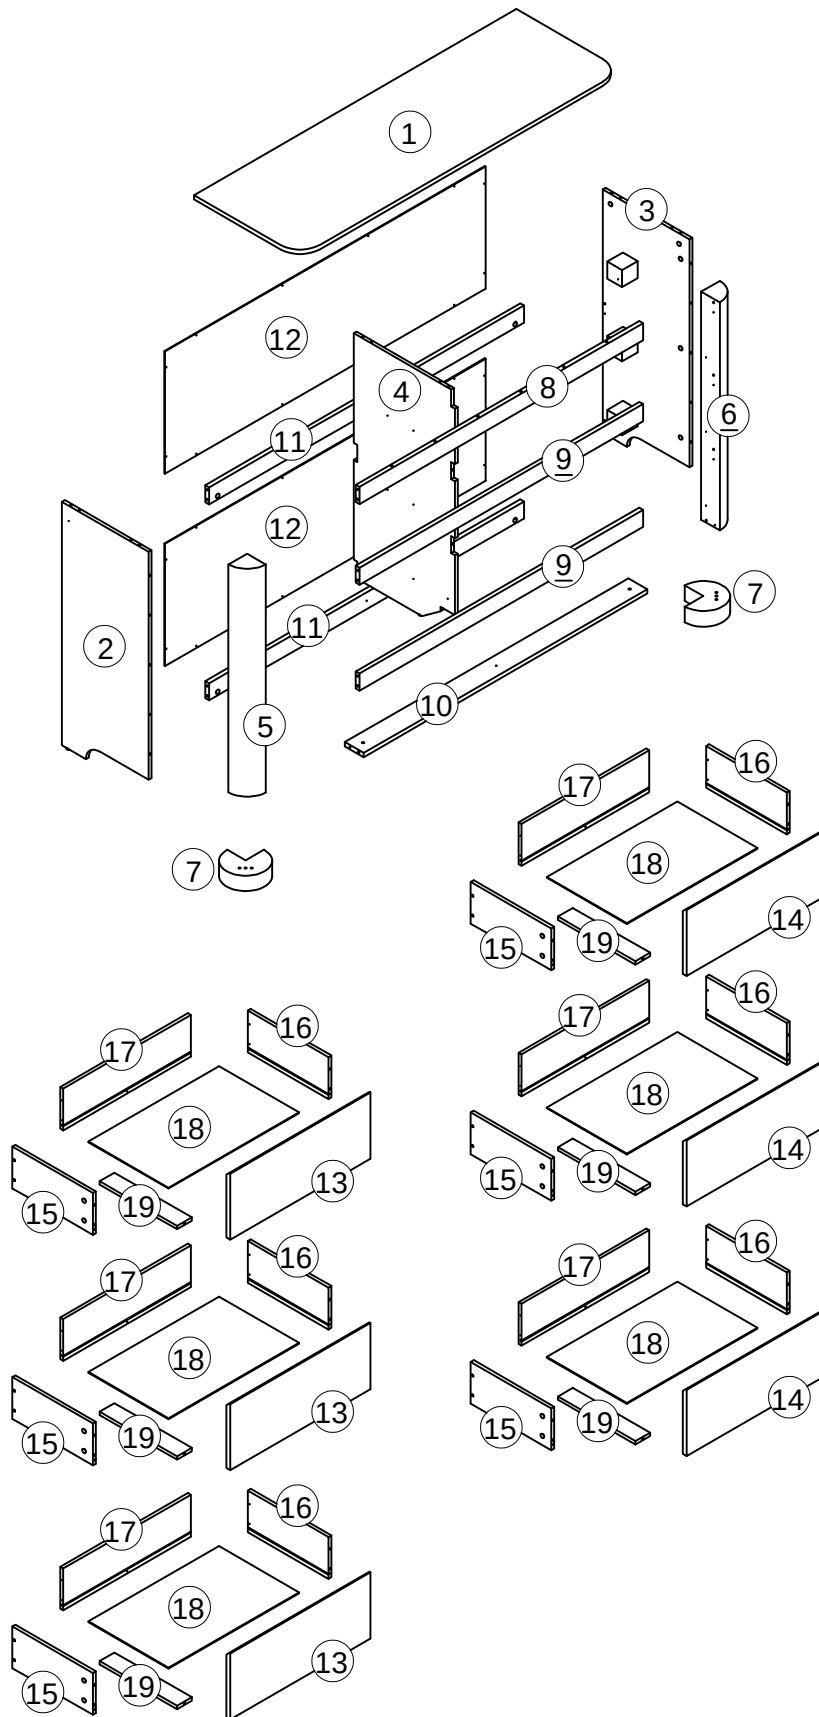


PACKAGE INCLUDE

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Left Side Panel	1
3	Right Side Plate	1
4	Mid-Side Panels	1
5	Left Column	1
6	Right Column	1
7	Round Foot	2
8	Pull The Strip	1
9	Pull The Strip	2
10	Bottom Horizontal Board	1
11	Pull The Strip	2
12	Backplate	2
13	Padded Panels	3
14	Padded Panels	3
15	Drawer Left Side Panel	6
16	Drawer Right Side Panel	6
17	Drawer Back Panel	6
18	Drawer Bottom Panel	6
19	Drawer Bottom Strip	6

       
PACKAGE CONTENT

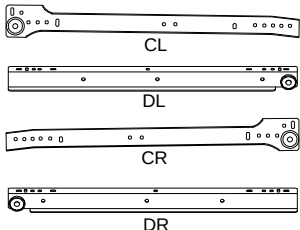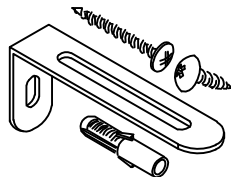Ø8X40MM  (A) 4X	Ø6X30MM  (B) 24X+2	Ø6X40MM  (C) 62X+2	Ø15X10MM  (D) 62X+2
 (E) 6X	Ø3.5X12MM  (F) 60X+2	Ø4X35MM  (G) 33X+2	Ø3X12MM  (H) 24X+2
Ø6X50MM  (J) 2X	M4  (K) 1X	 (P) 2X	

 
How to use the cam lock system

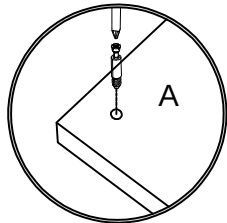

 
1. Screw cam bolt into panel

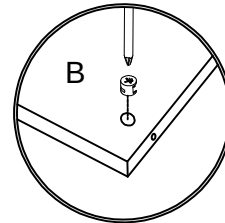

 
2. Push cam into panel - arrow feature on cam top points to panel edge

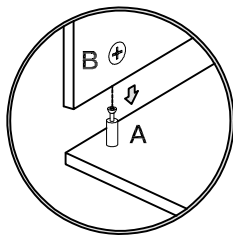

 3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

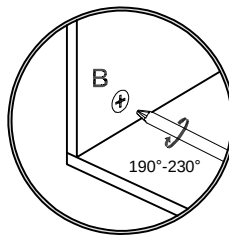


 4. Rotate cam(s) clockwise 190°-230° to lock panels together


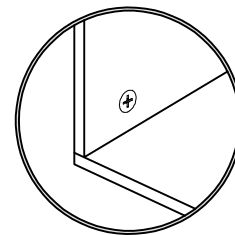


5. Panels should be tight against each other and connection should be rigid




 
Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

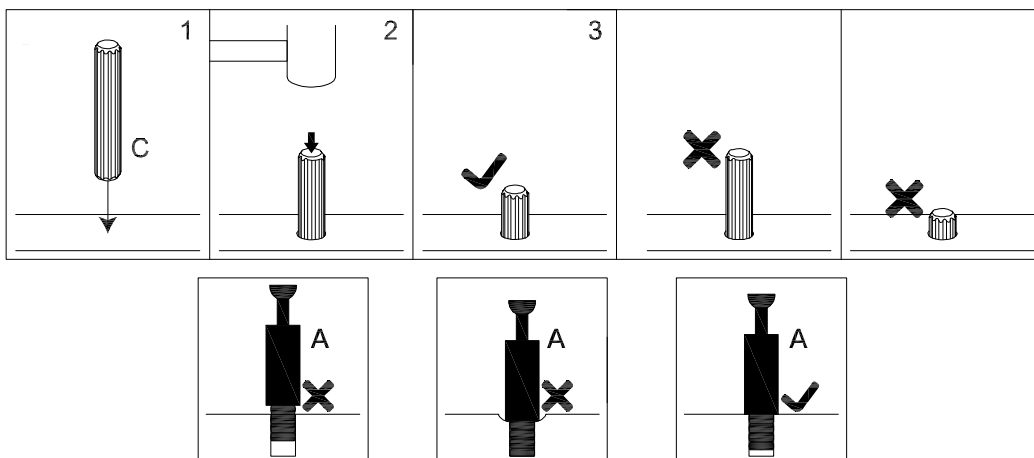



 
 
STEP 1

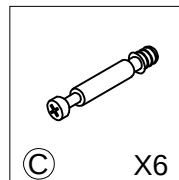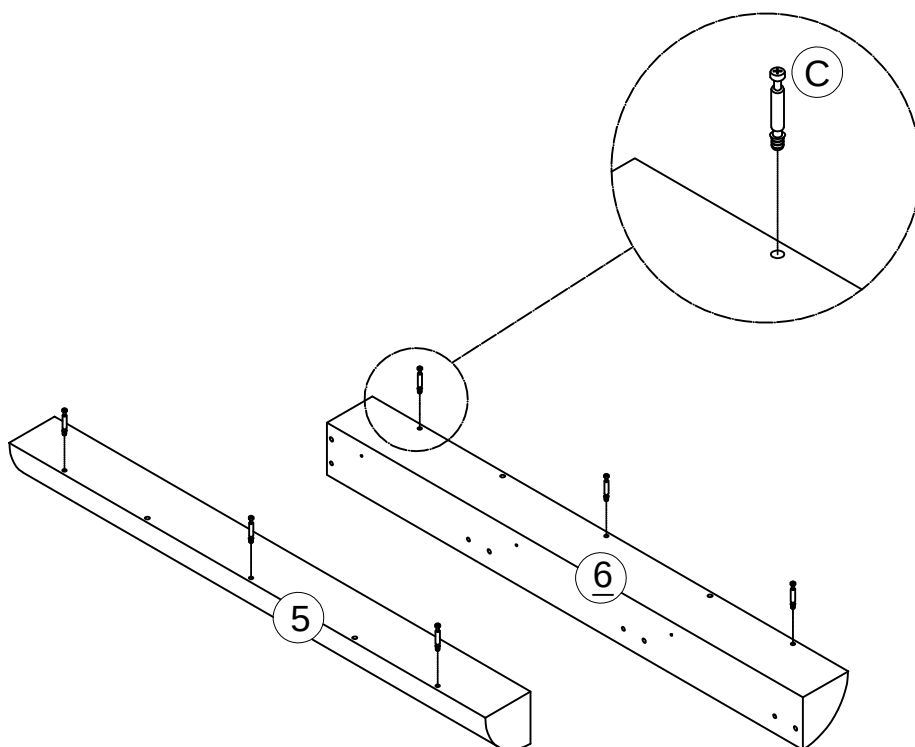

 
 
 
 
STEP 2

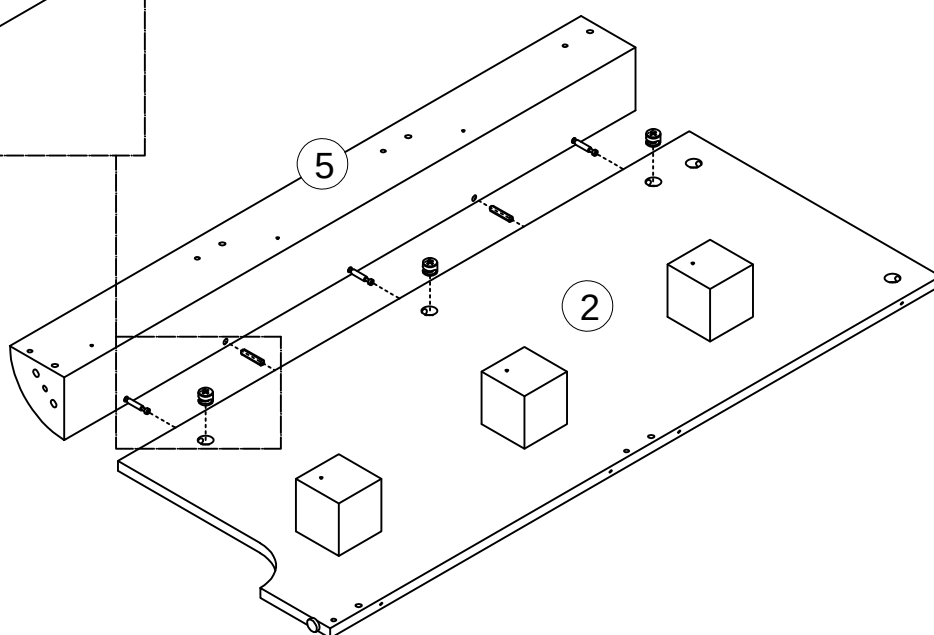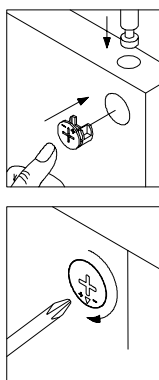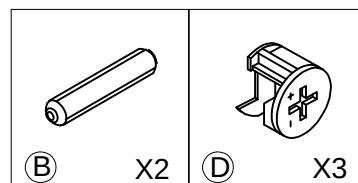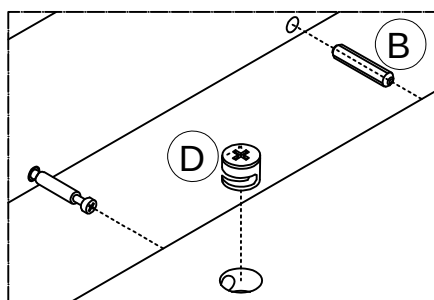

  
 
 
STEP 3

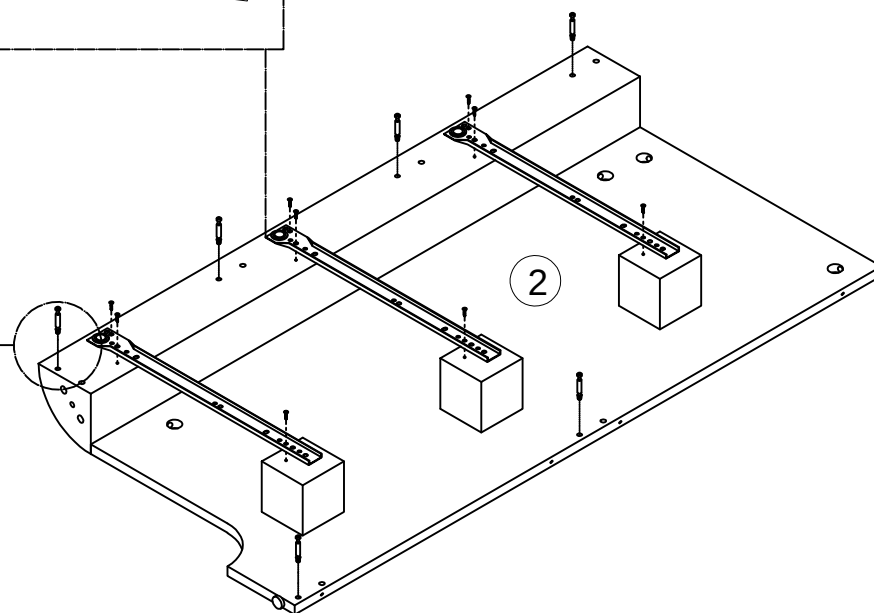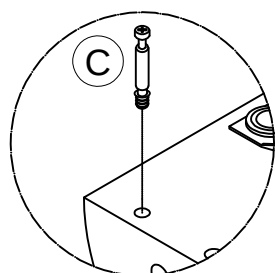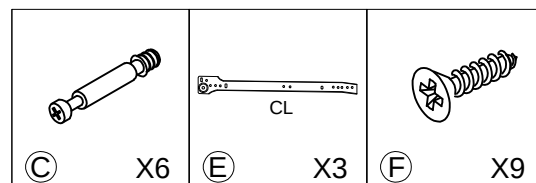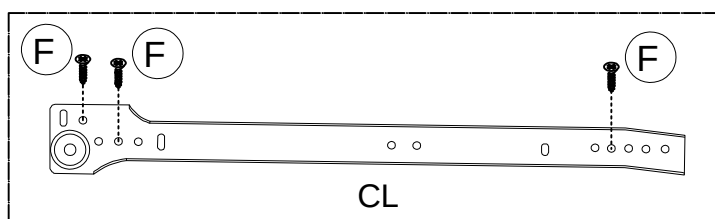

  
 
 
STEP 4

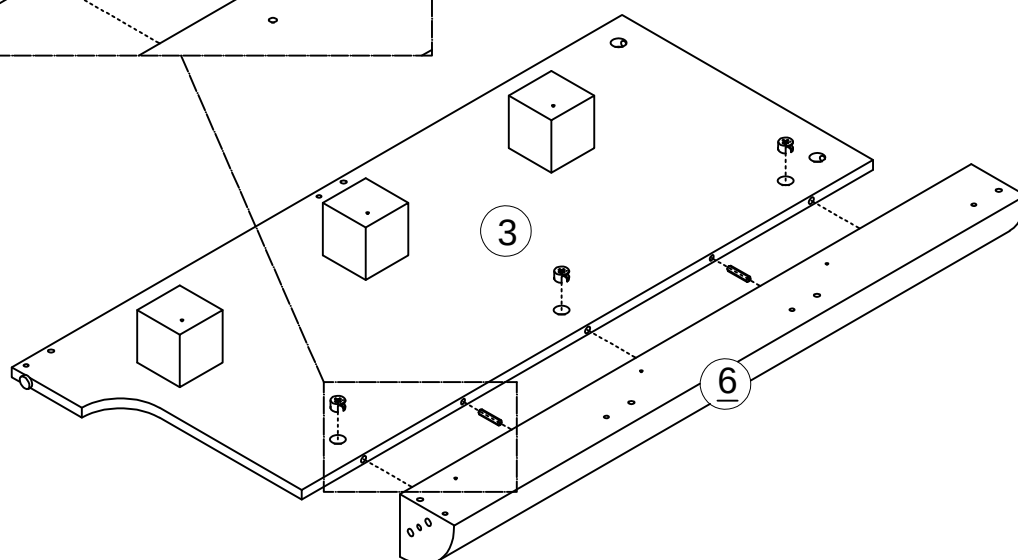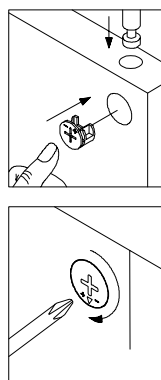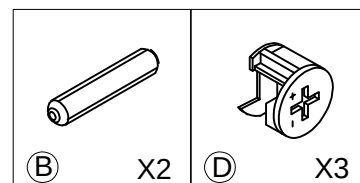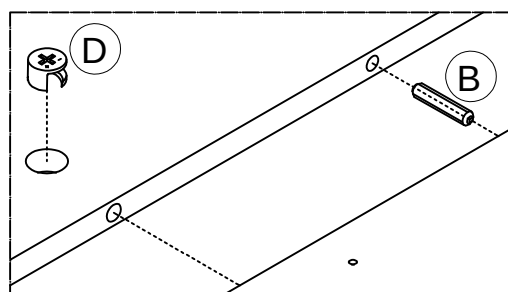

   
STEP 5

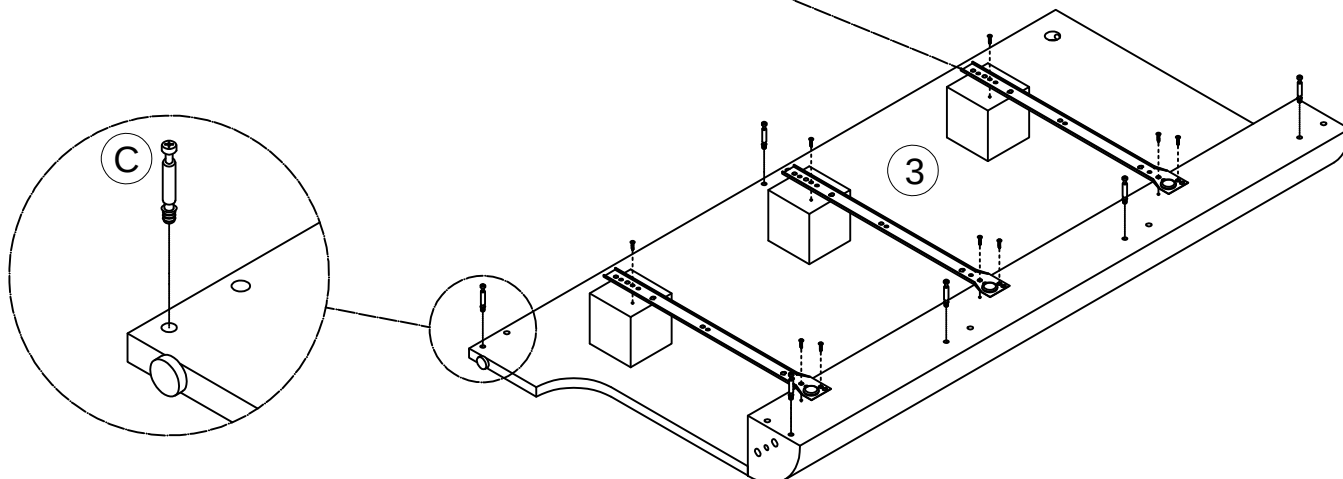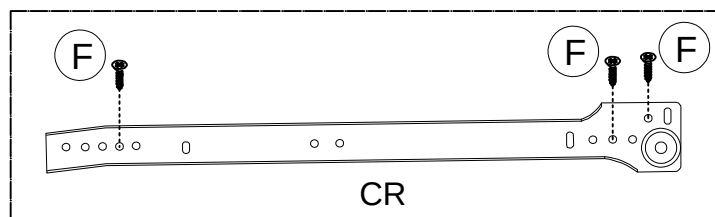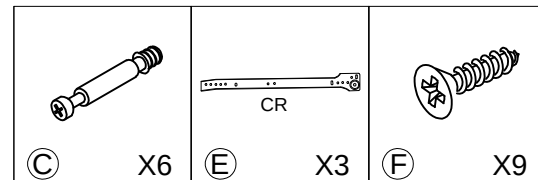

   
STEP 6

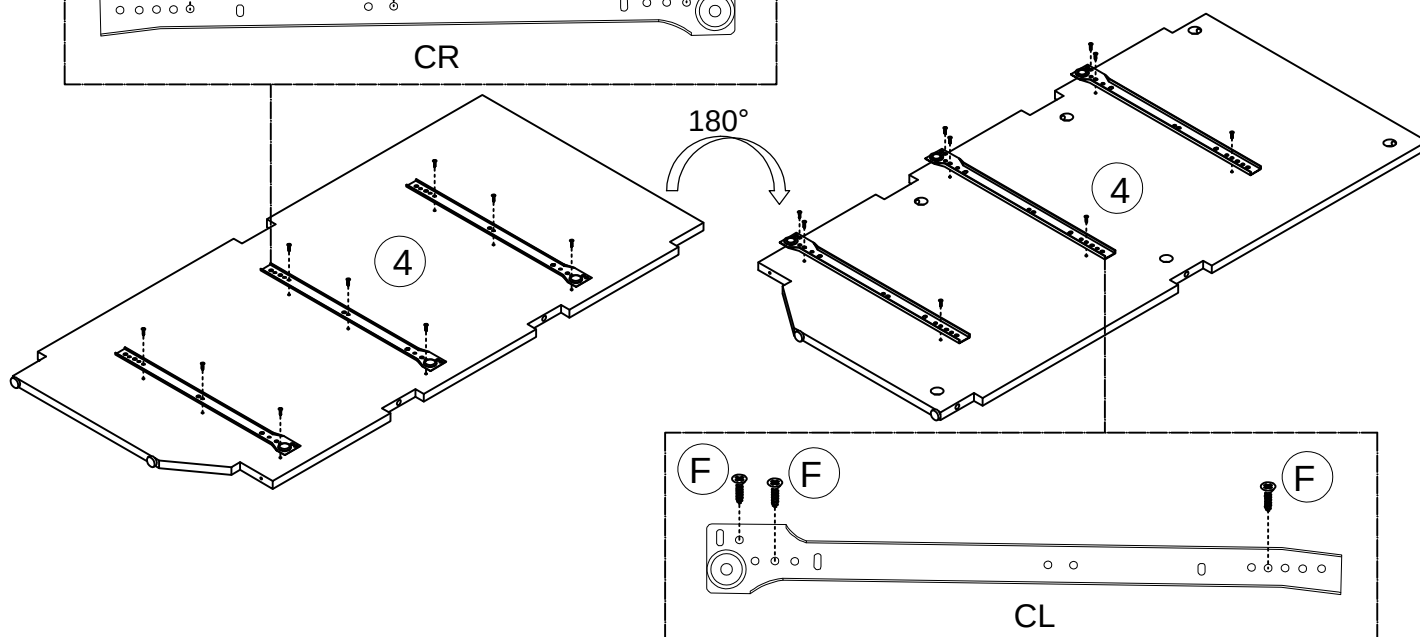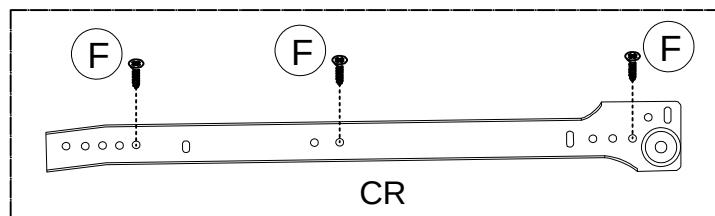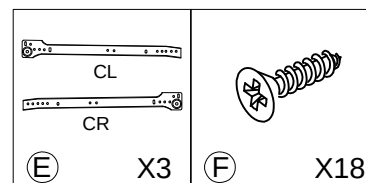




 
STEP 7

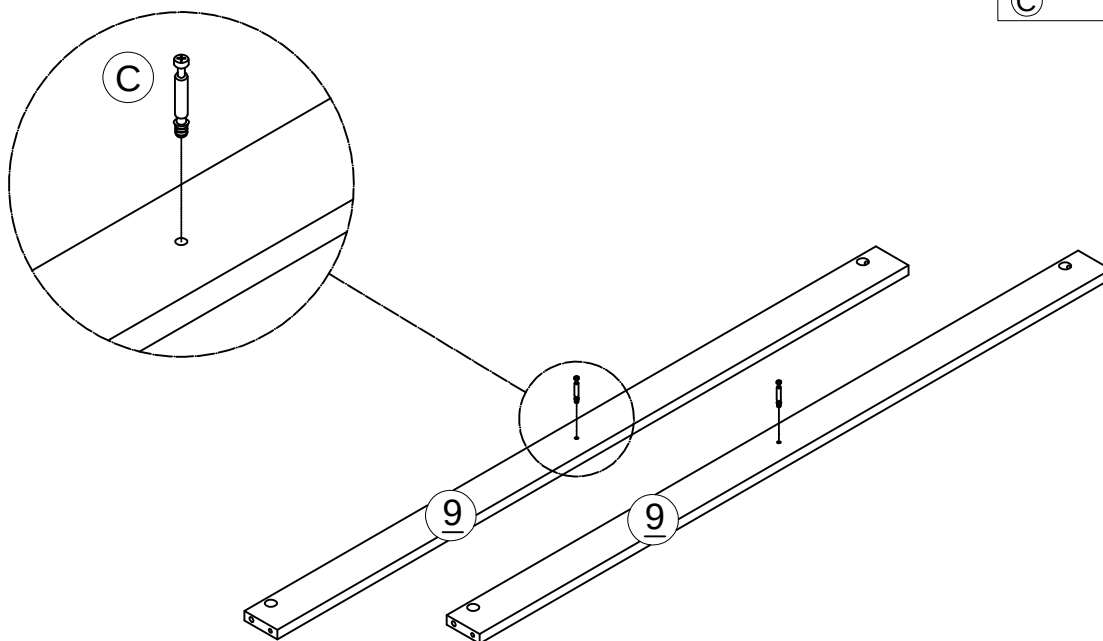



 
STEP 8

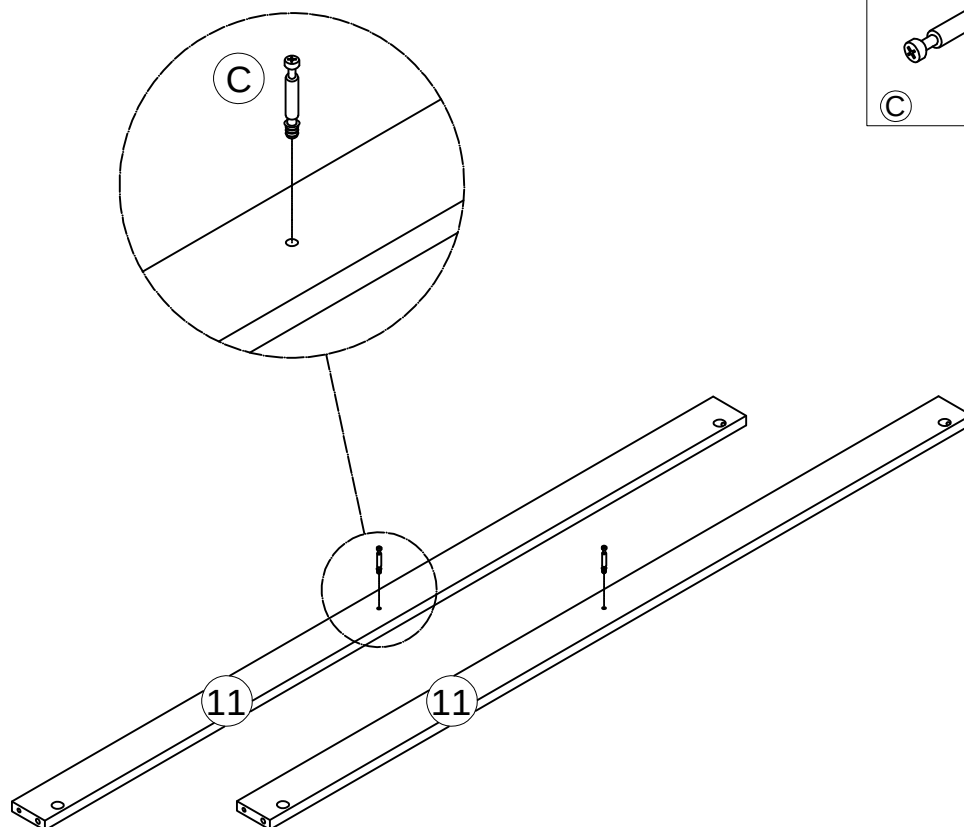


 
 
 
 
STEP 9

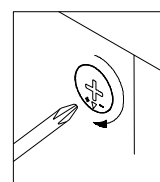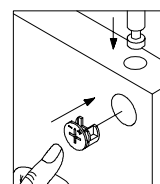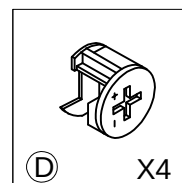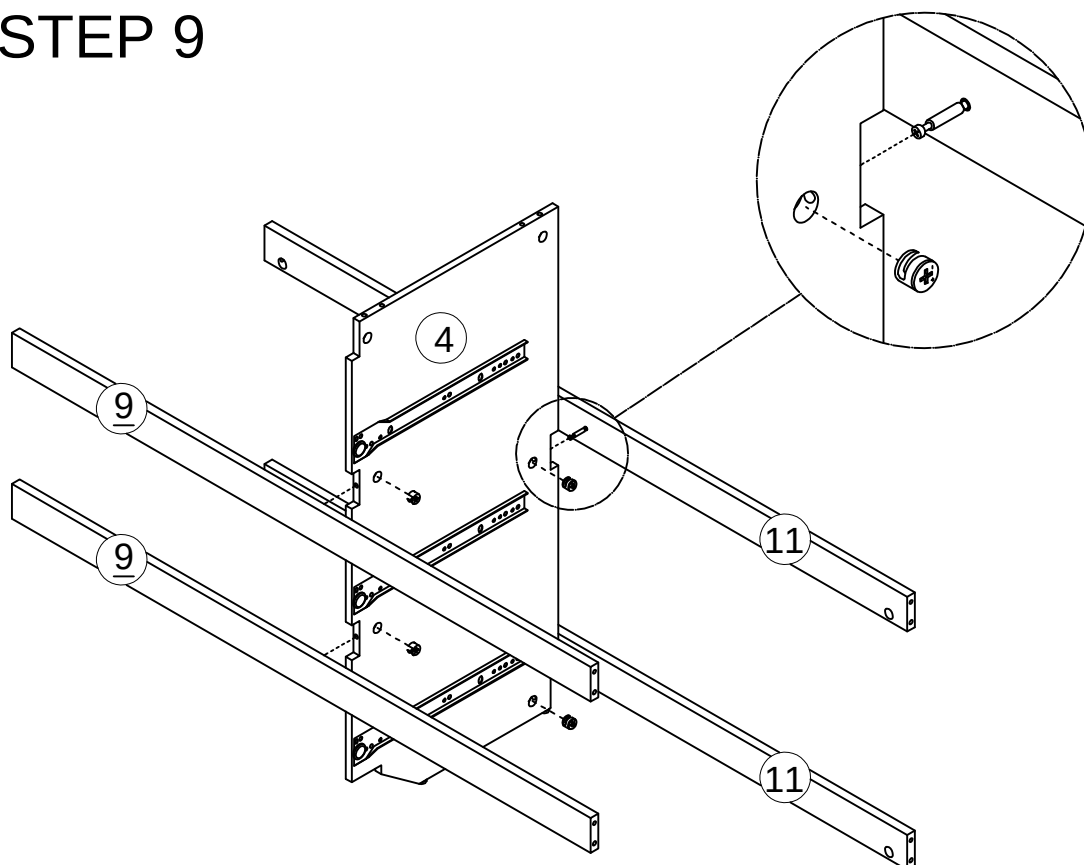

 
 
 
STEP 10

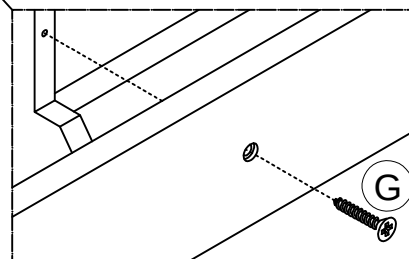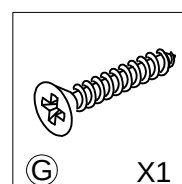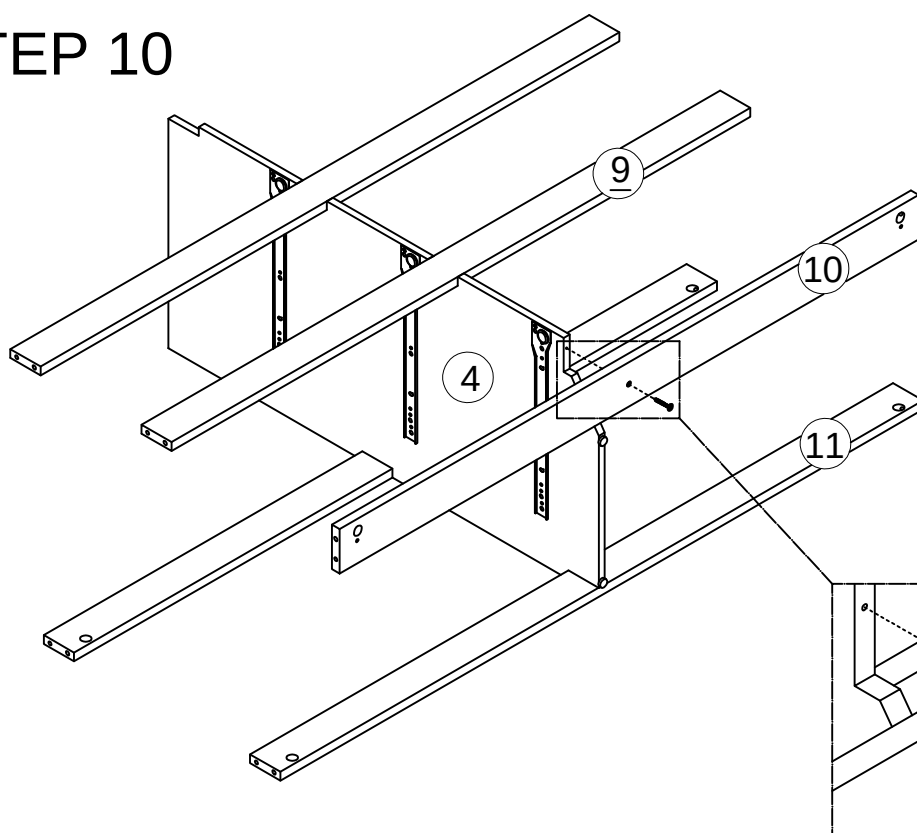

     
STEP 11

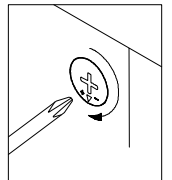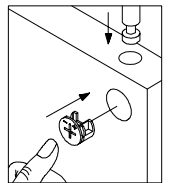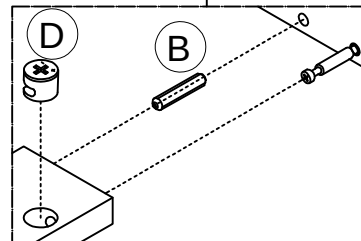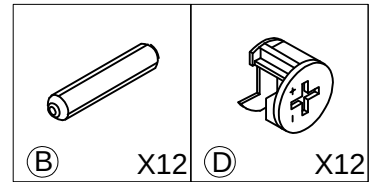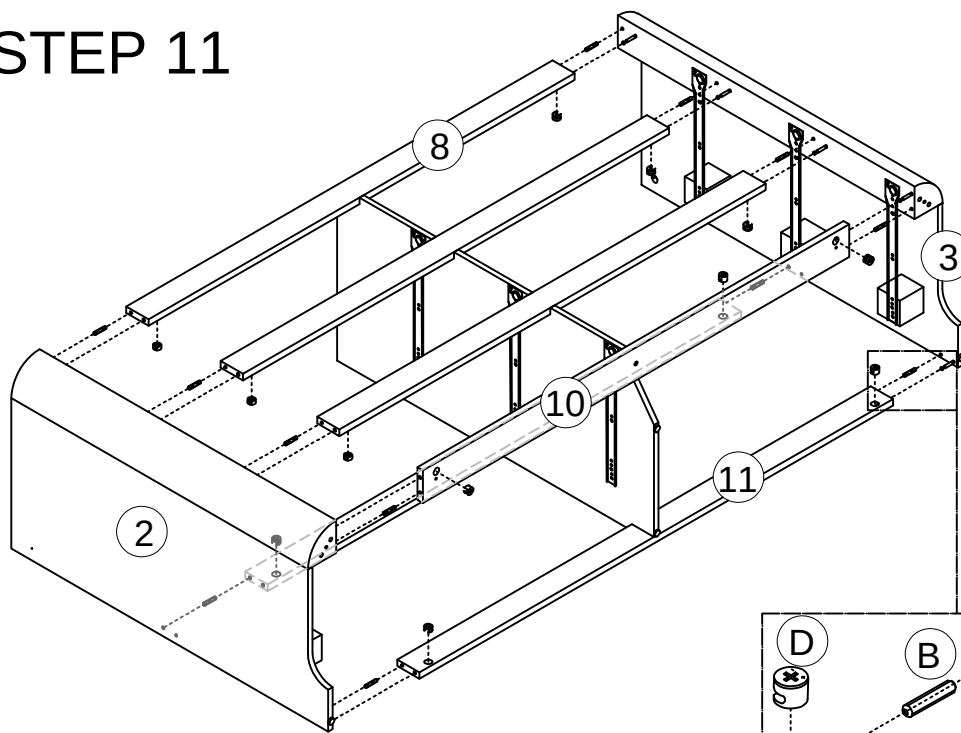

   
STEP 12

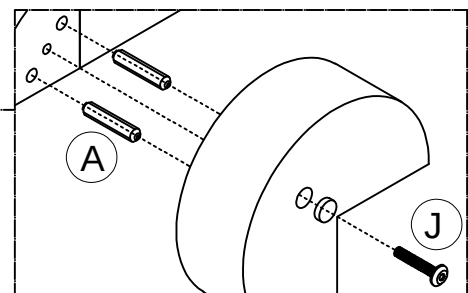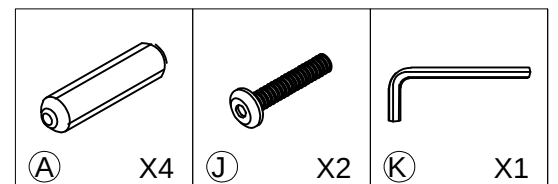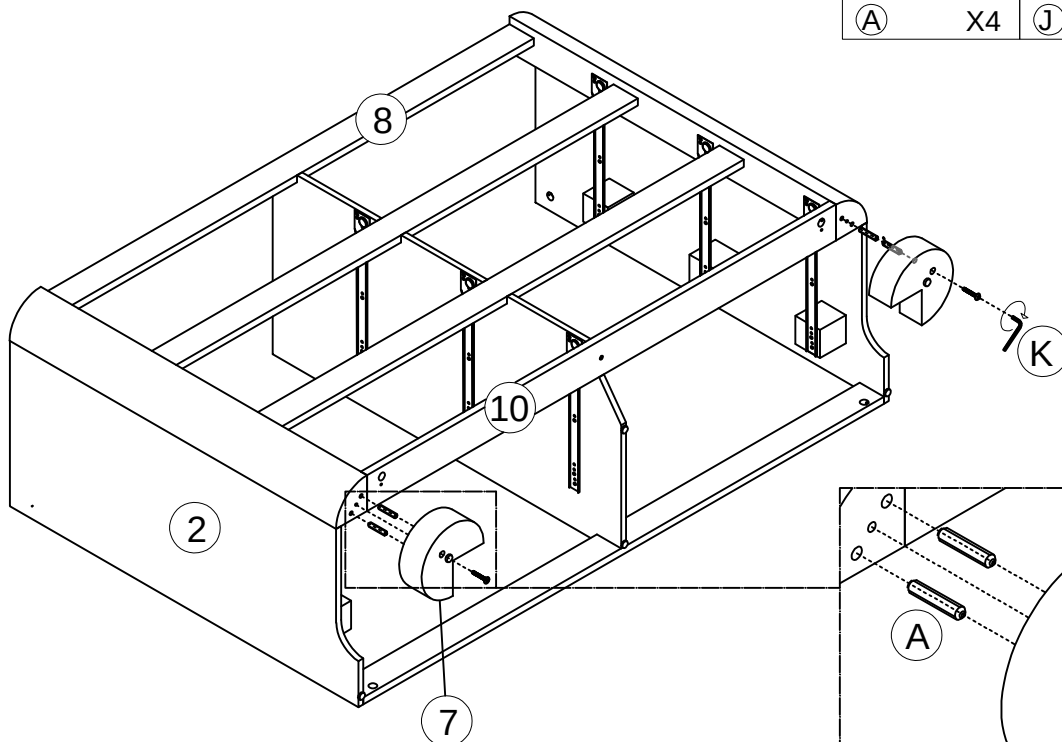



 
STEP 13

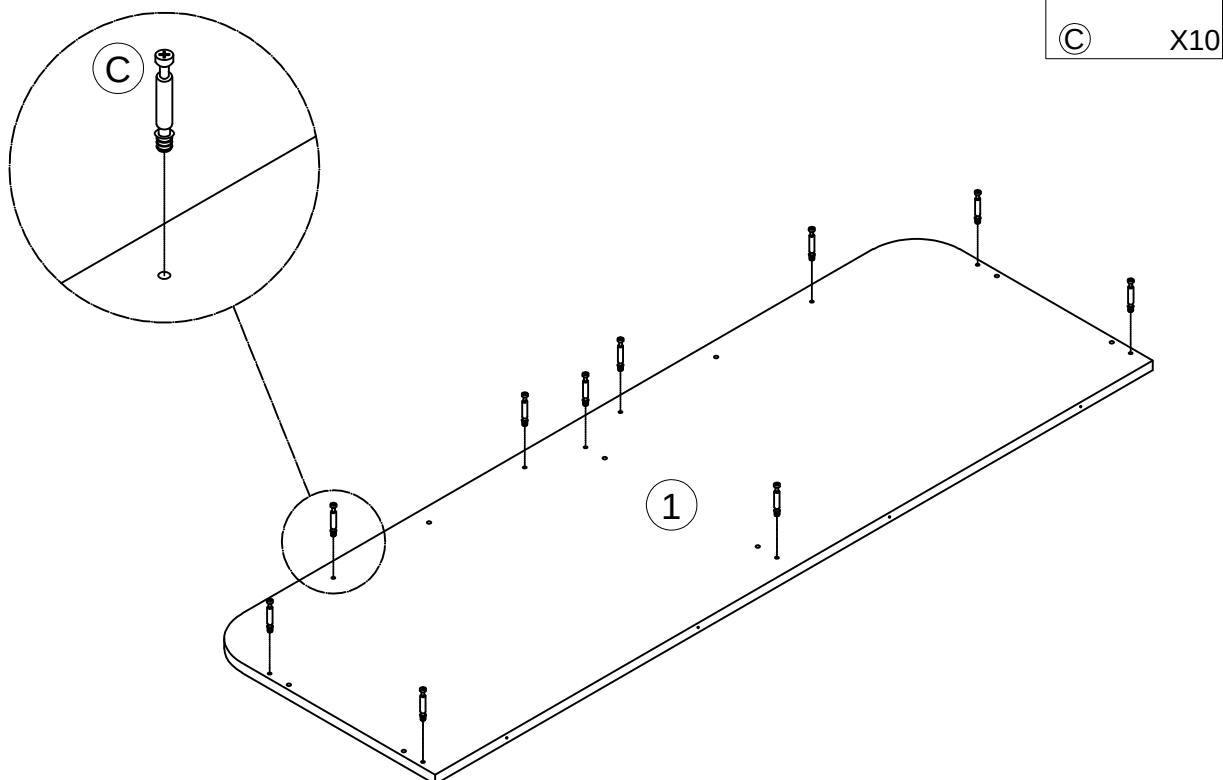



 
STEP 14

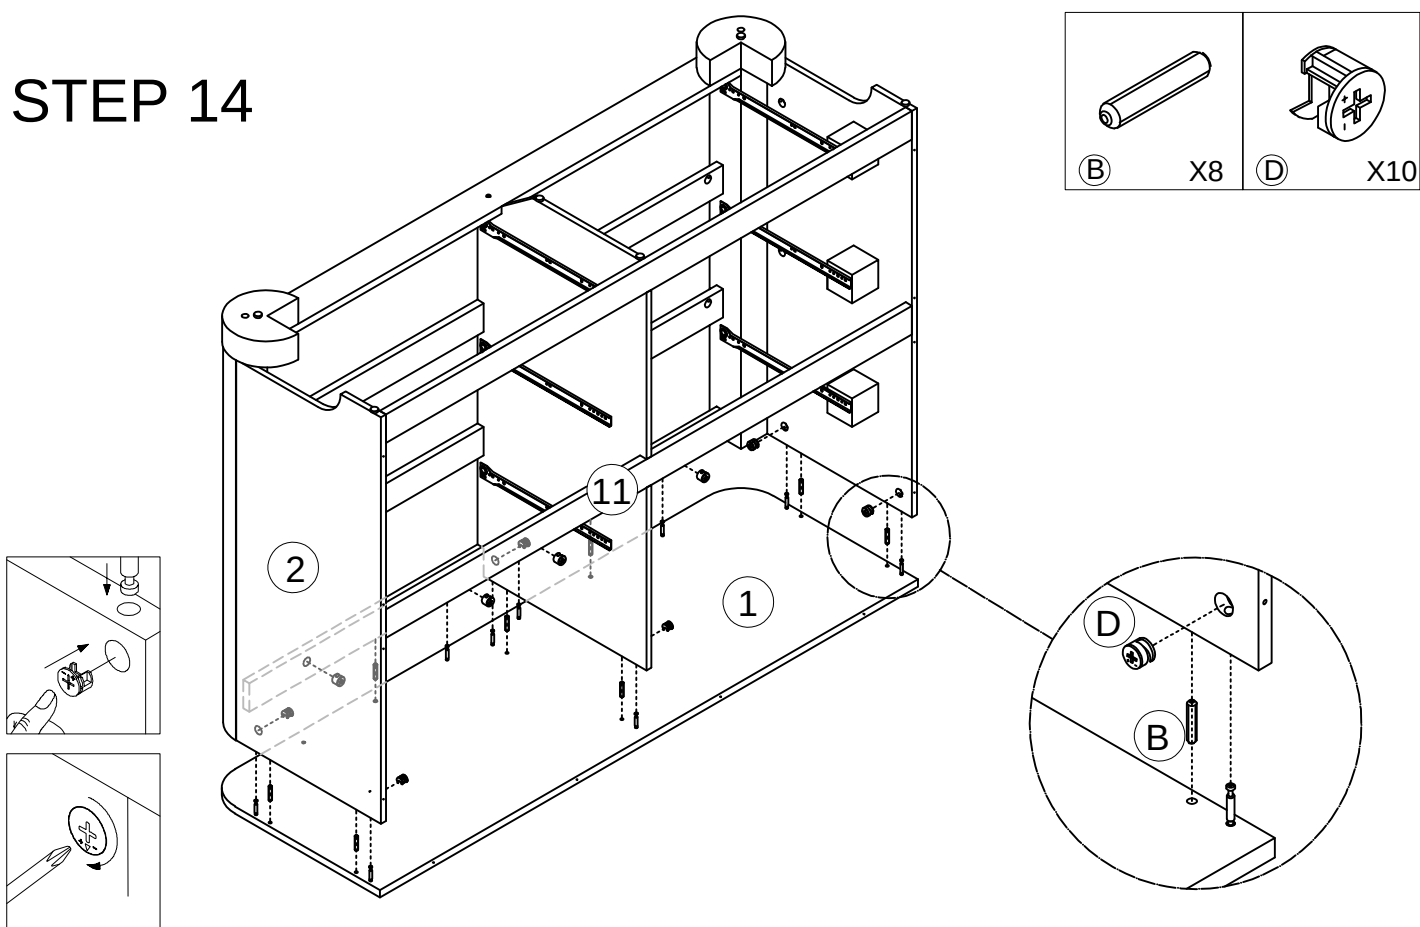

  
 
STEP 15

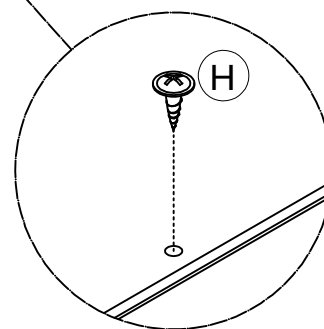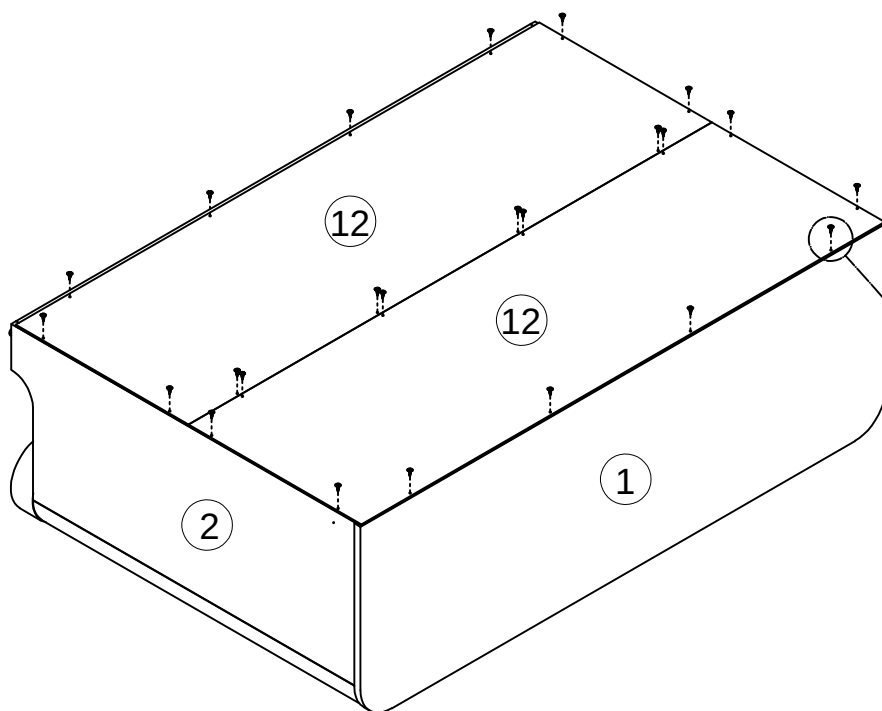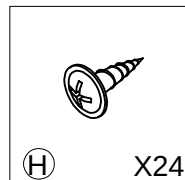

   STEP 16

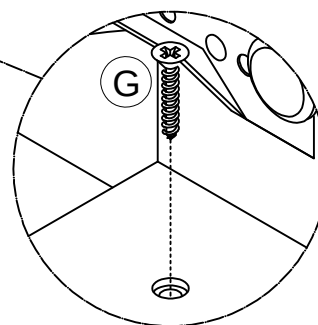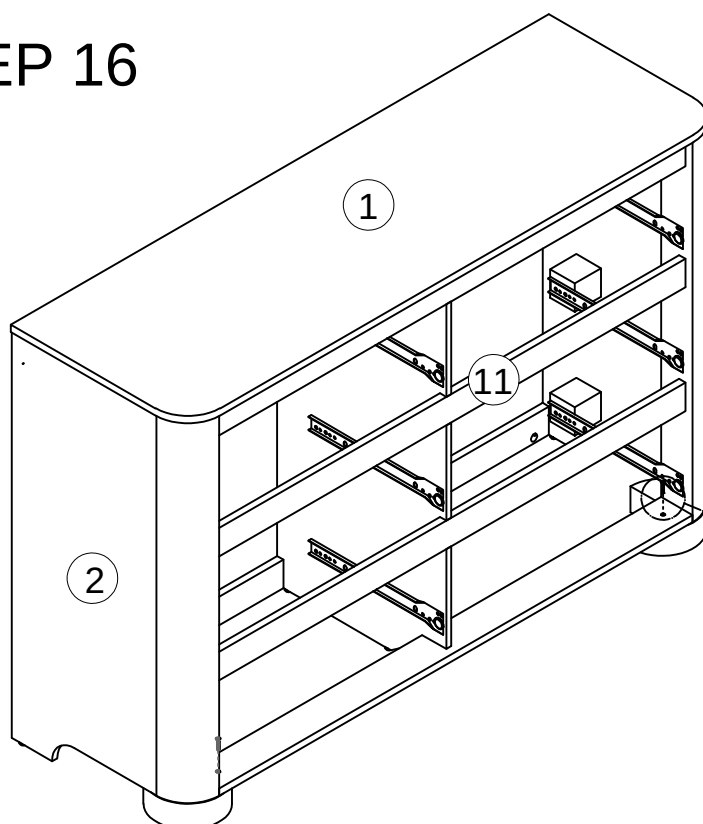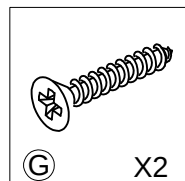


  STEP 17

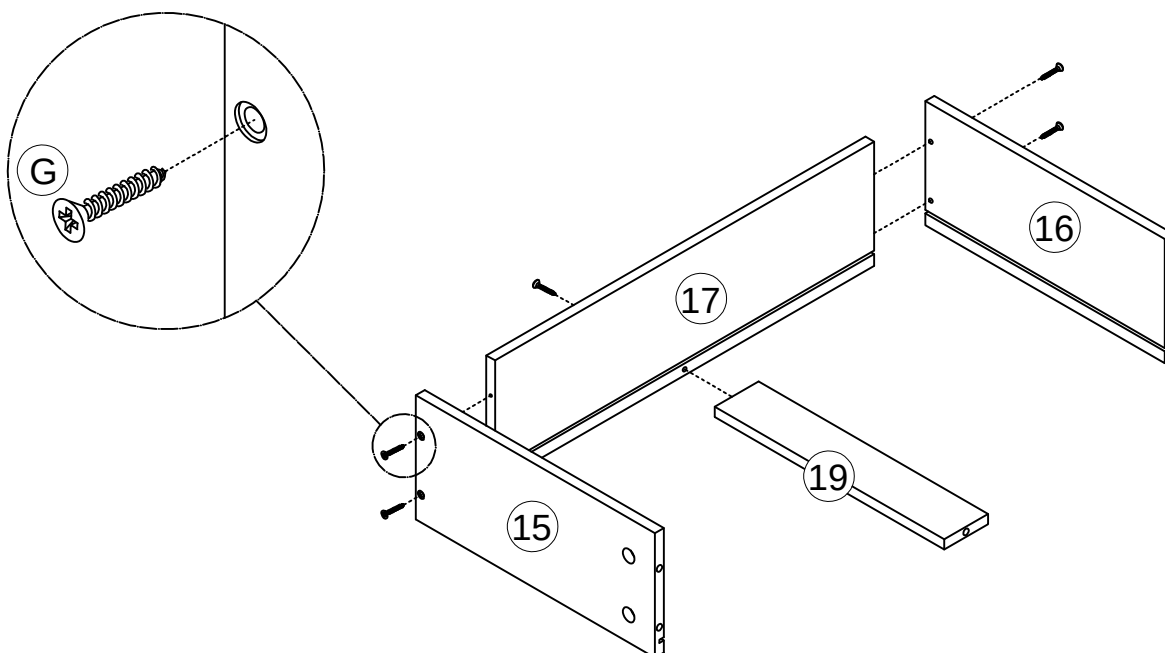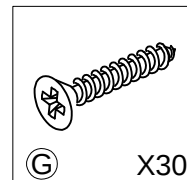



X6

 STEP 18

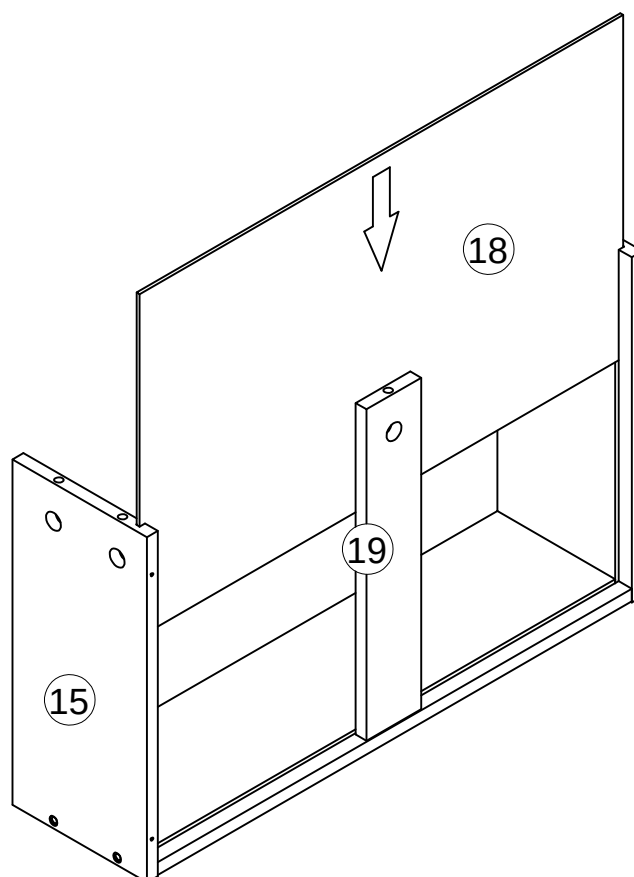



X6

  STEP 19

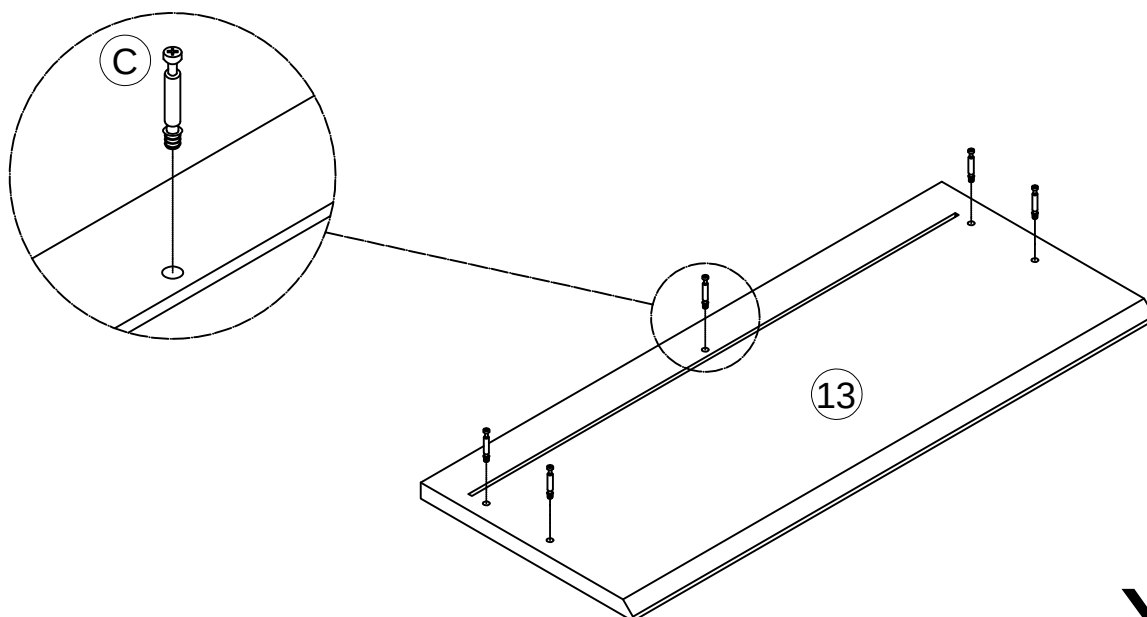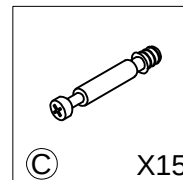





X3

  STEP 20

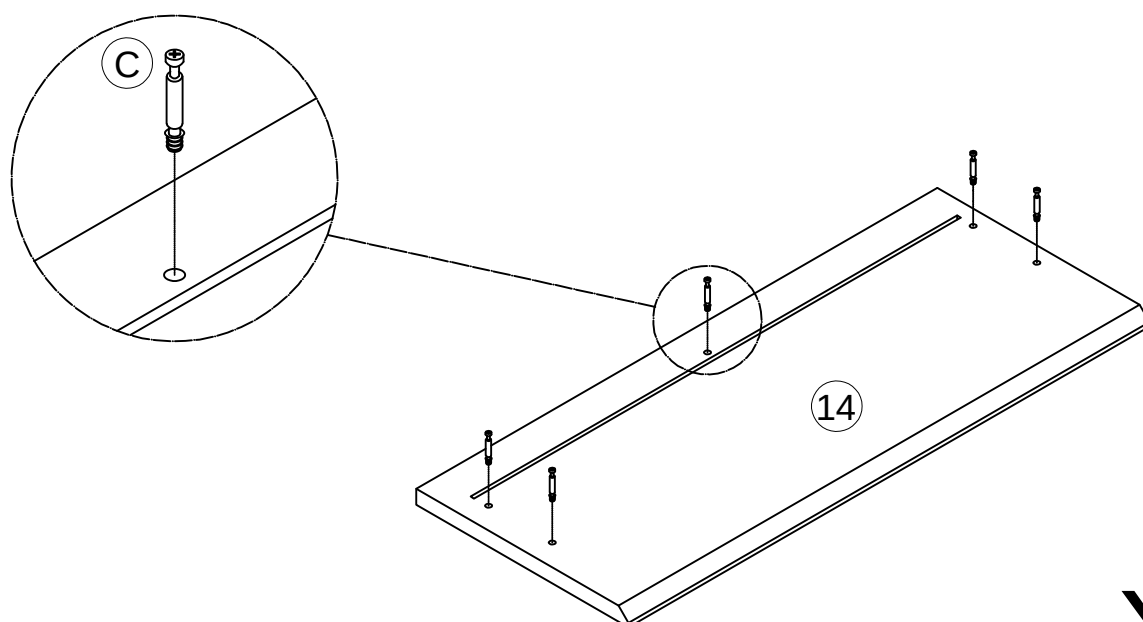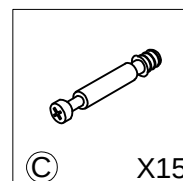




X3

    STEP 21

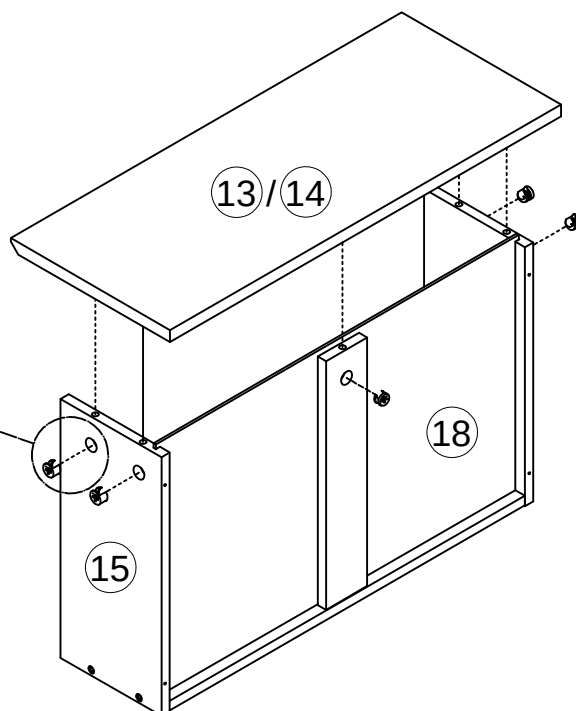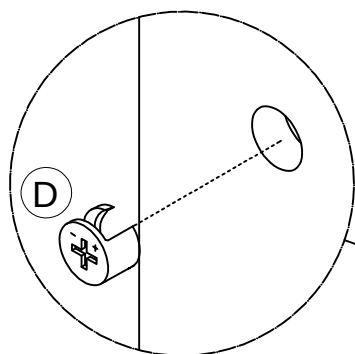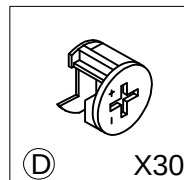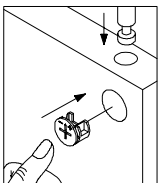


X6

   STEP 22

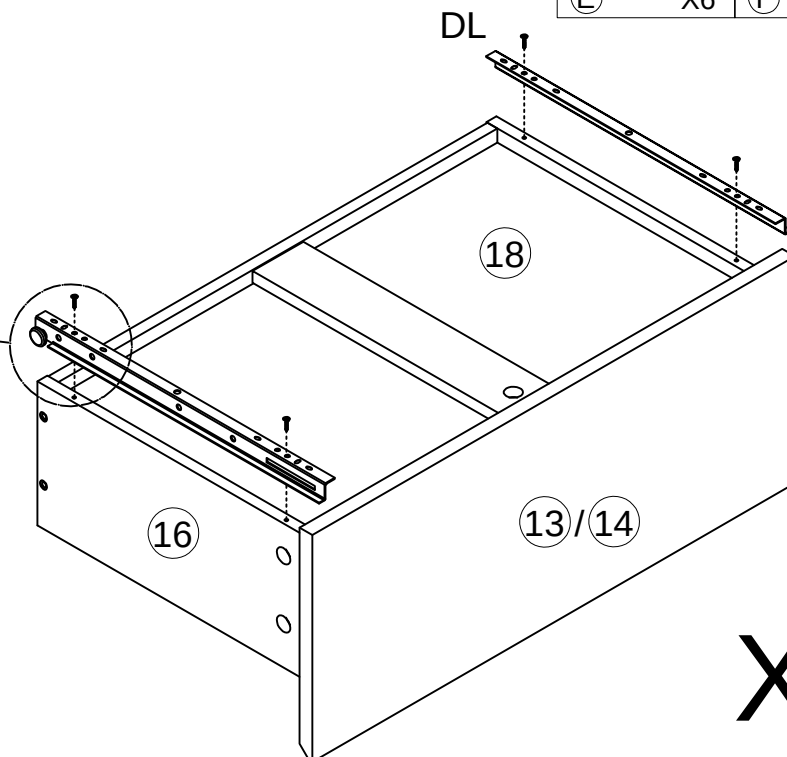
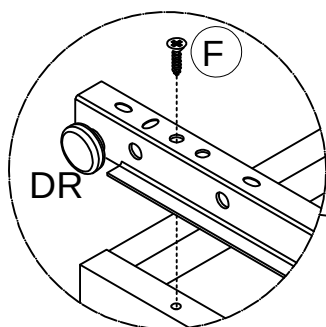
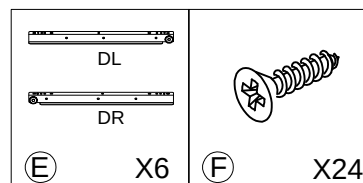


X6

 STEP 23

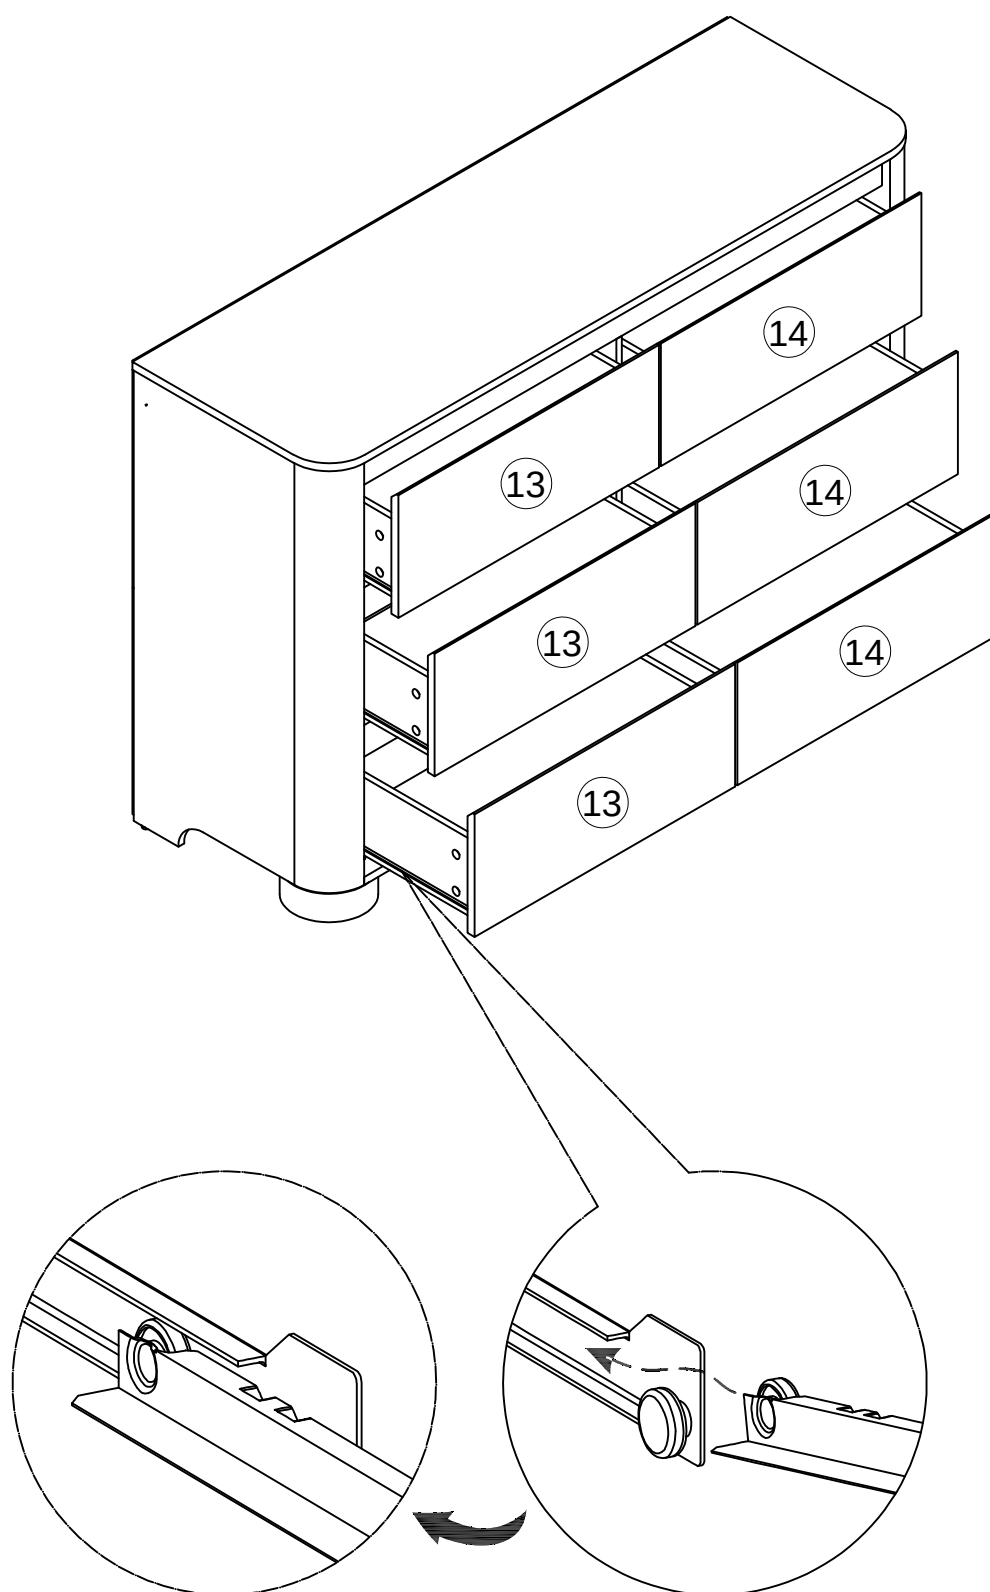

   STEP 24

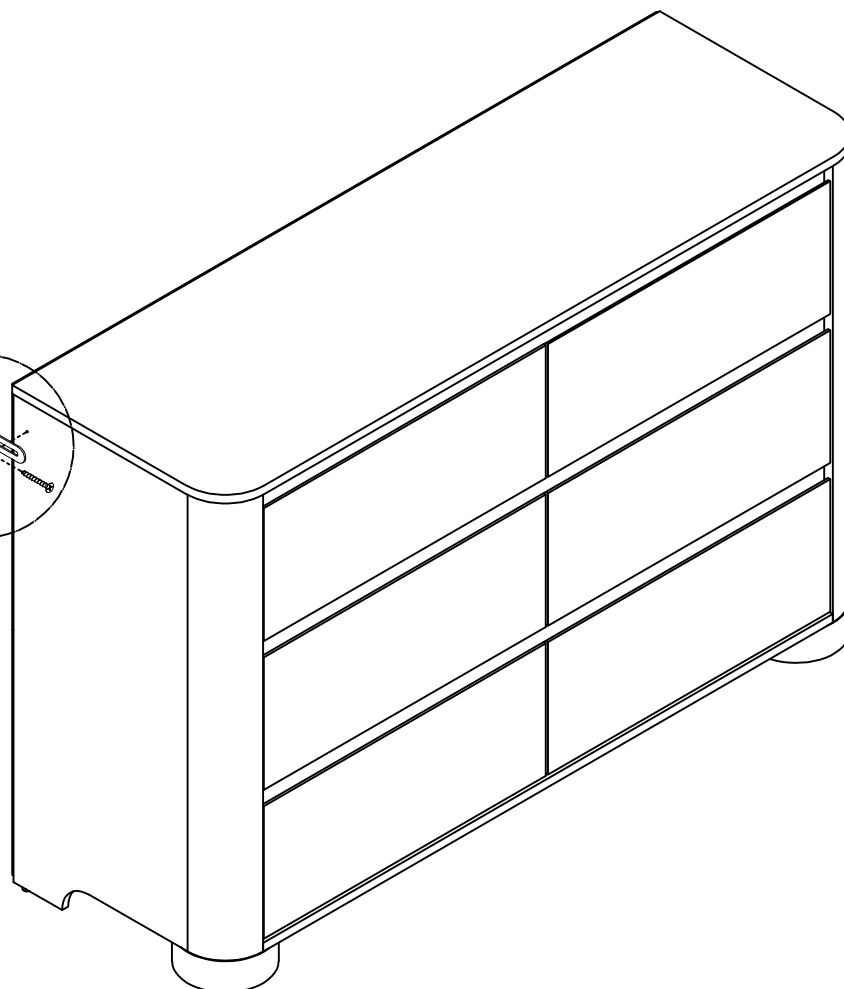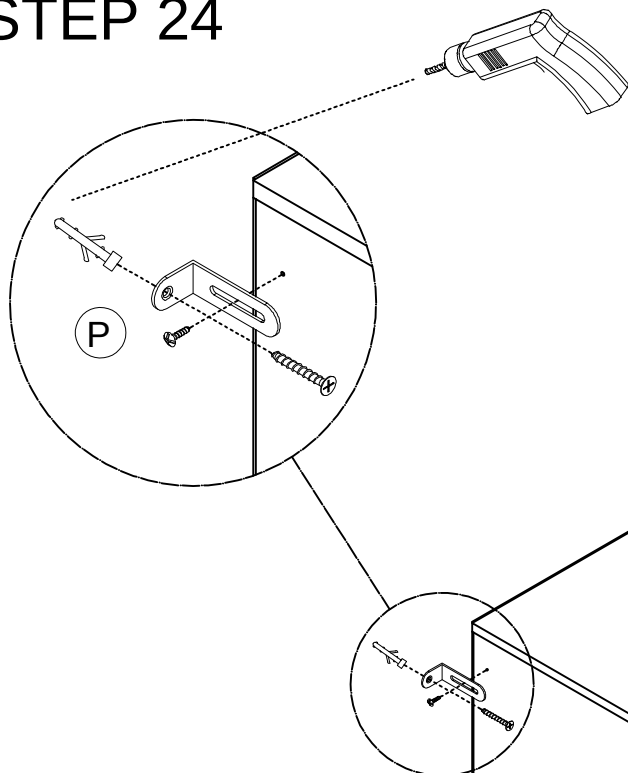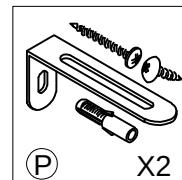

▲ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers. This is a permanent label. Do not remove!

