

Gramophone Product Manual





Insert the power cord into the port on the back of the gramophone, then turn the center knob to power on.



USB plug-and-play automatic recognition and playback

Defaults to Bluetooth mode on startup—simply enable Bluetooth on your phone to stream music. USB insertion also triggers automatic recognition and playback.



From left to right: first button for previous track, second for pause/play, third for next track, fourth for mode switch.



Long-press the pause button to scan for channels; press the function switch button until 'PHO' appears to enter vinyl record playback mode.



Remove the stylus guard



Move the tonearm onto the record

Remove the stylus guard and position the tonearm over the record to begin playback. To change tracks, manually reposition the tonearm.



To change tracks, manually reposition the tonearm.



Knob for volume adjustment

The knob adjusts volume levels; rotate counterclockwise to power off.