

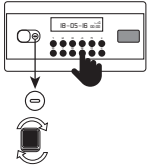 
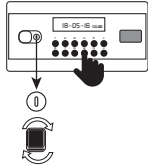 
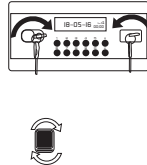 
Set the user password

To set the new user password, the door must be opened first, then press the setting button to enter the password setting state (located on the inner left side of the door when its opened). When the screen displays shows "-----", enter 1-8 digits password, press "#" to confirm. If the screen displays "Into", it indicates that the password is successfully set, then system enters the standby state.

Set the administrator password

To set the new administrator password, the door must be opened first, then press the "#" key to wake up the panel, press the "0" key twice, and then press the setting key to enter the administrator password resetting state. The screen displays "-----", enter 1-8 digits password, press "#" to confirm. If "Into" is displayed on the screen, the administrator password is successfully set, and then system enters the standby state.

Three ways to open the door

<p>Method 1 Password opening</p>  <p>when you pull out the master key at horizontal angle, password only can open the door.</p>	<p>Method 2 Master key + password opening</p>  <p>when you pull out the master key at vertical angle, you can open with master key + password.</p>	<p>Method 3 Emergency opening</p>  <p>Master key+emergency key can open the door.</p>
---	--	---

Review Door Opening Record

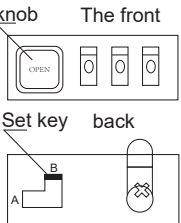
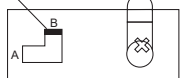
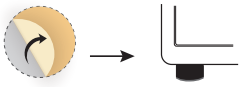
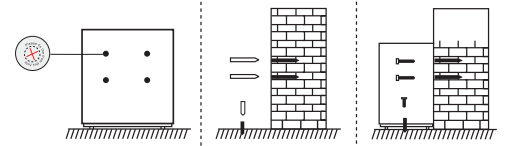
1. First, using your password to open the door, while the screen display "OPEN", press "0" and "8" button, then you can query the door opening record.
2. The record displays in three parts: Password type(such as PASS-1 user password/-PASS-2 administration password), number of opening door times(such as NO.01-NO.45), Door opening time and date. If you don't press the button in 5 second after your query, the screen will back to normal. The LCD screen can store 45 door opening records.

System Date Resetting

- (1) In the standby state, press "▲" to enter system date resetting. The corresponding parameter will blink.
- (2) Enter the corresponding number to adjust the date and time, and return to the standby state after the adjustment.
- (3) During the setting, press the "▲" key to go back one space and re-enter.
- (4) During the setting state, if no key is pressed within 10S, the state will be exited (the modified value is invalid). System will return to standby.

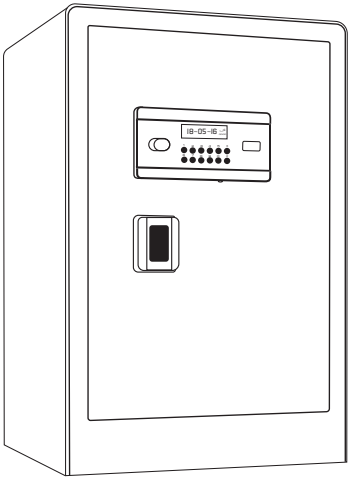
Dual Alarm System

- ① After 3 consecutive time of wrong code, your safe will activate the alarm system, the alarm will sound, then enter the correct password and the alarm will be cancelled.
 - ② In the standby state press "0", the screen displays "Bell on" and enters the alarm state. In the alarm status, the safe will alarm if encounters vibration or violent hit)
- ! Note:** When the door is opened, the alarm is turned off and needs to be turned on again.

<p>knob The front</p>  <p>Set key back</p> 	<p>Operation method of internal door password lock</p> <ol style="list-style-type: none">1. Initial password is "000".2. When adjusting password, first turn to the initial password "000" and turn clockwise to turn the knob to open the inner door. Adjust the password setting key on the back of the inner door. <p>Adjust "A" to "B" (as shown in the figure below), dial the password you need on the password disk, and then adjust the password setting key to "A". After setting, the new password is set successfully, and the initial password no longer works.</p> <p>Note: please remember the password, so as not to bring you unnecessary trouble.</p>
<p>How to install foot mat?</p>  <ol style="list-style-type: none">1. Remove the stickers of the four foot mats2. Install the four foot mats on the bottom of the safe	<p>How to mount the safe?</p>  <ol style="list-style-type: none">1. Place the safe at the installation place. Mark the drilling spots on the wall from the inside pre-drilled holes, then remove safe and drill the holes.2. Put the expansion bolts into the drilled holes, take the expansion bolt out of the sleeves, then place the safe and align the pre-drilled holes with drilled holes, and insert the expansion bolts into its sleeves from inside of the safe. <p>(This safe has six mounting holes, four are on the back of the safe and the others are on the bottom of the safe)</p>

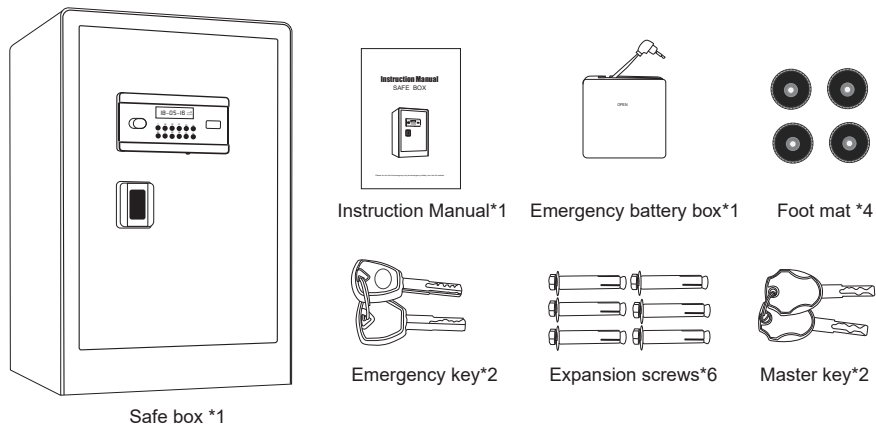 
Instruction Manual

SAFE BOX

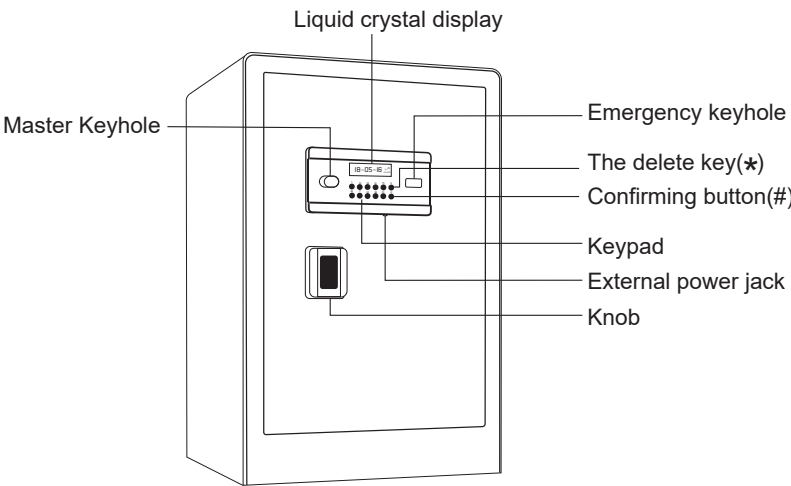 


Please do not lock the emergency key and emergency battery box into the cabinet.

Parts List



Component Description



Warnings

- 1. Do not lock the emergency key or emergency battery box into the cabinet.
- 2. If the safe box is not used for a long time, the battery should be removed to prevent leakage of liquid from damaging the electronic system.
- 3. Purchase 4 AA batteries in advance, this safe does not contain batteries.
- 4. System initial user password is "1234", administrator password is "123456", both need to be modified.

Power and voltage indication

- (1) Power supply: use four 1.5V batteries. When the voltage is full, the solid battery symbol is displayed. When the voltage is undervoltage, it displays a hollow battery symbol. The screen displays "LO-BATT" . It reminds user to replace the battery.
- (2) Undervoltage reminder: 4.5±0.3V quiescent current: <20uA Maximum current: <350mA

First Opening

Note: Please use the master key + emergency key to open the safe for the first time. The operation is as follows:

1. Left slide the keyhole cover to expose the master keyhole.Press the right edge of the emergency keyhole cover.		4. Turn the knob clockwise to open the door for the first time.	
2. Insert the master key into the keyhole, turn clockwise to the limit.		5. Remove the internal battery case cover and install 4 AA batteries at the right polarity. The system will be powered on.	
3. Insert the emergency key into the emergency keyhole Turn counterclockwise to the limit.		6. Weak current or power off. There are two ways of emergency opening. 1) Adopting emergency key + master key. 2) Employing emergency battery box (Install four AA alkaline batteries, insert external power jack, the system will be energized). Note: Do not use rechargeable batteries of other brands batteries.	

Initialization

System initial user password is "1234", administrator password is "123456", date: 00-01- 01, Saturday, 00 hours 00 minutes 00 seconds.

Door Opening Instruction

- (1) Press "#" key to start, enter a password of 1 to 8 digits, and press the "#" key to confirm. (After entering the 8 digit password, system automatically confirms)

<p>(1-1) If the password is correct, the screendisplays "OPEN", turn the knob to open the door.</p>	<p>(1-2) If the password is not correct, the screen will display "Error", and then display dash line "-----" again. Then re-enter password.</p>	<p>(1-3) If the password is entered incorrectly for 3 consecutive times, the screen will display the alarm sign and alarm for 1 minute. During the alarm, if the correct password is entered, the alarm will be cancelled and the door will be opened.</p>
---	---	--

- (2) Clear function: When inputting the password, every time user press the "★" key, it will clear the last entered number.
- (3) Hidden code function: Before entering the password, press the "★" key to switch to the hidden code function(Password will not show when entering).