



SAFETY WARNING:

- Never leave the child unattended.
- Always use the restraint system.
- Falling hazard: Prevent your child from climbing on the product.
- Do not use the product unless all components are correctly fitted and adjusted.
- Be aware of the risk of opening fires and other sources of strong heat in the vicinity of the product.
- Be aware of the risk of tilting when your child can push its feet against a table or any other structure.
- Do not carry backrest or adjust height when baby is inside of chair.
- Do not to use the product until the child can sit up unaided.
- Do not to use the product if any part is broken, torn or missing.
- Any additional harness other than the one provided by the manufacturer, shall comply with EN 13210.
- Product is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.

MAINTENANCE:

1. Check the components of each part (screw / seat belt bayonet) before use under fixed and complete. For the safety of your baby, regular inspections and repairs weekly.
If there is any abnormality, please replace it immediately or stop using.
2. Avoid long-term storage in wet or high temperature environment; otherwise it will easily lead to damage and aging of parts, affecting product life or potential danger.
3. Cleaning the cushion: Unfasten the safety belt. Wash it with warm water and dry it to avoid exposure under high temperature.
4. Do not use bleach and strong acid/base liquid for cleaning the chair frame. Avoid contact with water in hardware parts, and corrosion will affect the service life of the product.
5. Regularly check the various parts of the baby high chair weekly, contact and repair with supplier immediately if you have any questions.
6. Avoid prolonged exposure under hot environment; otherwise it will promote the aging and functional decline of parts, fabric fading and other problems.