 




INSTALLATION

Product Manual

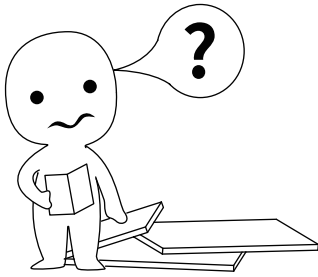



IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

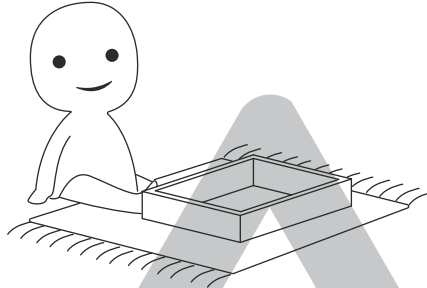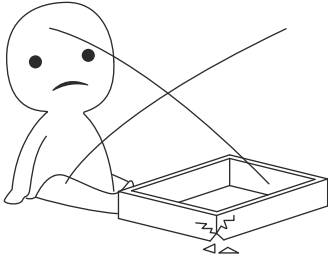





AVOID SCRATCHES!

  In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

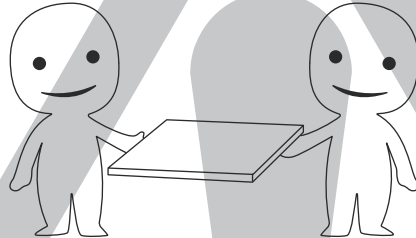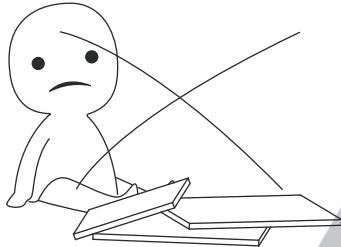

IMPROVE EFFICIENCY !

    Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

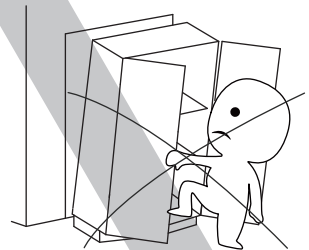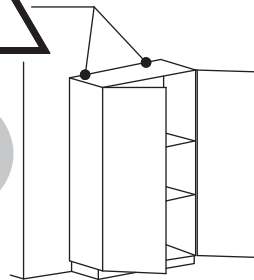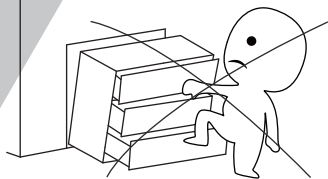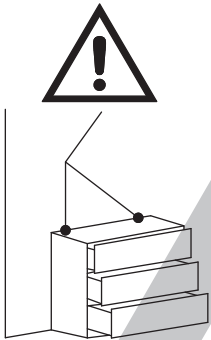

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

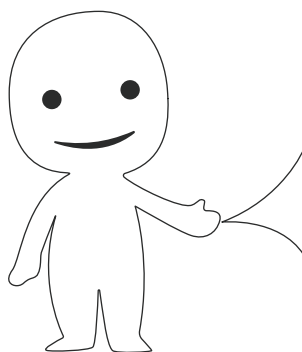


Please prepare the following tools

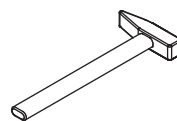   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 64



CRB1595A

 B x 50




CRA0635B

C x 38




CRF0630A

 D x 50



Ø 5 x 40mm

 E x 12




CRF0840A

F x 14



 G x 6




H x 54




CRD3514A

 
J x 1

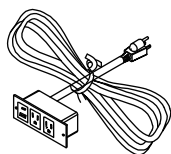

K x 6

 

L x 14

 


CRD0314A


M x 6



 N x 1



P x 8

 


Q x 10




R x 31



 S x 14



Ø 6 x 48mm

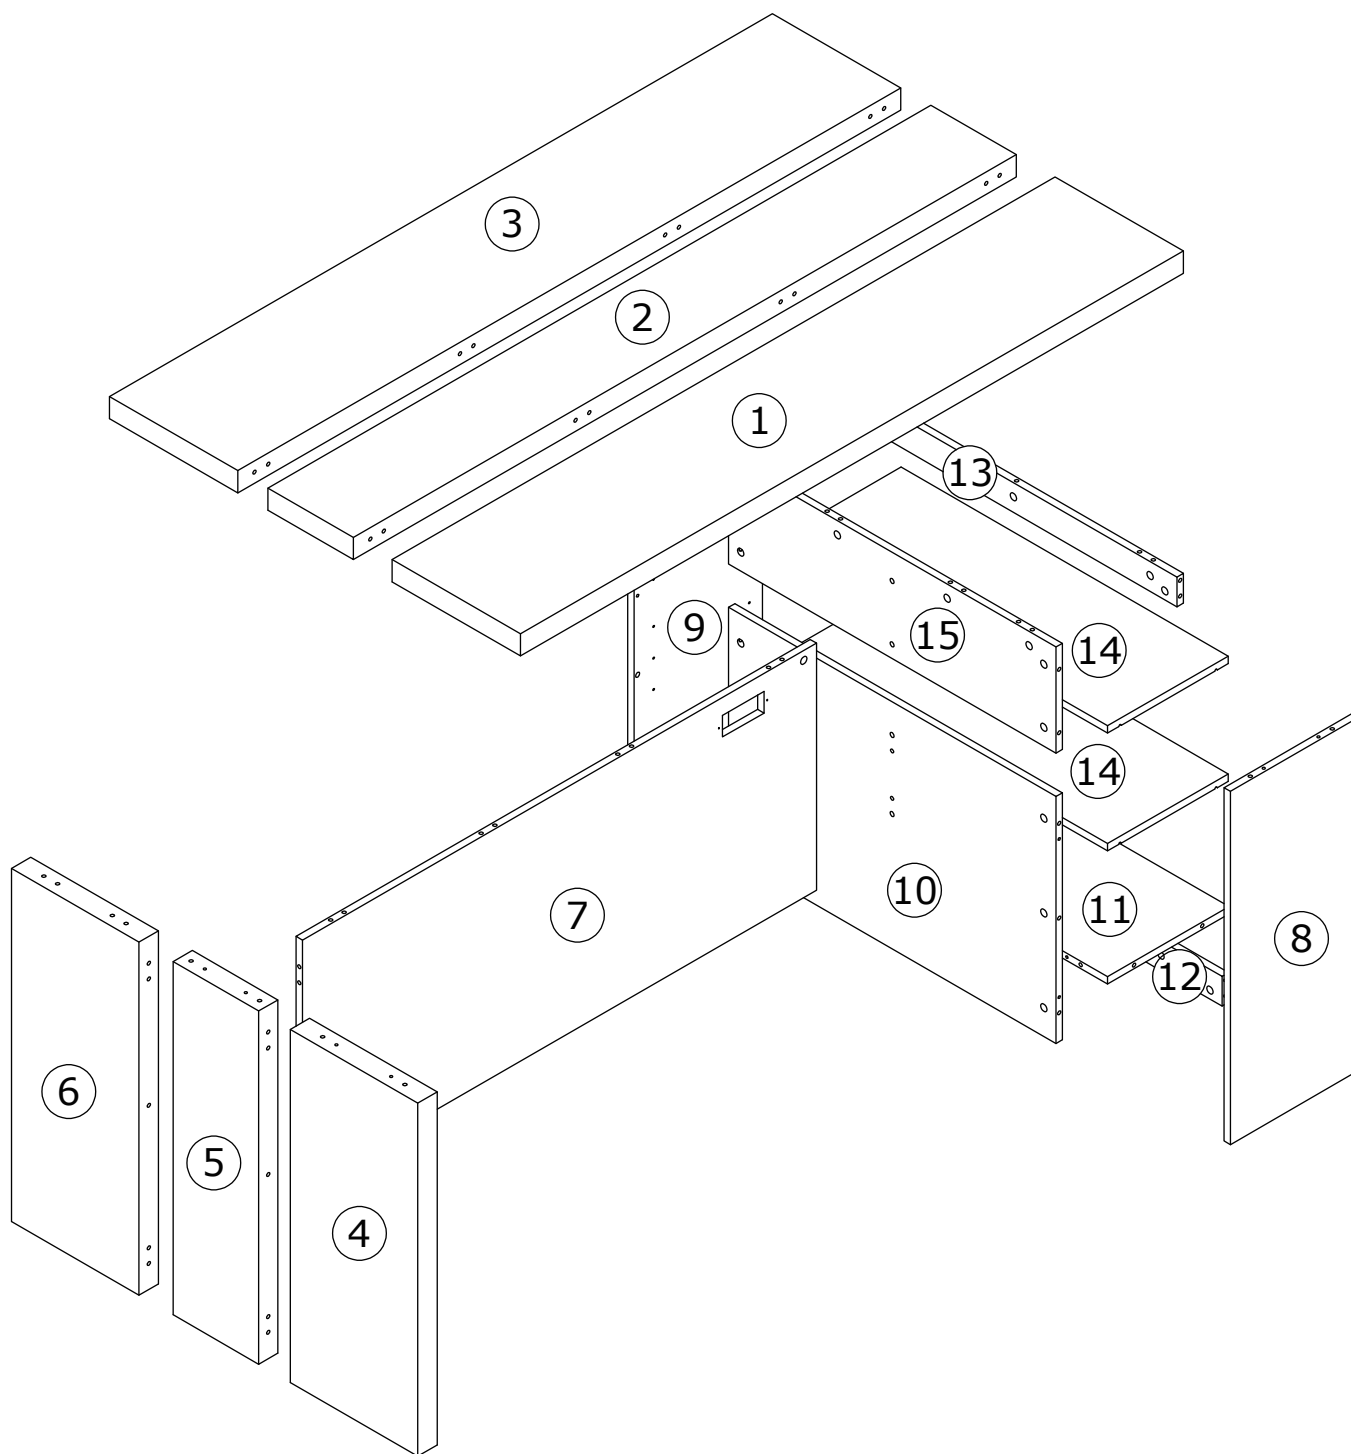 


⚠ WARNING










Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

        *This is a permanent label.
Do not remove!*

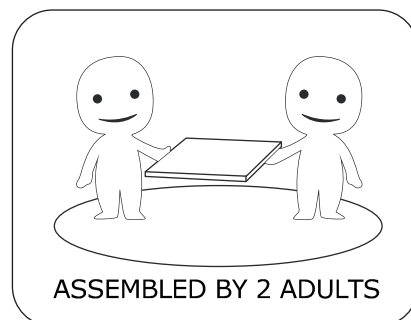

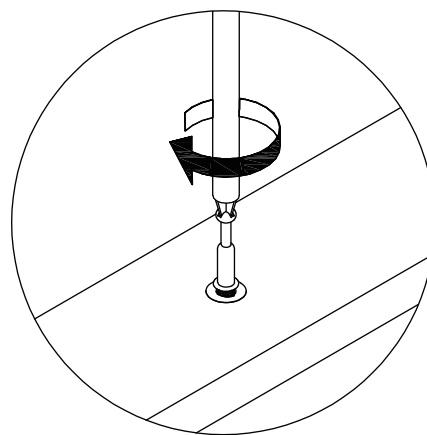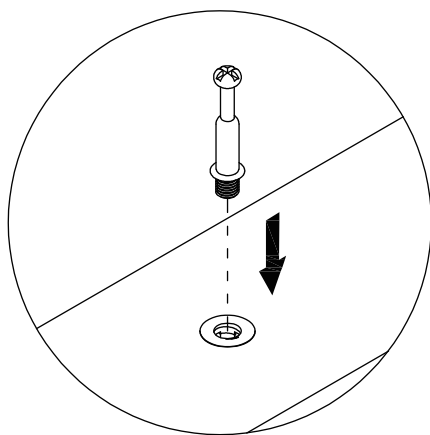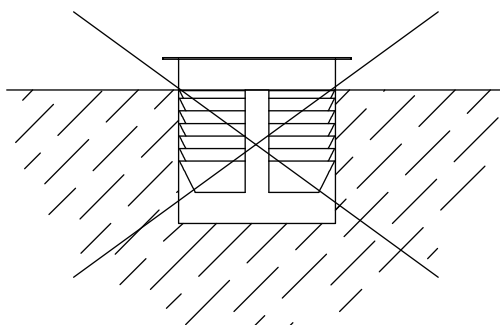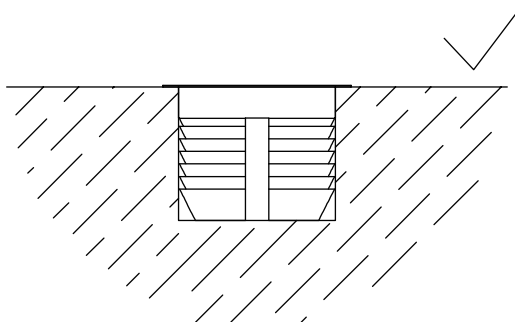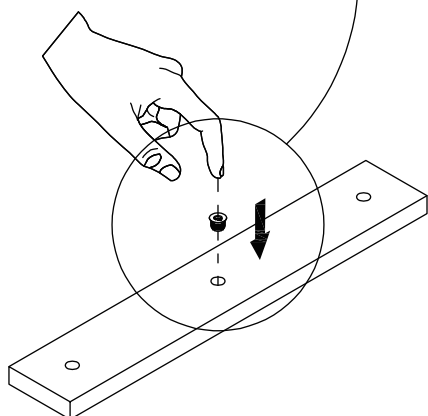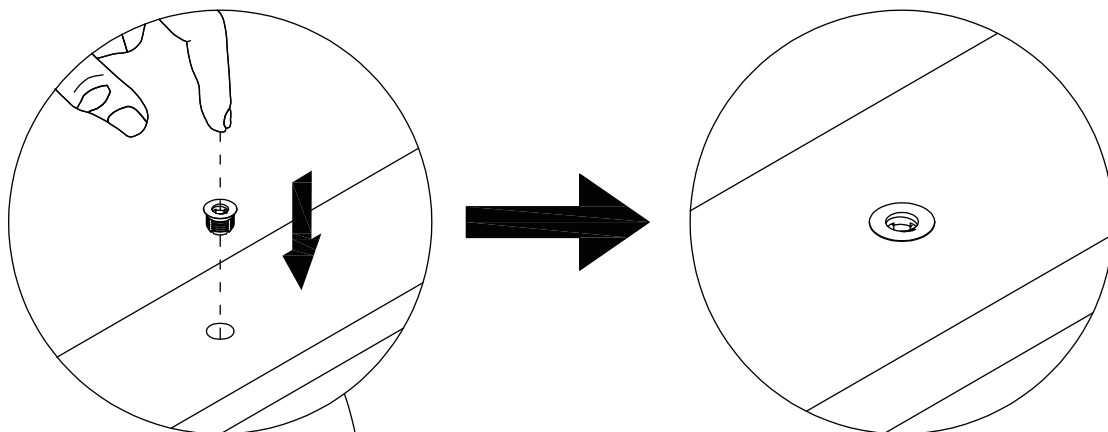


1








F x 14



 S x 14



Ø 6 x 48mm

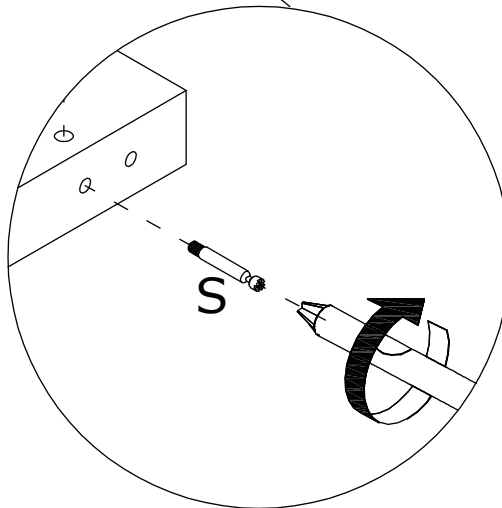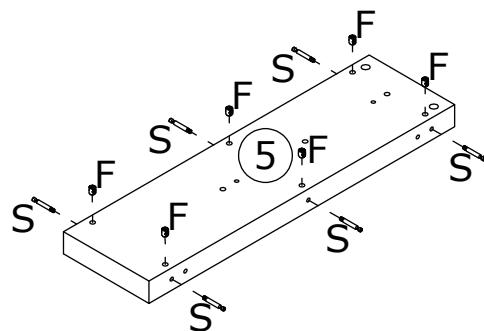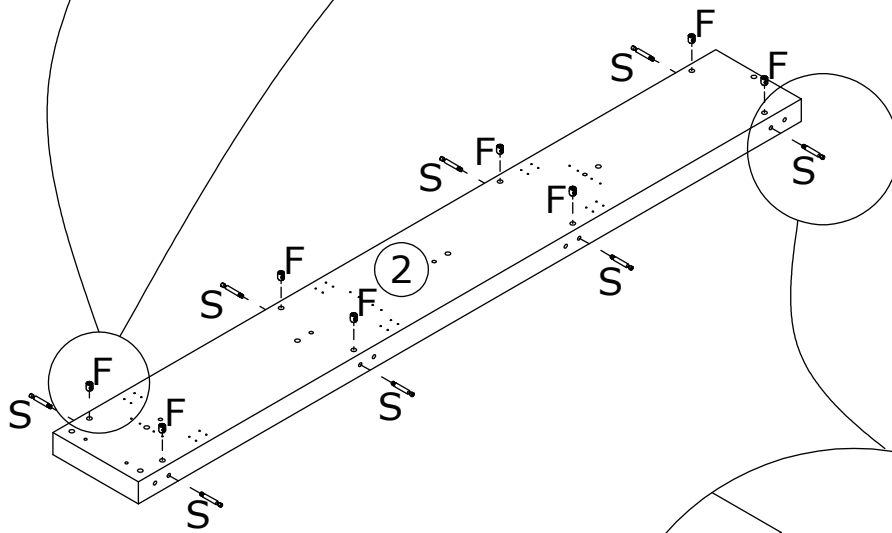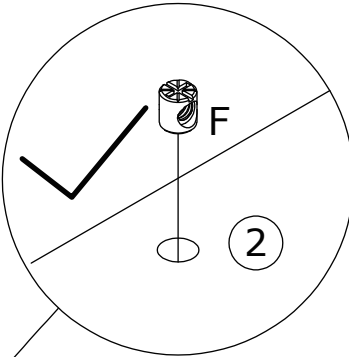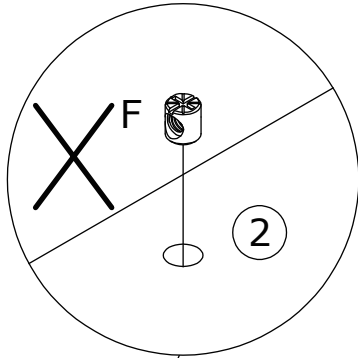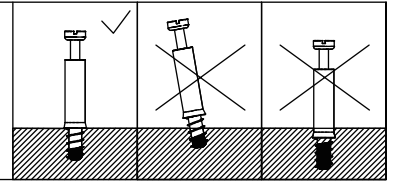       

First, install nut (F) onto panels 2 and 5, then screw rod (S) into panels 2 and 5.

2

A x 14




CRB1595A









E x 12





 
CRF0840A



       
 
Connect panels 1 and 3 to panel 2, panels 4 and 6 to panel 5 using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

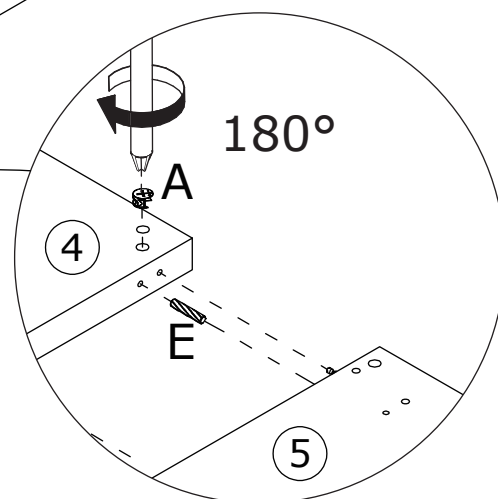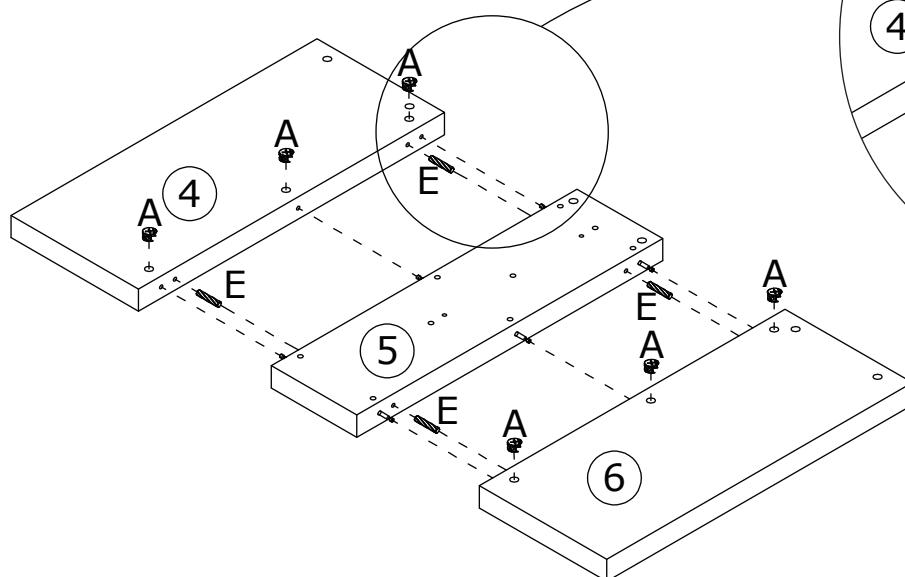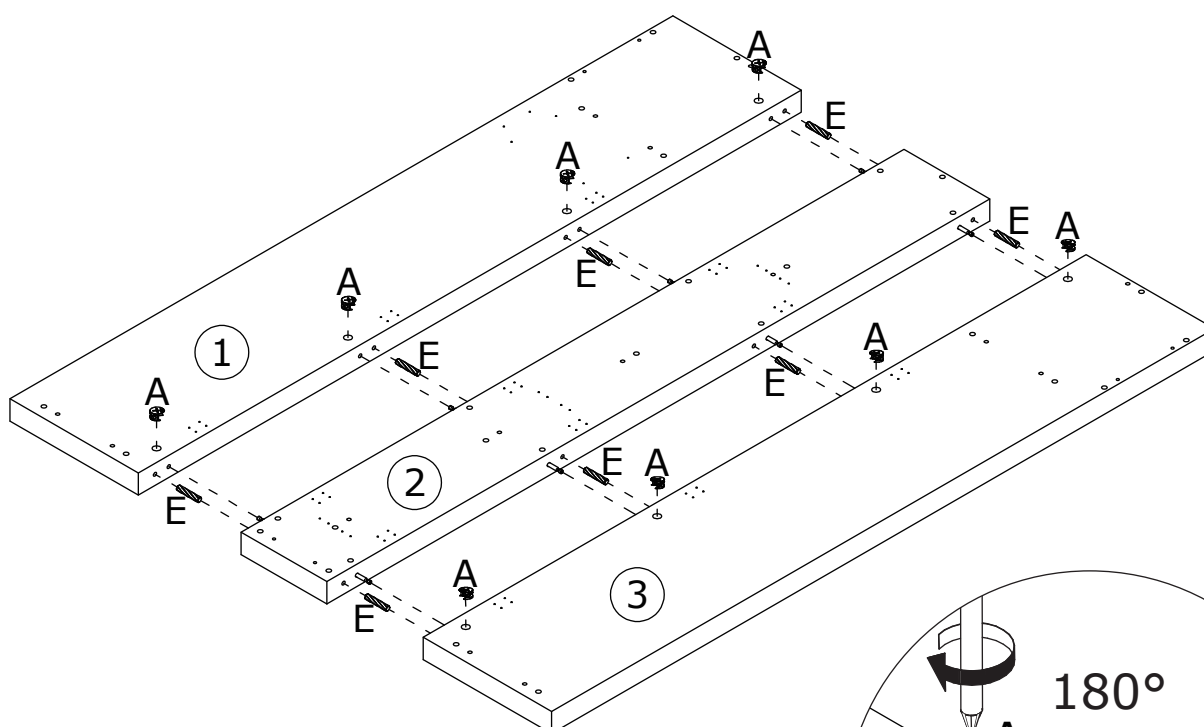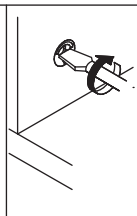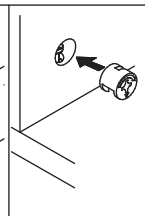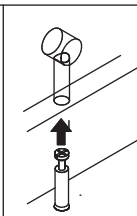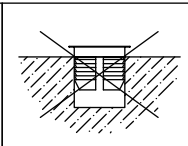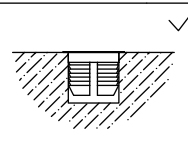

3

 
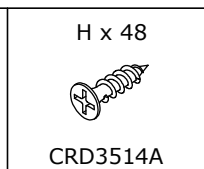 
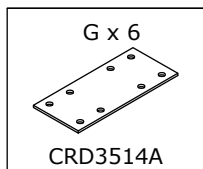 


  Secure iron plate (G) to panels 1, 2, and 3 using screw (H).

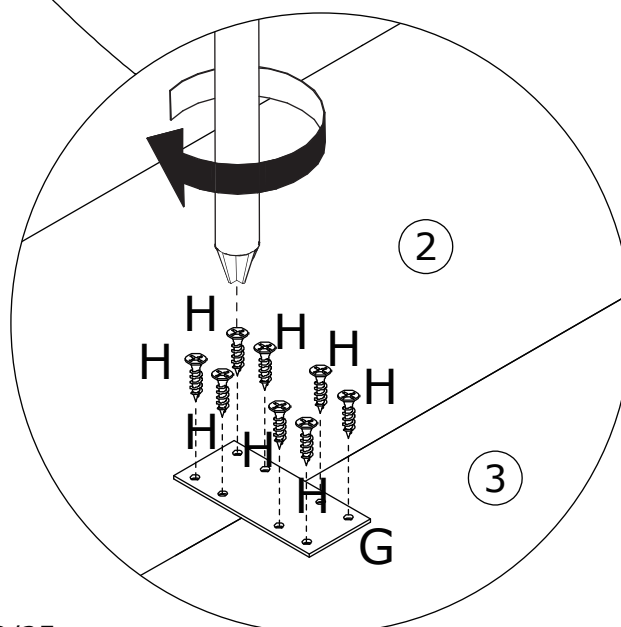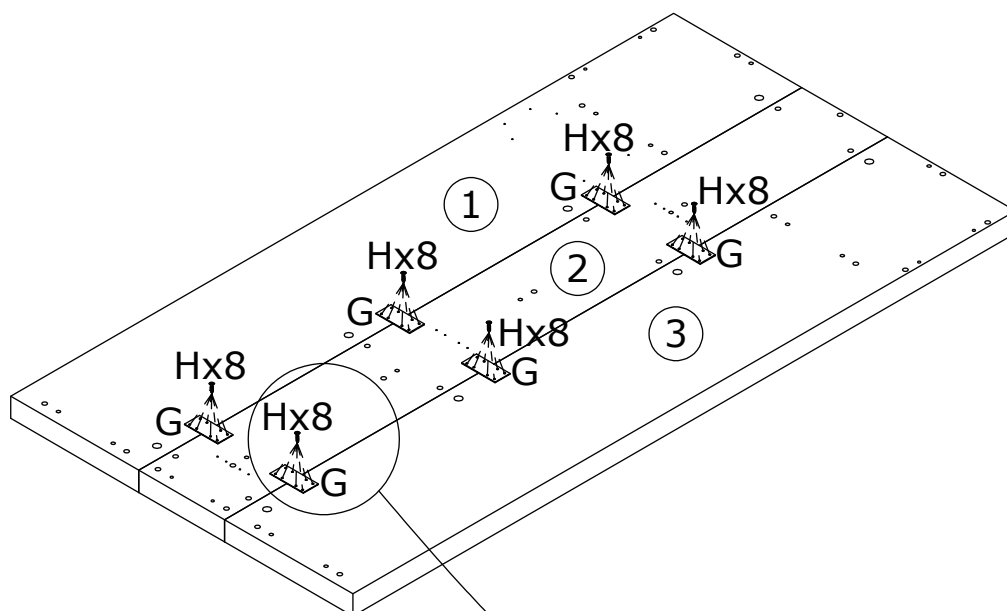


4

   D x 24




 Install plug (D) onto panels 1, 2, 3, and 5


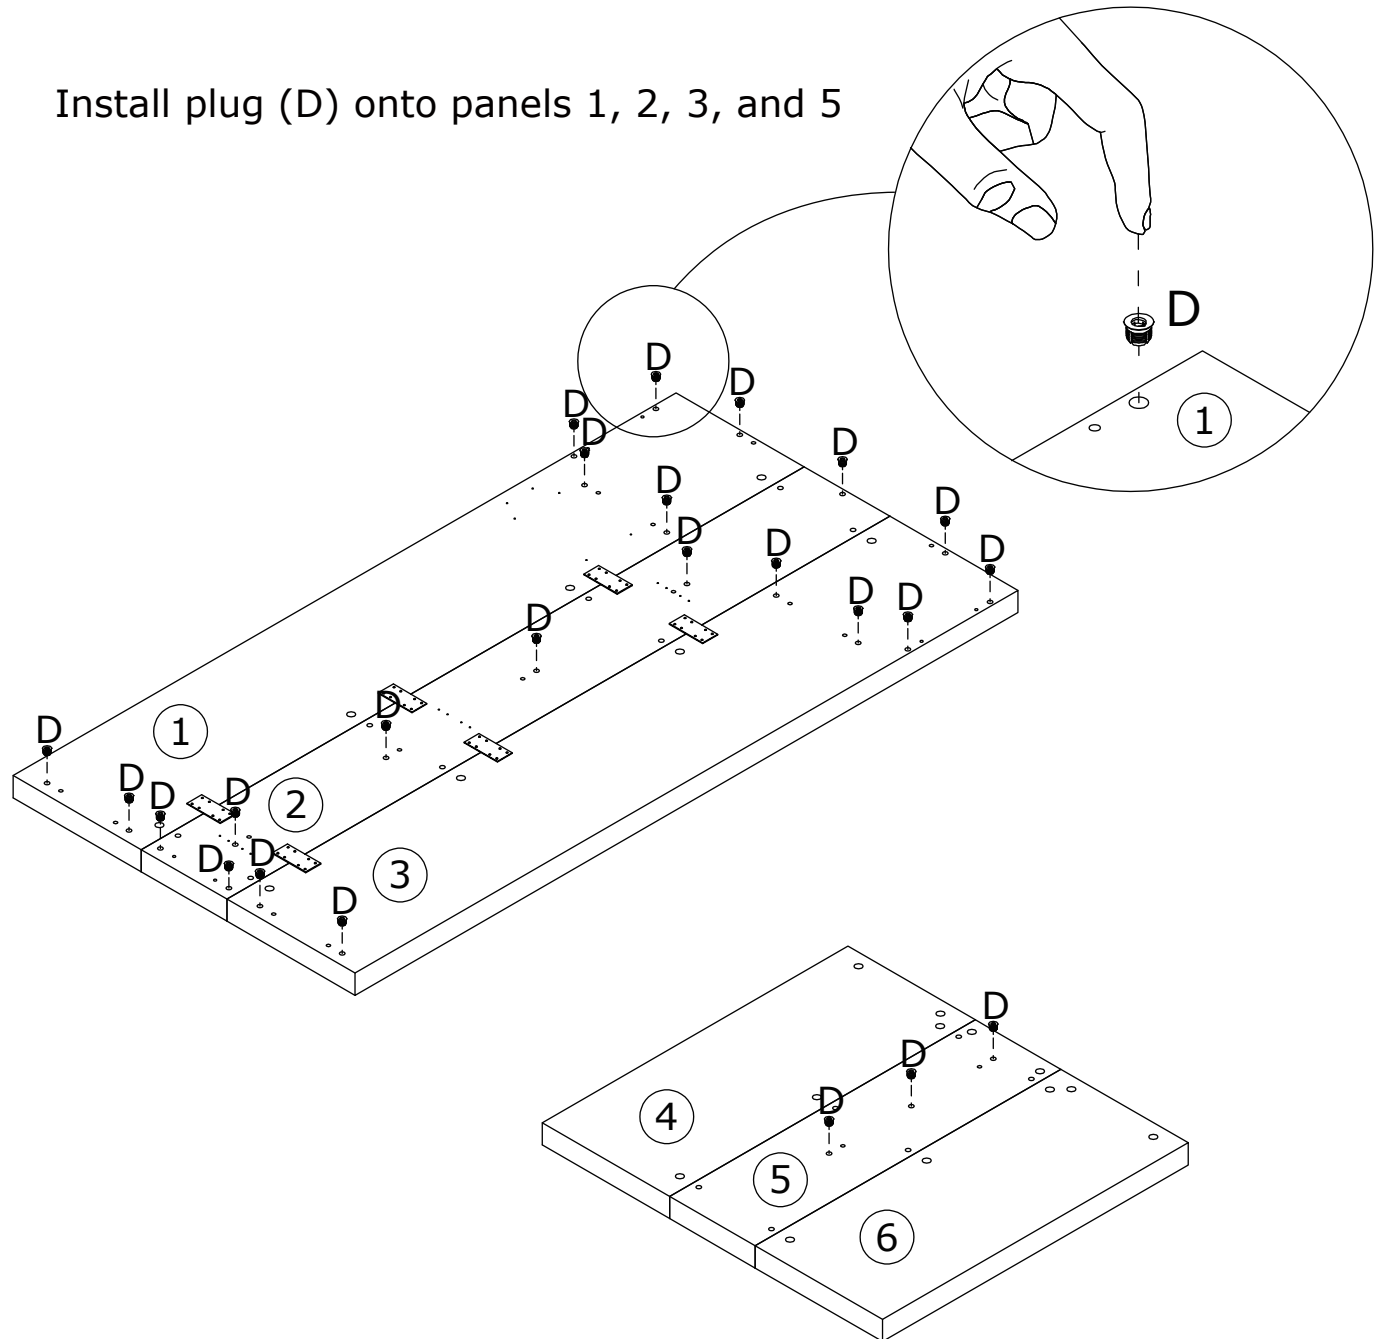


5

 
B x 24



CRA0635B



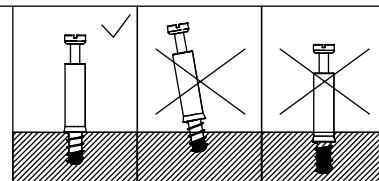 
 


 Screw eccentric rod (B) into panels 1, 2, 3, and 5.

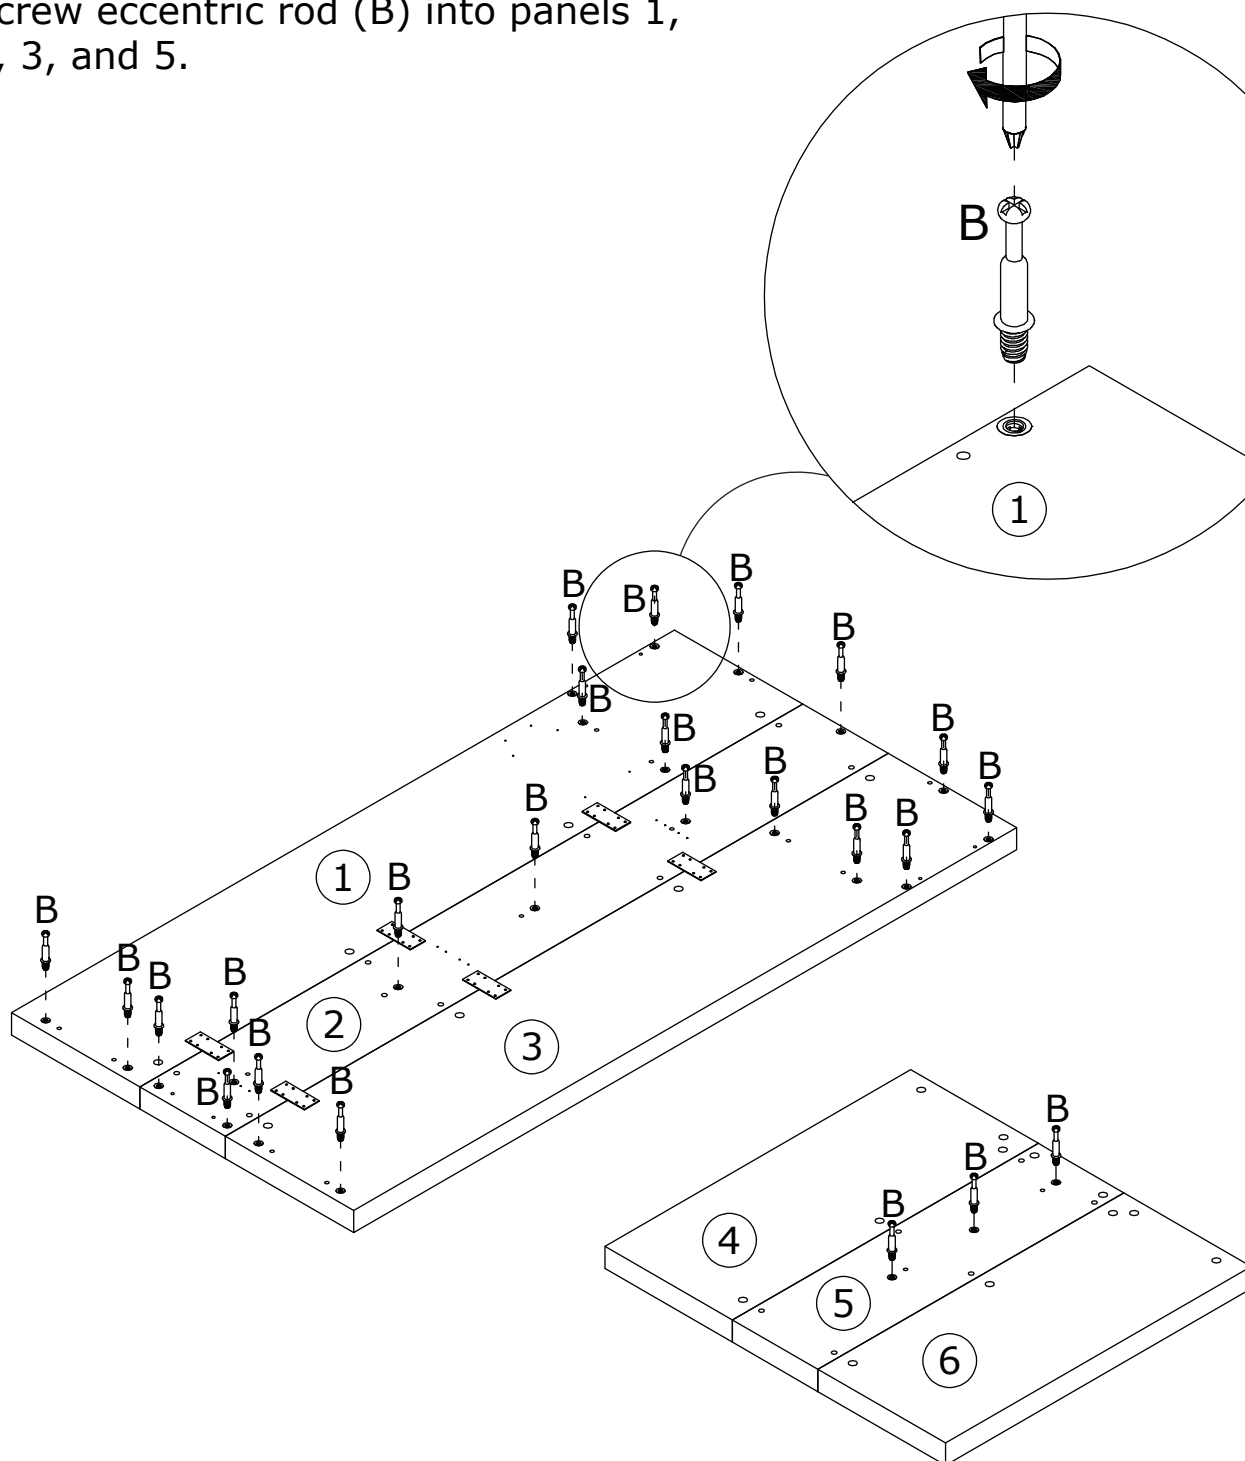




6

    D x 24

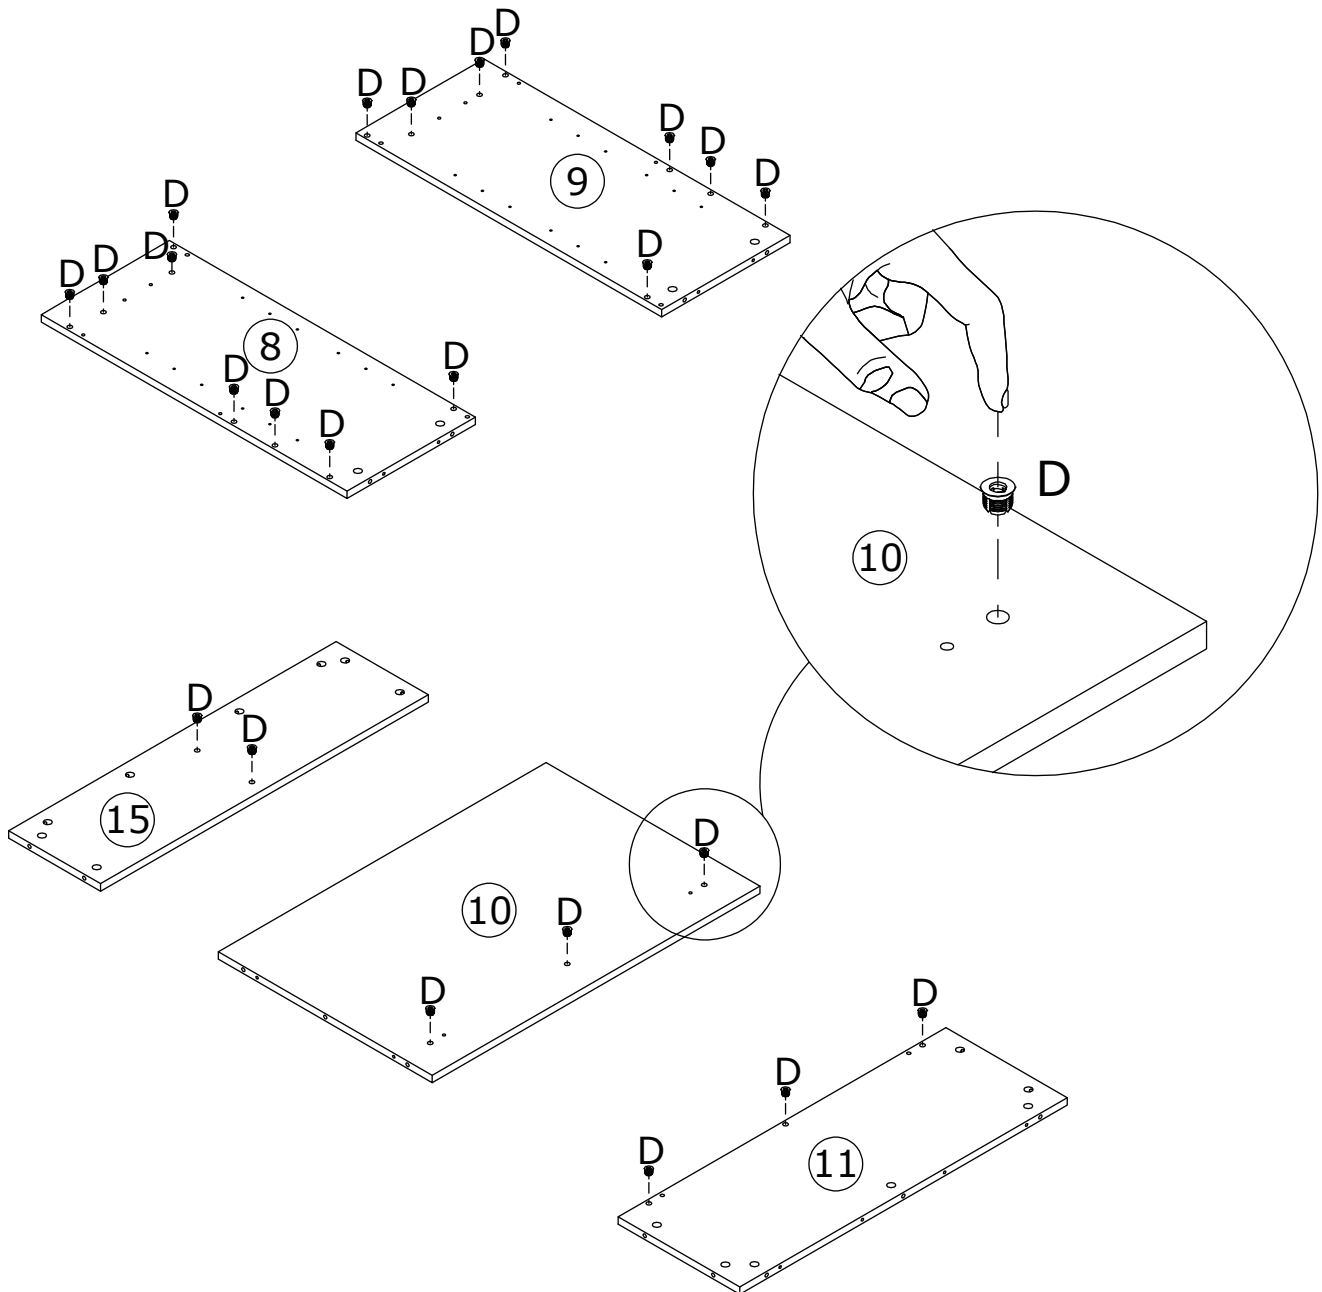


Install plug (D) onto panels 8, 9, 10, 11, and 15.

   7

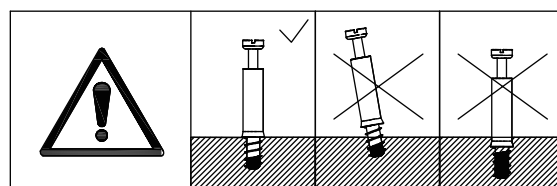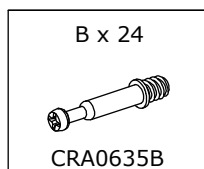

 Screw eccentric rod (B) into panels 8, 9, 10, 11, and 15.

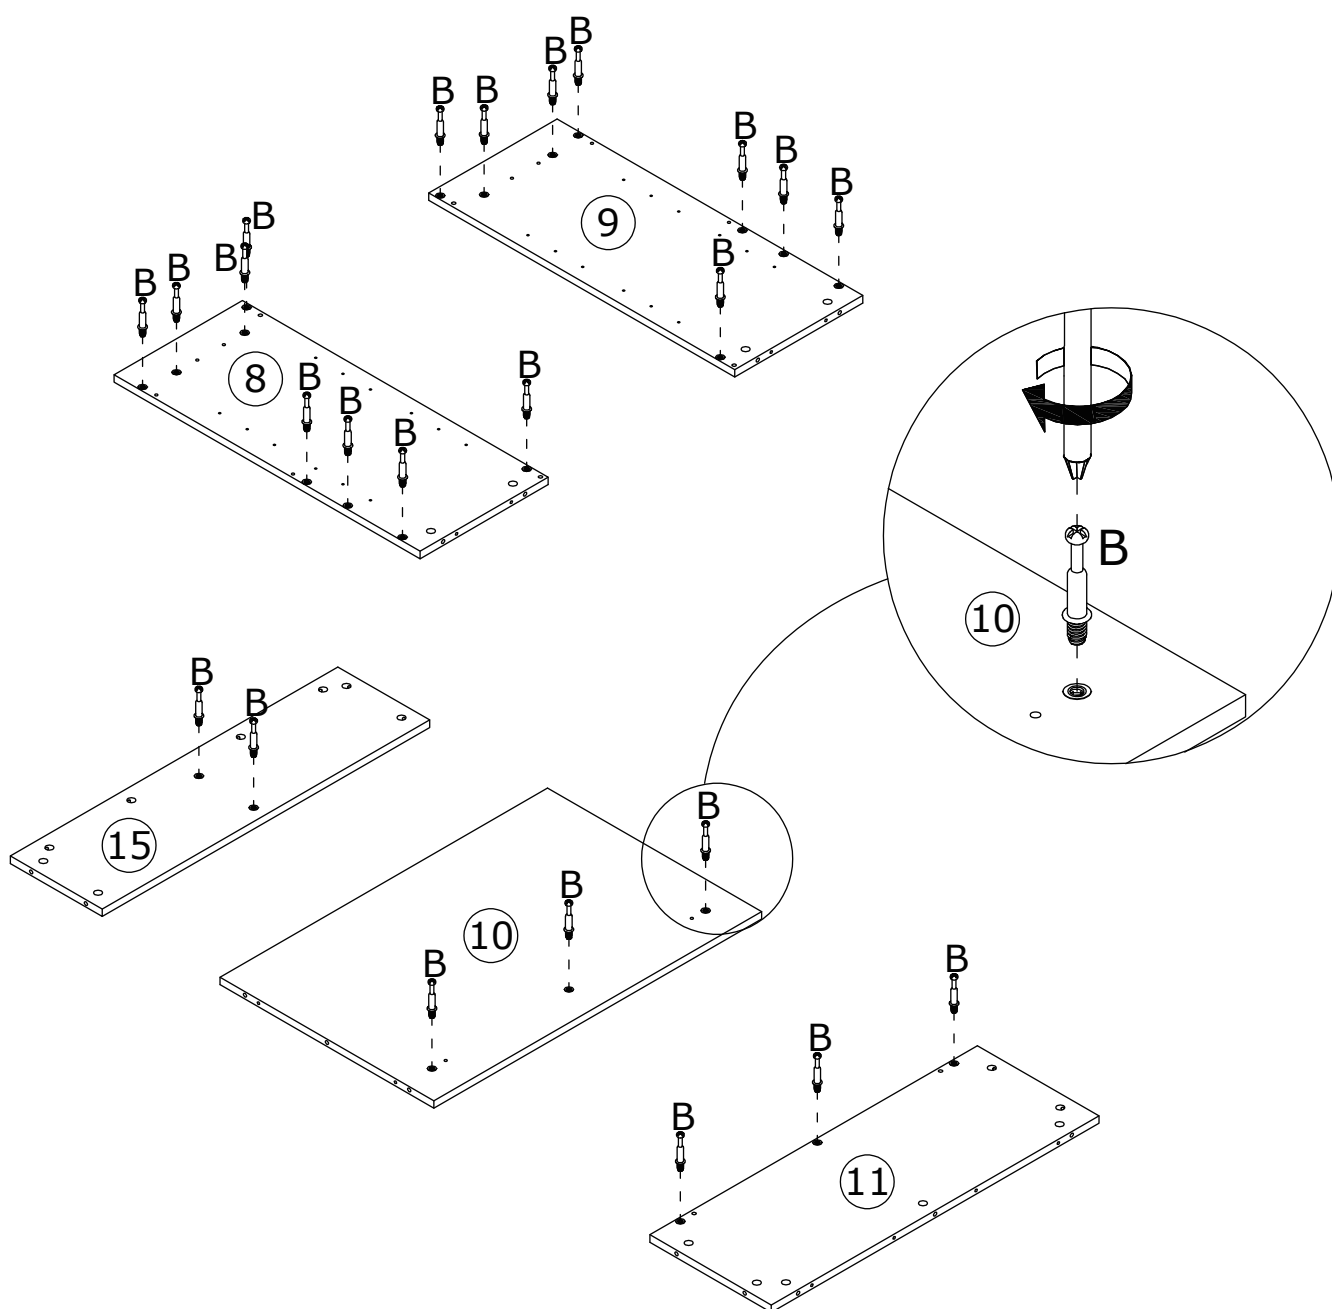

8

A x 3




CRB1595A



C x 2



 CRF0630A



  Connect panel 12 to panel 11 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

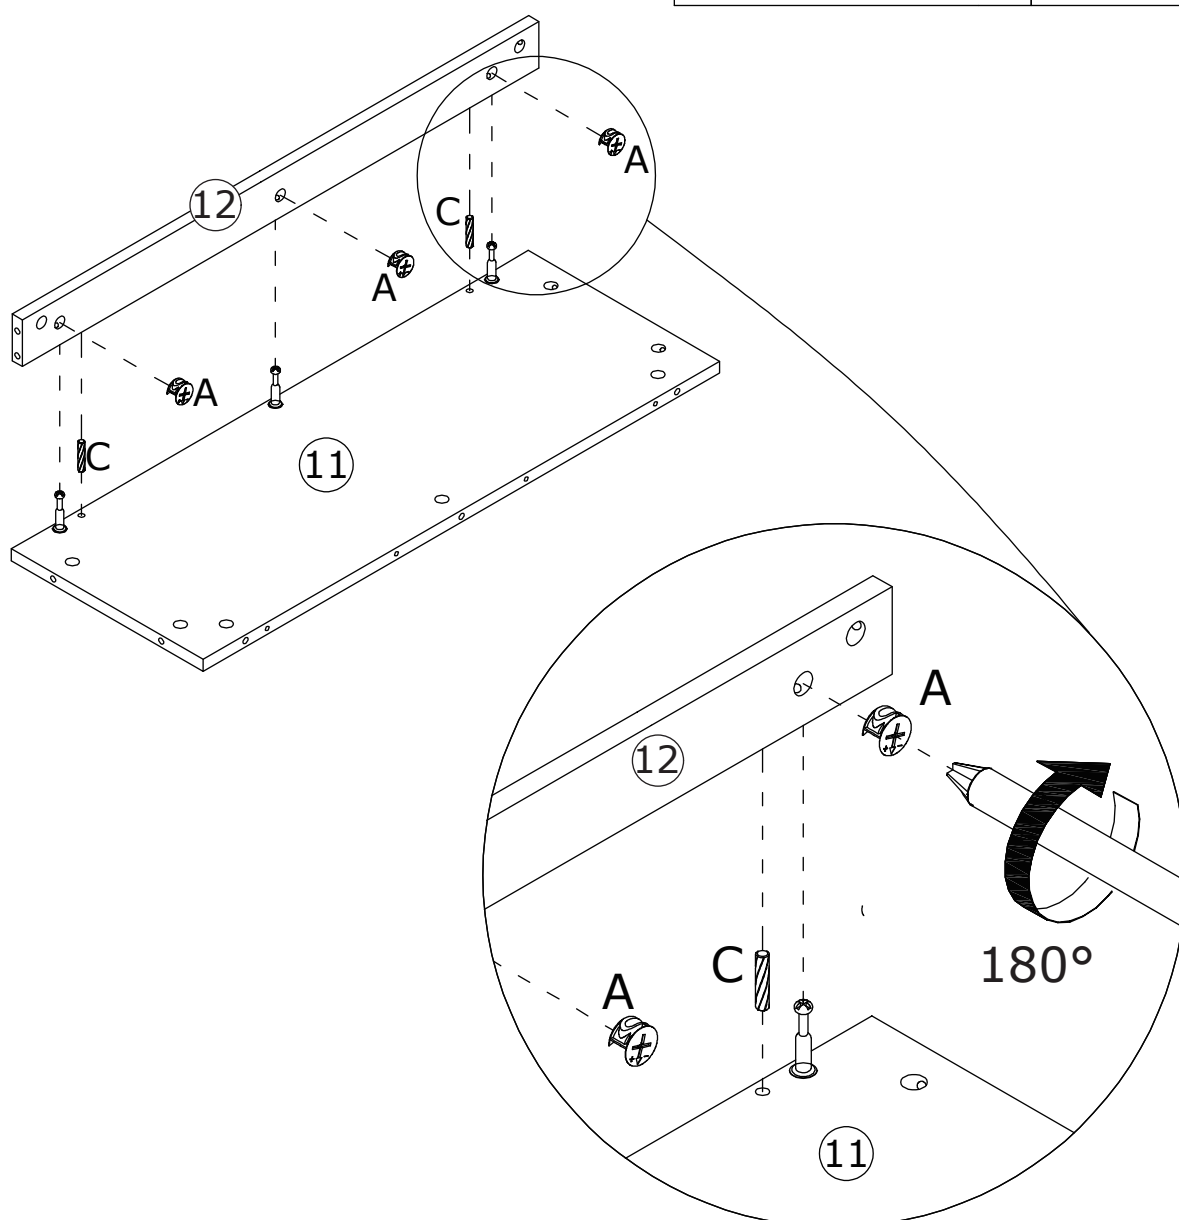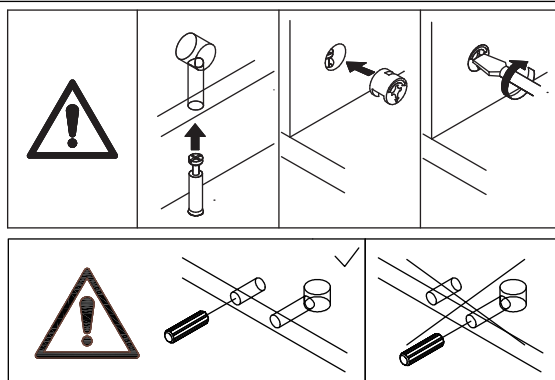

9

A x 3




CRB1595A



C x 2



 CRF0630A



  Connect panel 11 to panel 10 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

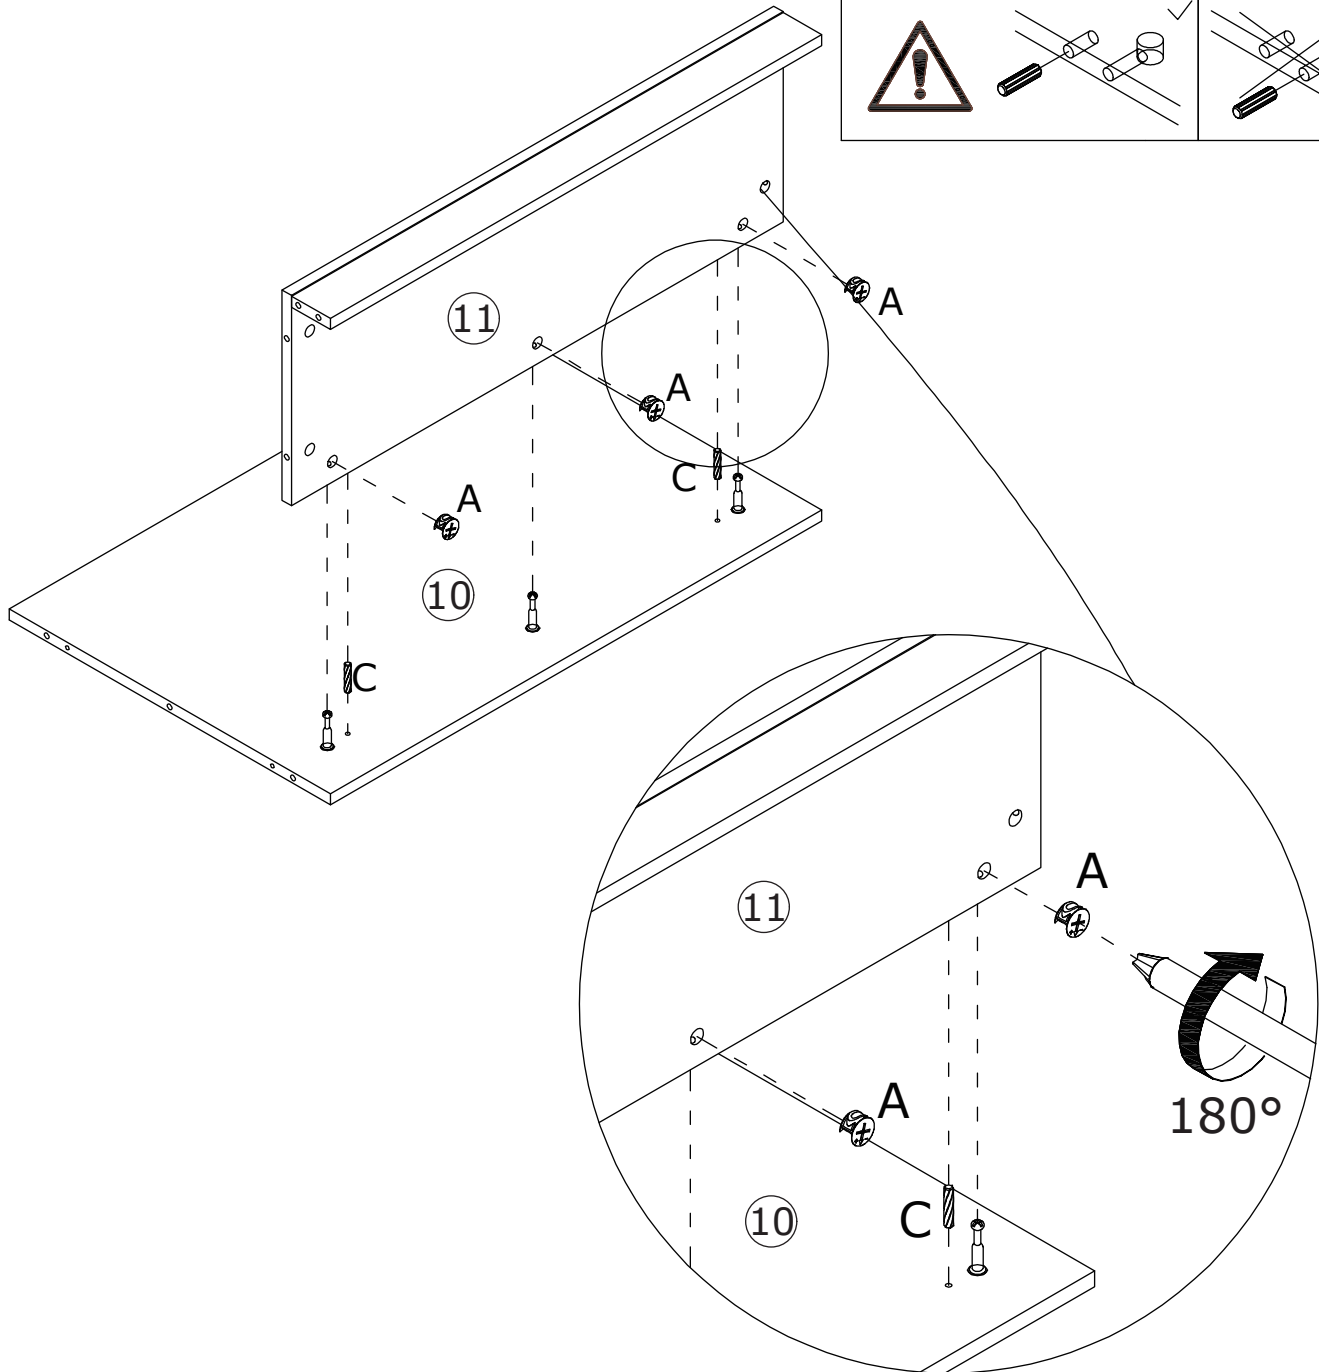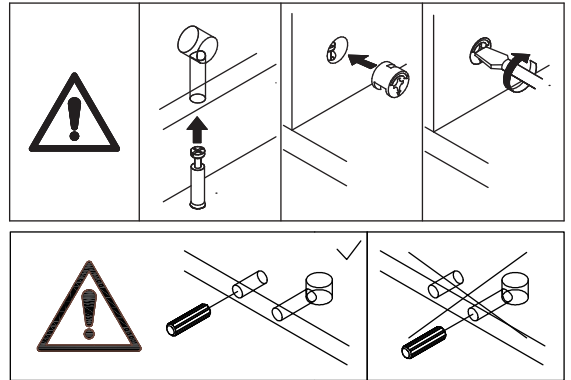

10

A x 8




CRB1595A




C x 6



 CRF0630A



   Connect panels 10, 11, 12, 13, and 15 to panel 8 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

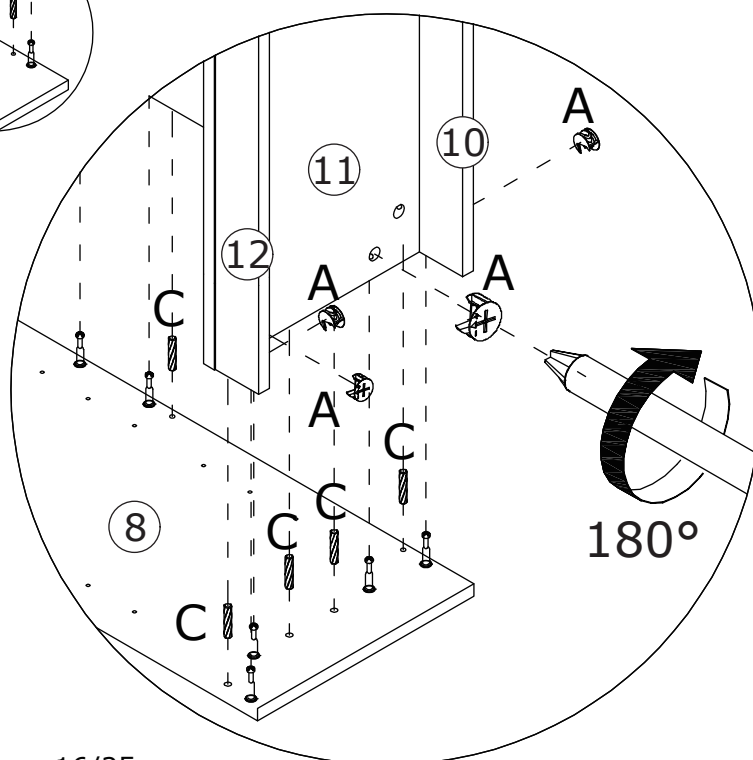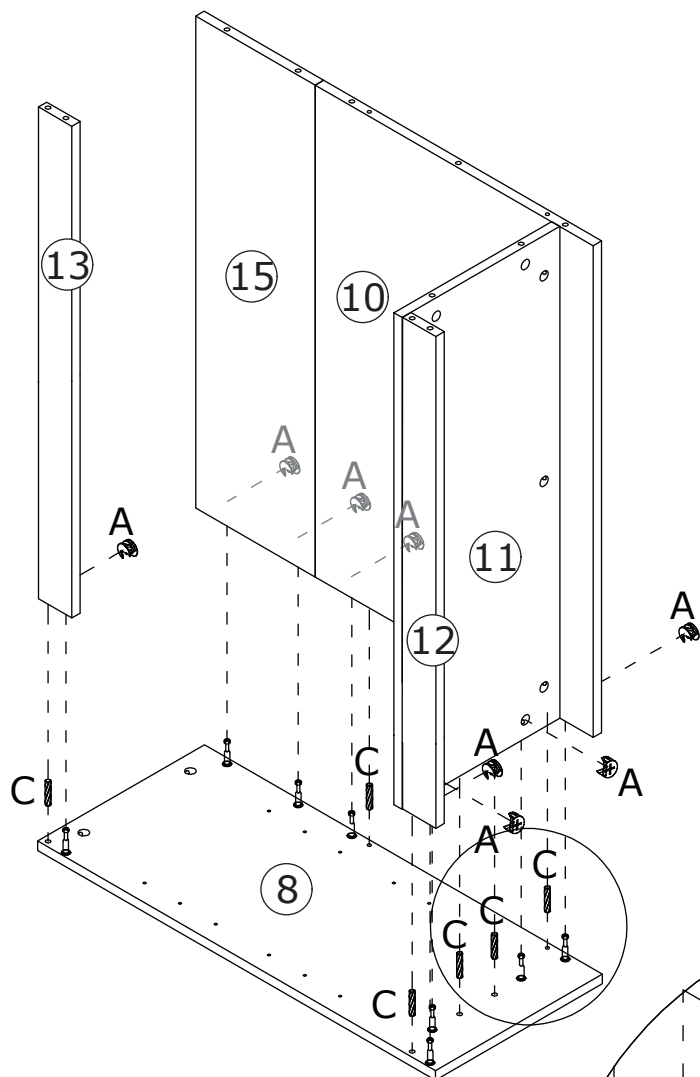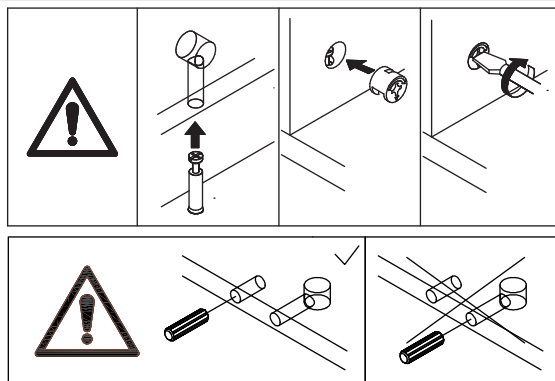

11

A x 8




CRB1595A




C x 6



 CRF0630A




 
 
 
Connect panels 10, 11, 12, 13, and 15 to panel 9 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

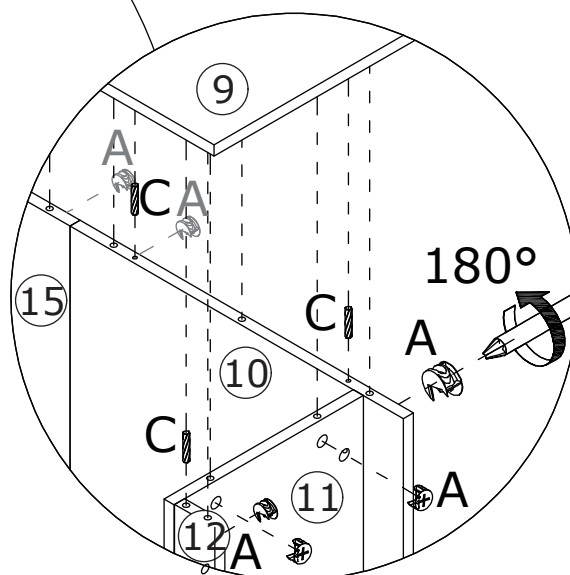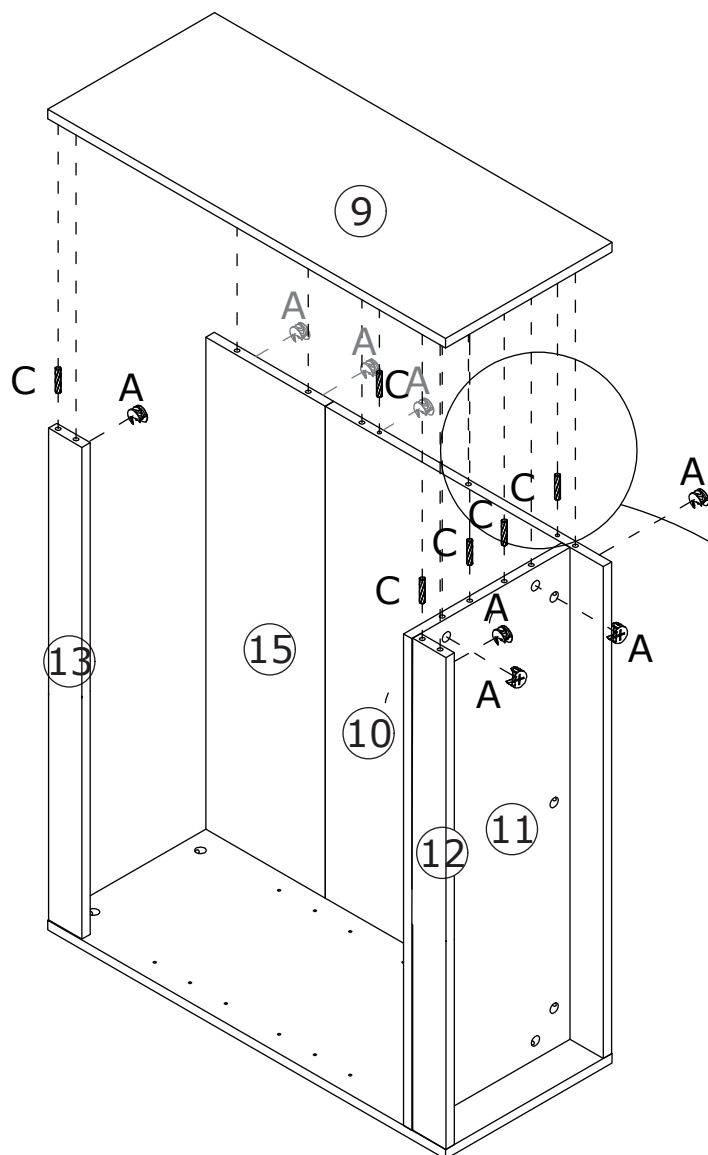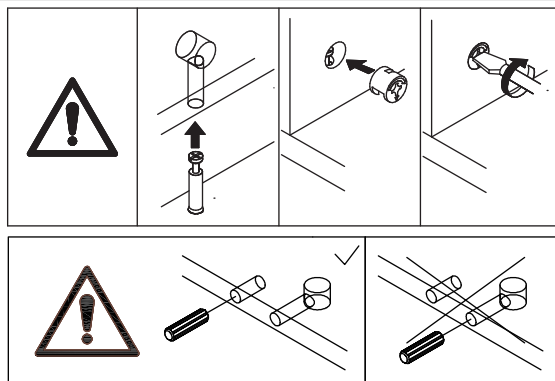

12



  
 
 
First, install plug (D) onto panel 10, then screw eccentric rod (B) into panel 10.

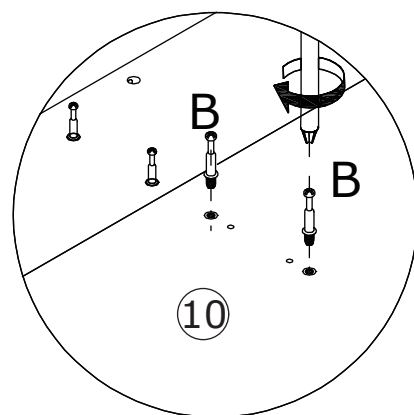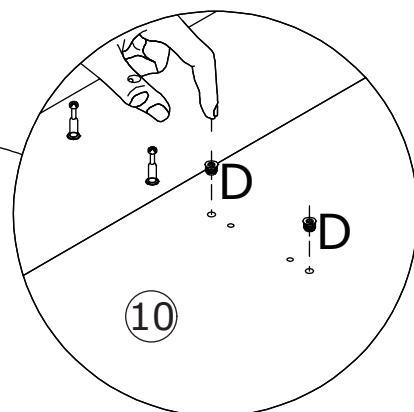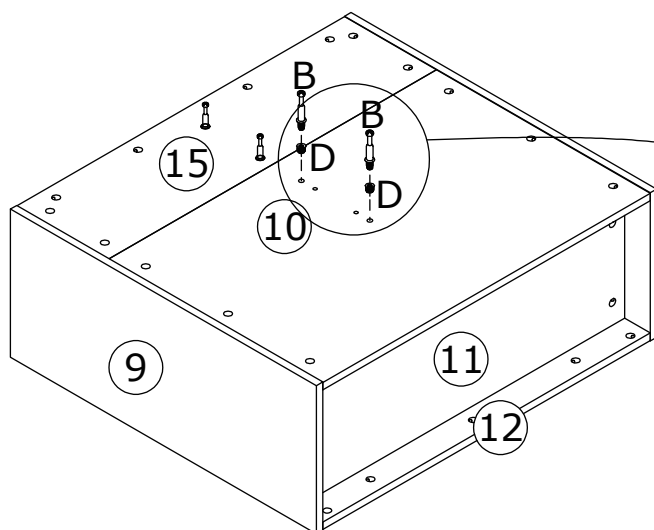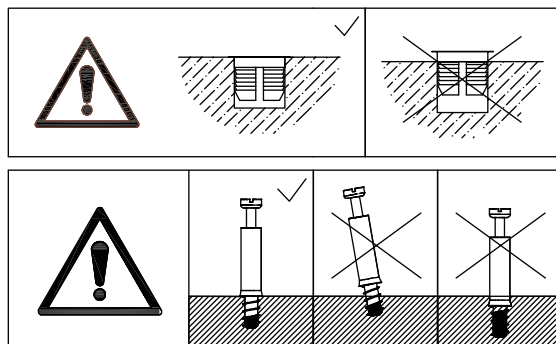

13

A x 7 CRB1595A	C x 4 CRF0630A	
------------------------------	------------------------------	--

   Connect panel 7 to panels 5, 10, and 15 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

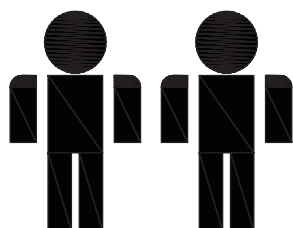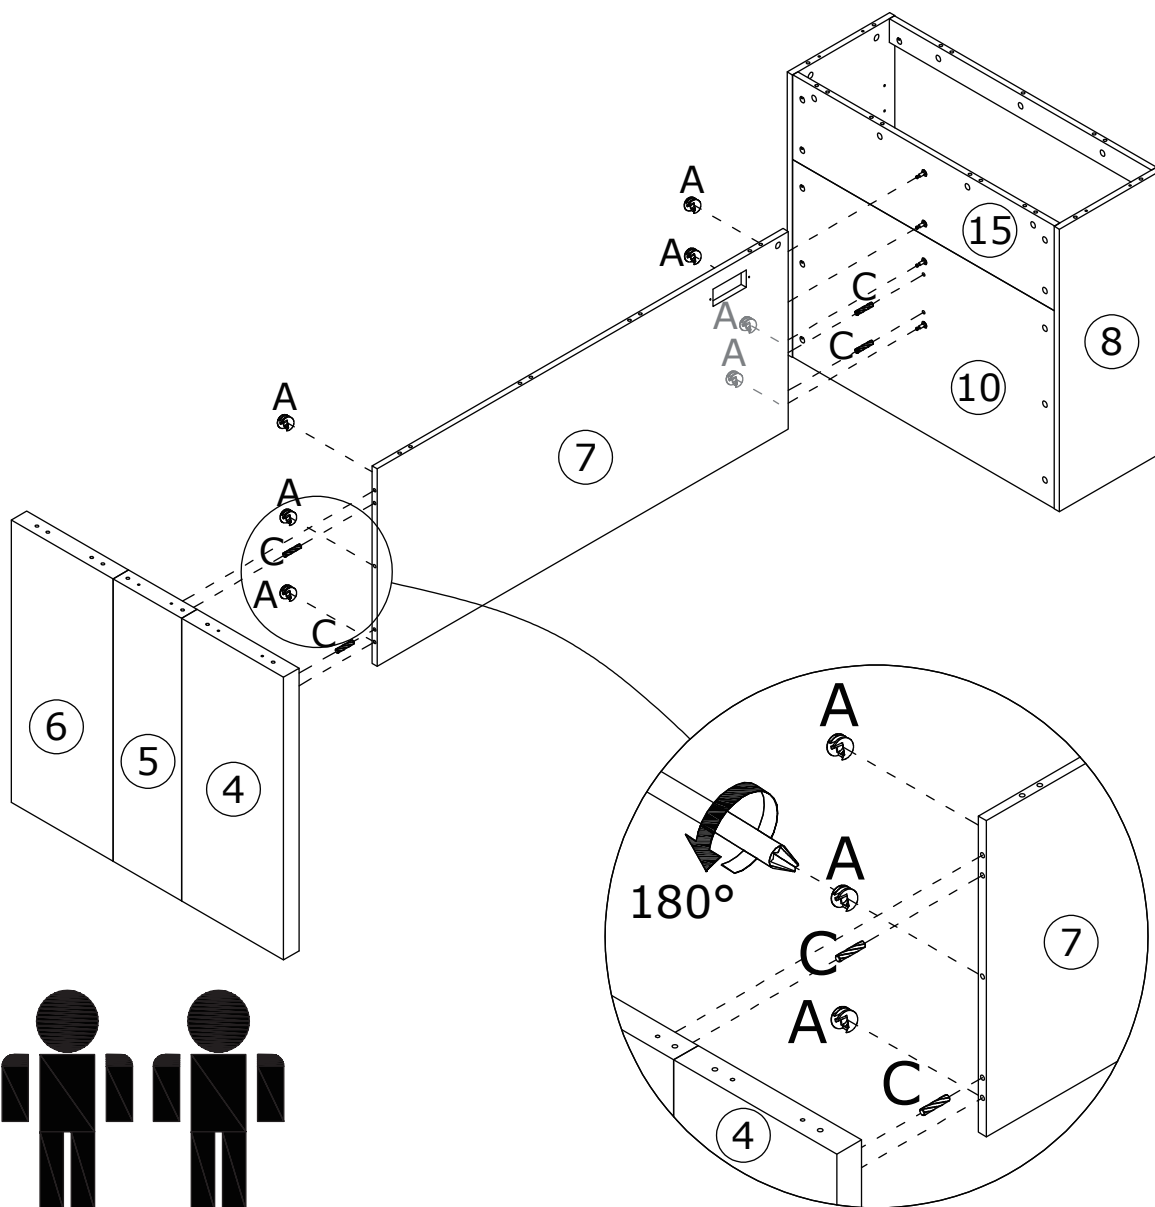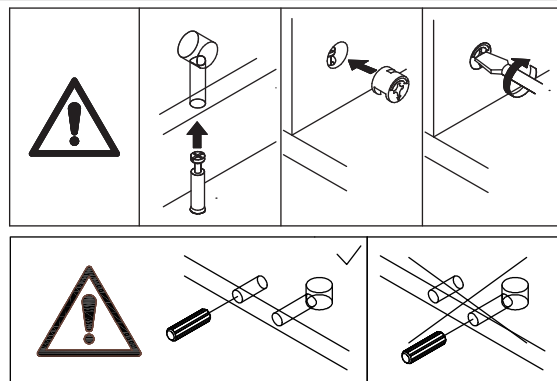

2 ADULTS


14

C x 18



CRF060A

 
J x 1




L x 2



 CRD0314A



 Insert wooden dowel (C) into panels 4, 6, 7, 8, 9, 13, and 15, and secure outlet (J) to panel 7 using screw (L).

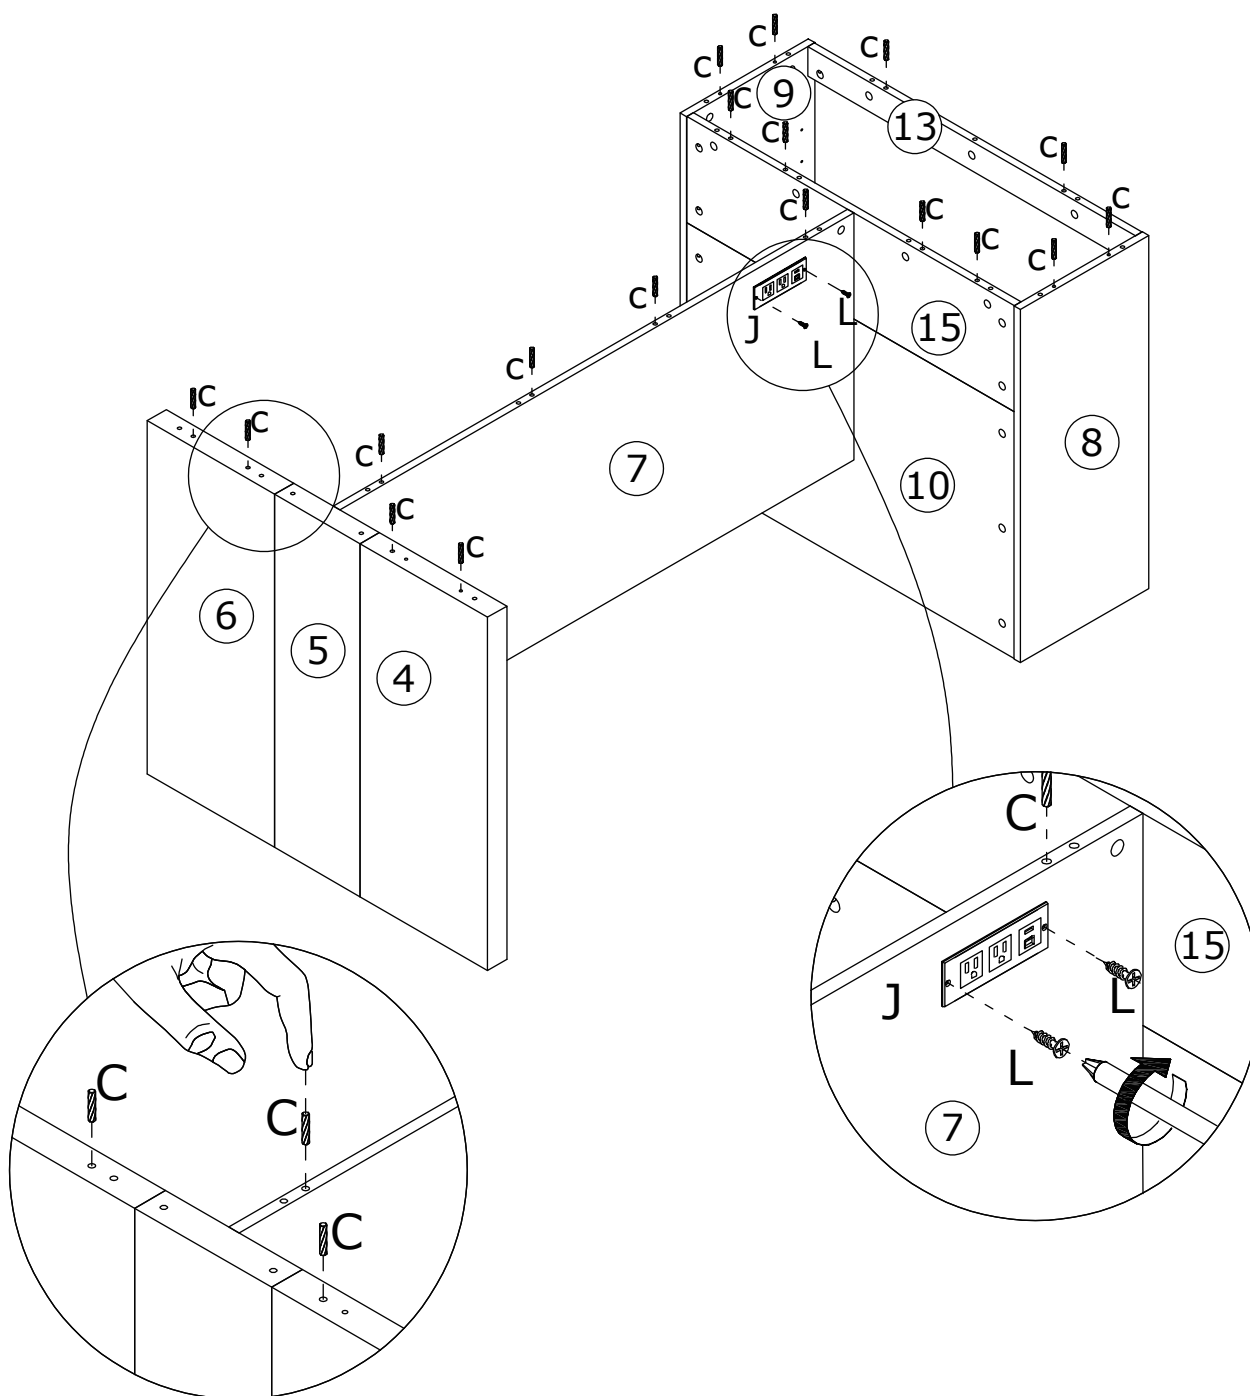


15





A x 21




 
CRB1595A





    Connect panel 1, 2, and 3 to the mounting unit, then tighten by turning eccentric wheel (A) clockwise.

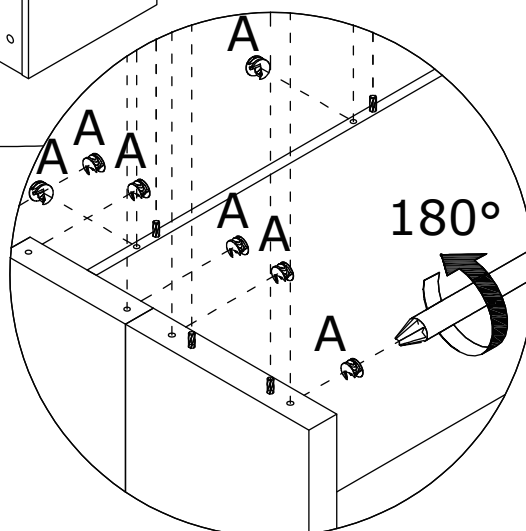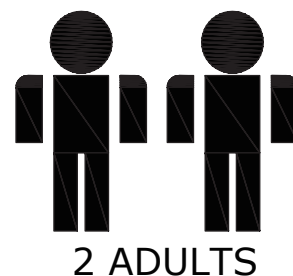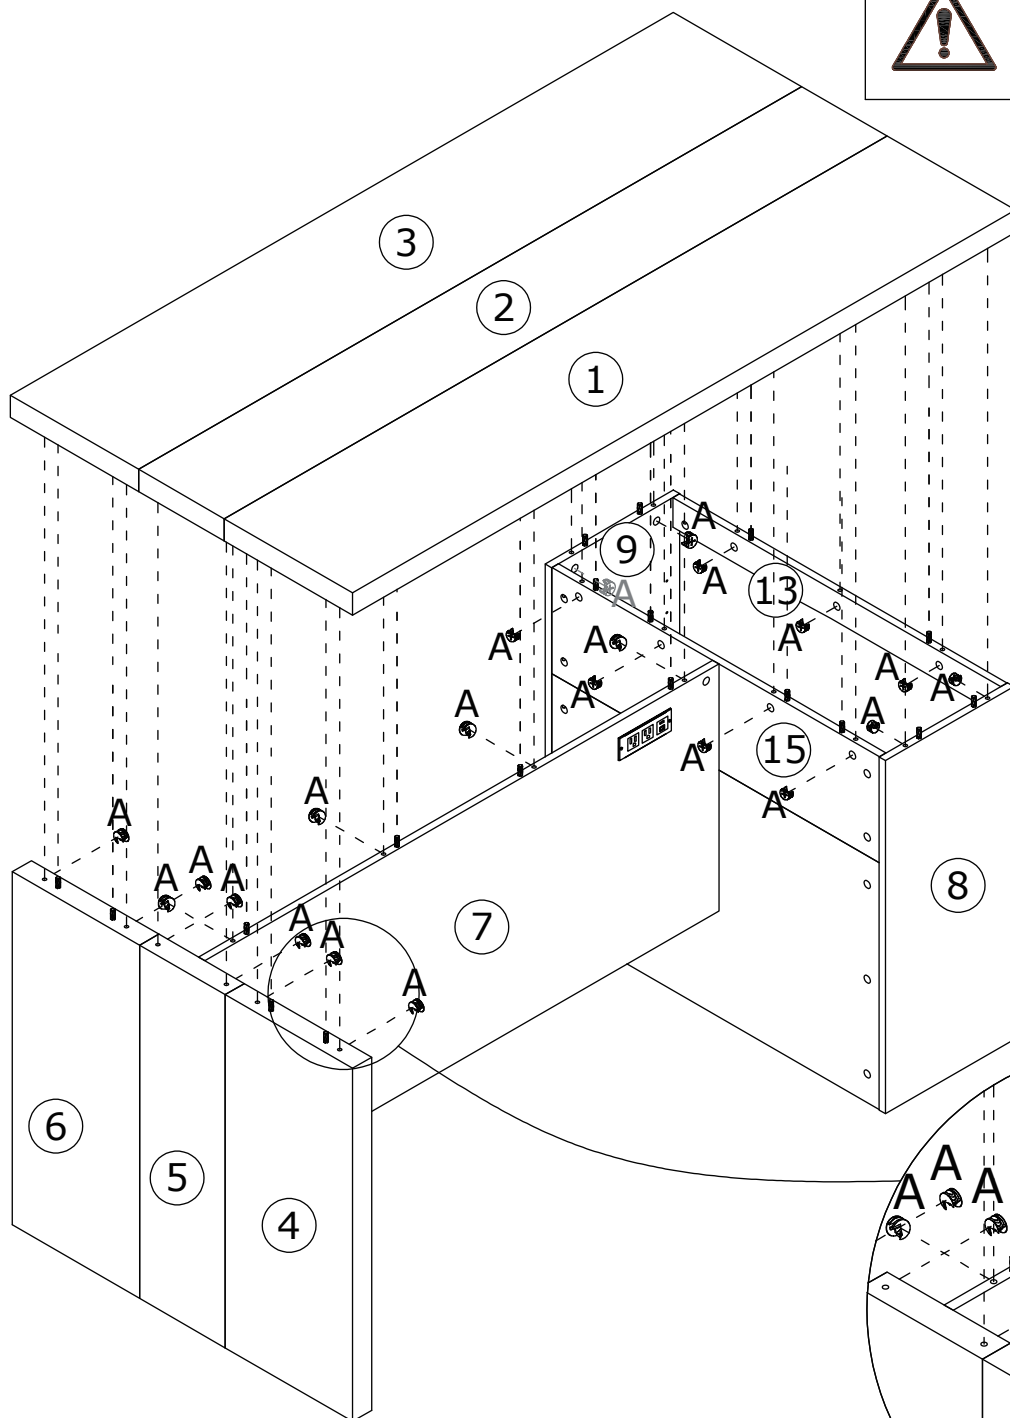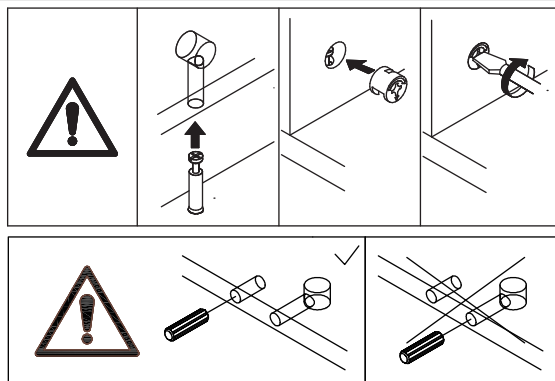

16

  H x 6  CRD3514A	K x 6  	L x 12  CRD0314A	M x 6  	N x 1  	
--	--	---	--	--	---

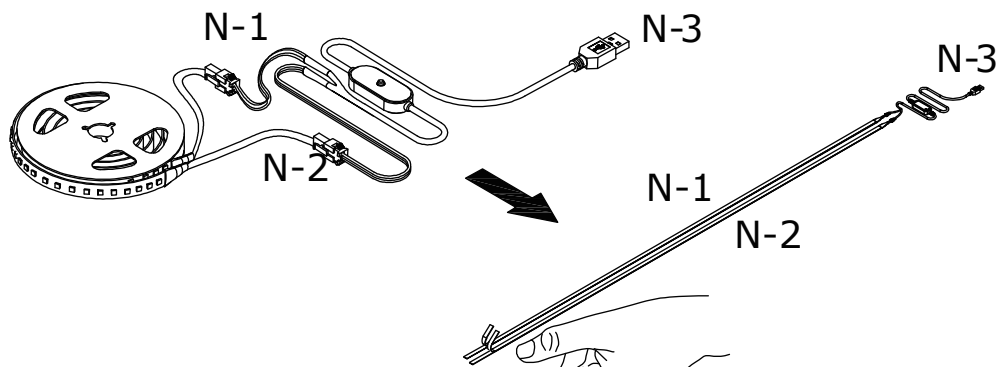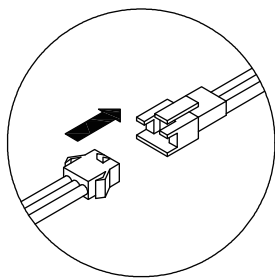  




Peel off the anti-adhesive backing from the light strips (N-1, N-2).

Install (N-2) onto panel 2.

For (N-1), thread the connector at the end of the light strip (N-1) through the hole in panel 7 and install it onto panel 2.


Secure the light strips (N-1, N-2) to panel 2 using clip (K) and screw (H).

   Secure clip (M), which encloses (N-3), to panel 1 using screw (H).

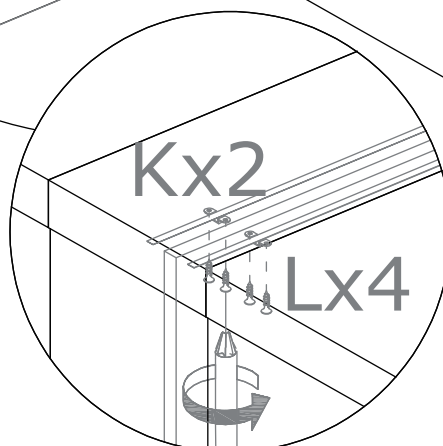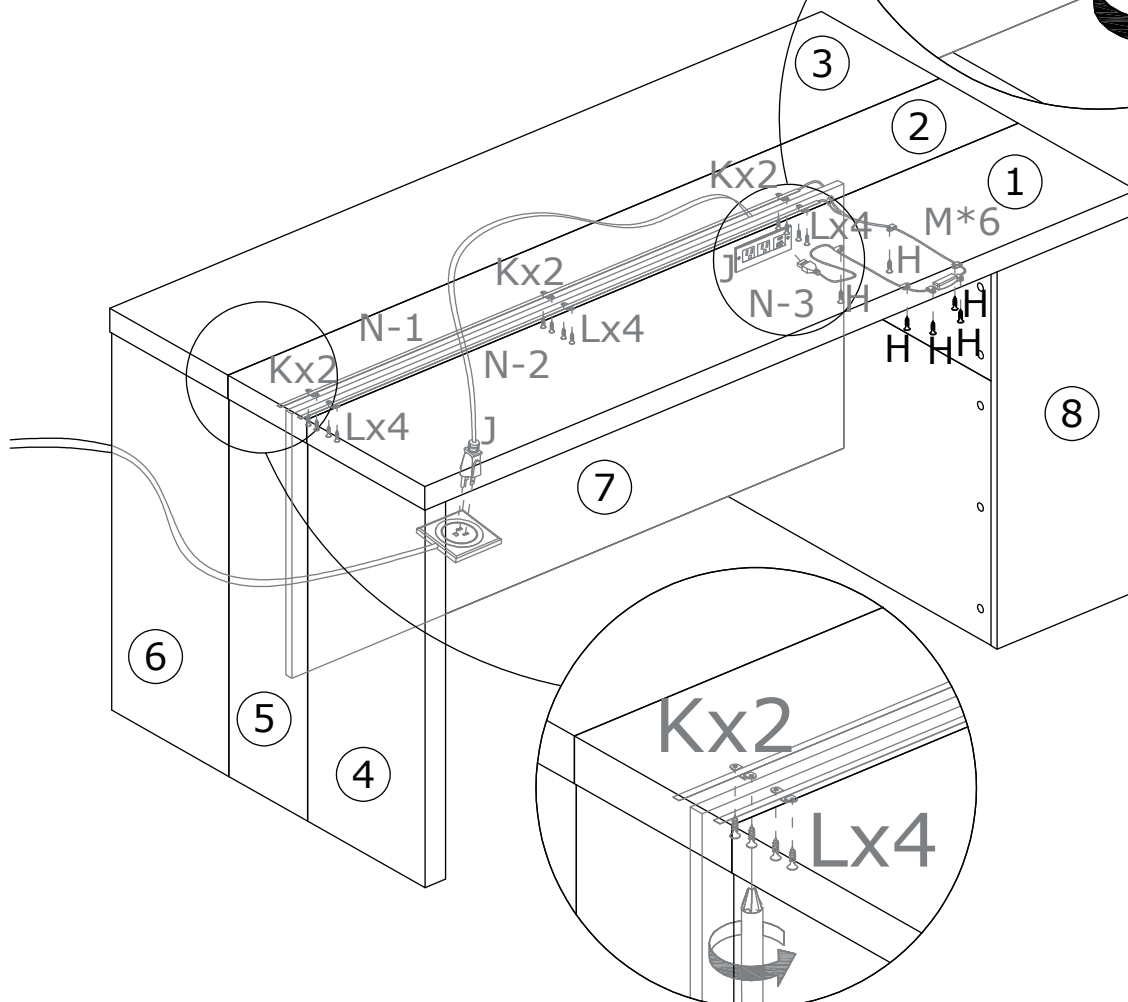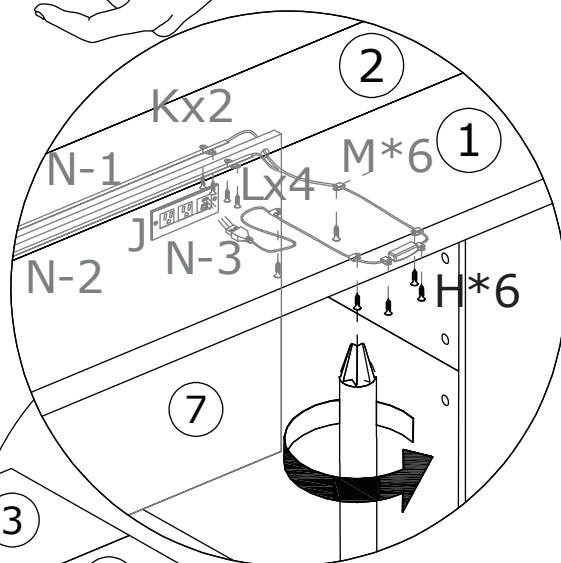


17


 
P x 8

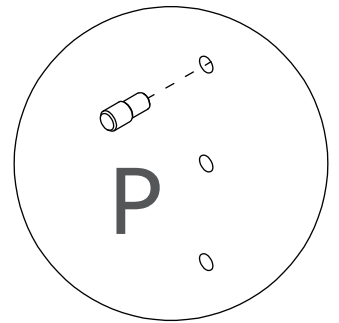

OR

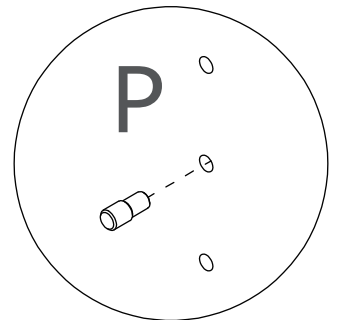 


OR

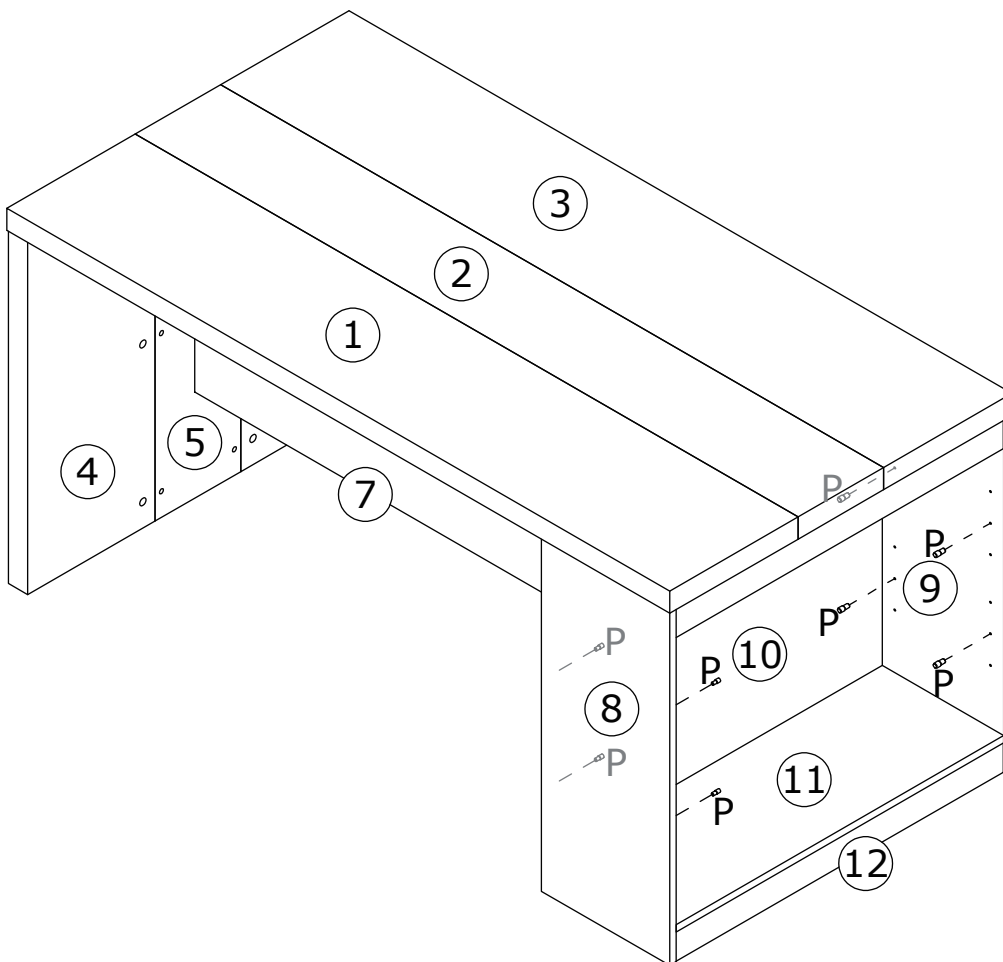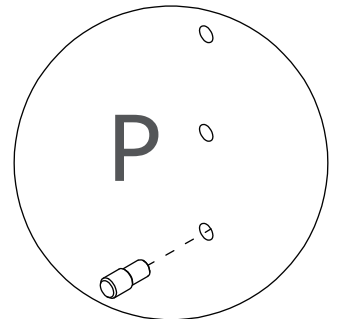  

Insert pin (P) to panels 8 and 9.

18

 Install panel 14 onto pins.

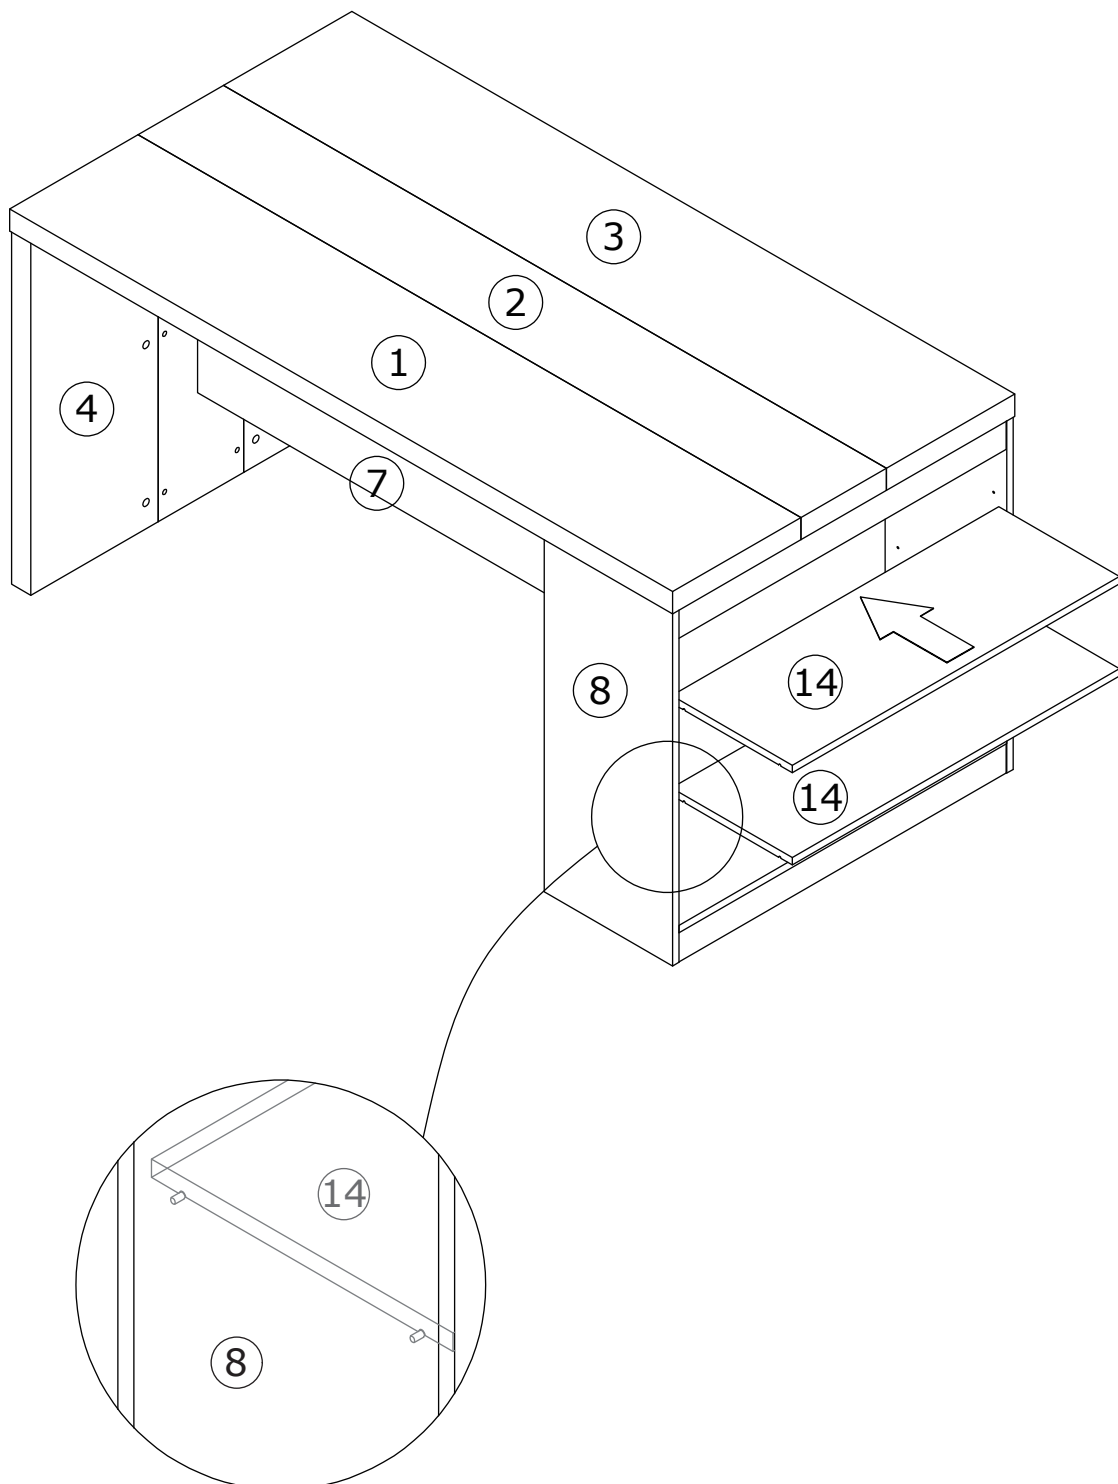

19

Q x 10

 


R x 31




Distinguish between the Sticker (Q) and (R) by their colors.

Use Sticker (Q) to cover the holes of eccentric wheel (A) on the panels matching its color.

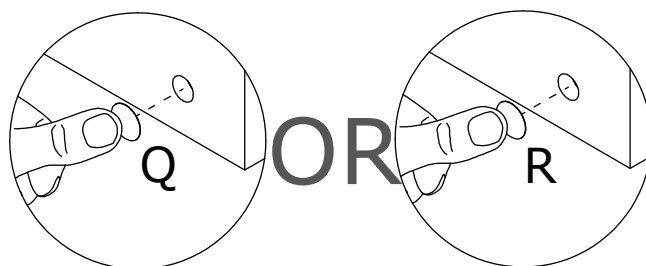

 Use Sticker (R) to cover the holes of eccentric wheel (A) on the panels matching its color.

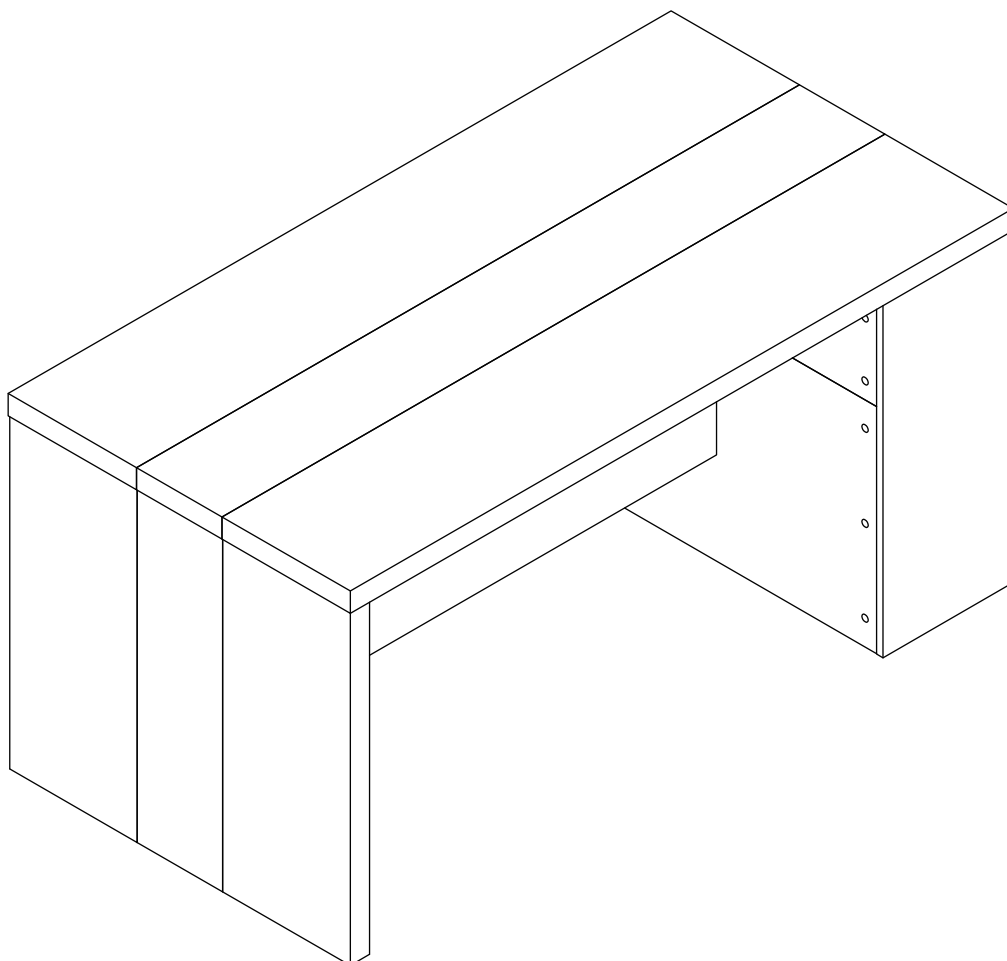

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.