 


Assembly Instructions

For more information contact our team: service.ec@foagroup.com

WI4670C

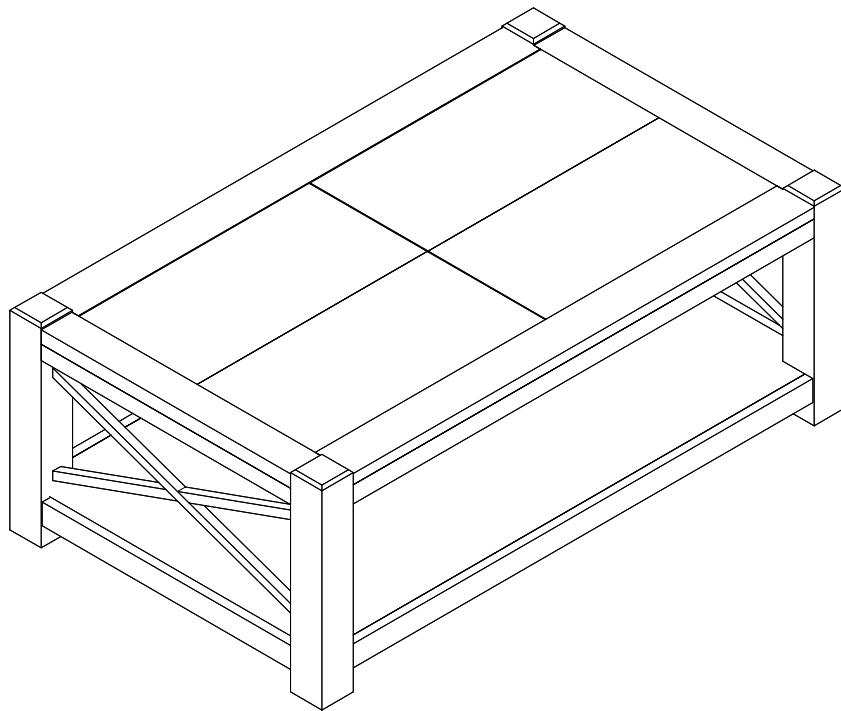

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 
BASIC ASSEMBLY TECHNIQUES

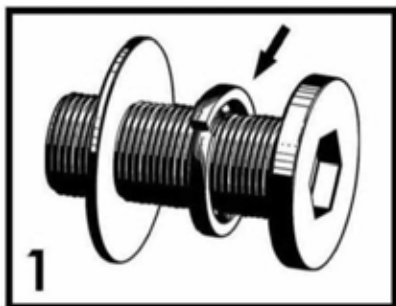

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

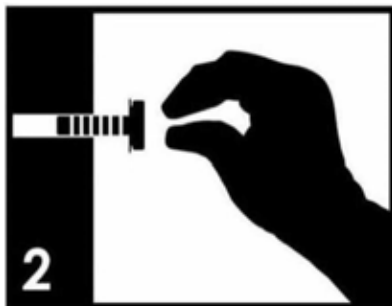

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

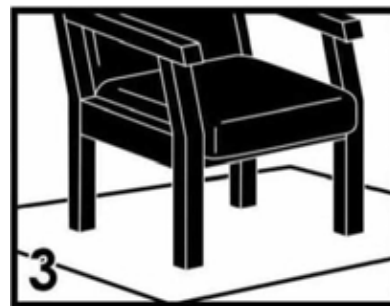

 Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

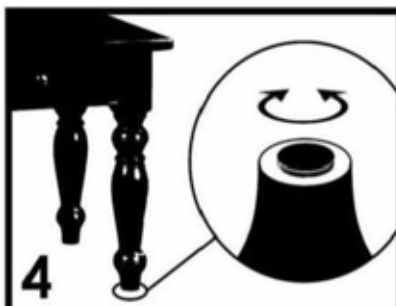

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

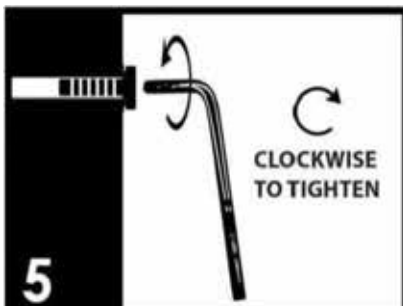


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.



Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

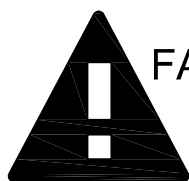


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 
Parts List

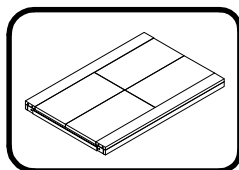

#1 x 1pc
Frame Table Top

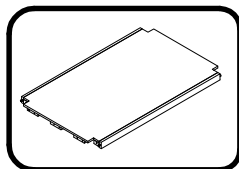 


#2 x 1pc
Shelf

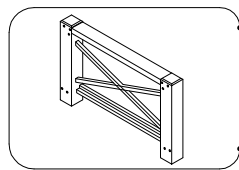 


#3 x 2pcs
Legs Frame

 
Hardware List

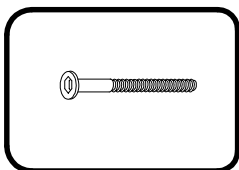


#A x 8pcs
Bolt Ø5/16" * 2-3/8"

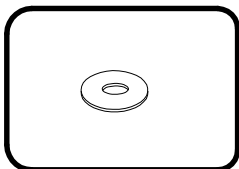 


#B x 8pcs
Flat Washer Ø5/16"

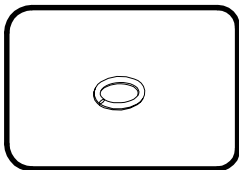 


#C x 8pcs
Spring washer Ø5/16"

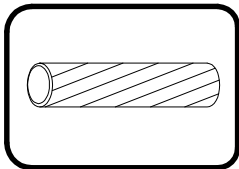 

#D x 8pcs
Wood Dowel Ø12 X 2"

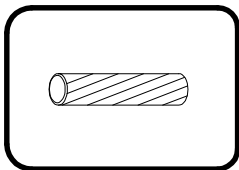 

#E x 4pcs
Wood Dowel Ø10 x 1-9/16"

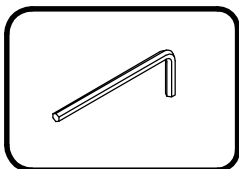 


#F x 1pc
Allen Wrench (M4)




Prepare 2 bolts assembly by inserting lock washer (#C), then flat washer (#B) onto bolts (#A). Insert wood dowels (#D) onto the holes of the leg frame (#3). Align and attach frame table top (#1) to the wood dowels (#D) of the leg frame (#3), then secure with bolts (#A).
 
#A x 2pcs
#B x 2pcs
#C x 2pcs
#D x 4pcs

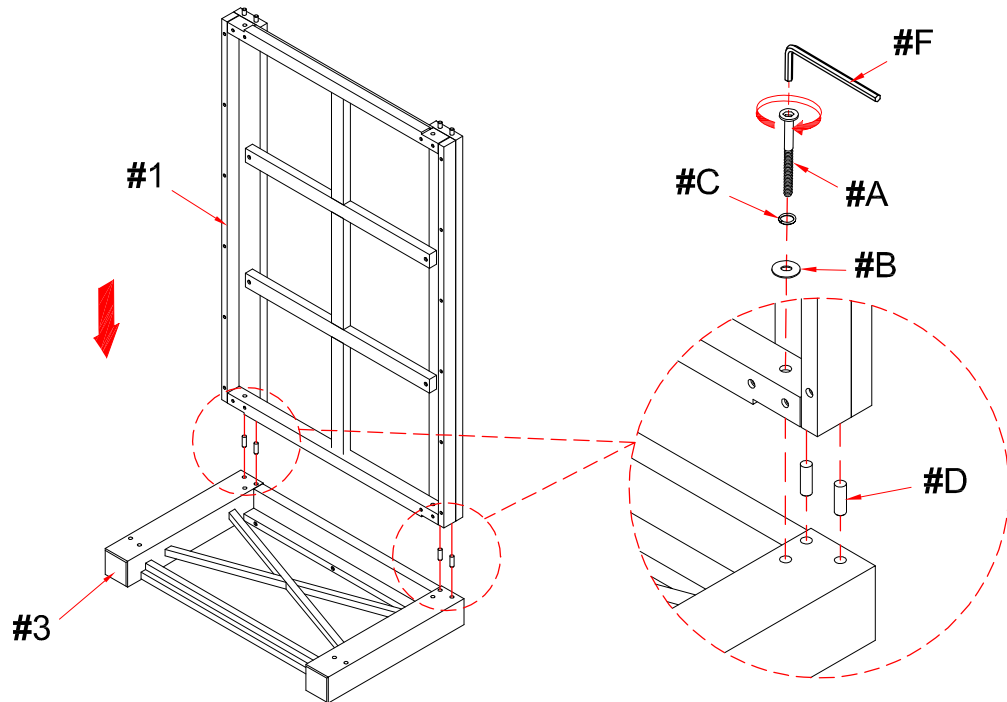

Prepare 2 bolts assembly by inserting lock washer (#C), then flat washer (#B) onto bolts (#A). Insert wood dowels (#E) onto the holes of the leg frame (#3). Align and attach shelf (#2) to the wood dowels (#E) of the leg frame (#3), then secure with bolts (#A).


#A x 2pcs
#B x 2pcs
#C x 2pcs
#E x 2pcs

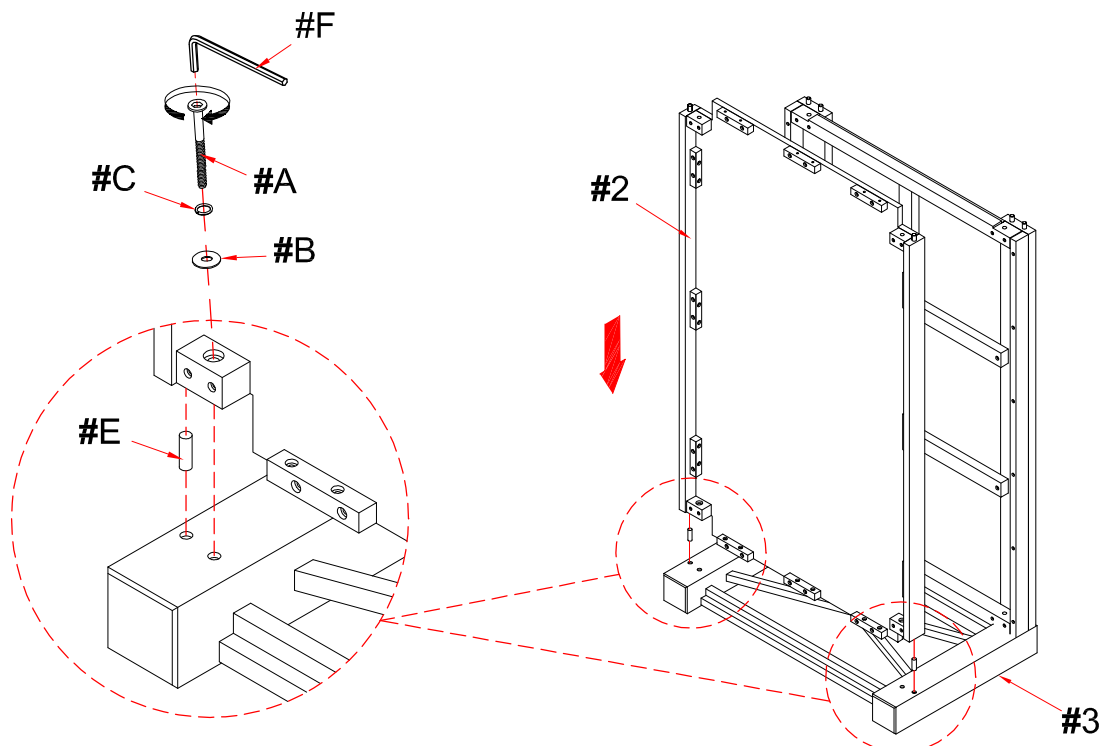 




1) Prepare 4 bolts assembly by inserting lock washer (#C), then flat washer (#B) onto bolts (#A). Insert wood dowels (#D) to the top holes of the second leg frame (#3).

#A x 4pcs
#B x 4pcs
#C x 4pcs
#D x 4pcs
#E x 2pcs

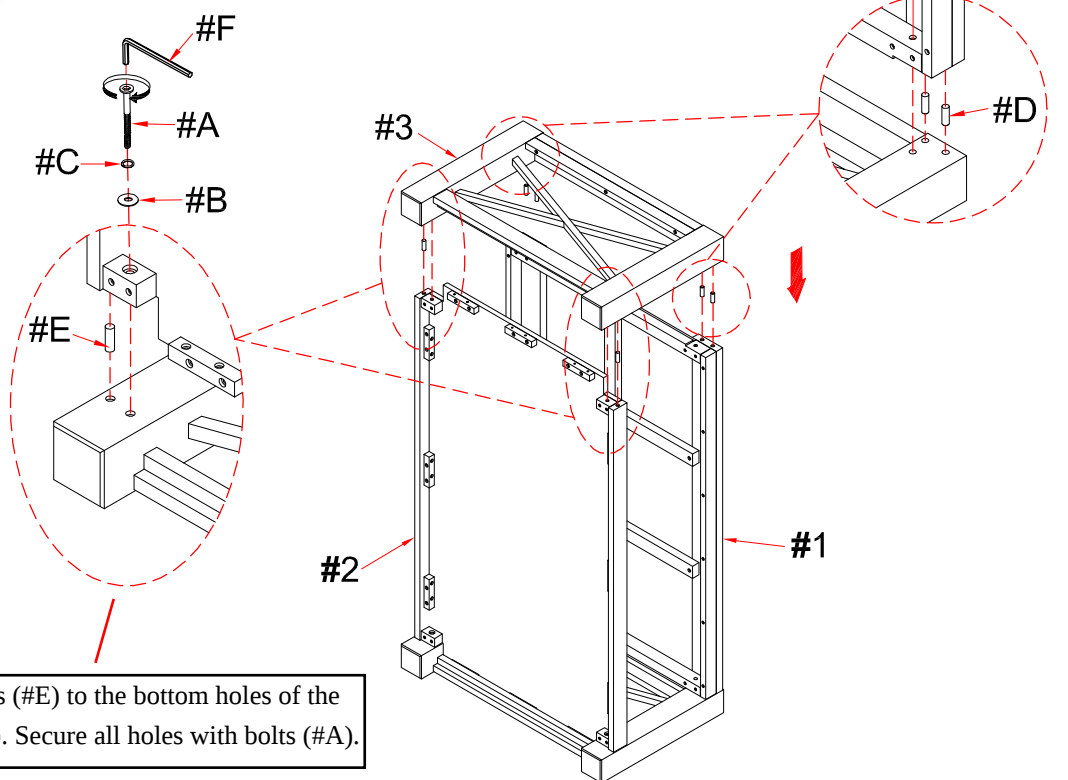 

 2) Insert wood dowels (#E) to the bottom holes of the second leg frame (#3). Secure all holes with bolts (#A).

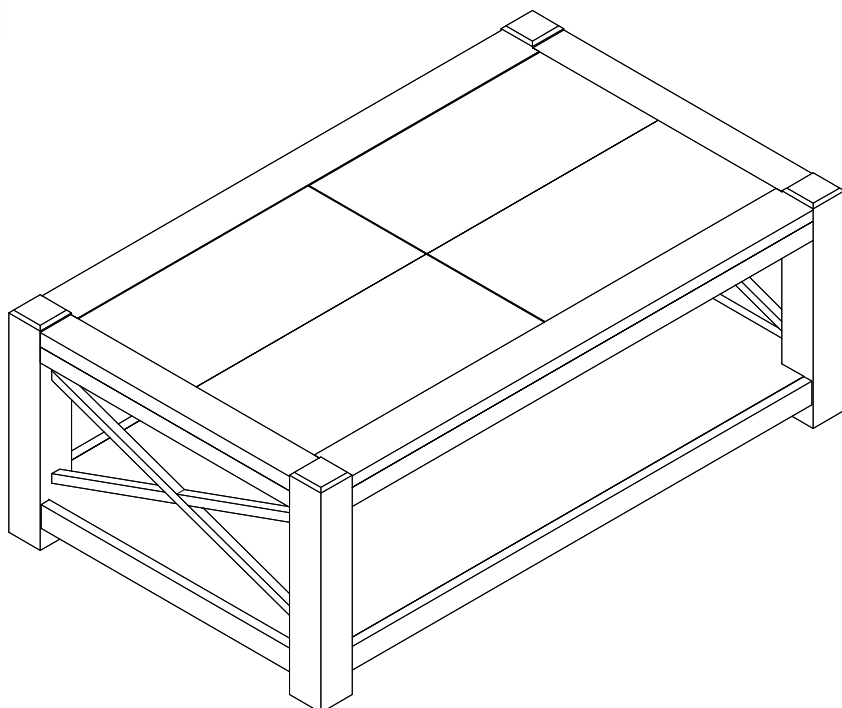

ASSEMBLY IS COMPLETED