

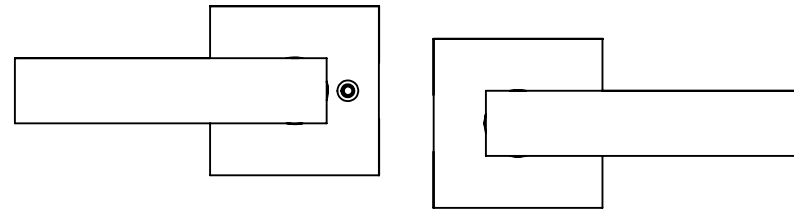
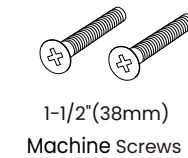
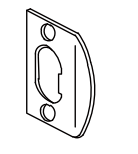
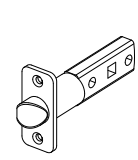



INSTALLATION MANUAL

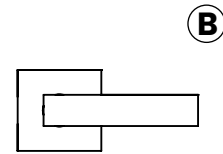


—





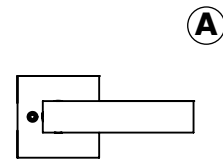


1-1/2"(38mm)
Machine Screws

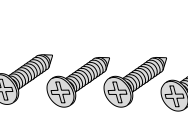



3/4" (20mm)
Latch/Strike Screws

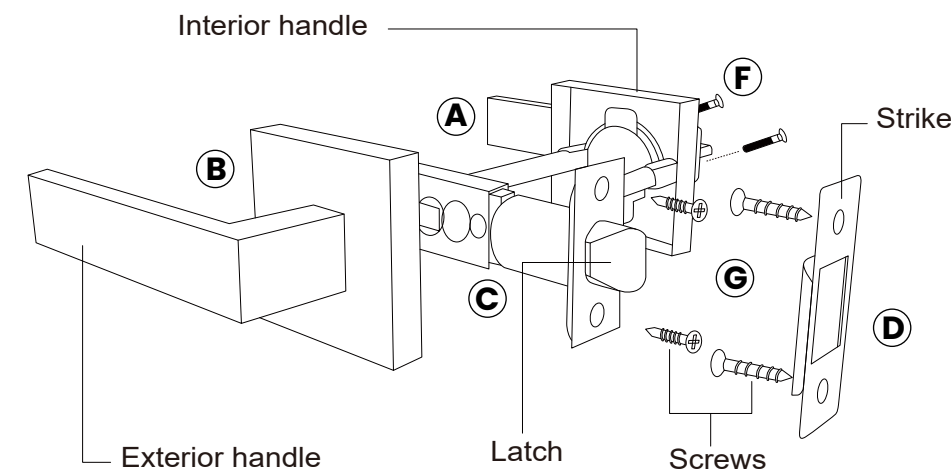

 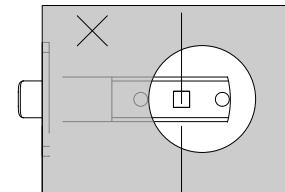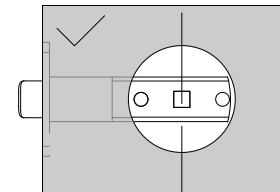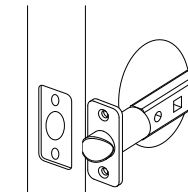 



60mm(2 3/8 in)

 60mm(2 3/8 in)

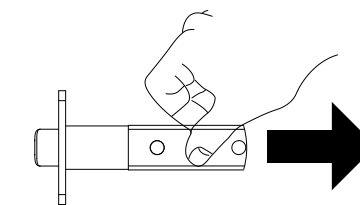


right


70mm(2 ¾ in)

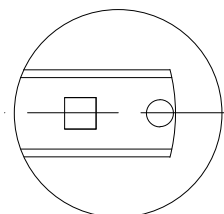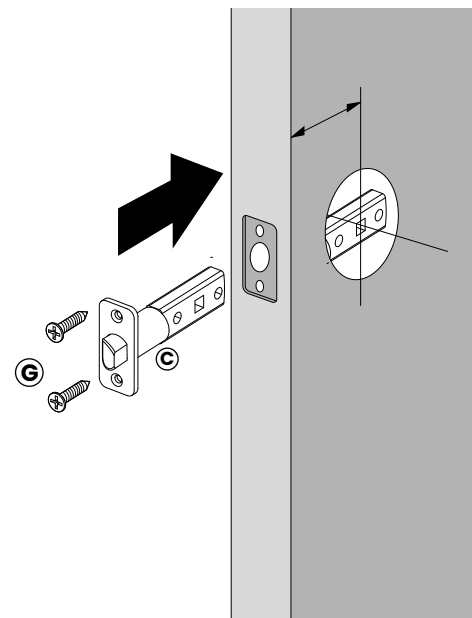


Note:
The square hole must be horizontal.

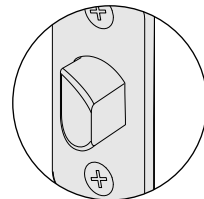


Note:
Ensure that the beveled edge of the lock tongue is oriented towards the direction the door swings shut.

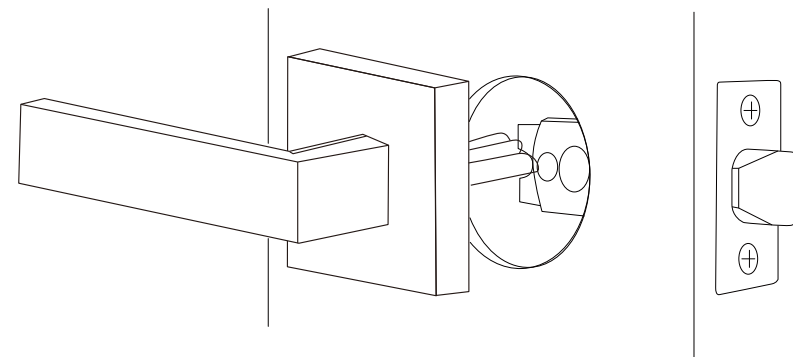

Secure the exterior handle lock in position by inserting the posts and square bolt into the latch mechanism holes.

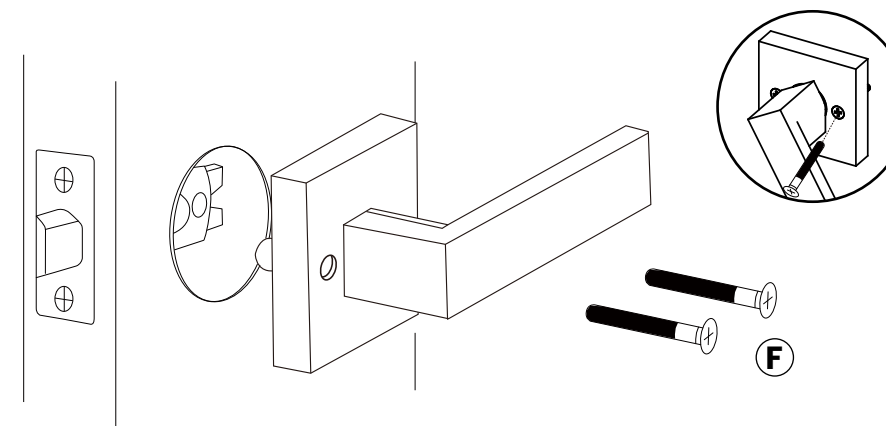

Attach the indoor handle lock to the square bolt on the outside and align the screws from the interior latch towards the posts.
Tighten the screws and test the lock.

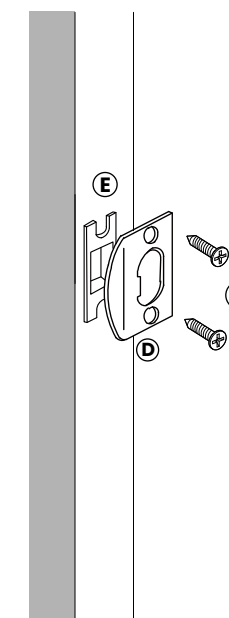

Mount the strike onto the door frame by aligning it with the latch height before drilling the required holes.