


ASSEMBLY INSTRUCTIONS

TV STAND


(BOX 1) BOX OF TV STAND

NO	ITEM	QTY
A	TV STAND	1 pc
B	LEG	4 pcs


STEP 1 : Take out the Leg carton (B) from bottom TV Stand (A) as shown . Attach the Leg (B) at the bottom TV Stand (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Wrench (4) .

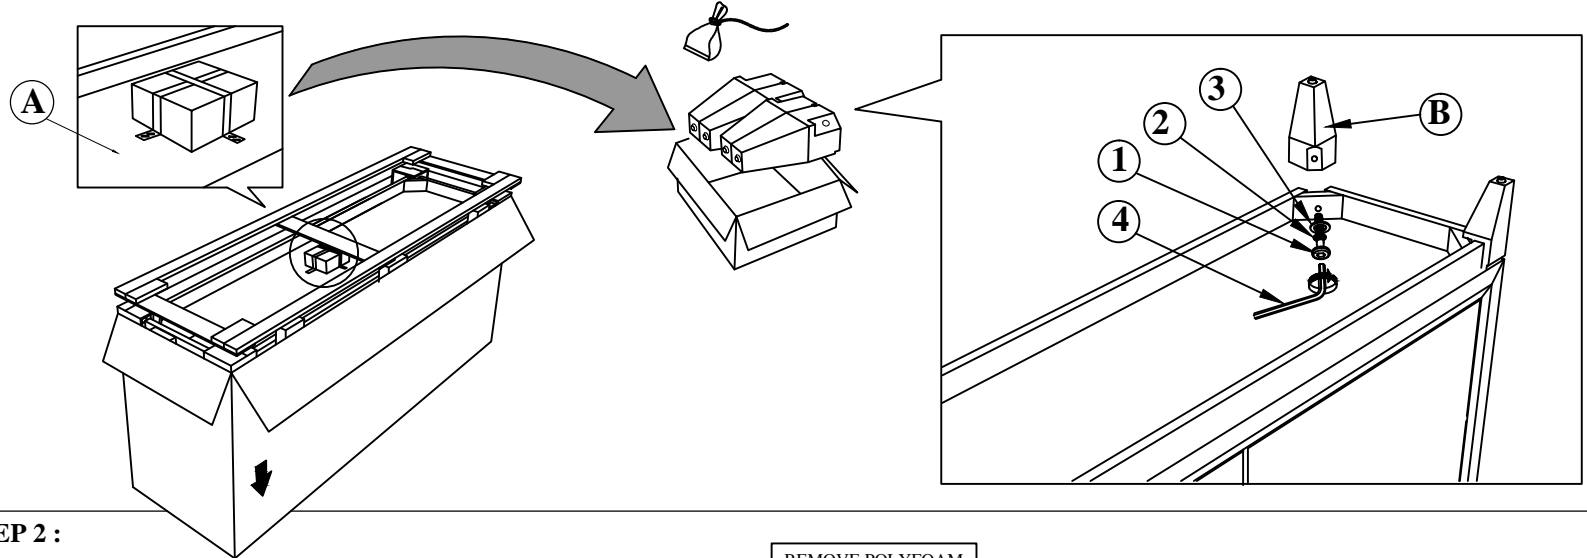

STEP 2 :

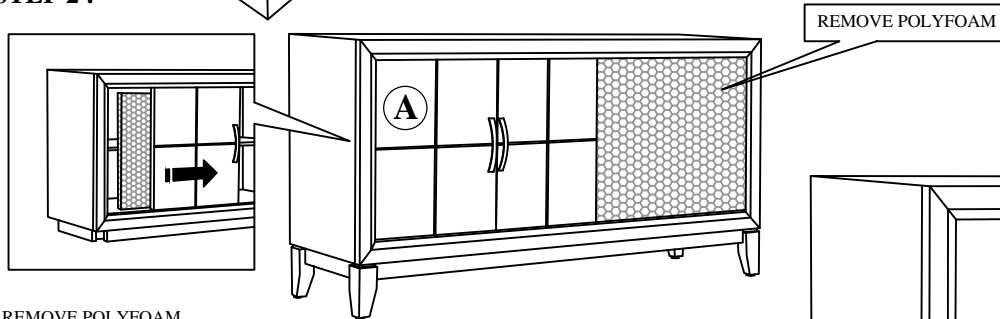

REMOVE POLYFOAM AT THE BACK OF SLIDING DOOR AS SHOWN.

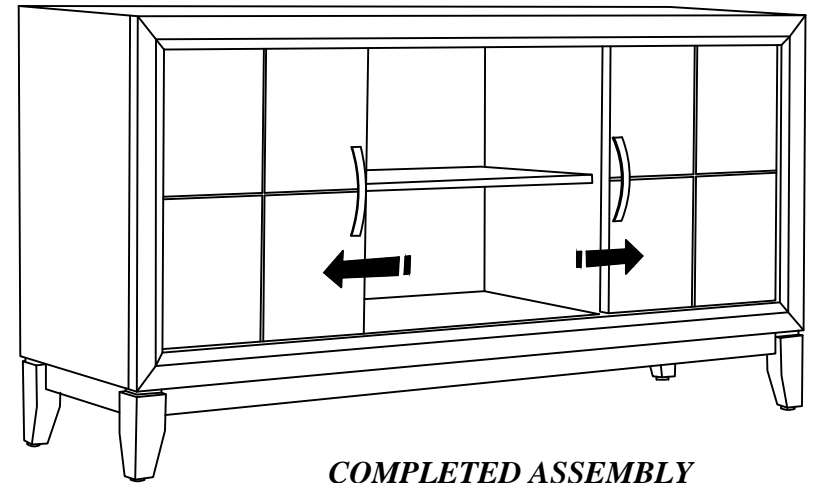

COMPLETED ASSEMBLY

(BOX 1) HARDWARE LIST

NO	ITEM	QTY
1	JCBC M6 x 50mm	4 PCS
2	Spring Washer 1/4" Rbw	4 PCS
3	Flat Washer 1/4"ID x 19mmOD Blk	4 PCS
4	ALLEN KEY m4x65mm Blk	1 pc

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.