



98.1WCF18.150

Assembly Instruction

*Please follow this instruction to avoid assembly errors.

*For customer service, please contact E-mail: shop@robud.com

⚠ WARNING:

- CHOKING HAZARD-Small parts. STRANGULATION HAZARD-Long cord. Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package, please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- The product requires 2"AAA/LR03/AM4 1.5V" batteries. (Batteries for self-preparation).
- Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity(+ and -).
- Remove the exhausted battery in time.
- The power supply terminal cannot be short circuited.
- Do not connect the wire to a mains outlet.
- The product is not to be connected to more than the recommended number of power supplies.
- Check each part before assembly.If the part is damaged,fix it well before assembly.
- The instruction must be retained since it contains important information.
- This toy produces flashes that may trigger epilepsy in sensitised individuals.

x1	x1	x1	x1	x1	x1
x1	x1	x1	x1	x1	x1
x1	x1	x1	x1	x1	x1
x1	x1	x1	x1	x1	x1
x1	x3	x1	x2	x3	x1
x1	x4	x3	x1	x1	M3*12 x6

x2	x7	x6	x26		

1

⚠ The magnet faces upward.

⚠ Pay attention to the direction of the magnet.

2

3

4

5

6

7

8

