 
 


Installation & Assembly

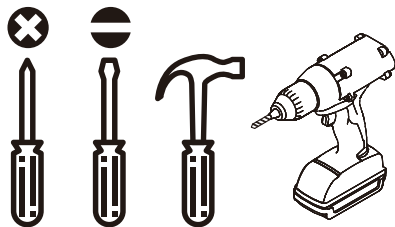

Tools required
(not included)

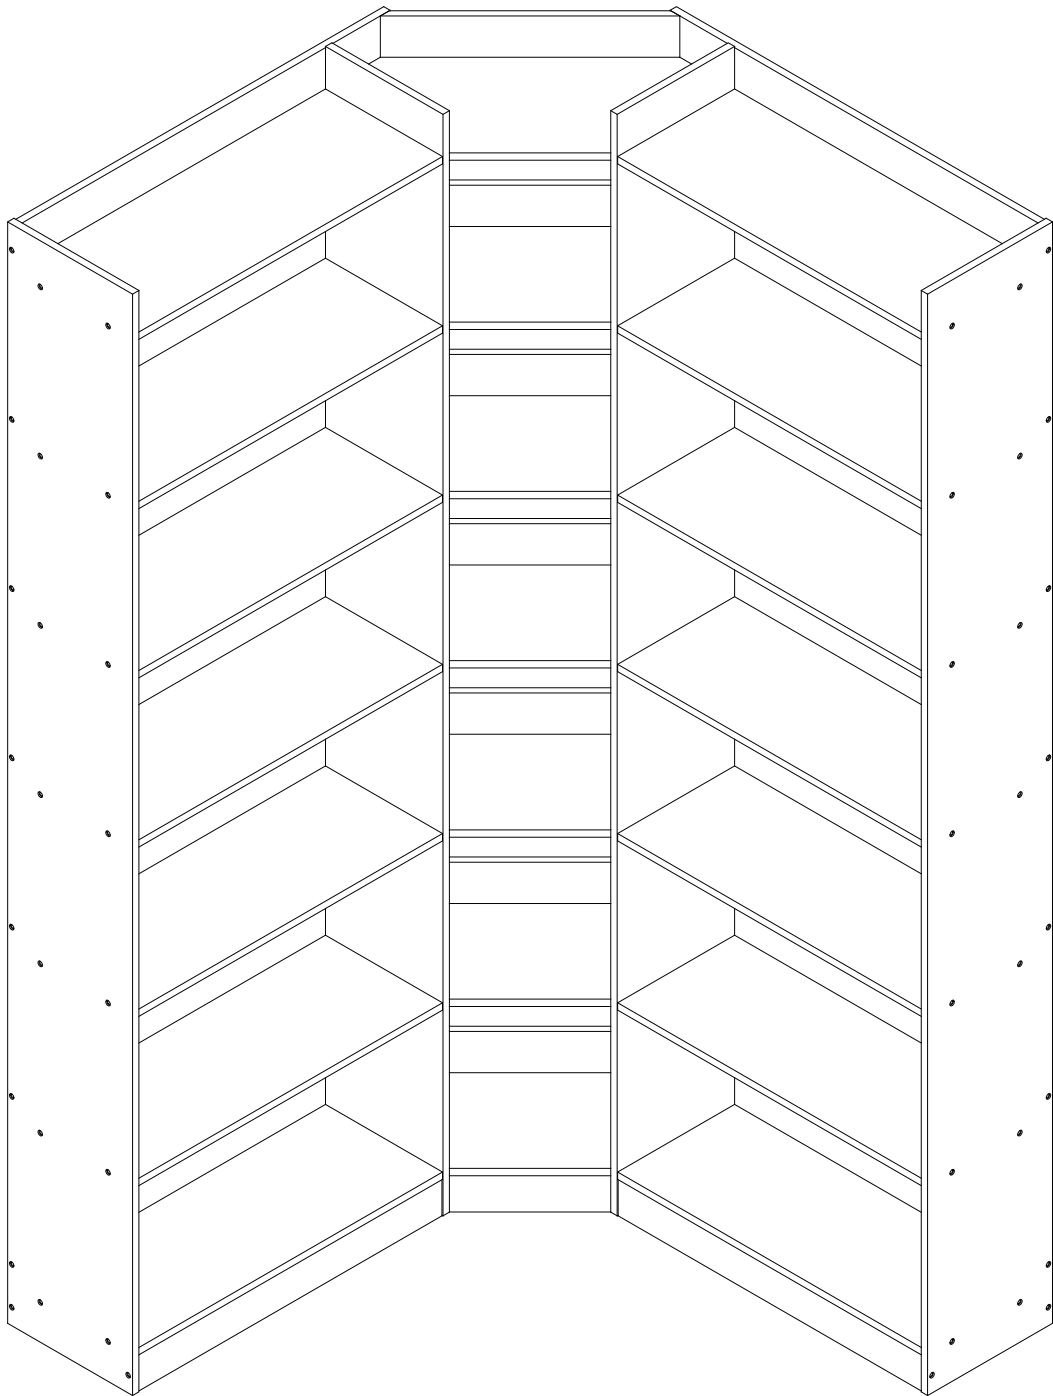

2 people for assembly

WARNING!!

Furniture Tipping Risk.

Serious risk of severe or fatal crush injuries can occur from furniture tipping over if not secured.

Please look in the brown box for hardware packs and legs. Sets often ship in multiple boxes and may arrive a day or two apart.


Children like to climb on furniture and Unsecured furniture can pose a serious danger.

Please follow all instructions and install the tip-over restraints provided

















In addition to installing the restraints, to help prevent tip-over:

1. Place heaviest items on the lowest shelves,
2. Unless specifically designed to accommodate, do not set TV's or other heavy objects on top of this product,
3. Never allow children to climb or hang on sides or shelves,
4. Do not assemble on a rough or uneven surface.

! WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. • Do not defeat or remove the drawer interlock system. <i>This is a permanent label. Do not remove!</i>
	



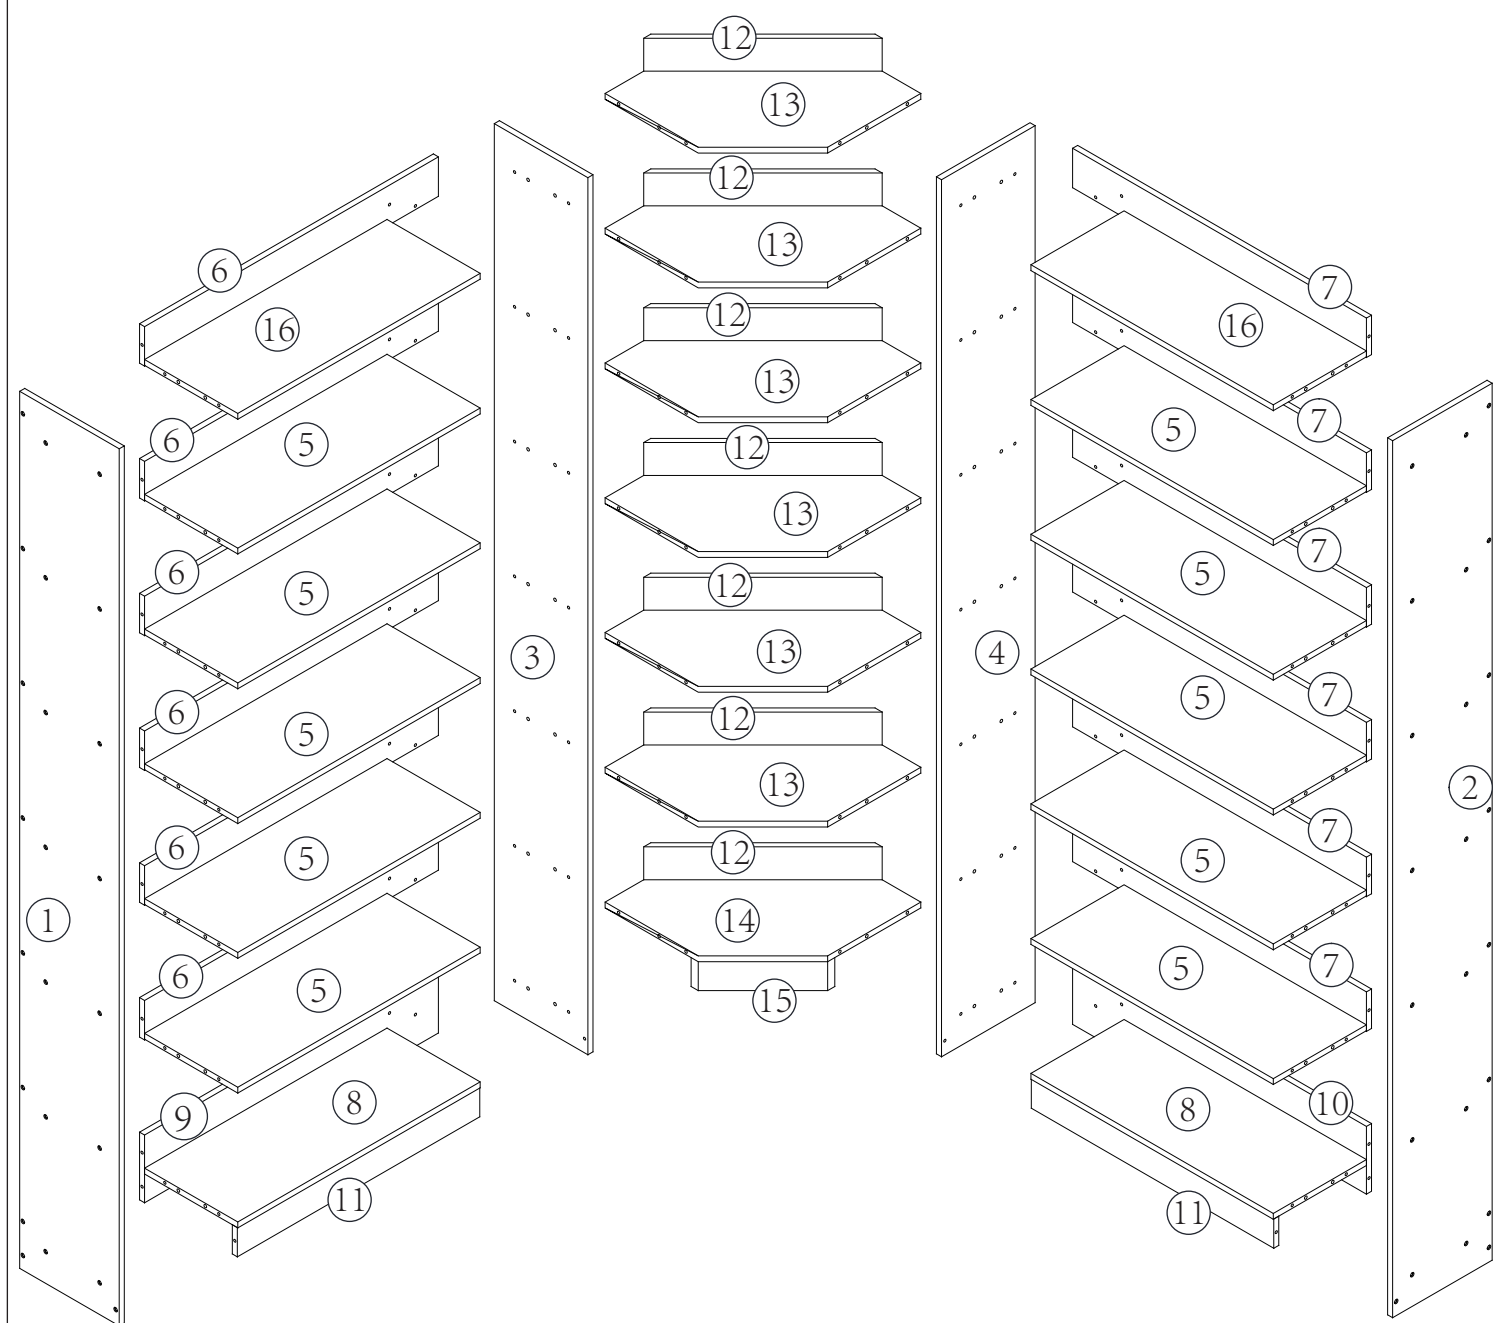 


Parts List

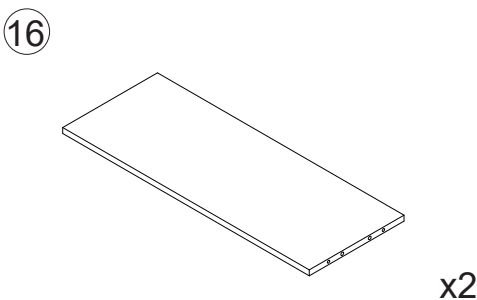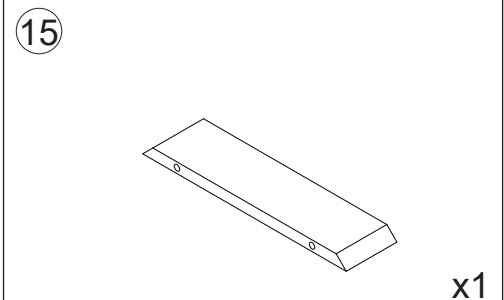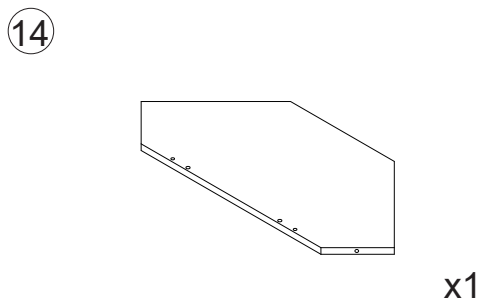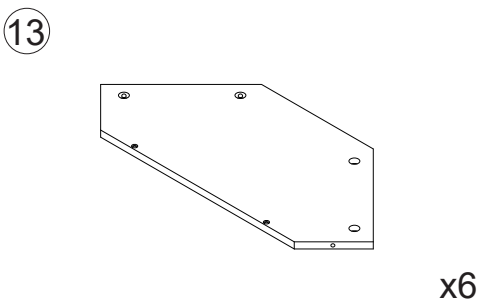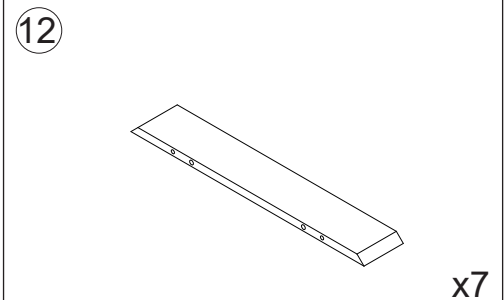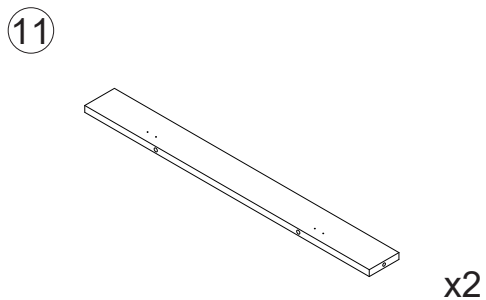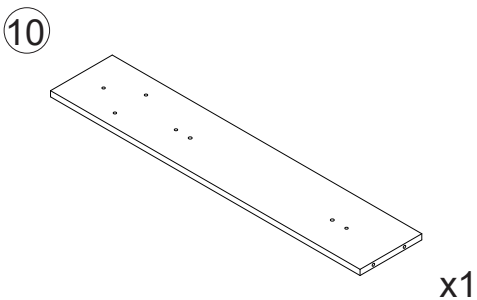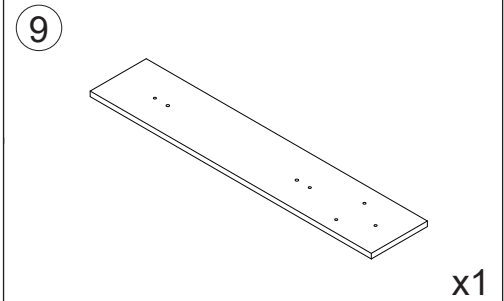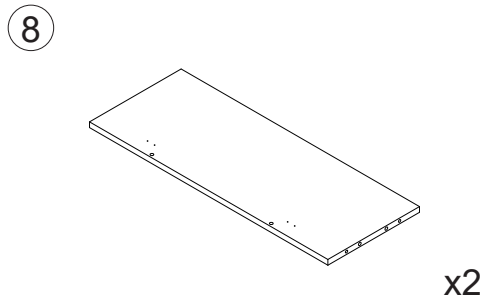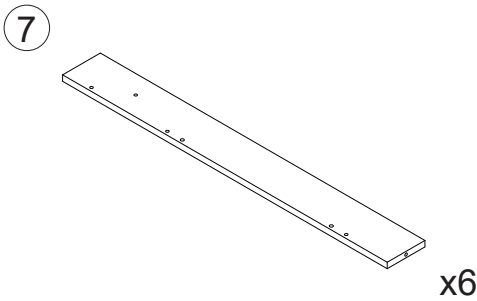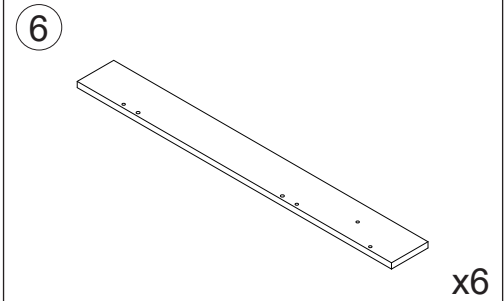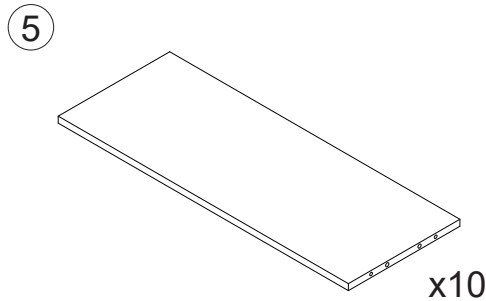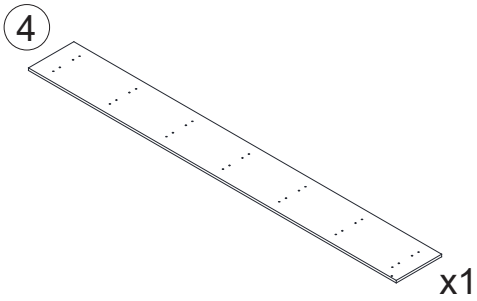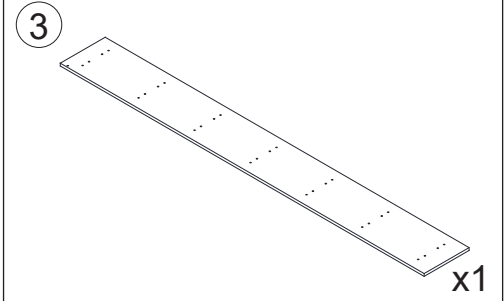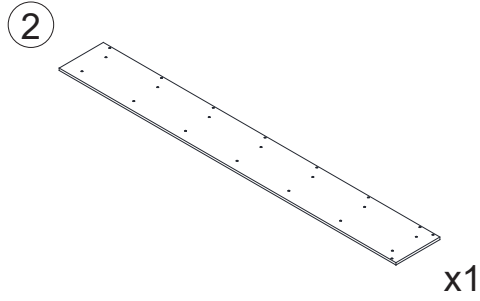               
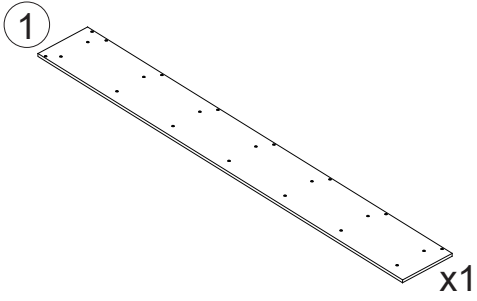 


(A) x28+2  M6x35mm	(B) x28+2  Ø15x9mm	(C) x118+2  Ø6x30mm	(D) x148+4  M5x40mm	(E) x24+2  M3x12mm	(F) x6 	(G) x2  M4x10mm	(H) x2 	(I) x2  M4x35mm
(J) x2 	(K) x54+4 							

  
 
1

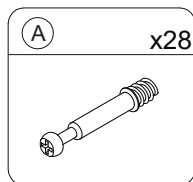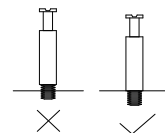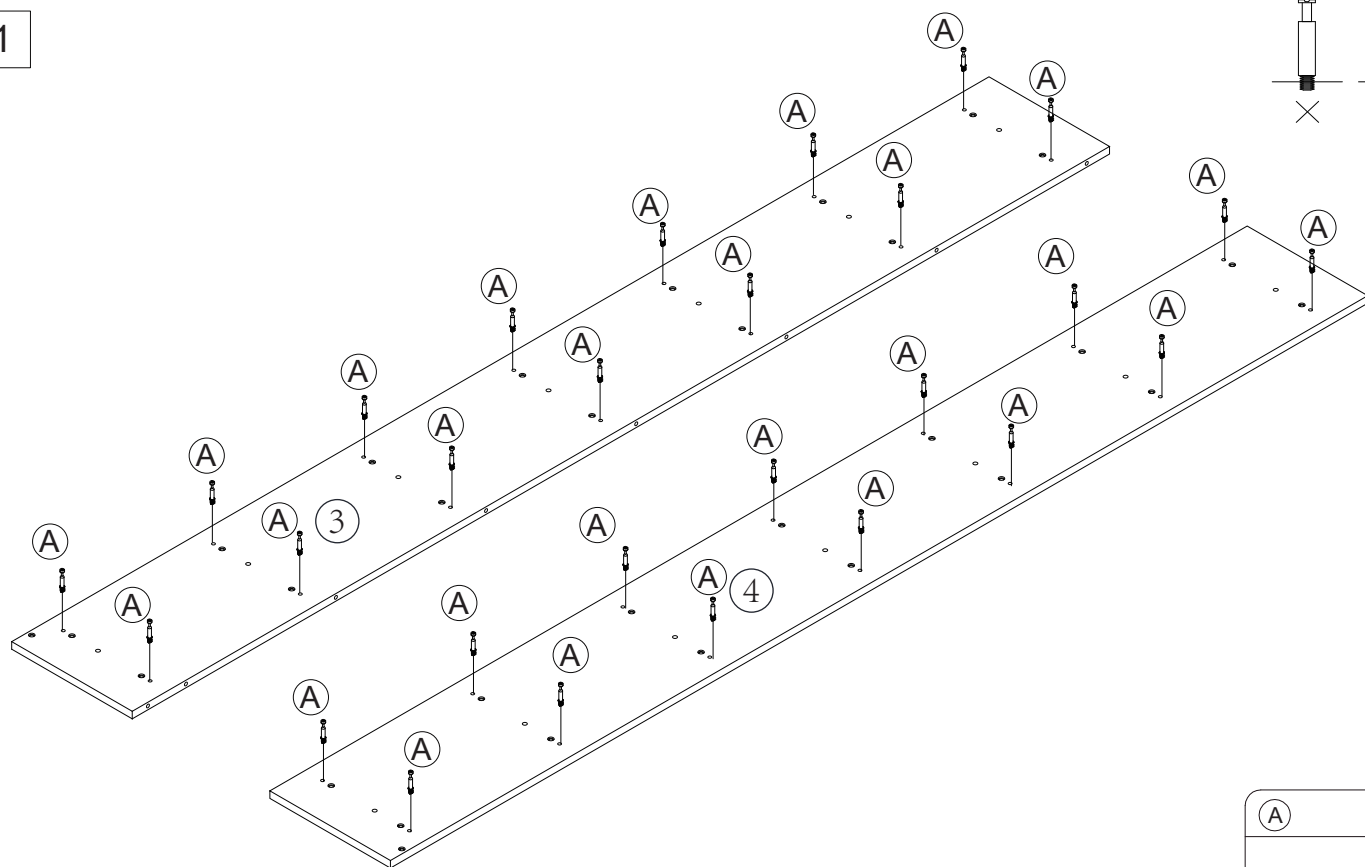


2

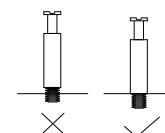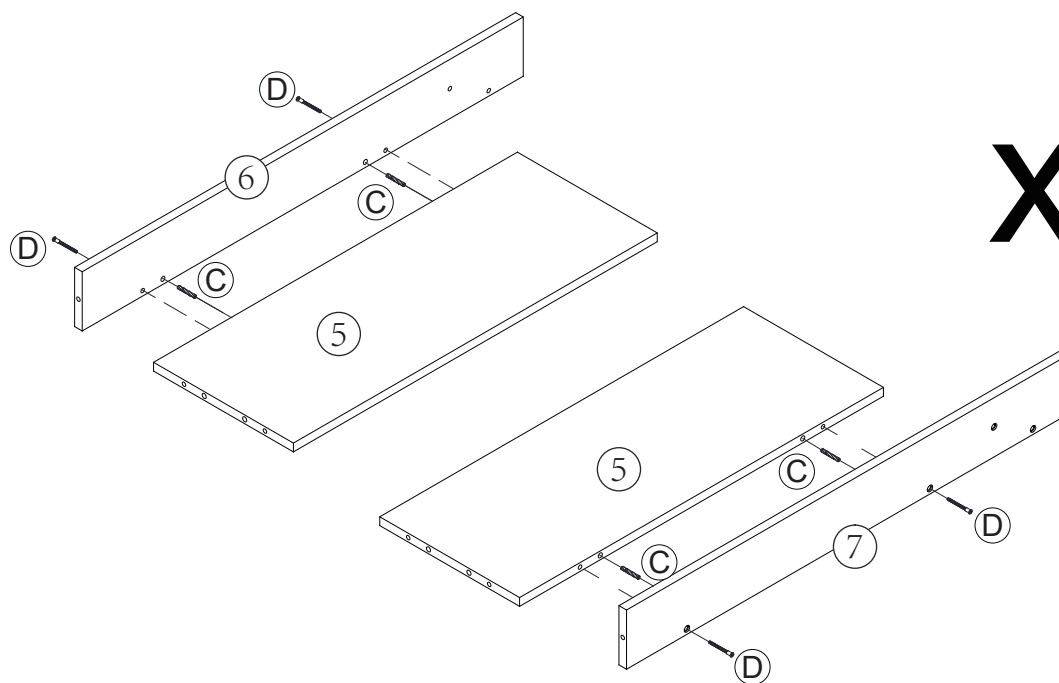  

x5

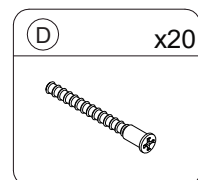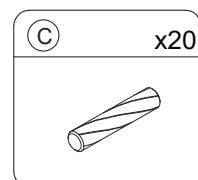  


3

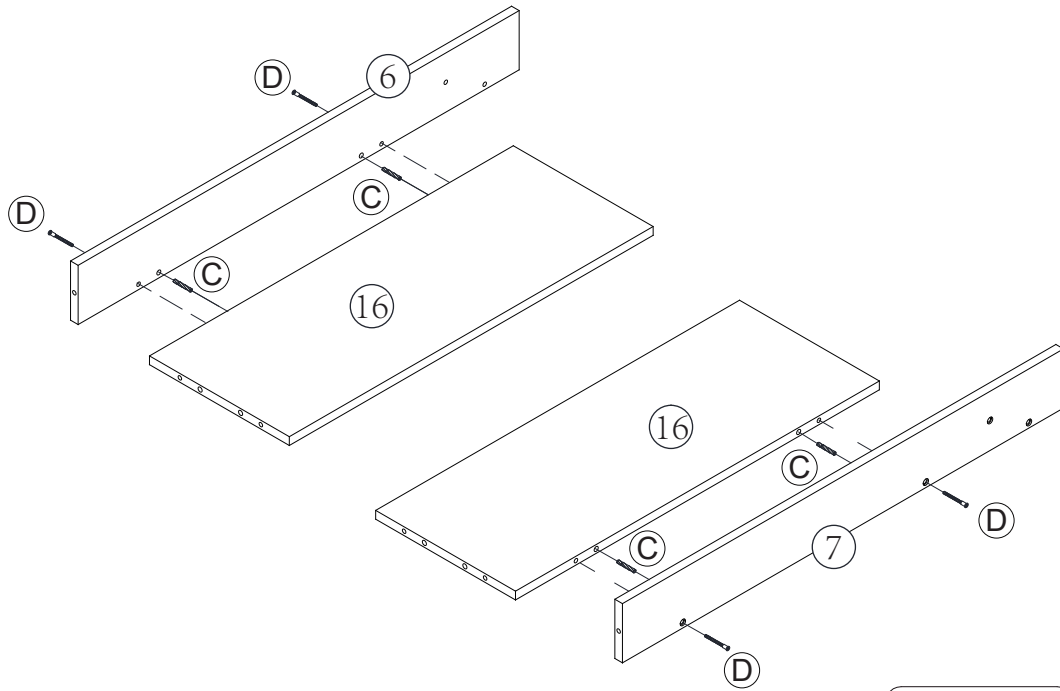 


(C)	x4	(D)	x4

 4

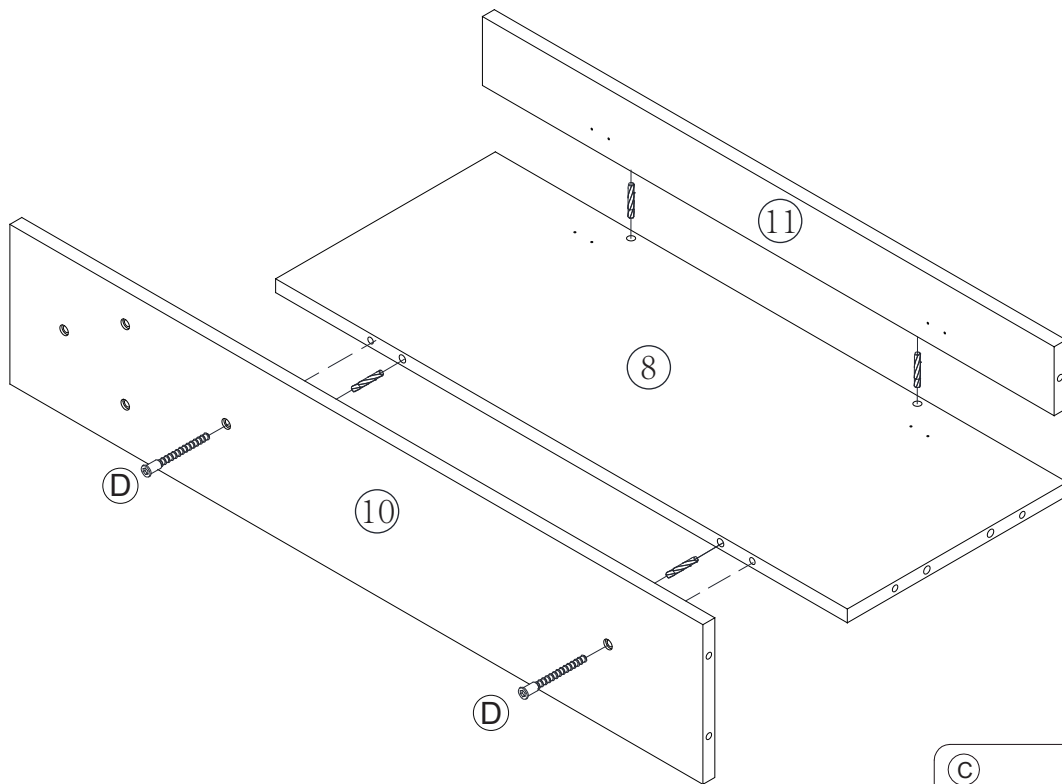


(C)	x4	(D)	x2


 
5

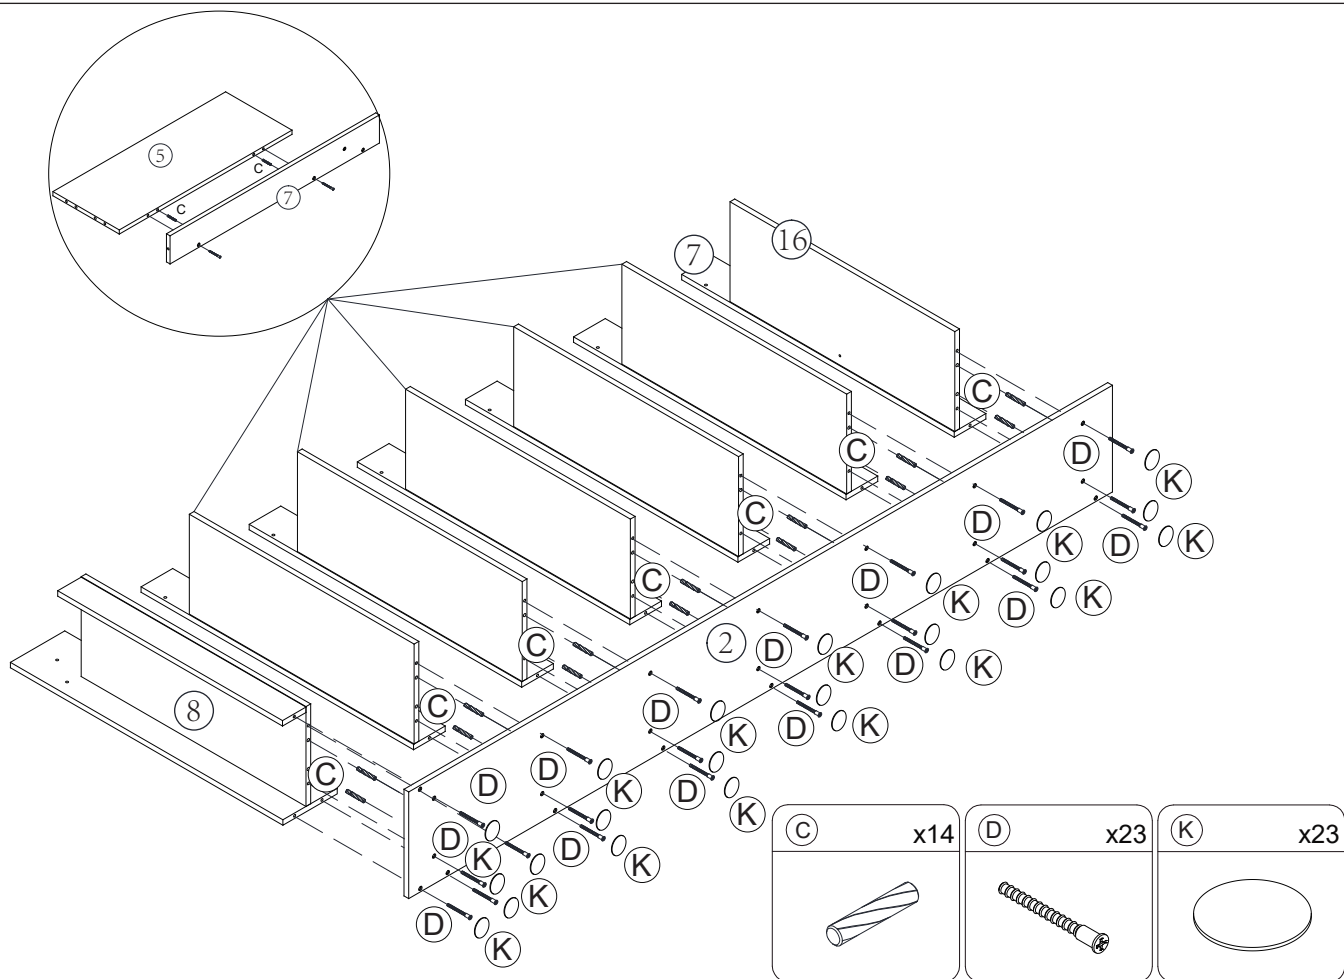

6


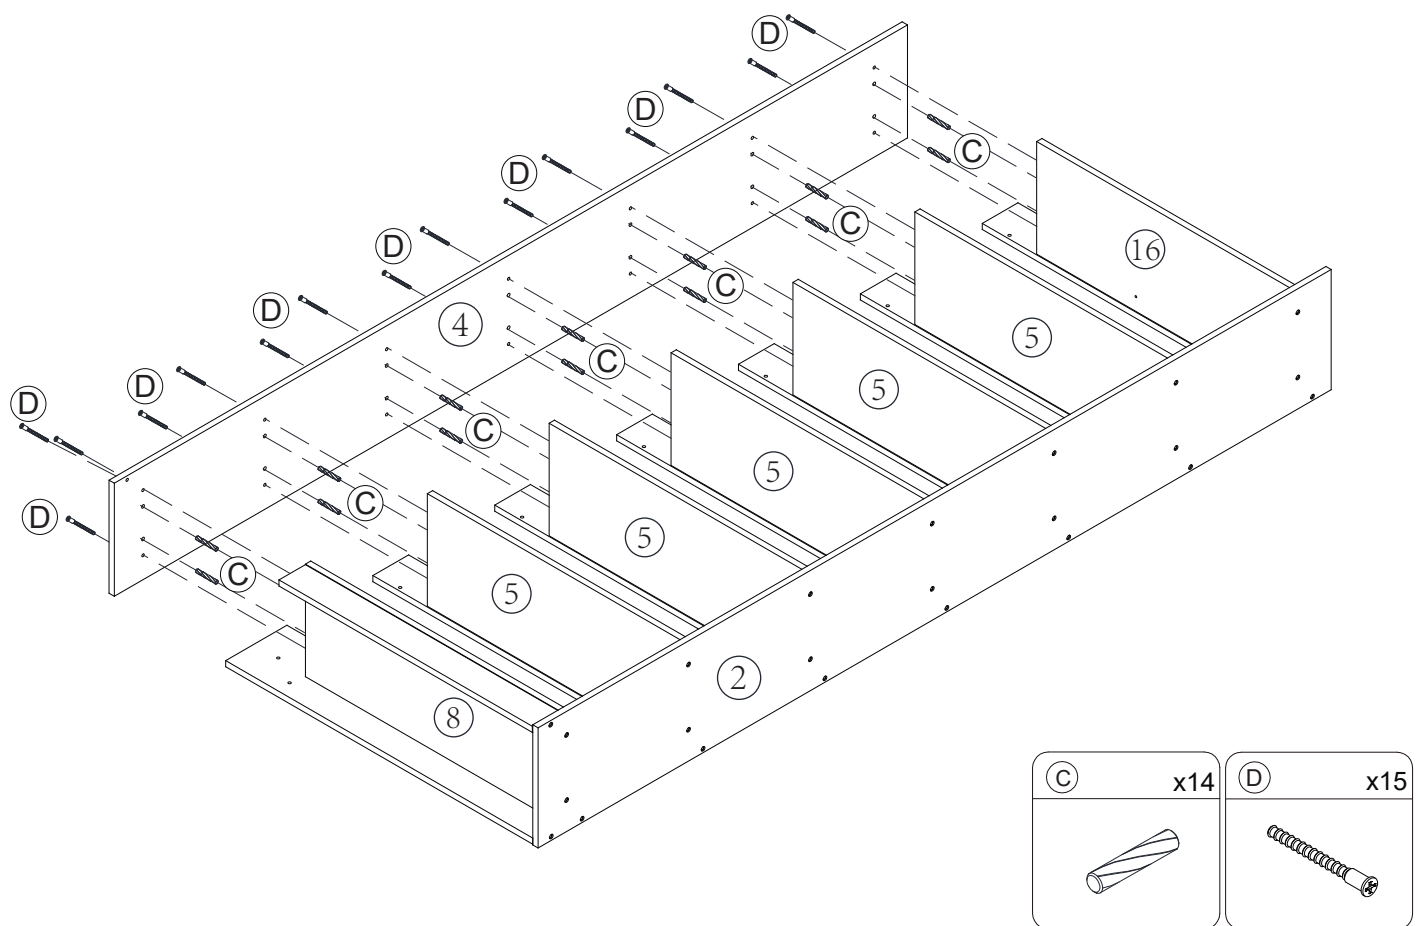 


7



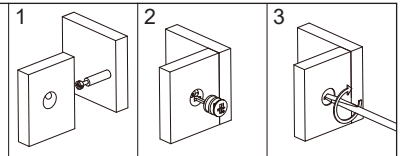 
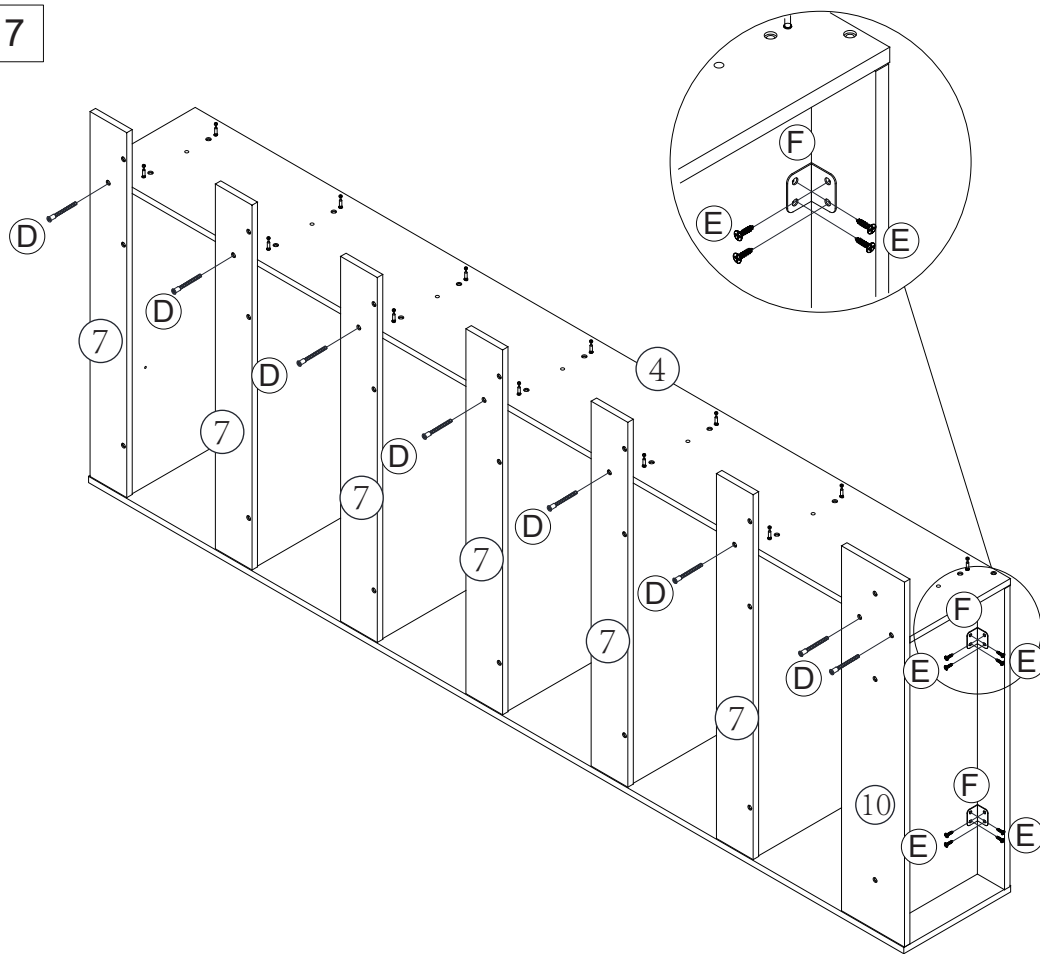 


Cam Lock Fastening System


 
 
8

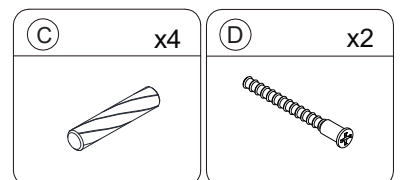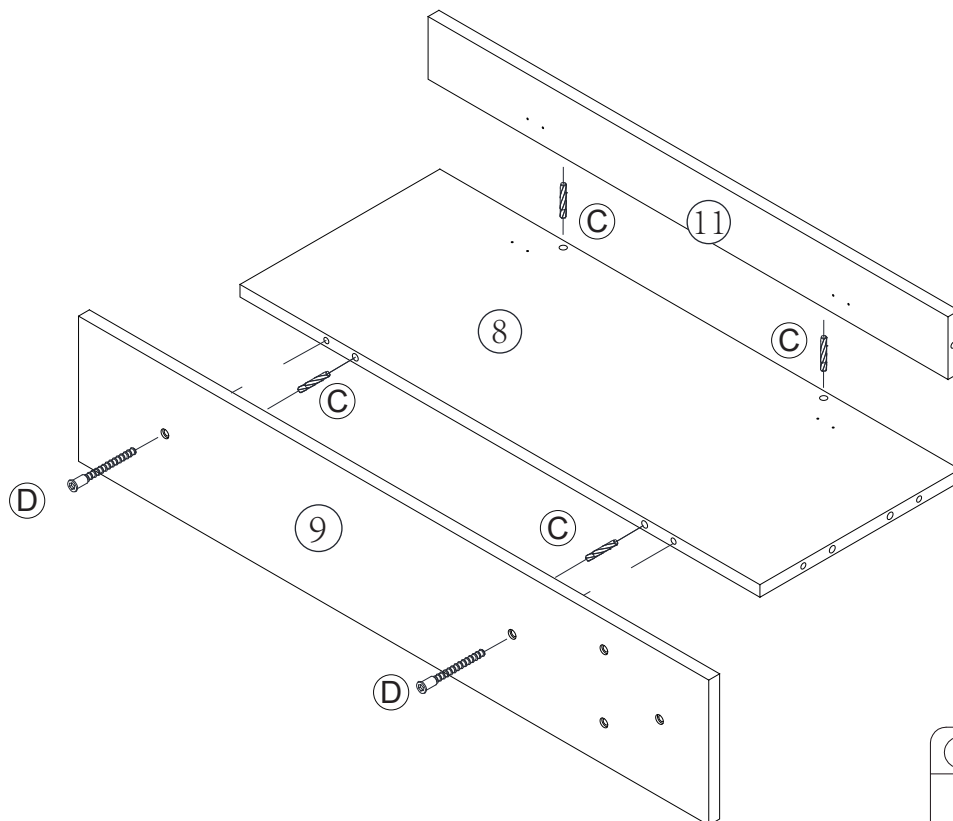





9

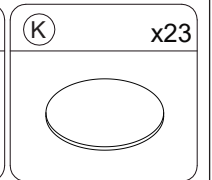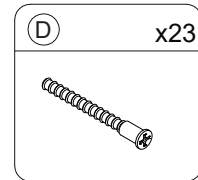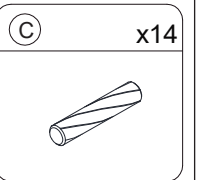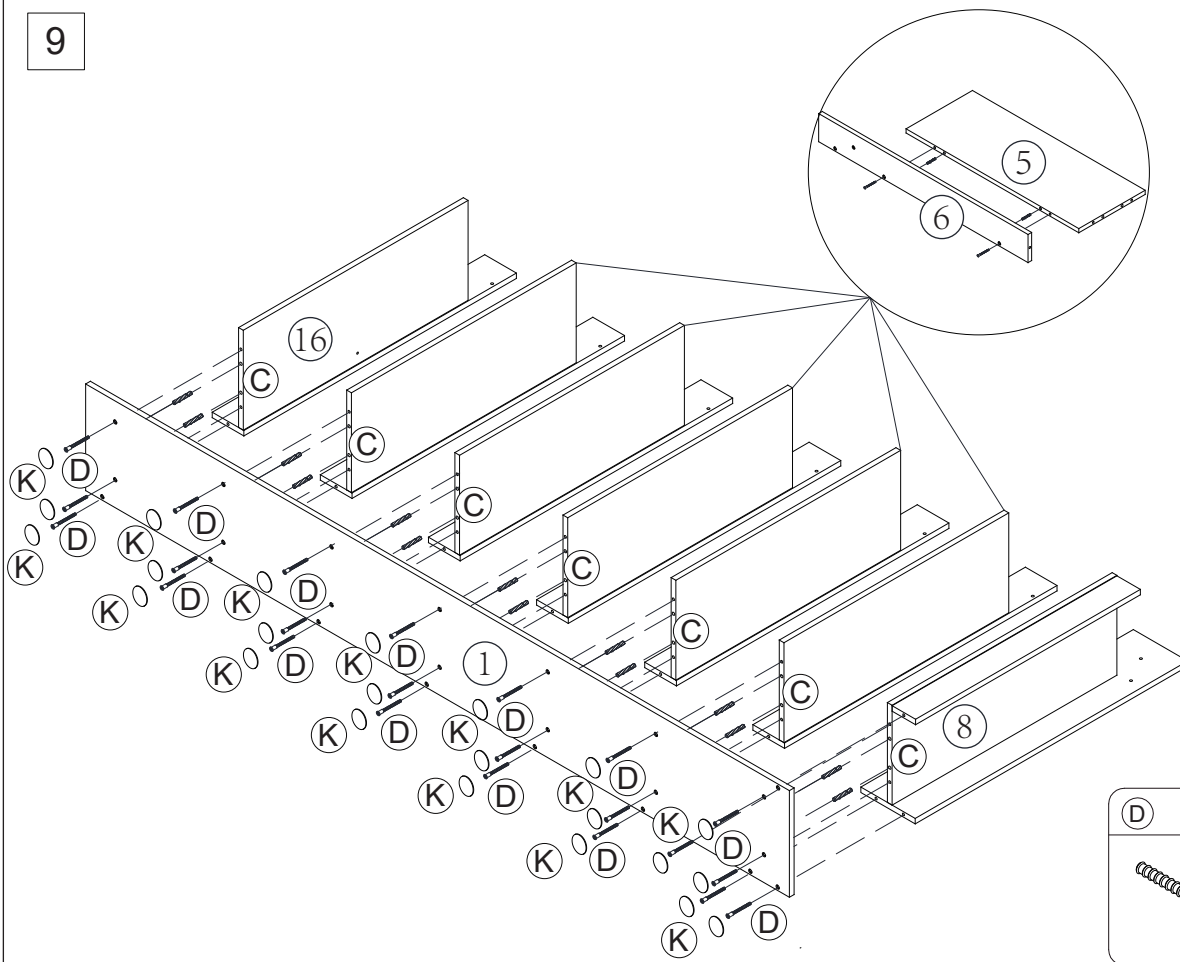    


10

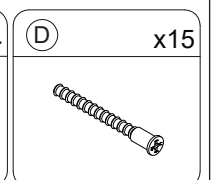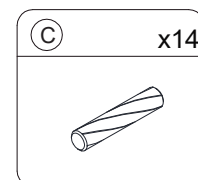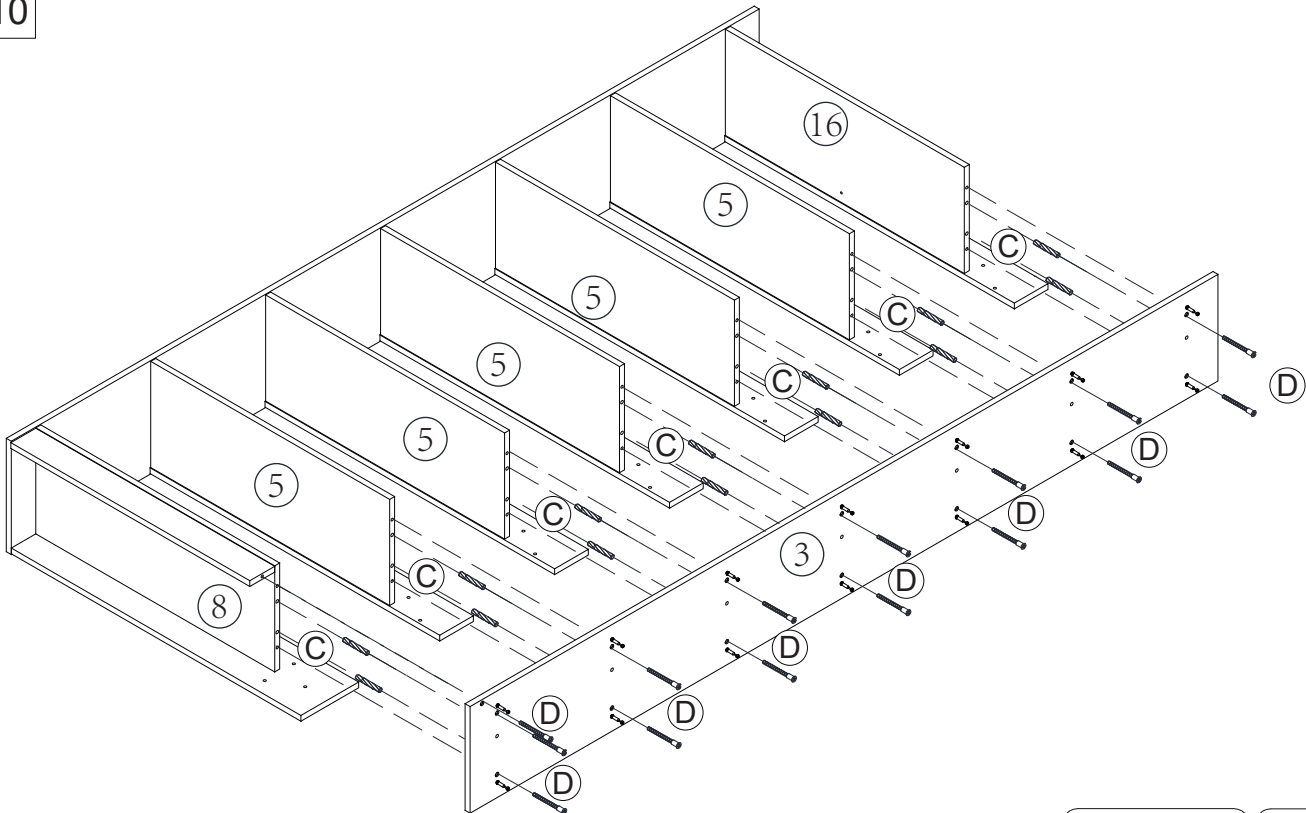   



11

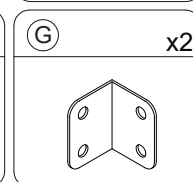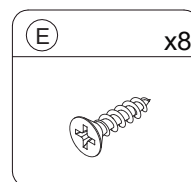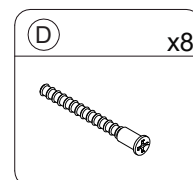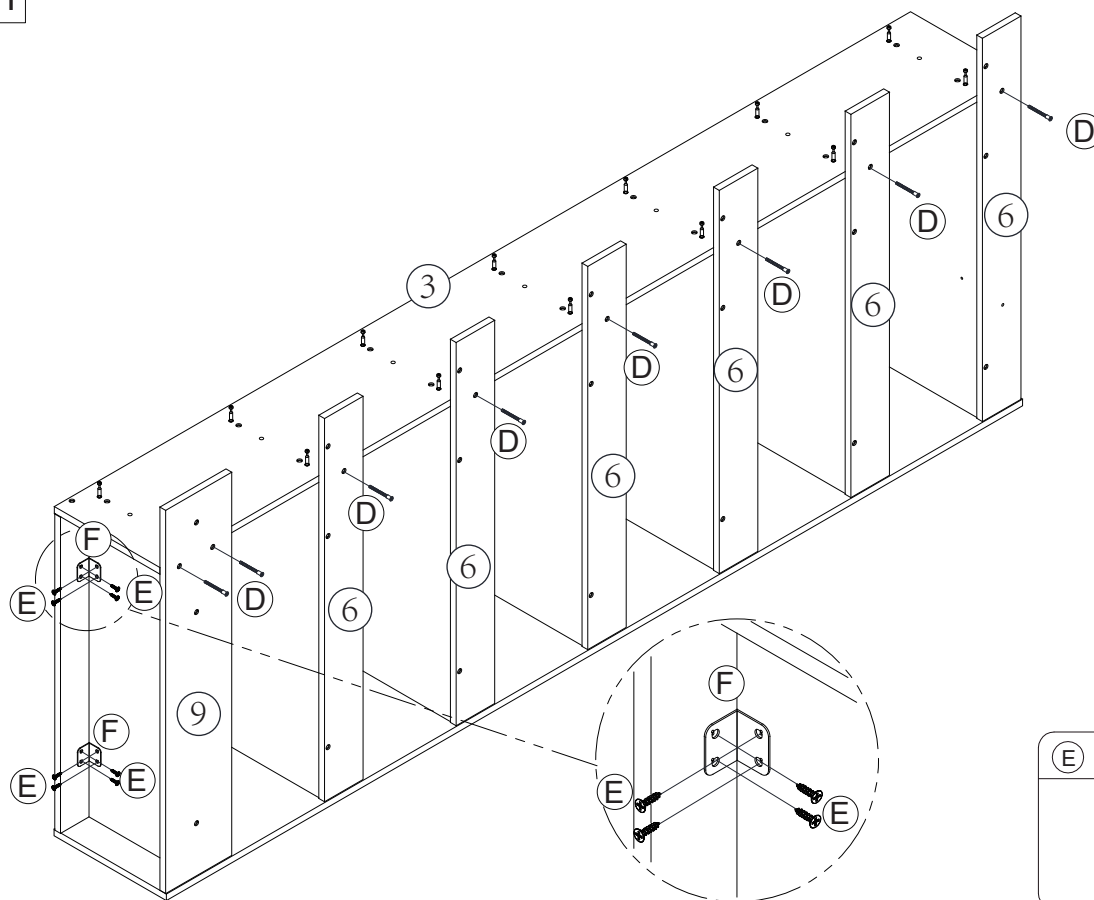    



12

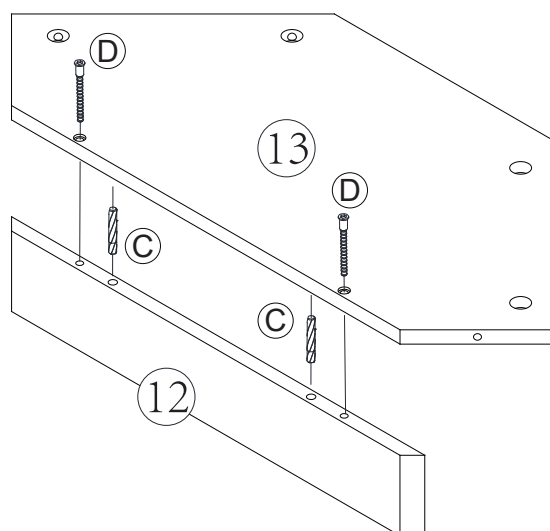 

x6

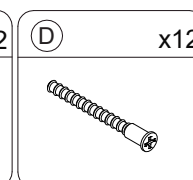 
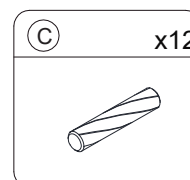 


13

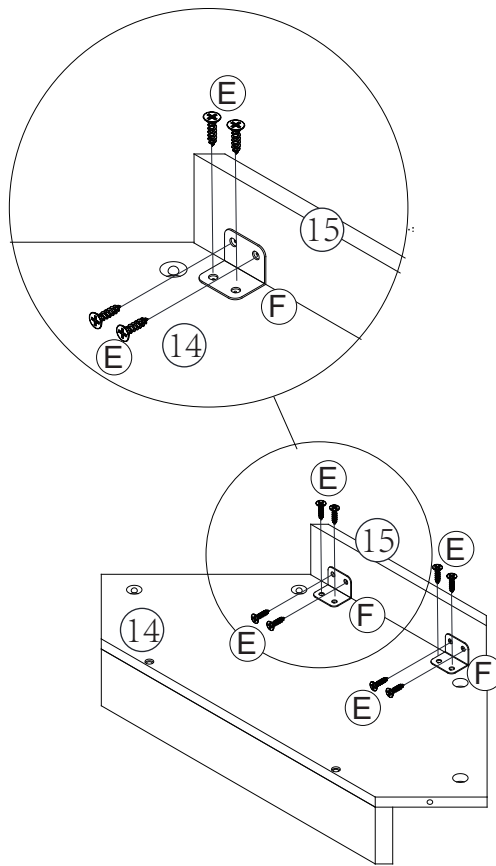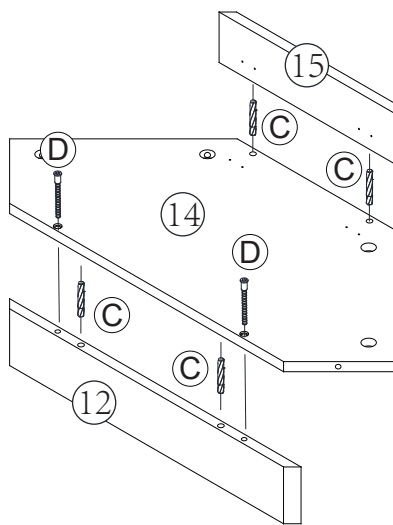  

(C) x4	(D) x2
(E) x8	(F) x2

 
 
14

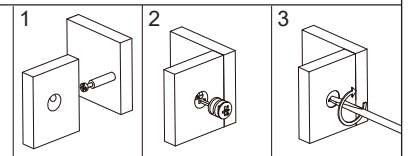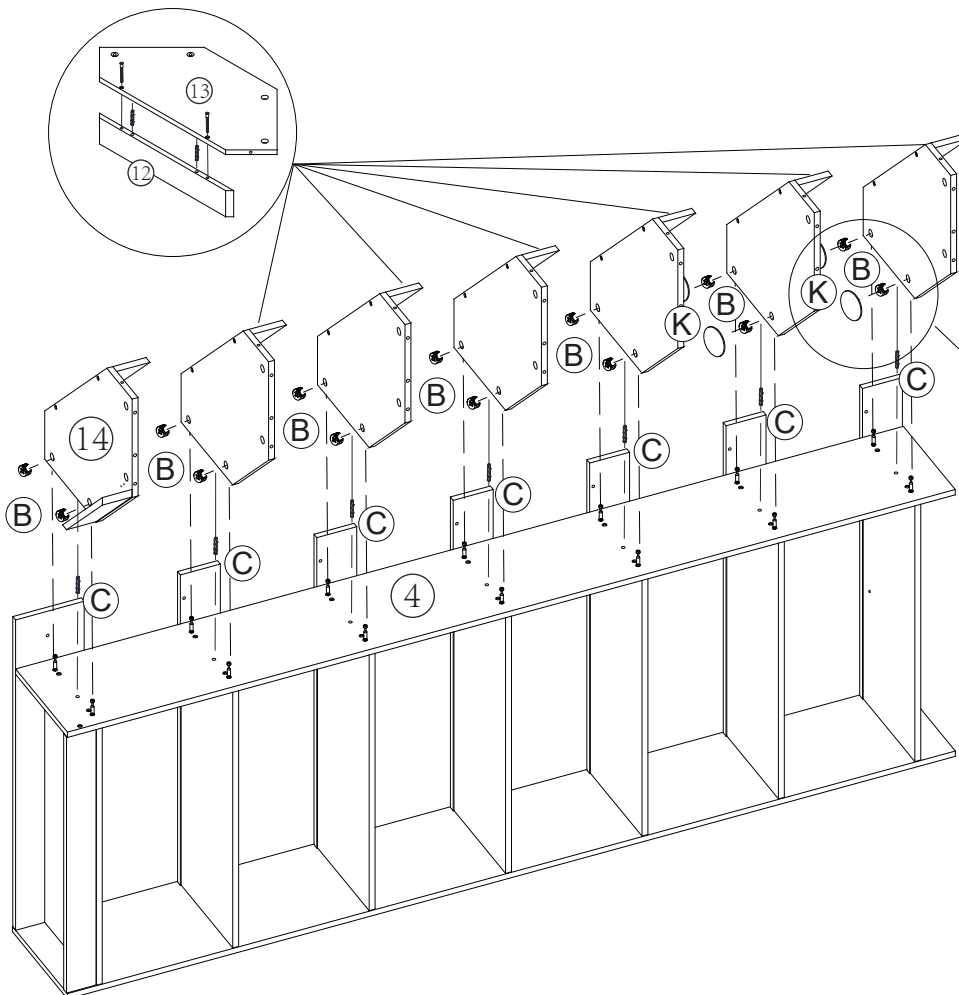

Cam Lock Fastening System

(B) x14	
(C) x7	(K) x4

  
15

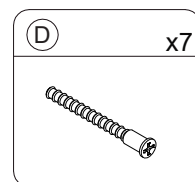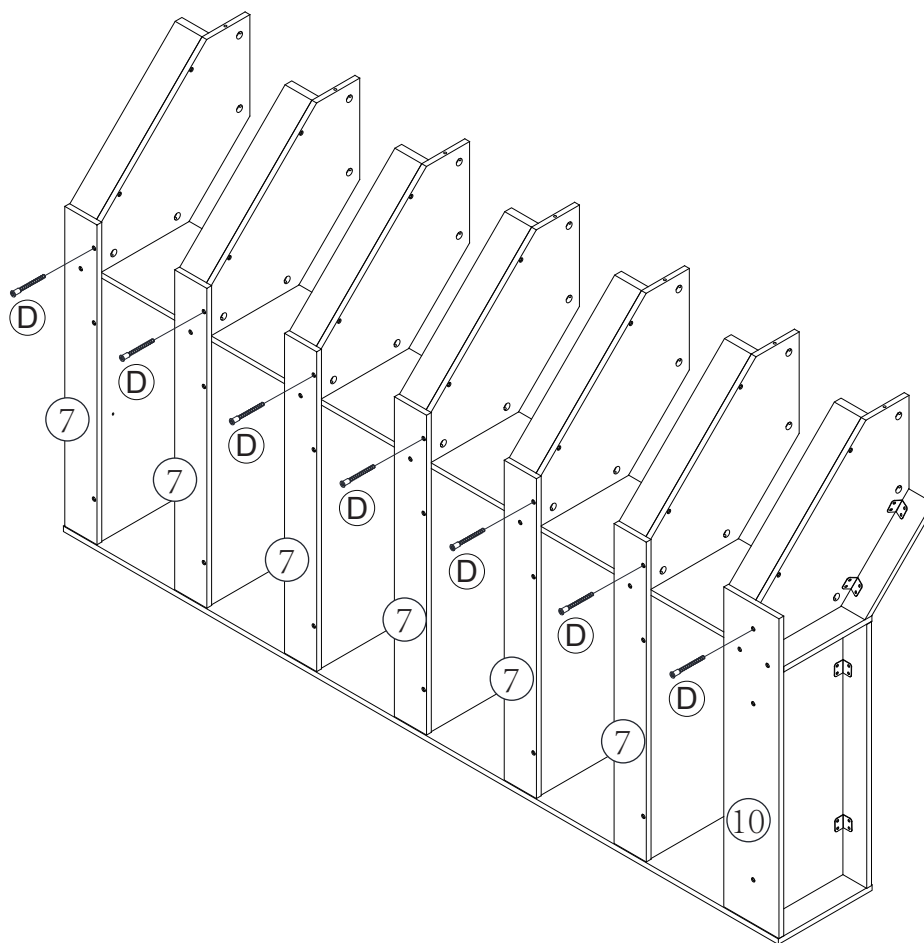






16




 
TIP: Need more than two people for assembly!

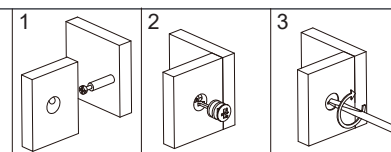






Cam Lock Fastening System

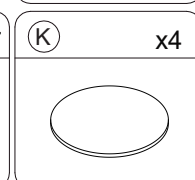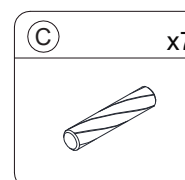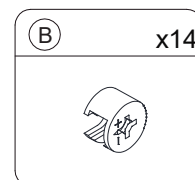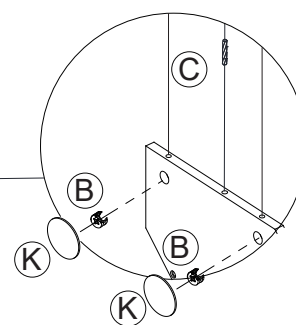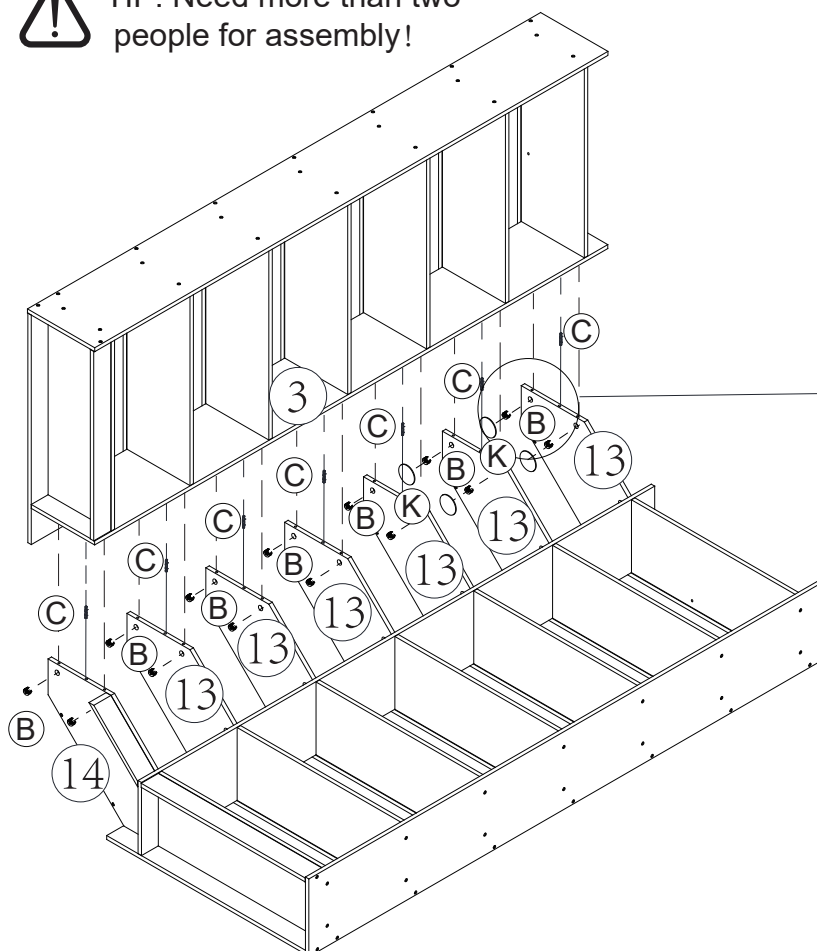     

17

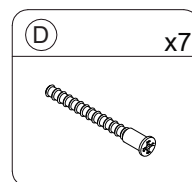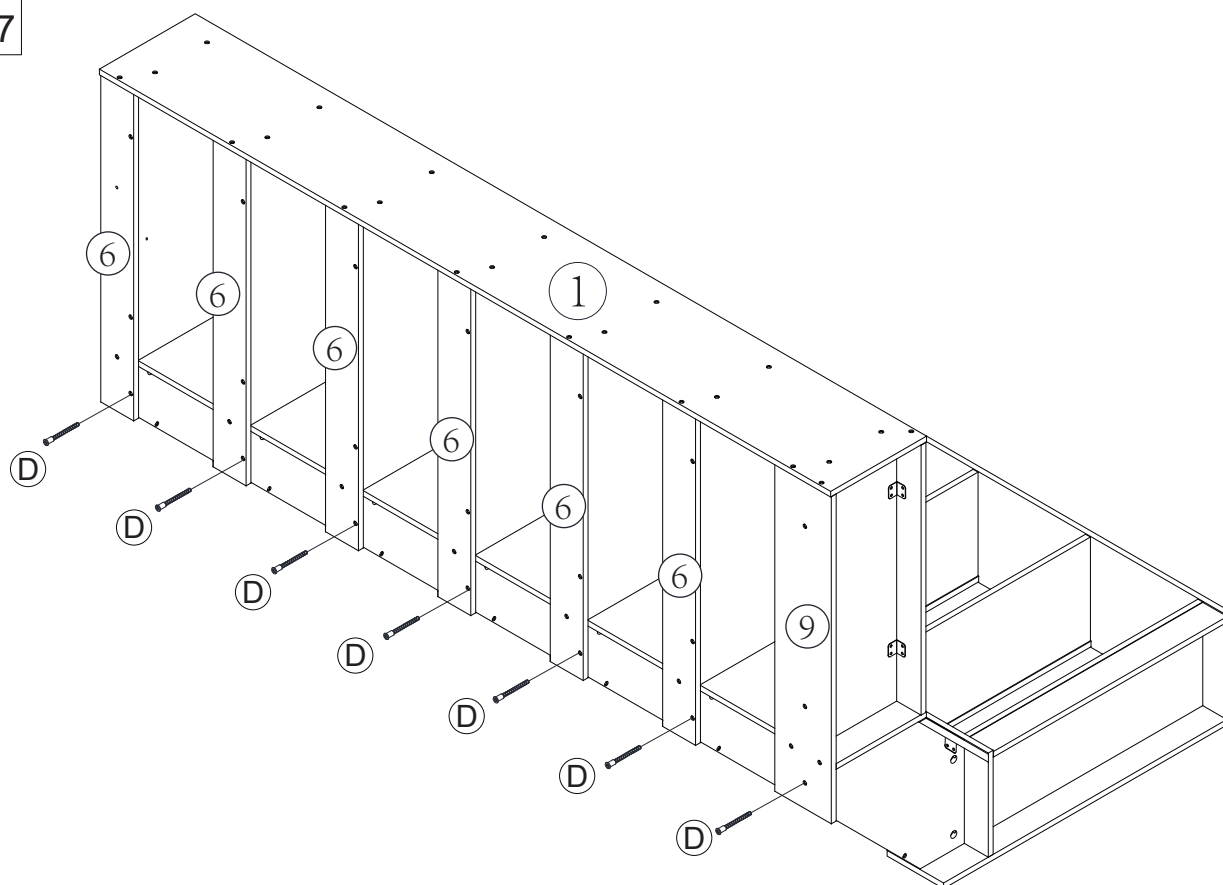  

18

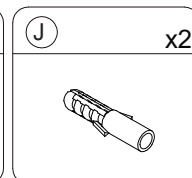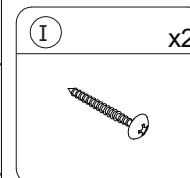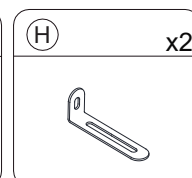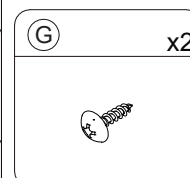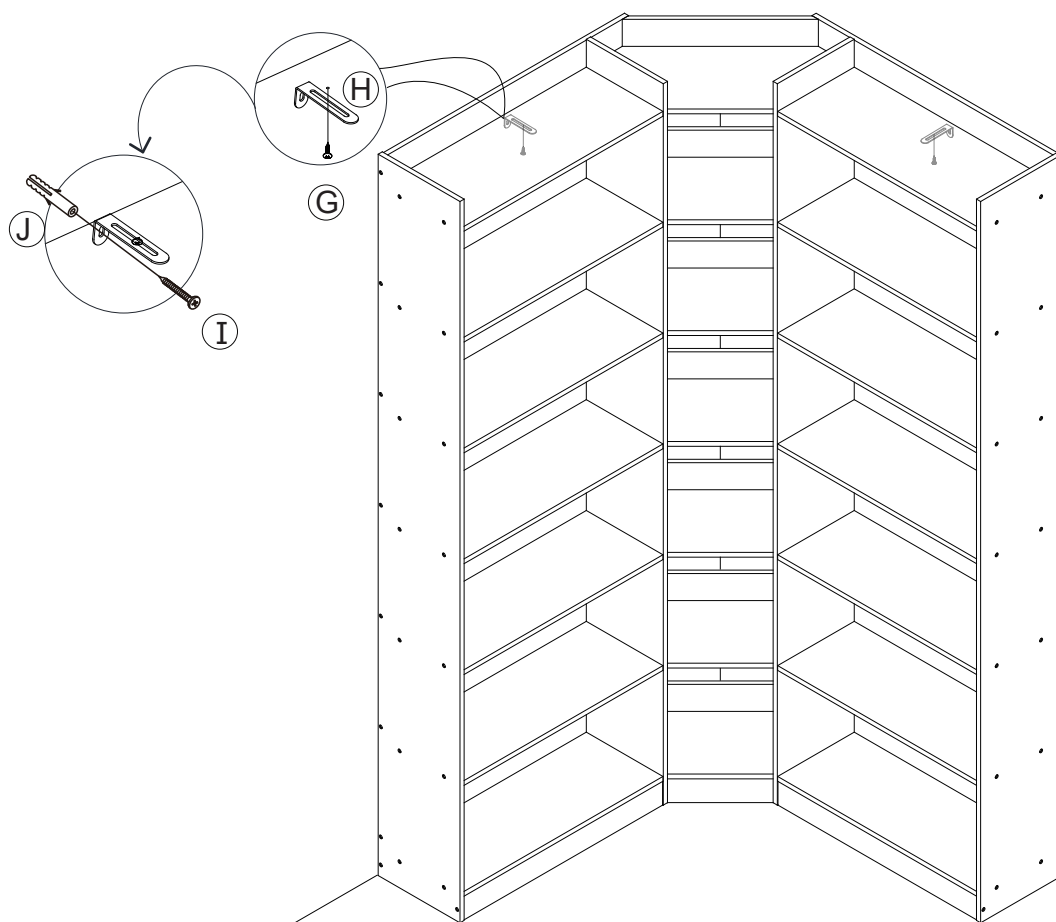     

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, eg:



- these are suitable for use in masonry walls

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.



 
Hints:

1. General rule: always use a larger screw and wall plug if you are not sure.
2. Ensure you use the recommended drill bit to match the wall plug and hole size.
3. Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
4. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5. Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No. 1 "General Purpose" wall plug

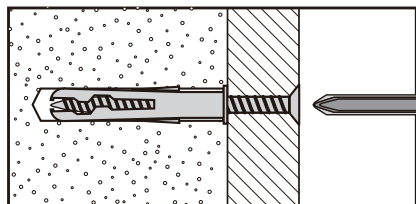


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No. 3 "Cavity Fixing" wall plug

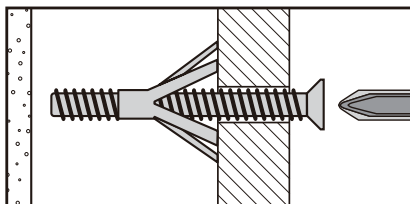


For use with plasterboard partitions or hollow wooden doors.

 No. 5 "Hammer Fixing" wall plug

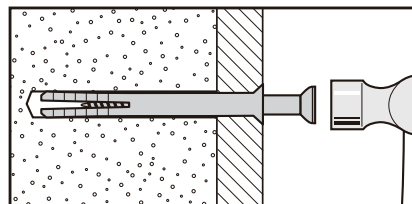


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No. 2 "Plasterboard" wall plug

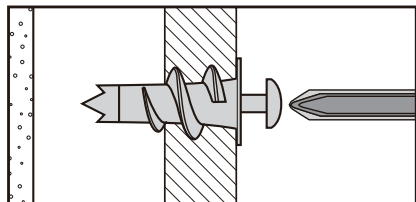


For use when attaching light loads onto plasterboard partitions.

 No. 4 "Cavity Fixing - Heavy Duty" wall plug

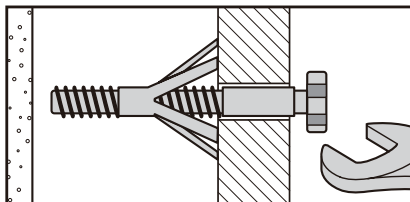

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No. 6 "Shield Anchor" wall plug - heavy loads

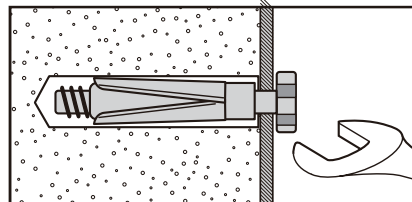

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.