

FOUNTAIN - INSTRUCTION MANUAL -



- WIDTH: 11.81 INCH
- HEIGHT: 10.62 INCH
- DEPTH: 11.81 INCH
- WEIGHT: 5.94 LBS

PRODUCT INTRODUCTION

- ▶ Water Fountain Are Built To High Standards. For Technical Support, Please Check The Troubleshooting Guide In This Manual Or Contact Us Via Email.
- ▶ For Any Quality-Related Issues, Please Email Our Support Team Before Returning The Product. This Often Leads To A Faster Resolution.

ASSEMBLY INSTRUCTIONS

STEP 1

Unpack the box from the top.



STEP 2

Step 2: Upon unboxing, verify all included accessories.

Accessories include: a transformer, a water pump, a water leakage cover, and a product shell/casing.



STEP 3

Step 3: Pass the long end of the water pump cable through the central hole in the housing.



STEP 4

Step 4: Connect the hose on the water leakage cover to the water pump. Attach the light wire on the short wire on the pump, and tighten it firmly to prevent water ingress. Then, place the cover onto the housing, connect the other end of the cable to the transformer, and power it on for normal operation.



ASSEMBLY INSTRUCTIONS

STEP 5

Fountain operating normally.
Both water flow and lights.

ELECTRICAL SAFETY

- The transformer will get hot during use, which is normal.
- To prevent pump damage, please to add water promptly to avoid long time
- We recommend using a Residual Current Device (GFI) Ground Fault Interrupter when connecting the fountain to the electric supply (available from DIY stores).

REPAIR & MAINTENANCE

Fountain Care Guidelines

- Winter Care: Bring Indoors if Possible (e.g., garage or shed)
- If freezing is a concern, drain all water to prevent damage

Fountain Cleaning Tips

To Empty the Fountain of Water for Cleaning or for Winter Care:

- For smaller fountains, invert and let water pour away for cleaning
- For larger fountains, use siphon pipe for water removal.
- Always power off before cleaning or maintaining the fountain or pump
- **Note:** Stains may be present, This does not imply the fountain is second-hand. The testing water may not dry before repacking, causing stains upon opening the package.