






 
CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Frame		1×
B	Seat Panel		1×
C	Screw		4×
D	Lock Washer		4×
E	Screw Washer		4×
F	Allen Key		2×

**ASSEMBLY INSTRUCTIONS APPLICABLE FOR ALL
OUR DINING CHAIRS.
THE DESIGN OF THE CHAIR IN THE DRAWINGS MAY
VARY FROM YOUR ACTUAL CHAIR, BUT ASSEMBLY IS
THE SAME ON ALL MODELS.**



Weight Capacity: 275 lbs

WARNING: DO NOT STAND ON CHAIR

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS




PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.


Tools Required for Assembly (included): Allen Key

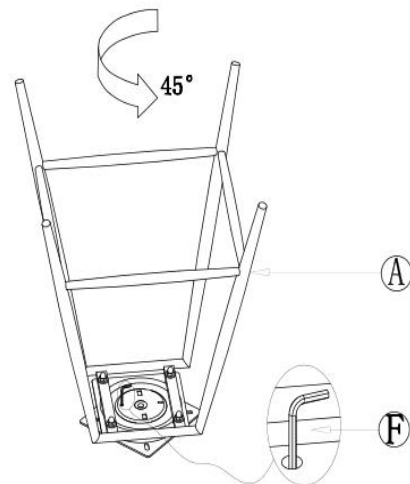


You may need some assistance turning the frame ask someone to hold the swivel panel



STEP 1 TURN THE FRAME SO THAT SWIVEL PANEL AND FRAME OFFSET BY 45°, THEN INSERT ONE OF ALLEN KEY INTO THE HOLE. SEE ABOVE PICTURES.

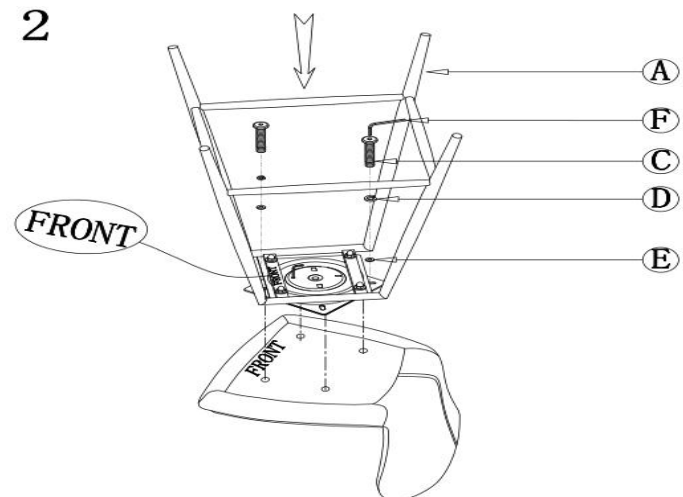

STEP 2 ATTACHED FRAME (A) TO SEAT (B), USING HARDWARE (C), (D), (E) BY ALLEN KEY (F), SEE ABOVE PICTURE.

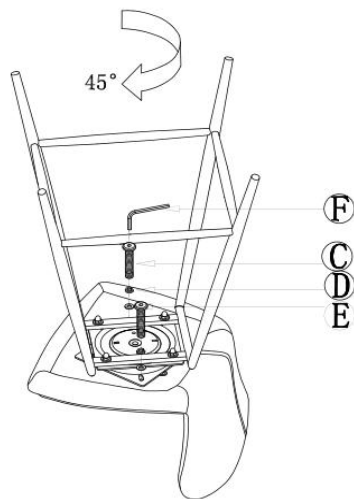

STEP 3 AFTER FRAME AND SEAT PANEL ARE SECURELY TIGHTENED, TAKE OFF THE ALLEN KEY (F) FROM STEP 1 AND SWIVEL THE FRAME BY 45° IN THE OPPOSITE DIRECTION. THEN USING HARDWARE (C), (D), (E) BY ALLEN KEY TO REMAINING INSTALLATION HOLES.



STEP 4 TURN OVER THE PRODUCTS. THE ASSEMBLY IS FINISHED